

**SECTION IDX
ALPHABETICAL INDEX**

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Numerics	
3METER - Wiring diagram	DI-35
A	
A/C component layout	ATC-23
A/C compressor mounting	ATC-135
A/C compressor precaution	ATC-11
A/C controller	ATC-112
A/C diagnostic work flow (auto A/C)	ATC-101
A/C evaporator	ATC-149
A/C HFC134a (R134a) system precaution	ATC-5
A/C HFC134a (R134a) system service procedure	ATC-133
A/C HFC134a system service equipment precaution ...	ATC-12
A/C lubricant (R134a)	ATC-24
A/C lubrication oil	ATC-155
A/C operational check	ATC-64
A/C self-diagnoses (auto A/C)	ATC-56 , ATC-101
A/C service data specification	ATC-155
A/C trouble diagnoses (auto A/C)	ATC-43
A/C, A - Wiring diagram	ATC-49
A/T - Wiring diagram	AT-49
A/T fluid checking	AT-12 , AT-56
A/T fluid replacement	AT-12
A/T fluid temperature sensor	AT-130
A/T IND - Wiring diagram	DI-80
A/T self-diagnoses	AT-93 , AT-103
A/T shift lock system	AT-217
A/T shift lock system - Wiring diagram	AT-218
A/T trouble diagnoses	AT-40
Accelerator control system	ACC-2
Accelerator pedal position (APP) sensor	EC-552 , EC-559 , EC-573
Accelerator pedal released position learning	EC-50
Air bag	SRS-3
Air bag disposal	SRS-49
Air bag precautions	SRS-3
Air bleeding (hydraulic clutch)	CL-7
Air bleeding for brake system	BR-10
Air cleaner and air duct	EM-15
Air cleaner filter replacement	MA-17
Air conditioner cut control	EC-28
Air flow meter - See Mass air flow sensor	EC-167 , EC-175
Air mix. door motor	ATC-74 , ATC-127
Air spoiler, rear	EI-28
Ambient sensor	ATC-102 , ATC-114
Angular tightening application	EM-4
Antenna	AV-30
APPS1 - Wiring diagram	EC-554
APPS2 - Wiring diagram	EC-561
APPS3 - Wiring diagram	EC-575
ASC/BS - Wiring diagram	EC-521
ASC/SW - Wiring diagram	EC-514
ASCBOF - Wiring diagram	EC-613
ASCD	EC-647
ASCIND - Wiring diagram	EC-629
Ashtray illumination	LT-208
AT indicator lamp	DI-80
Audio	AV-5
AUDIO - Wiring diagram	AV-8
Auto air conditioner - Wiring diagram	ATC-49
Auto amp	ATC-113
Auto anti-dazzling inside mirror	GW-55
Automatic amplifier	ATC-66 , ATC-113
Automatic transmission fluid replacement	MA-24
Axle	MA-29
Axle housing (rear)	RAX-8
B	
Back Door	BL-85 , BL-86
Back door	BL-85 , BL-86
Back door opener - See Back door	BL-90
BACK/L - Wiring diagram	LT-177
Back-up lamp	LT-177
Back-up lamp switch (M/T)	MT-12
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-15 , SC-23
BCM (Body control module)	BCS-3
Blower motor	ATC-81 , ATC-120
Blower unit	ATC-118
Bose speaker amp.	AV-5
Brake booster	BR-22
Brake fluid change	BR-9
Brake fluid level	MA-27
Brake fluid level and line check	BR-9
Brake hydraulic line	BR-11
Brake inspection	MA-27
Brake lines and cables inspection	MA-27
Brake master cylinder	BR-14
Brake pedal	BR-6
Brake switch	EC-546
BRK/SW - Wiring diagram	EC-547
Bulb specifications	LT-242
Bumper, front	EI-14
Bumper, rear	EI-17
C	
Camshaft	EM-65
Camshaft inspection	EM-67
Camshaft position sensor (PHASE)	EC-310
CAN - Wiring diagram	EC-146 , LAN-14 , LAN-41 , LAN-60 , LAN-88 , LAN-112 , LAN-140 , LAN-162
CAN (Controller Area Network)	LAN-6 , LAN-13 , LAN-40 , LAN-59 , LAN-87 , LAN-111 , LAN-139 , LAN-161
CAN communication .	EC-30 , EC-145 , AT-27 , AT-105 , WT-11 , BRC-8 , BRC-48 , BRC-98 , LT-9 , LT-38 , LT-137 , LT-181 , LT-225 , WW-9 , LAN-6 , LAN-13 , LAN-40 , LAN-59 , LAN-87 , LAN-111 , LAN-139 , LAN-161
Canister-See EVAP canister	EC-636
CHARGE - Wiring diagram	SC-22

ALPHABETICAL INDEX

Charging system	SC-21	Door glass Fitting Adjustment(Front)	GW-54
Chassis and body maintenance	MA-21	Door lock	BL-83
CHIME - Wiring diagram	DI-95	Door mirror	GW-84
Circuit breaker	PG-16	Door trim	EI-30
Clock	DI-110	Door, front	BL-80 , GW-52
CLOCK - Wiring diagram	DI-110	Drive belt	EM-13
Closed loop control	EC-26	Drive belt inspection	MA-13
Clutch cover	CL-15	Drive pinion diff. inspection	RFD-15
Clutch disc	CL-15	Drive pinion height	RFD-21 , RFD-24
Clutch master cylinder	CL-8	Drive shaft	MA-30
Clutch operating cylinder	CL-11	Drive shaft (rear)	RAX-10
Clutch pedal	CL-5	Driver air bag	SRS-37
Clutch release bearing	CL-13	DTRL - Wiring diagram	LT-78 , LT-113
Clutch release mechanism	CL-13	Duct and grilles	ATC-129
Clutch withdrawal lever	CL-13	E	
Coil spring (front)	FSU-10	ECM power supply	EC-138 , EC-407
Collision diagnosis	SRS-56	ECM/PW - Wiring diagram	EC-408
Combination lamp, front, removal and installation		ECTS - Wiring diagram	EC-189
LT-63 , LT-132		Electric throttle control actuator	EC-418 , EC-420
Combination lamp, rear, removal and installation		Electrical load signal circuit	EC-611
LT-203		Electrical unit	PG-71
Combination meter	DI-4	Electrical units location	PG-63
Combination switch	LT-160	Electronic ignition (EI) system	EC-27
Component Location (auto A/C)	ATC-46	Engine control module (ECM)	EC-404
Compression pressure	EM-79	Engine control system diagram and chart	EC-22
Condenser ... ATC-144 , ATC-147 , ATC-148 , ATC-149 , ATC-150		Engine coolant	CO-8
CONSULT for VDC	BRC-116	Engine coolant temperature sensor (ECTS) ... EC-187 , EC-199	
Control units (terminal arrangement)	PG-71	Engine oil	LU-6
Control valve (A/T)	AT-34	Engine oil filter replacement	MA-18
Controller Area Network (CAN)	LAN-6 , LAN-13 , LAN-40 , LAN-59 , LAN-87 , LAN-111 , LAN-139 , LAN-161	Engine oil precautions	GI-7
Converter housing installation	AT-251	Engine removal	EM-90
COOL/F - Wiring diagram	EC-479	ETC1 - Wiring diagram	EC-421
Cooling circuit (engine)	CO-7	ETC2 - Wiring diagram	EC-428
Cooling fan motor	EC-487	ETC3 - Wiring diagram	EC-432
Cowl top	EI-20	EVAP canister	EC-636
Cowl top cover	EI-20	EVAP canister purge volume control solenoid valve EC-338 , EC-497	
Crankcase ventilation system - See Positive crankcase ventilation	EC-645	EVAP canister vent control valve	EC-345 , EC-505
Crankshaft position sensor (POS)	EC-304	EVAP control system (small leak) diagnosis .. EC-328 , EC-369	
Crash zone sensor	SRS-45	EVAP control system pressure sensor	EC-352 , EC-355 , EC-361
Cylinder head	EM-79	EVAP control system purge flow monitoring diagnosis EC-323	

D

D/LOCK - Wiring diagram	BL-22
Daytime light system	LT-66 , LT-101
Daytime running light - See Daytime light system	
LT-66 , LT-101	
DEF - Wiring diagram	GW-68
Diagnosis sensor unit	SRS-48
Diagnostic trouble code (DTC) for OBD system ..	EC-8
Differential carrier assembly	RFD-12
Differential carrier disassembly	RFD-16
Differential gear oil replacement	MA-25
Direct clutch solenoid valve	AT-149 , AT-151
Display and amp.assembly	ATC-66
Door glass	GW-52

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Final drive pre-inspection	RFD-15	Heated oxygen sensor 1 (bank 1)	EC-207 , EC-217 , EC-230 , EC-436 , EC-442
Final drive removal and installation	RFD-10	Heated oxygen sensor 1 (bank 2)	EC-207 , EC-217 , EC-230 , EC-436 , EC-442
Floor trim	EI-36	Heated oxygen sensor 1 heater (bank 1)	EC-151
Flow charts	GI-27	Heated oxygen sensor 1 heater (bank 2)	EC-151
Fluid temperature sensor (A/T)	AT-130	Heated oxygen sensor 2 (bank 1)	EC-240 , EC-249 , EC-449 , EC-460
Fluorescent leak detector	ATC-151	Heated oxygen sensor 2 (bank 2)	EC-240 , EC-249 , EC-449 , EC-460
Flywheel (clutch)	CL-15	Heated oxygen sensor 2 heater (bank 1)	EC-159
Flywheel runout(QR)	EM-119	Heated oxygen sensor 2 heater (bank 2)	EC-159
Front axle	FAX-4	Heated seat	SE-13
Front brake solenoid valve	AT-145 , AT-147	Heater and cooling unit (Heater core)	ATC-122
Front bumper	EI-14	HFC134a (R134a) system precaution	ATC-5
Front combination lamp removal and installation	LT-63 ,	HFC134a (R134a) system service procedure	ATC-133
LT-132		HFC134a system service equipment precaution	ATC-12
Front door	BL-80 , GW-52	High & low reverse clutch solenoid valve	AT-153 , AT-155
Front passenger air bag	SRS-41	Hood	BL-12
Front seat belt	SB-4	Hood lock system	BL-14
Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-47	Horn	WW-55
Front side air bag	SRS-42	HORN - Wiring diagram	WW-55
Front suspension	FSU-5	HSEAT - Wiring diagram	SE-15
Front washer	WW-4		I
Front wiper	WW-4		
FTTS - Wiring diagram	EC-279 , EC-283	IATS - Wiring diagram	EC-184
Fuel cut control (at no load high engine speed)	EC-28	Idle air volume learning	EC-51
Fuel filter replacement	FL-5	Idle mixture ratio	EC-40
Fuel gauge	DI-4	Idle speed	EC-40
Fuel level sensor	EC-387 , EC-389 , EC-391	Idle speed control (ISC)	EC-395 , EC-397
Fuel lid opener, electric	BL-47	Ignition coil	EM-31 , EC-581
Fuel line inspection	FL-3 , MA-17	Ignition control system	EC-581
Fuel precautions	GI-5	Ignition timing	EC-40
Fuel pressure check	EC-53	IGNSYS - Wiring diagram	EC-582
Fuel pressure release	EC-53	ILL - Wiring diagram	LT-234
Fuel pump	EC-599	Illumination	LT-224
Fuel pump and gauge	FL-5	In vehicle sensor	ATC-104 , ATC-115
Fuel system	FL-3	INJECT - Wiring diagram	EC-594
Fuel tank	FL-11	Injector	EC-593
Fuel tank temperature sensor	EC-277 , EC-282	Input clutch solenoid valve	AT-141 , AT-143
Fuel tank vacuum relief valve	EC-636	INT/L - Wiring diagram	LT-205
FUELB1 - Wiring diagram	EC-262 , EC-271	Intake air temperature sensor	EC-182 , EC-202
FUELB2 - Wiring diagram	EC-263 , EC-272	Intake door control linkage adjustment	ATC-80
Fuse	PG-16	Intake door motor	ATC-78 , ATC-121
Fuse and fusible link box	PG-78	Intake manifold	EM-21
Fusible link	PG-16	Intake manifold collector	EM-17
		Intake sensor	ATC-110 , ATC-117
		Intake valve timing control (Bank 1)	EC-148
		Intake valve timing control (Bank 2)	EC-148
		Intake valve timing control solenoid valve (Bank 1)	EC-411
		Intake valve timing control solenoid valve (Bank 2)	EC-411
		Integrated homelink transmitter	BL-140
		Interior	EI-32
		Interior lamp	LT-209

G

Gauges	DI-4
Glass	GW-11 , GW-52
GPS antenna	AV-35
Ground distribution	PG-31

H

H/LAMP - Wiring diagram	LT-18 , LT-48
Harness connector	PG-68
Harness layout	PG-43
Hazard warning lamp	LT-135
Headlamp	LT-7 , LT-37
Headlamp removal and installation	LT-63 , LT-132
Headlining - See Roof trim	EI-37

ALPHABETICAL INDEX

IPDM (Intelligent power distribution module engine room)	PG-17	Multiport fuel injection precautions	GI-6
IVCB1 - Wiring diagram	EC-412		
IVCB2 - Wiring diagram	EC-414		
IVIS (Infiniti vehicle immobilizer system) precautions ... GI-3			
J			
Joint connector (J/C)	PG-70		
K			
KEYLES - Wiring diagram	BL-60	O2H1B1 - Wiring diagram	EC-153
Knock sensor (KS)	EC-299	O2H1B2 - Wiring diagram	EC-155
KS - Wiring diagram	EC-300	O2H2B1 - Wiring diagram	EC-161
L			
LAN system circuit	ATC-68	O2H2B2 - Wiring diagram	EC-163
License lamp	LT-180	O2S1B1 - Wiring diagram	EC-209, EC-220, EC-233
Line pressure solenoid valve	AT-120	O2S1B2 - Wiring diagram	EC-211, EC-222, EC-235
Line pressure test (A/T)	AT-57	O2S2B1 - Wiring diagram	EC-242, EC-252, EC-452, EC-463
Liquid gasket application	LU-2, CO-2	O2S2B2 - Wiring diagram	EC-244, EC-254, EC-454, EC-465
Location of electrical units	PG-63	Oil cooler (engine)	LU-10
Lock, door	BL-83	Oil filter	LU-9
Low coast brake solenoid valve	AT-157, AT-159	Oil pan (engine)	EM-26
Low tire pressure warning system	WT-9	Oil pressure (engine)	LU-7
Lubricant (R134a) A/C	ATC-6, ATC-24	Oil pump (engine)	LU-12
Lubrication circuit (engine)	LU-4	Oil pump regulator valve (engine)	LU-12
Lubrication oil A/C	ATC-155	Oil seal replacement (front of final drive)	RFD-6
Luggage room lamp	LT-205	Oil seal replacement (side of final drive)	RFD-8
M			
M/ANT - Wiring diagram	AV-31	Operating cylinder (clutch)	CL-11
M/T major overhaul	MT-29	ORVR (On-board Refueling Vapor Recovery)	EC-640
M/T oil replacement	MT-10	Out side mirror	GW-84
M/T removal and installation	MT-19	Overheat	EC-475
MAFS - Wiring diagram	EC-170, EC-177	P	
Magnet clutch	ATC-86	P/SCKT - Wiring diagram	WW-53
MAIN - Wiring diagram	EC-138	Park/Neutral position switch	EC-538
Maintenance (engine)	MA-13	Park/neutral position switch (A/T)	AT-110
Major overhaul (Final drive)	RFD-16	Parking brake control	PB-3
Manual transmission oil replacement	MA-21, MA-22	Parking lamp	LT-180
Mass air flow sensor (MAFS)	EC-167, EC-175	PCV (positive crankcase ventilation)	EC-645
Master cylinder (clutch)	CL-8	PGC/V - Wiring diagram	EC-340, EC-499
Meter	DI-4	PHSB1 - Wiring diagram	EC-311
METER - Wiring diagram	DI-9	PHSB2 - Wiring diagram	EC-313
MIL data link connectors circuit	EC-631	Pinion bearing preload diff.	RFD-30
MIL/DL - Wiring diagram	EC-631	Pinion gear height diff.	RFD-24
MIRROR - Wiring diagram	GW-83	PNP/SW - Wiring diagram	EC-540
Mirror, door	GW-84	POS - Wiring diagram	EC-305
Mirror, out side	GW-84	POWER - Wiring diagram	PG-5
Misfire	EC-293	Power door lock	BL-18
Mode door control linkage adjustment	ATC-74	Power seat	SE-11
Mode door motor	ATC-72, ATC-126	Power socket	WW-53
Molding - See Exterior	EI-22, EI-24	Power steering fluid level	PS-6, MA-29
Multiport fuel injection (MFI) system	EC-25	Power steering gear	PS-17
		Power steering hydraulic pressure	PS-29

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Power steering oil pump	PS-29	SHIFT - Wiring diagram	AT-218
Power steering system bleeding	PS-6	Shift lock system	AT-217
Power supply routing	PG-4	Shift schedule	AT-317
Power window	GW-17	Shock absorber (front)	FSU-10
PRE/SE - Wiring diagram	EC-357, EC-363	Shock absorber (rear)	RSU-9
Precations for Leak detection dye	ATC-14	Side air bag (satellite) sensor	SRS-46
Precautions (General)	GI-4	Side bearing preload diff.	RFD-23
Pressure plate - See Clutch cover	CL-15	Side curtain air bag	SRS-43
Pressure switch 1	AT-147, AT-164	Side flange installation diff.	RFD-9
Pressure switch 2	AT-159	Side trim	EI-32
Pressure switch 3	AT-143, AT-166	SMJ (super multiple junction)	PG-73
Pressure switch 5	AT-151, AT-168	Spark plug	EM-32
Pressure switch 6	AT-155, AT-170	Spark plug replacement	MA-19
Pressure test (A/T)	AT-57	Specification value	EC-133
Propeller shaft	PR-5	Speedometer	DI-4
Propeller shaft inspection	MA-24	Spiral cable	SRS-39
Propeller shaft on vehicle service	PR-5	SRS - See Supplemental Restraint System	SRS-6
Propeller shaft vibration	PR-5	SRS - Wiring diagram	SRS-12
PS/SEN - Wiring diagram	EC-400	SRS Trouble diagnoses	SRS-8

R

Radiator	CO-11	Stabilizer bar (rear)	RSU-16
Radio - See Audio	AV-5	Stall test (A/T)	AT-56
Rear axle	RAX-6	Standardized relay	PG-75
Rear bumper	EI-17	START - Wiring diagram	SC-12
Rear combination lamp removal and installation	LT-203	Starter	SC-10
Rear cover packing replacement diff.	RFD-31	Starting system	SC-10
Rear suspension	RSU-5	Steering gear and linkage inspection	MA-28
Rear washer	WW-38	Steering linkage	PS-17
Rear window defogger	GW-57	Steering wheel and column	PS-8, PS-10
Rear wiper	WW-38	Steering wheel turning force	PS-8
Refrigerant connection precaution	ATC-6	Stop lamp	LT-174
Refrigerant discharging evacuating charging	ATC-133	Stop lamp switch	EC-546
Refrigerant general precaution	ATC-6	STOP/L - Wiring diagram	LT-174
Refrigerant lines	ATC-133	Sunload sensor	ATC-107, ATC-116
Refrigerant pressure sensor	EC-606, ATC-91, ATC-148	Supplemental Restraint System	SRS-6
Refrigeration cycle	ATC-19	Supplemental restraint system - Wiring diagram	SRS-12
Release bearing (clutch)	CL-13	Suspension	MA-29
Remote keyless entry system	BL-48	Symbols and abbreviations	GI-10, GI-23
Removal and installation (A/T)	AT-250		

S

SEAT - Wiring diagram	SE-11	Tachometer	DI-4
Seat belt inspection	SB-6	Tail lamp	LT-180
Seat belt pre-tensioner disposal	SRS-49	TAIL/L - Wiring diagram	LT-190
Seat belt, front	SB-4	TCM circuit diagram	AT-48
SEN/PW - Wiring diagram	EC-493	TCM inspection table	AT-91

ALPHABETICAL INDEX

Tie-rod	PS-17	Wheel sensor (VDC)	BRC-149
Timing chain	EM-49	Wheel sensors (ABS)	BRC-40
Tire rotation	WT-8 , MA-26	Wheel sensors (TCS)	BRC-87
Tooth contact diff.	RFD-27	WINDOW - Wiring diagram	GW-22
Torque converter installation	AT-251	Window, door	GW-52
Torque convertor clutch solenoid valve	AT-116 , AT-118	Windshield	GW-11
TPS1 - Wiring diagram	EC-288	WIP/R - Wiring diagram	WW-40
TPS2 - Wiring diagram	EC-194	WIPER - Wiring diagram	WW-18
TPS3 - Wiring diagram	EC-568	Wiper, front	WW-4
Transverse link (front)	FSU-13	Wiper, rear	WW-38
Triple meter	DI-30	Wiring Diagram (Cell code) list	PG-60
TRNSCV - Wiring diagram	BL-140	Wiring diagrams	GI-15
Trouble diagnoses	GI-11	Withdrawal lever (clutch)	CL-13
Turbine revolution sensor	AT-132	WT-T/WARN - Wiring diagram	WT-20
Turbocharger precautions	GI-6		
TURN - Wiring diagram	LT-146		
Turn signal lamp	LT-135		
Tyre pressure monitoring system - trouble diagnoses ..			
WT-19			
Tyre pressure monitoring system - wiring diagram			
WT-20			

U

Unified meter and A/C amp.	DI-53
Upper link (front susp.)	FSU-14

V

Vacuum hose (brake system)	BR-24
Vacuum hose drawing (Engine control)	EC-23
Valve clearance	EM-72
Valve guide	EM-84
Valve lifter	EM-69
Valve seat	EM-86
Valve spring	EM-88
Vanity mirror lamp	LT-204
VDC -Wiring diagram	BRC-106
Vehicle security (theft warning) system	BL-91
Vehicle speed sensor (VSS)	EC-393
VEHSEC - Wiring diagram	BL-103
VENT/V - Wiring diagram	EC-347 , EC-507

W

WARN - Wiring diagram	DI-70
Warning chime	DI-84
Warning lamps	DI-69
Washer, front	WW-4
Washer, rear	WW-38
Water pump	CO-19
Water temperature gauge	DI-4
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-5
Wheel balance	WT-7 , MA-25
Wheel bearing (front)	FAX-4
Wheel bearing (rear)	RAX-6
Wheel hub (front)	FAX-4
Wheel hub (rear)	RAX-6

A

B

C

D

E

F

G

H

I

J

K

L

IDX