

# SECTION **ATC**

## AUTOMATIC AIR CONDITIONER

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

### CONTENTS

<p><b>SERVICE INFORMATION</b> ..... 3</p> <p><b>PRECAUTIONS</b> ..... 3</p> <p style="padding-left: 20px;">Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....3</p> <p style="padding-left: 20px;">Precaution for Battery Service .....3</p> <p style="padding-left: 20px;">Precaution for Procedure without Cowl Top Cover.....3</p> <p style="padding-left: 20px;">Precaution for Working with HFC-134a (R-134a).....3</p> <p style="padding-left: 20px;">General Refrigerant Precaution .....4</p> <p style="padding-left: 20px;">Precaution for Refrigerant Connection .....4</p> <p style="padding-left: 20px;">Precaution for Service of Compressor .....9</p> <p style="padding-left: 20px;">Precaution for Service Equipment .....9</p> <p style="padding-left: 20px;">Precaution for Leak Detection Dye ..... 11</p> <p><b>PREPARATION</b> .....13</p> <p style="padding-left: 20px;">Special Service Tool ..... 13</p> <p style="padding-left: 20px;">HFC-134a (R-134a) Service Tool and Equipment... 13</p> <p style="padding-left: 20px;">Commercial Service Tool ..... 16</p> <p><b>REFRIGERATION SYSTEM</b> .....17</p> <p style="padding-left: 20px;">Refrigerant Cycle ..... 17</p> <p style="padding-left: 20px;">Refrigerant System Protection ..... 17</p> <p style="padding-left: 20px;">Component Part Location ..... 18</p> <p><b>LUBRICANT</b> .....19</p> <p style="padding-left: 20px;">Maintenance of Lubricant Quantity in Compressor... 19</p> <p><b>AIR CONDITIONER CONTROL</b> .....21</p> <p style="padding-left: 20px;">Description of Air Conditioner LAN Control System .....21</p> <p style="padding-left: 20px;">System Construction .....21</p> <p style="padding-left: 20px;">Description of Control System .....24</p> <p style="padding-left: 20px;">Control Operation .....24</p> <p style="padding-left: 20px;">Discharge Air Flow .....26</p> <p style="padding-left: 20px;">System Description .....27</p> <p style="padding-left: 20px;">CAN Communication System Description .....27</p> <p><b>TROUBLE DIAGNOSIS</b> .....28</p> <p style="padding-left: 20px;">CONSULT-III Function (BCM) .....28</p> <p style="padding-left: 20px;">How to Perform Trouble Diagnosis for Quick and Accurate Repair ..... 28</p>	<p style="padding-left: 20px;">Component Parts and Harness Connector Location .....30</p> <p style="padding-left: 20px;">Schematic .....32</p> <p style="padding-left: 20px;">Wiring Diagram - A/C - .....33</p> <p style="padding-left: 20px;">Auto Amp. Terminal and Reference Value .....38</p> <p style="padding-left: 20px;">Self-Diagnosis Function .....39</p> <p style="padding-left: 20px;">Operational Check .....45</p> <p style="padding-left: 20px;">Power Supply and Ground Circuit for Auto Amp ....46</p> <p style="padding-left: 20px;">LAN System Circuit .....48</p> <p style="padding-left: 20px;">Mode Door Motor Circuit .....51</p> <p style="padding-left: 20px;">Air Mix Door Motor Circuit .....53</p> <p style="padding-left: 20px;">Air Mix Door Motor PBR Circuit .....56</p> <p style="padding-left: 20px;">Intake Door Motor Circuit .....56</p> <p style="padding-left: 20px;">Blower Motor Circuit .....58</p> <p style="padding-left: 20px;">Magnet Clutch Circuit .....63</p> <p style="padding-left: 20px;">Insufficient Cooling .....68</p> <p style="padding-left: 20px;">Insufficient Heating .....75</p> <p style="padding-left: 20px;">Noise .....76</p> <p style="padding-left: 20px;">Self-Diagnosis .....77</p> <p style="padding-left: 20px;">Ambient Sensor Circuit .....78</p> <p style="padding-left: 20px;">In-vehicle Sensor Circuit .....80</p> <p style="padding-left: 20px;">Sunload Sensor Circuit .....83</p> <p style="padding-left: 20px;">Intake Sensor Circuit .....86</p> <p><b>A/C CONTROLLER</b> .....89</p> <p style="padding-left: 20px;">Removal and Installation .....89</p> <p style="padding-left: 20px;">Disassembly and Assembly .....89</p> <p><b>AUTO AMP</b> .....90</p> <p style="padding-left: 20px;">Removal and Installation of Unified Meter and A/C Amp .....90</p> <p><b>AMBIENT SENSOR</b> .....91</p> <p style="padding-left: 20px;">Removal and Installation .....91</p> <p><b>IN-VEHICLE SENSOR</b> .....92</p> <p style="padding-left: 20px;">Removal and Installation .....92</p> <p><b>SUNLOAD SENSOR</b> .....93</p> <p style="padding-left: 20px;">Removal and Installation .....93</p> <p><b>INTAKE SENSOR</b> .....94</p>
--	--

ATC

Removal and Installation .....	94	Removal and Installation of Compressor .....	111
<b>BLOWER UNIT .....</b>	<b>95</b>	Check Disc to Pulley Clearance .....	112
Removal and Installation .....	95	Removal and Installation of Low-Pressure Flexi- ble Hose and Pipe 2 .....	112
Disassembly and Assembly .....	96	Removal and Installation of High-pressure Flexi- ble Hose .....	114
<b>BLOWER MOTOR .....</b>	<b>97</b>	Removal and Installation of High-pressure Pipe 1 (Engine Compartment) .....	115
Removal and Installation .....	97	Removal and Installation of Low-Pressure Pipe 1 and High-pressure Pipe 2 .....	116
<b>INTAKE DOOR MOTOR .....</b>	<b>98</b>	Removal and Installation of Liquid Tank .....	117
Removal and Installation .....	98	Removal and Installation of Condenser .....	118
<b>HEATER &amp; COOLING UNIT ASSEMBLY .....</b>	<b>99</b>	Removal and Installation of Refrigerant Pressure Sensor .....	120
Removal and Installation .....	99	Removal and Installation of Evaporator .....	120
Disassembly and Assembly .....	101	Removal and Installation of Expansion Valve .....	121
<b>MODE DOOR MOTOR .....</b>	<b>103</b>	Checking of Refrigerant Leaks .....	121
Removal and Installation .....	103	Checking System for Leaks Using the Fluorescent Leak Detector .....	121
<b>AIR MIX DOOR MOTOR .....</b>	<b>104</b>	Dye Injection .....	122
Removal and Installation .....	104	Electrical Leak Detector .....	122
<b>HEATER CORE .....</b>	<b>105</b>		
Removal and Installation .....	105	<b>SERVICE DATA AND SPECIFICATIONS</b>	
<b>DUCTS AND GRILLES .....</b>	<b>106</b>	<b>(SDS) .....</b>	<b>125</b>
Removal and Installation .....	106	Compressor .....	125
<b>REFRIGERANT LINES .....</b>	<b>109</b>	Lubricant .....	125
HFC-134a (R-134a) Service Procedure .....	109	Refrigerant .....	125
Component .....	111	Engine Idling Speed .....	125
		Belt Tension .....	125

# PRECAUTIONS

< SERVICE INFORMATION >

## SERVICE INFORMATION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005874499

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SUPPLEMENTAL RESTRAINT SYSTEM" and "SEAT BELTS" of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SUPPLEMENTAL RESTRAINT SYSTEM".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution for Battery Service


INFOID:000000004655733

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

#### Precaution for Procedure without Cowl Top Cover

INFOID:000000004655734

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

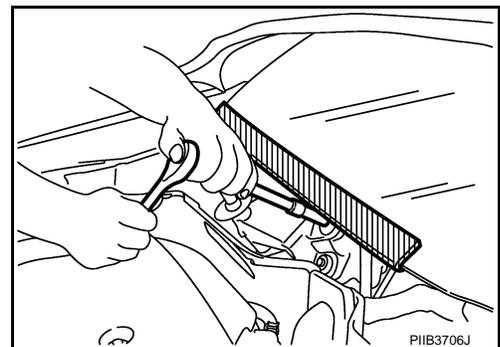

#### Precaution for Working with HFC-134a (R-134a)

INFOID:000000004655735

#### **CAUTION:**

- CFC-12 (R-12) refrigerant and HFC-134a (R-134a) refrigerant are not compatible. If the refrigerants are mixed and compressor malfunction is likely to occur, refer to "CONTAMINATED REFRIGERANT"

A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M  
N  
O  
P

# PRECAUTIONS

## < SERVICE INFORMATION >

below. To determine the purity of HFC-134a (R-134a) in the vehicle and recovery tank, use Refrigerant Recovery/Recycling Recharging equipment and Refrigerant Identifier.

- Use only specified lubricant for the HFC-134a (R-134a) A/C system and HFC-134a (R-134a) components. If lubricant other than that specified is used, compressor malfunction is likely to occur.
- The specified HFC-134a (R-134a) lubricant rapidly absorbs moisture from the atmosphere. The following handling precautions must be observed:
  - When removing refrigerant components from a vehicle, immediately cap (seal) the component to minimize the entry of moisture from the atmosphere.
  - When installing refrigerant components to a vehicle, never remove the caps (unseal) until just before connecting the components. Connect all refrigerant loop components as quickly as possible to minimize the entry of moisture into system.
  - Only use the specified lubricant from a sealed container. Immediately reseal containers of lubricant. Without proper sealing, lubricant will become moisture saturated and should not be used.
  - Never allow lubricant (Nissan A/C System Oil Type S) to come in contact with styrene foam parts. Damage may result.

## CONTAMINATED REFRIGERANT

If a refrigerant other than pure HFC-134a (R-134a) is identified in a vehicle, take appropriate steps shown below:

- Explain to the customer that environmental regulations prohibit the release of contaminated refrigerant into the atmosphere.
- Explain that recovery of the contaminated refrigerant could damage service equipment and refrigerant supply.
- Suggest the customer return the vehicle to the location of previous service where the contamination may have occurred.
- In case of repairing, recover the refrigerant using only **dedicated equipment and containers. Never recover contaminated refrigerant into the existing service equipment.** If the facility does not have dedicated recovery equipment, contact a local refrigerant product retailer for available service. This refrigerant must be disposed of in accordance with all federal and local regulations. In addition, replacement of all refrigerant system components on the vehicle is recommended.
- If the vehicle is within the warranty period, the air conditioner warranty is void. Please contact Nissan Customer Affairs for further assistance.

## General Refrigerant Precaution

INFOID:000000004655736

### **WARNING:**

- Avoid breathing A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose and throat. Remove HFC-134a (R-134a) from the A/C system, using certified service equipment meeting requirements of SAE J-2210 [HFC-134a (R-134a) recycling equipment], or J-2209 [HFC-134a (R-134a) recovery equipment]. If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from refrigerant and lubricant manufacturers.
- Never release refrigerant into the air. Use approved recovery/recycling equipment to capture the refrigerant every time an air conditioning system is discharged.
- Always wear eye and hand protection (goggles and gloves) when working with any refrigerant or air conditioning system.
- Never store or heat refrigerant containers above 52°C (126°F).
- Never heat a refrigerant container with an open flame; if container warming is required, place the bottom of the container in a warm pail of water.
- Never intentionally drop, puncture, or incinerate refrigerant containers.
- Keep refrigerant away from open flames: poisonous gas will be produced if refrigerant burns.
- Refrigerant will displace oxygen, therefore be certain to work in well ventilated areas to prevent suffocation.
- Never pressure test or leak test HFC-134a (R-134a) service equipment and/or vehicle air conditioning systems with compressed air during repair. Some mixtures of air and HFC-134a (R-134a) have been shown to be combustible at elevated pressures. These mixtures, if ignited, may cause injury or property damage. Additional health and safety information may be obtained from refrigerant manufacturers.

## Precaution for Refrigerant Connection

INFOID:000000004655737

A new type refrigerant connection has been introduced to all refrigerant lines except the following location.

# PRECAUTIONS

## < SERVICE INFORMATION >


- Expansion valve to evaporator
- Refrigerant pressure sensor to liquid tank

## ABOUT ONE-TOUCH JOINT

### Description

- One-touch joints are pipe joints which do not require tools during piping connection.
- Unlike conventional connection methods using union nuts and flanges, controlling tightening torque at connection point is not necessary.
- When removing a pipe joint, use a disconnecter.

### COMPONENT PARTS

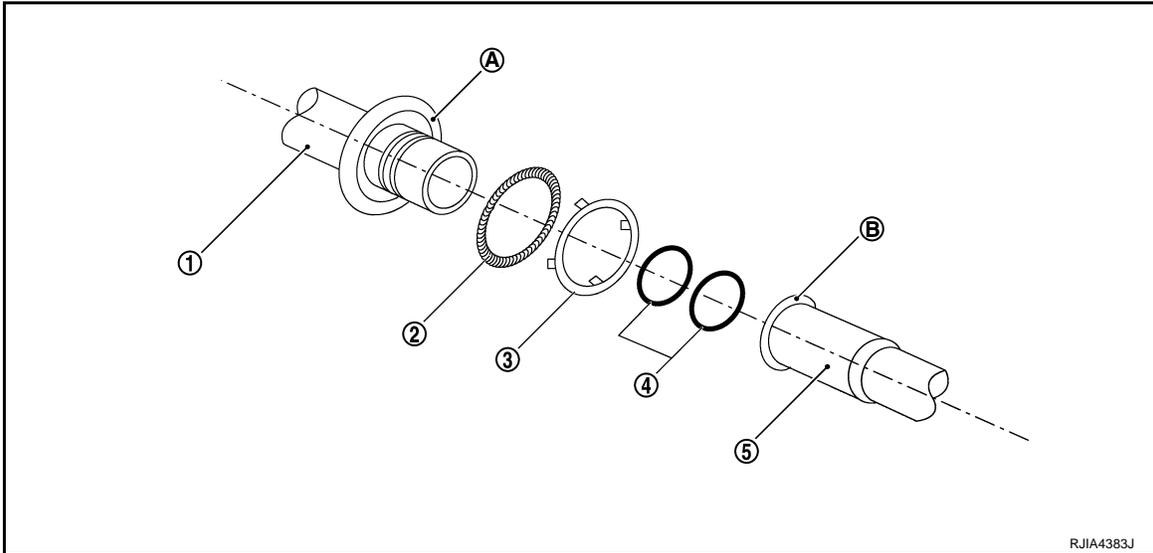

### FUNCTIONS OF COMPONENT PARTS

1	Pipe (Male-side)	<ul style="list-style-type: none"> <li>• Retains O-rings.</li> <li>• Retains garter spring in cage (A).</li> </ul>
2	Garter spring	Anchors female-side piping.
3	Indicator ring	When connection is made properly, this is ejected from male-side piping. (This part is no longer necessary after connection.)
4	O-ring	Seals connection point. (Not reusable)
5	Pipe (Female-side)	<ul style="list-style-type: none"> <li>• Seals connection by compressing O-rings.</li> <li>• Anchors piping connection using flare (B) and garter spring.</li> </ul>

### NOTE:

- Garter spring cannot be removed from cage of male-side piping.
- Indicator ring remains near piping connection point, however, this is not a malfunction. (This is to check piping connection during factory assembly.)

A  
B  
C  
D  
E  
F  
G  
H  
I

ATC

K

L

M

N


O

P

# PRECAUTIONS


## < SERVICE INFORMATION >

### REMOVAL

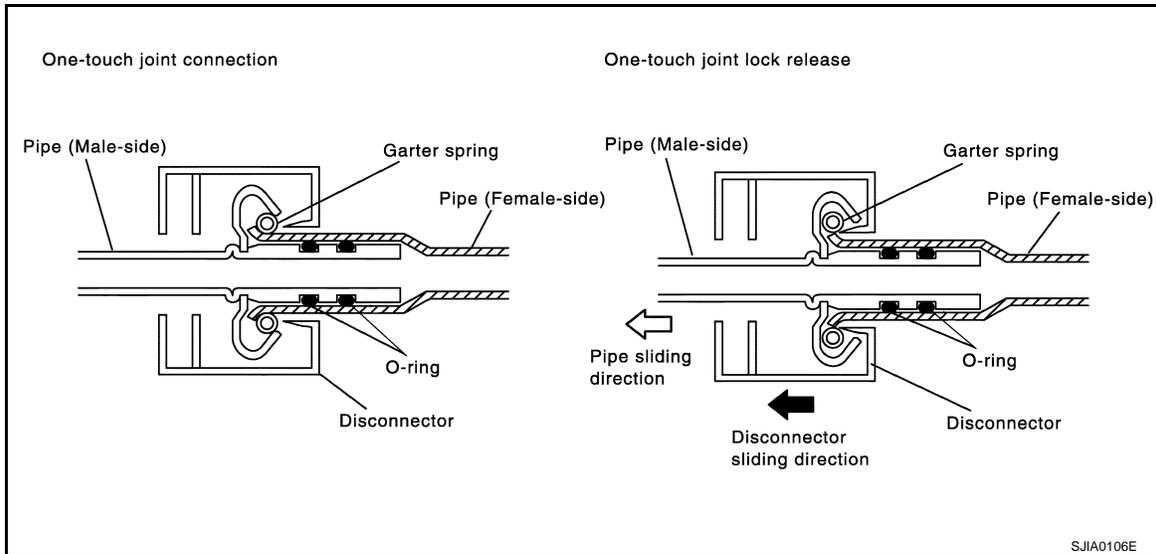

1. Clean piping connection point, and set a disconnecter.
2. Slide disconnecter in axial direction of piping, and stretch garter spring with tapered point of disconnecter.
3. Slide disconnecter farther so that inside diameter of garter spring becomes larger than outside diameter of female-side piping flare. Then male-side piping can be disconnected.

### INSTALLATION

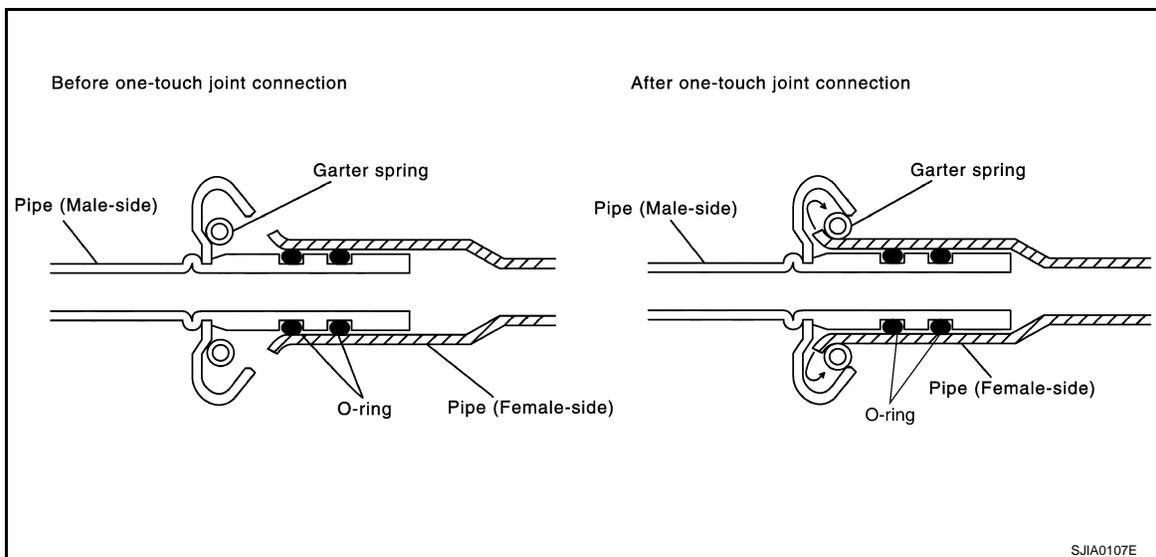

1. Clean piping connection points, and insert male-side piping into female-side piping.
2. Push inserted male-side piping harder so that female-side piping flare stretches garter spring.
3. If inside diameter of garter spring becomes larger than outside diameter of female-side piping flare, garter spring seats on flare. Then, it fits in between male-side piping cage and female-side piping flare to anchor piping connection point.

#### NOTE:

When garter spring seats on flare, and fits in between male-side piping cage and female-side piping flare, it clicks.

#### CAUTION:

- Female-side piping connection is thin and easy to deform. Slowly insert the male-side piping straight in axial direction.
- Insert piping securely until a click is heard.
- After piping connection is completed, pull male-side piping by hand to make sure that connection does not come loose.

#### NOTE:

One-touch joint connection is used in points below.

- Low-pressure pipe 2 to low-pressure pipe 1 (O-ring size: 16)
- Low-pressure pipe 2 to low-pressure flexible hose (O-ring size: 16)
- High-pressure flexible hose to condenser (O-ring size: 12)


# PRECAUTIONS

## < SERVICE INFORMATION >


- High-pressure pipe 1 to high-pressure pipe 2 (O-ring size: 8)
- High-pressure pipe 1 to condenser (O-ring size: 8)

## FEATURES OF NEW TYPE REFRIGERANT CONNECTION

- The O-ring has been relocated. It has also been provided with a groove for proper installation. This eliminates the possibility of the O-ring being caught in, or damaged by, the mating part. The sealing direction of the O-ring is now set vertically in relation to the contacting surface of the mating part to improve sealing characteristics.
- The reaction force of the O-ring will not occur in the direction that causes the joint to pull out, thereby facilitating piping connections.

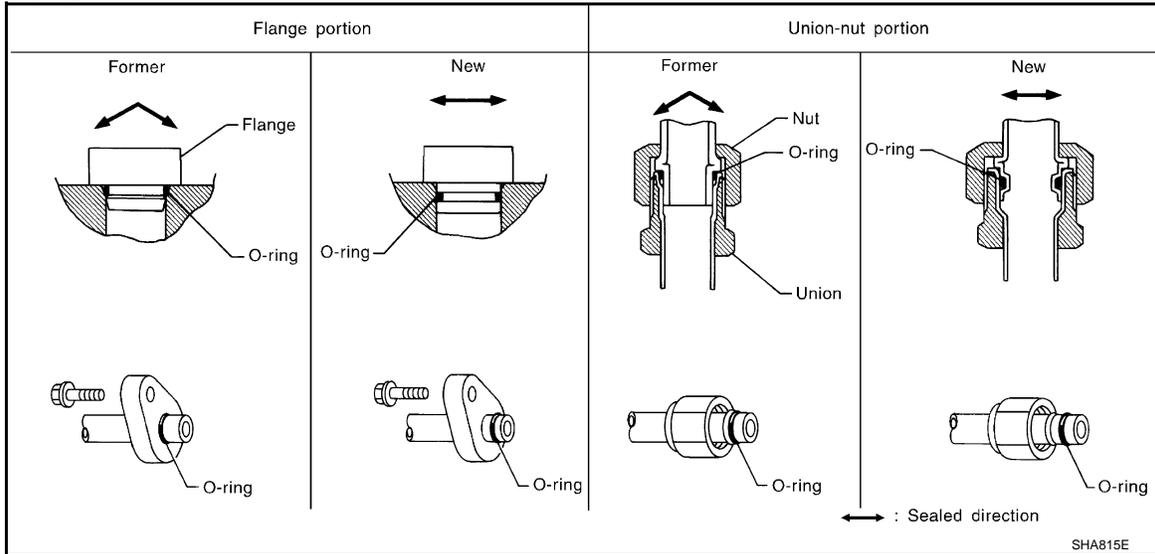

## O-RING AND REFRIGERANT CONNECTION

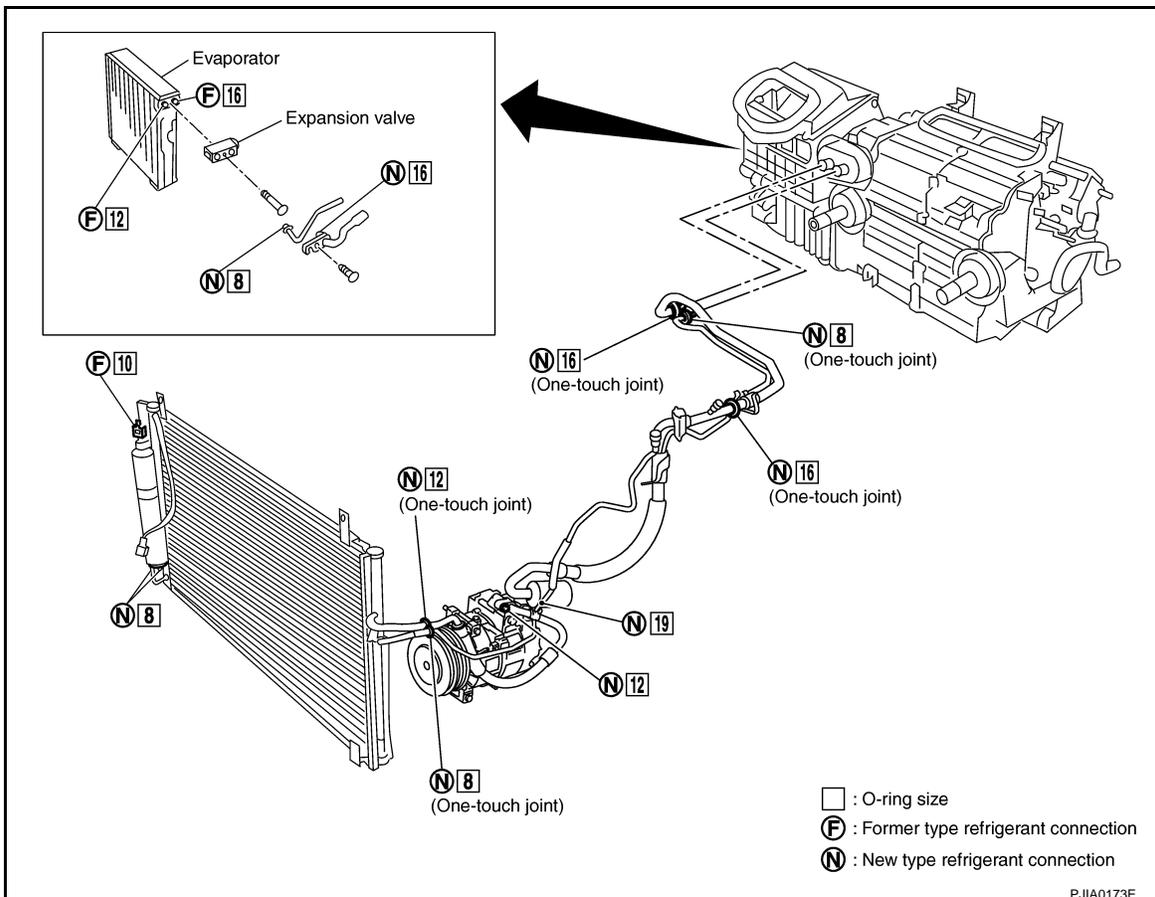

**CAUTION:**

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M  
N  
O  
P

ATC

# PRECAUTIONS

## < SERVICE INFORMATION >

The new and former refrigerant connections use different O-ring configurations. Never confuse O-rings since they are not interchangeable. If a wrong O-ring is installed, refrigerant may leak at the connection.

### O-Ring Part Numbers and Specifications

Connection type	Piping connection point		Part number	QTY	O-ring size	
New	Low-pressure pipe 2 to low-pressure pipe 1 (One-touch joint)		92473 N8221	2	16	
	Low-pressure pipe 2 to low-pressure flexible hose (One-touch joint)		92473 N8221	2	16	
	High-pressure pipe 1 to high-pressure pipe 2 (One-touch joint)		92471 N8221	2	8	
	Condenser to high-pressure flexible hose (One-touch joint)		92472 N8221	2	12	
	Condenser to high-pressure pipe 1 (One-touch joint)		92471 N8221	2	8	
	Low-pressure pipe 1 to expansion valve		92473 N8210	1	16	
	High-pressure pipe 2 to expansion valve		92471 N8210	1	8	
	Compressor to low-pressure flexible hose		92474 N8210	1	19	
	Compressor to high-pressure flexible hose		92472 N8210	1	12	
	Liquid tank to condenser pipe		Inlet	92471 N8210	1	8
Outlet			1			
Former	Refrigerant pressure sensor to liquid tank		J2476 89956	1	10	
	Expansion valve to evaporator		Inlet	92475 71L00	1	12
			Outlet	92475 72L00	1	16

### **WARNING:**

Make sure all refrigerant is discharged into the recycling equipment and the pressure in the system is less than atmospheric pressure. Then gradually loosen the discharge side hose fitting and remove it.

### **CAUTION:**

When replacing or cleaning refrigerant cycle components, observe the following.

- When the compressor is removed, store it in the same way as it is when mounted on the car. Failure to do so will cause lubricant to enter the low-pressure chamber.
- When connecting tubes, always use a torque wrench and a back-up wrench.
- After disconnecting tubes, immediately plug all openings to prevent entry of dust and moisture.
- When installing an air conditioner in the vehicle, connect the pipes at the final stage of the operation. Never remove the seal caps of pipes and other components until just before required for connection.
- Allow components stored in cool areas to warm to working area temperature before removing seal caps. This prevents condensation from forming inside A/C components.
- Thoroughly remove moisture from the refrigeration system before charging the refrigerant.
- Always replace used O-rings.
- When connecting tubes, apply lubricant to circle of the O-rings shown in illustration. Be careful not to apply lubricant to threaded portion.


**Name** : Nissan A/C system Oil Type S

- O-ring must be closely attached to the groove of tube.
- When replacing the O-ring, be careful not to damage O-ring and tube.
- Connect tube until a click can be heard, then tighten the nut or bolt by hand. Make sure that the O-ring is installed to tube correctly.

# PRECAUTIONS

## < SERVICE INFORMATION >

- After connecting line, perform leak test and make sure that there is no leakage from connections. When the refrigerant leaking point is found, disconnect that line and replace the O-ring. Then tighten connections of seal seat to the specified torque.

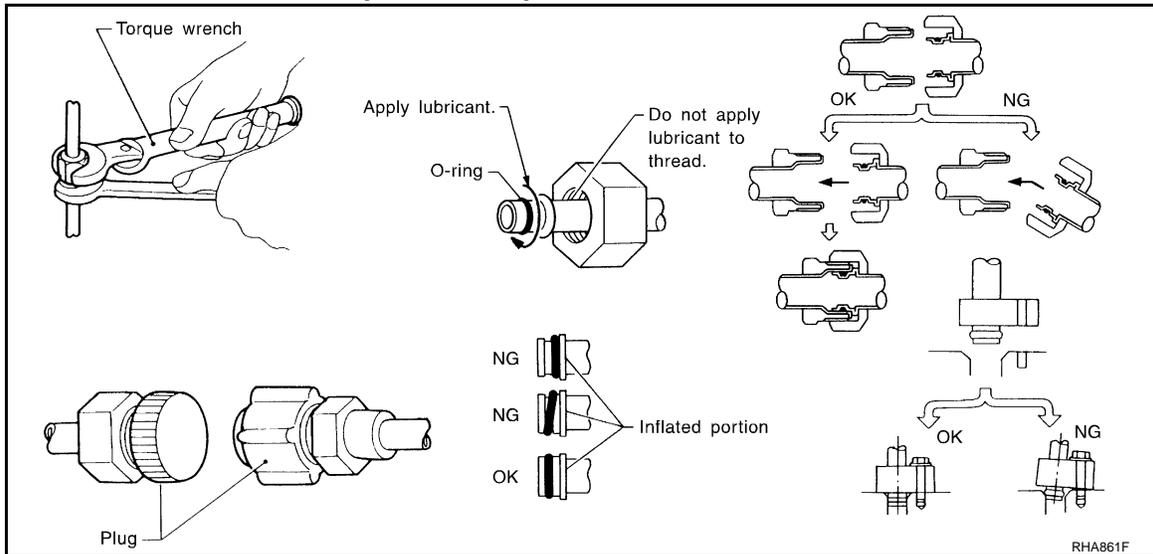

## Precaution for Service of Compressor

INFOID:000000004655738

- Plug all openings to prevent moisture and foreign matter from entering.
- When the compressor is removed, store it in the same way as it is when mounted on the car.
- When replacing or repairing compressor, follow "Maintenance of Lubricant Quantity in Compressor" exactly. Refer to [ATC-19, "Maintenance of Lubricant Quantity in Compressor"](#).
- Keep friction surfaces between clutch and pulley clean. If the surface is contaminated with lubricant, wipe it off by using a clean waste cloth moistened with thinner.
- After compressor service operation, turn the compressor shaft by hand more than five turns in both directions. This will equally distribute lubricant inside the compressor. After the compressor is installed, let the engine idle and operate the compressor for one hour.
- After replacing the compressor magnet clutch, apply voltage to the new one and check for normal operation.

## Precaution for Service Equipment

INFOID:000000004655739

### RECOVERY/RECYCLING EQUIPMENT

Be certain to follow the manufacturer's instructions for machine operation and machine maintenance. Never introduce any refrigerant other than that specified into the machine.

### ELECTRICAL LEAK DETECTOR

Be certain to follow the manufacturer's instructions for tester operation and tester maintenance.

### VACUUM PUMP

# PRECAUTIONS


## < SERVICE INFORMATION >

The lubricant contained inside the vacuum pump is not compatible with the specified lubricant for HFC-134a (R-134a) A/C systems. The vent side of the vacuum pump is exposed to atmospheric pressure. So the vacuum pump lubricant may migrate out of the pump into the service hose. This is possible when the pump is switched off after evacuation (vacuuming) and hose is connected to it.

To prevent this migration, use a manual valve placed near the hose-to-pump connection, as follows.


- Usually vacuum pumps have a manual isolator valve as part of the pump. Close this valve to isolate the service hose from the pump.
- For pumps without an isolator, use a hose equipped with a manual shut-off valve near the pump end. Close the valve to isolate the hose from the pump.
- If the hose has an automatic shut-off valve, disconnect the hose from the pump. As long as the hose is connected, the valve is open and lubricating oil may migrate.

Some one-way valves open when vacuum is applied and close under no vacuum condition. Such valves may restrict the pump's ability to pull a deep vacuum and are not recommended.

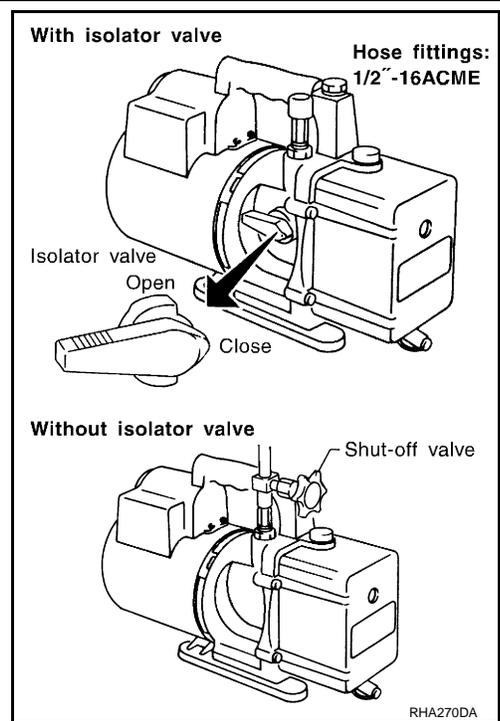


## MANIFOLD GAUGE SET

Be certain that the gauge face indicates HFC-134a or R-134a. Be sure the gauge set has 1/2\"-16 ACME threaded connections for service hoses. Confirm the set has been used only with refrigerant HFC-134a (R-134a) and specified lubricants.

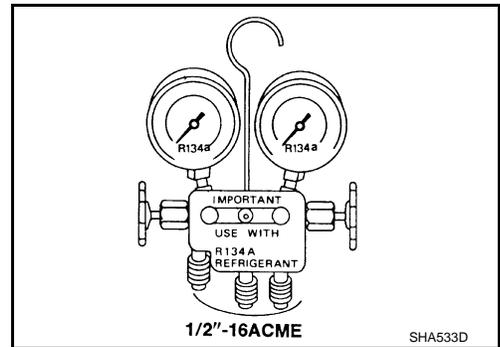

## SERVICE HOSES

Be certain that the service hoses display the markings described (colored hose with black stripe). All hoses must include positive shut-off devices (either manual or automatic) near the end of the hoses opposite to the manifold gauge.

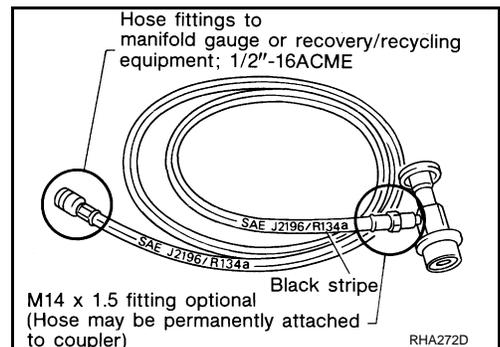


## SERVICE COUPLERS

# PRECAUTIONS

## < SERVICE INFORMATION >


Never attempt to connect HFC-134a (R-134a) service couplers to a CFC-12 (R-12) A/C system. The HFC-134a (R-134a) couplers will not properly connect to the CFC-12 (R-12) system. However, if an improper connection is attempted, discharging and contamination may occur.

Shut-off valve rotation	A/C service valve
Clockwise	Open
Counterclockwise	Close

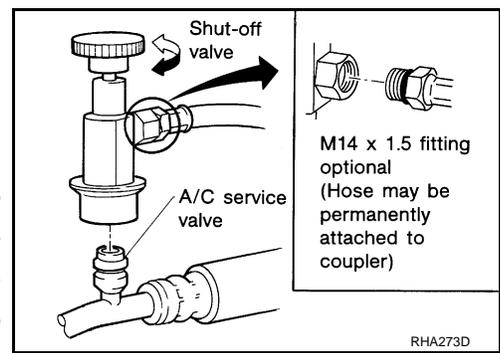

## REFRIGERANT WEIGHT SCALE

Verify that no refrigerant other than HFC-134a (R-134a) and specified lubricants have been used with the scale. If the scale controls refrigerant flow electronically, the hose fitting must be 1/2"-16 ACME.

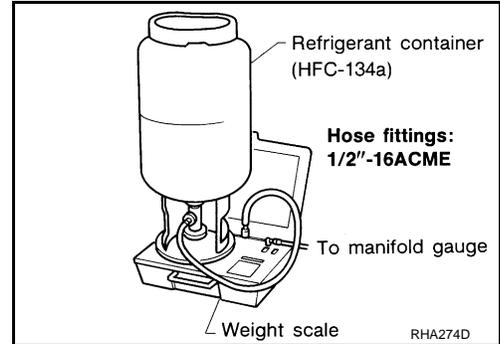

## CHARGING CYLINDER

Using a charging cylinder is not recommended. Refrigerant may be vented into air from cylinder's top valve when filling the cylinder with refrigerant. Also, the accuracy of the cylinder is generally less than that of an electrical scale or of quality recycle/recharge equipment.

## Precaution for Leak Detection Dye

INFOID:000000004655740

- The A/C system contains a fluorescent leak detection dye used for locating refrigerant leaks. An ultraviolet (UV) lamp is required to illuminate the dye when inspecting for leaks.
- Always wear fluorescence enhancing UV safety goggles to protect your eyes and enhance the visibility of the fluorescent dye.
- The fluorescent dye leak detector is not a replacement for an electrical leak detector (SST: J-41995). The fluorescent dye leak detector should be used in conjunction with an electrical leak detector (SST: J-41995) to pin-point refrigerant leaks.
- For the purpose of safety and customer's satisfaction, read and follow all manufacturer's operating instructions and precautions prior to performing the work.
- A compressor shaft seal should not necessarily be repaired because of dye seepage. The compressor shaft seal should only be repaired after confirming the leak with an electrical leak detector (SST: J-41995).
- Always remove any remaining dye from the leak area after repairs are completed to avoid a misdiagnosis during a future service.
- Never allow dye to come into contact with painted body panels or interior components. If dye is spilled, clean immediately with the approved dye cleaner. Fluorescent dye left on a surface for an extended period of time cannot be removed.
- Never spray the fluorescent dye cleaning agent on hot surfaces (engine exhaust manifold, etc.).
- Never use more than one refrigerant dye bottle (1/4 ounce /7.4 cc) per A/C system.
- Leak detection dyes for HFC-134a (R-134a) and CFC-12 (R-12) A/C systems are different. Never use HFC-134a (R-134a) leak detection dye in CFC-12 (R-12) A/C system or CFC-12 (R-12) leak detection dye in HFC-134a (R-134a) A/C system, or A/C system damage may result.
- The fluorescent properties of the dye will remain for three years or a little over unless a compressor malfunction occurs.

## IDENTIFICATION

### NOTE:

Vehicles with factory installed fluorescent dye have a green label.  
Vehicles without factory installed fluorescent dye have a blue label.

## IDENTIFICATION LABEL FOR VEHICLE

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M  
N  
O  
P

ATC

## PRECAUTIONS

< SERVICE INFORMATION >

---

Vehicles with factory installed fluorescent dye have the identification label on the front side of hood.

# PREPARATION


< SERVICE INFORMATION >

## PREPARATION

### Special Service Tool

INFOID:000000004655741

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

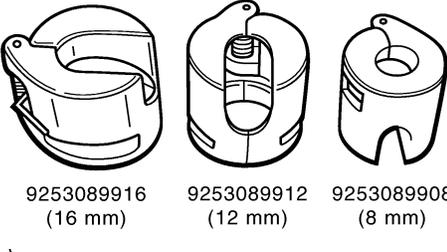Tool number (Kent-Moore No.) Tool name	Description
<p>9253089908 (for high-pressure pipe 1) (-) 9253089912 (for high-pressure flexible hose) (-) 9253089916 (for low-pressure pipe 1 and low-pressure flexible hose) (-) Disconnecter tool set (J-45815)</p>	<div style="text-align: center;">  <p>9253089916 (16 mm)    9253089912 (12 mm)    9253089908 (8 mm)</p> <p>Disconnecter tool set : J-45815</p> <p style="font-size: small;">SJIA1274E</p> </div> <p style="text-align: center;">Disconnect one-touch joint connection</p>

### HFC-134a (R-134a) Service Tool and Equipment

 
INFOID:000000004655742

Never mix HFC-134a (R-134a) refrigerant and/or its specified lubricant with CFC-12 (R-12) refrigerant and/or its lubricant.

Separate and non-interchangeable service equipment must be used for handling each type of refrigerant/lubricant.




Refrigerant container fittings, service hose fittings and service equipment fittings (equipment which handles refrigerant and/or lubricant) are different between CFC-12 (R-12) and HFC-134a (R-134a). This is to avoid mixed use of the refrigerants/lubricant.

Never use adapters that convert one size fitting to another: refrigerant/lubricant contamination occurs and compressor malfunction may result.

Tool number (Kent-Moore No.) Tool name	Description
<p>HFC-134a (R-134a) refrigerant</p>	<div style="text-align: center;">  <p>S-NT196</p> </div> <p>Container color: Light blue Container marking: HFC-134a (R-134a) Fitting size: Thread size</p> <ul style="list-style-type: none"> <li>• Large container 1/2"-16 ACME</li> </ul>
<p>Nissan A/C System Oil Type S (DH-PS)</p>	<div style="text-align: center;">  <p>S-NT197</p> </div> <p>Type: Polyalkylene glycol oil (PAG), type S (DH-PS) Application: HFC-134a (R-134a) wobble (swash) plate compressors (Nissan only) Capacity: 40 m ℓ (1.4 US fl oz, 1.4 Imp fl oz)</p>





# PREPARATION
 
## < SERVICE INFORMATION >

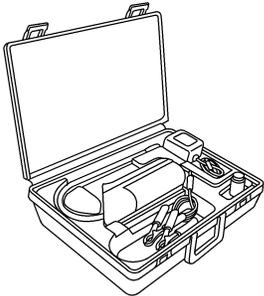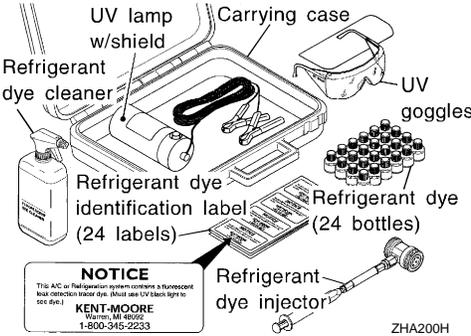Tool number (Kent-Moore No.) Tool name	Description
<p>(ACR2005-NI) ACR5 A/C Service Center</p>	<p style="text-align: center;">   <small>WJIA0293E</small> </p> <p>Function: Refrigerant recovery, recycling and recharging</p>
<p>(J-41995) Electrical A/C leak detector</p>	<p style="text-align: center;">   <small>AHA281A</small> </p> <p>Power supply: DC 12 V (Battery terminal)</p>
<p>(J-43926) Refrigerant dye leak detection kit Kit includes: (J-42220) UV lamp and UV safety goggles (J-41459) HFC-134a (R-134a) dye injector Use with J-41447, 1/4 ounce bottle (J-41447) HFC-134a (R-134a) fluorescent leak detection dye (Box of 24, 1/4 ounce bottles) (J-43872) Refrigerant dye cleaner</p>	<p style="text-align: center;">   <small>ZHA200H</small> </p> <p>Power supply: DC 12 V (Battery terminal)</p>
<p>(J-42220) UV lamp and UV safety goggles</p>	<p style="text-align: center;">   <small>SHA438F</small> </p> <p>Power supply: DC 12 V (Battery terminal) For checking refrigerant leak when fluorescent dye is installed in A/C system Includes: UV lamp and UV safety goggles</p>
<p>(J-41447) HFC-134a (R-134a) fluorescent leak detection dye (Box of 24, 1/4 ounce bottles)</p>	<p style="text-align: center;">   <small>SHA439F</small> </p> <p>Application: For HFC-134a (R-134a) PAG oil Container: 1/4 ounce (7.4 cc) bottle (Includes self-adhesive dye identification labels for affixing to vehicle after charging system with dye.)</p>
<p>(J-41459) HFC-134a (R-134a) dye injector Use with J-41447, 1/4 ounce bottle</p>	<p style="text-align: center;">   <small>SHA440F</small> </p> <p>For injecting 1/4 ounce of fluorescent leak detection dye into A/C system</p>

# PREPARATION

## < SERVICE INFORMATION >

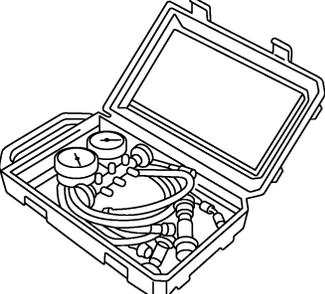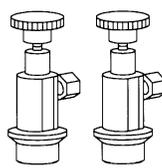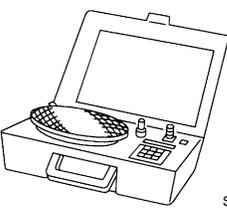
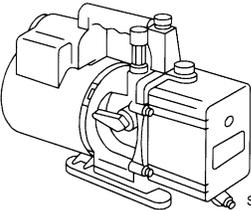
Tool number (Kent-Moore No.) Tool name	Description	A
<p>(J-43872) Refrigerant dye cleaner</p> <div style="text-align: center;">  <p>SHA441F</p> </div>	For cleaning dye spills	B C
<p>(J-39183) Manifold gauge set (with hoses and couplers)</p> <div style="text-align: center;">  <p>RJIA0196E</p> </div>	<p>Identification:</p> <ul style="list-style-type: none"> <li>The gauge face indicates HFC-134a (R-134a).</li> </ul> <p>Fitting size: Thread size</p> <ul style="list-style-type: none"> <li>1/2"-16 ACME</li> </ul>	D E F G
<p>Service hoses</p> <ul style="list-style-type: none"> <li>High-pressure side hose (J-39501-72)</li> <li>Low-pressure side hose (J-39502-72)</li> <li>Utility hose (J-39476-72)</li> </ul> <div style="text-align: center;">  <p>S-NT201</p> </div>	<p>Hose color:</p> <ul style="list-style-type: none"> <li>Low hose: Blue with black stripe</li> <li>High hose: Red with black stripe</li> <li>Utility hose: Yellow with black stripe or green with black stripe</li> </ul> <p>Hose fitting to gauge:</p> <ul style="list-style-type: none"> <li>1/2"-16 ACME</li> </ul>	H I
<p>Service couplers</p> <ul style="list-style-type: none"> <li>High-pressure side coupler (J-39500-20)</li> <li>Low-pressure side coupler (J-39500-24)</li> </ul> <div style="text-align: center;">  <p>S-NT202</p> </div>	<p>Hose fitting to service hose: M14 x 1.5 fitting is optional or permanently attached.</p>	ATC K L
<p>(J-39650) Refrigerant weight scale</p> <div style="text-align: center;">  <p>S-NT200</p> </div>	<p>For measuring of refrigerant</p> <p>Fitting size: Thread size</p> <p>1/2"-16 ACME</p>	M N
<p>(J-39649) Vacuum pump (Including the isolator valve)</p> <div style="text-align: center;">  <p>S-NT203</p> </div>	<p>Capacity:</p> <ul style="list-style-type: none"> <li>Air displacement: 4 CFM</li> <li>Micron rating: 20 microns</li> <li>Oil capacity: 482 g (17 oz)</li> </ul> <p>Fitting size: Thread size</p> <ul style="list-style-type: none"> <li>1/2"-16 ACME</li> </ul>	O P

# PREPARATION

< SERVICE INFORMATION >

## Commercial Service Tool

INFOID:000000004655743

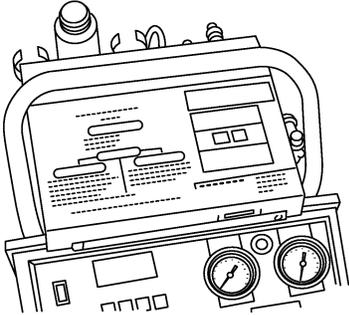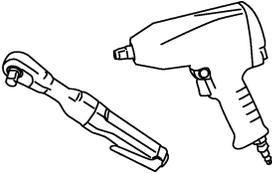Tool name	Description
<p data-bbox="168 449 483 478">Refrigerant identifier equipment</p>  <p data-bbox="943 617 1013 636">RJIA0197E</p>	<p data-bbox="1081 436 1422 491">Checking for refrigerant purity and system contamination</p>
<p data-bbox="168 756 277 785">Power tool</p>  <p data-bbox="870 869 940 888">PBIC0190E</p>	<p data-bbox="1081 756 1365 785">For loosening bolts and nuts</p>

# REFRIGERATION SYSTEM

< SERVICE INFORMATION >

## REFRIGERATION SYSTEM

### Refrigerant Cycle

INFOID:000000004655744

#### REFRIGERANT FLOW

The refrigerant flows from the compressor, through the condenser with liquid tank, through the evaporator, and back to the compressor. The refrigerant evaporation in the evaporator is controlled by an externally equalized expansion valve, located inside the evaporator case.

#### FREEZE PROTECTION

To prevent evaporator frozen up, the evaporator air temperature is monitored, and the voltage signal to the unified meter and A/C amp. will make the A/C relay go OFF and stop the compressor.

### Refrigerant System Protection


INFOID:000000004655745

#### REFRIGERANT PRESSURE SENSOR

The refrigerant system is protected against excessively high- or low-pressures by the refrigerant pressure sensor, located on the liquid tank. If the system pressure rises above, or falls below the specifications, the refrigerant pressure sensor detects the pressure inside the refrigerant line and sends the voltage signal to the ECM. ECM makes the A/C relay go OFF and stops the compressor when pressure on the high-pressure side detected by refrigerant pressure sensor is over about 2,746 kPa (28 kg/cm<sup>2</sup>, 398 psi), or below about 134 kPa (1.4 kg/cm<sup>2</sup>, 19 psi).

#### PRESSURE RELIEF VALVE

The refrigerant system is also protected by a pressure relief valve, located in the rear head of the compressor. When the pressure of refrigerant in the system increases to an unusual level [more than 3,600 kPa (36.7 kg/cm<sup>2</sup>, 522 psi)], the release port on the pressure relief valve automatically opens and releases refrigerant into the atmosphere.

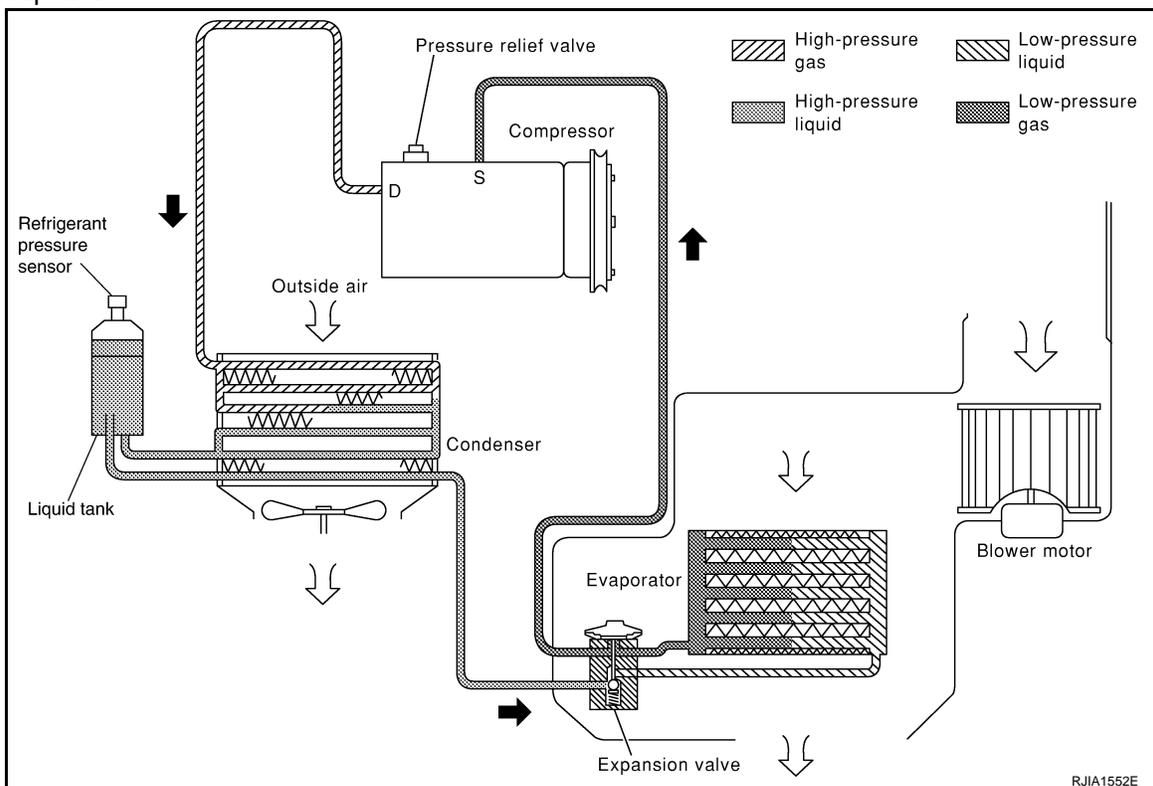

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M  
N  
O  
P


ATC

# REFRIGERATION SYSTEM

< SERVICE INFORMATION >

## Component Part Location

INFOID:000000004655746

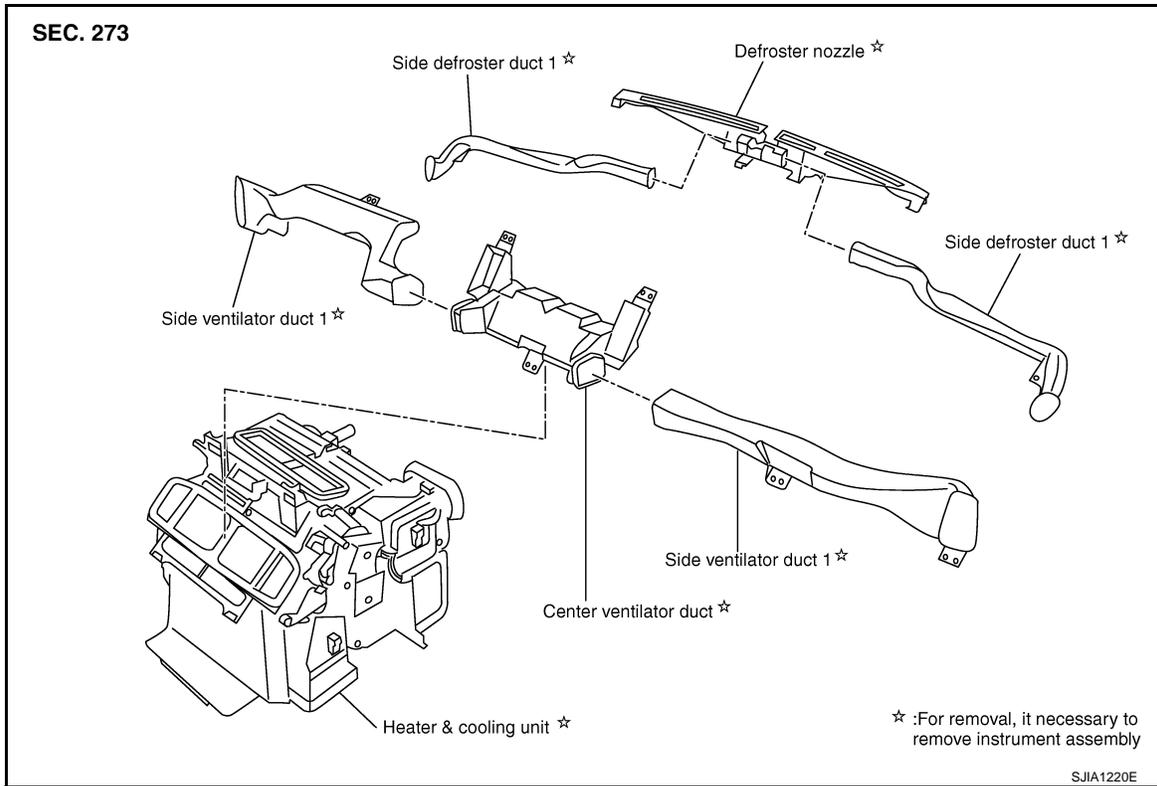

# LUBRICANT

< SERVICE INFORMATION >

## LUBRICANT

### Maintenance of Lubricant Quantity in Compressor

INFOID:000000004655747

The lubricant in the compressor circulates through the system with the refrigerant. Add lubricant to compressor when replacing any component or after a large refrigerant leakage occurred. It is important to maintain the specified amount.

If lubricant quantity is not maintained properly, the following malfunctions may result:

- Lack of lubricant: May lead to a seized compressor.
- Excessive lubricant: Inadequate cooling (thermal exchange interference)

### LUBRICANT

**Name** : Nissan A/C System Oil Type S

### LUBRICANT RETURN OPERATION

Adjust the lubricant quantity according to the test group shown below.

#### 1. CHECK LUBRICANT RETURN OPERATION

Can lubricant return operation be performed?

- A/C system works properly.
- There is no evidence of a large amount of lubricant leakage.

**CAUTION:**

**If excessive lubricant leakage is noted, never perform the lubricant return operation.**

#### OK or NG

- OK >> GO TO 2.  
NG >> GO TO 3.

#### 2. PERFORM LUBRICANT RETURN OPERATION, PROCEEDING AS FOLLOWS

1. Start the engine, and set to the following conditions:
  - Engine speed: Idling to 1,200 rpm
  - A/C switch: ON
  - Blower speed: Max. position
  - Temp. control: Optional [Set so that intake air temperature is 25 to 30°C (77 to 86°F).]
  - Intake position: Recirculation (REC)
2. Perform lubricant return operation for about 10 minutes.
3. Stop the engine.

>> GO TO 3.

#### 3. CHECK REPLACEMENT PART

Should the compressor be replaced?

- YES >> Go to "LUBRICANT ADJUSTING PROCEDURE FOR COMPRESSOR REPLACEMENT".  
NO >> Go to "LUBRICANT ADJUSTING PROCEDURE FOR COMPONENTS REPLACEMENT EXCEPT COMPRESSOR".

### LUBRICANT ADJUSTING PROCEDURE FOR COMPONENTS REPLACEMENT EXCEPT COMPRESSOR

After replacing any of the following major components, add the correct amount of lubricant to the system.  
Amount of lubricant to be added:

Part replaced	Lubricant to be added to system		Remarks
	Amount of lubricant m ℓ (US fl oz, Imp fl oz)		
Evaporator	75 (2.5, 2.6)		—
Condenser	35 (1.2, 1.2)		—
Liquid tank	10 (0.3, 0.4)		—

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M  
N  
O  
P

ATC

# LUBRICANT

## < SERVICE INFORMATION >


Part replaced	Lubricant to be added to system	Remarks
	Amount of lubricant m ℓ (US fl oz, Imp fl oz)	
In case of refrigerant leak	30 (1.0, 1.1)	Large leak
	—	Small leak <sup>*1</sup>

\*1: If the refrigerant leak is small, no addition of lubricant is needed.

### LUBRICANT ADJUSTING PROCEDURE FOR COMPRESSOR REPLACEMENT

- Before connecting recovery/recycling/recharging equipment to vehicle, check recovery/recycling/recharging equipment gauges. No refrigerant pressure should be displayed. If NG, recover refrigerant from equipment lines.
- Connect recovery/recycling/recharging equipment to vehicle. Confirm refrigerant purity in supply tank using recovery/recycling/recharging equipment and refrigerant identifier. If NG, refer to [ATC-3. "Precaution for Working with HFC-134a \(R-134a\)"](#).
- Confirm refrigerant purity in vehicle A/C system using recovery/recycling/recharging equipment and refrigerant identifier. If NG, refer to [ATC-3. "Precaution for Working with HFC-134a \(R-134a\)"](#).
- Discharge refrigerant into the refrigerant recovery/recycling equipment. Measure lubricant discharged into the recovery/recycling equipment.
- Drain the lubricant from the old (removed) compressor into a graduated container and recover the amount of lubricant drained.
- Drain the lubricant from the new compressor into a separate, clean container.
- Measure an amount of new lubricant installed equal to amount drained from old compressor. Add this lubricant to new compressor through the suction port opening.
- Measure an amount of new lubricant equal to the amount recovered during discharging. Add this lubricant to new compressor through the suction port opening.
- If the liquid tank also needs to be replaced, add another 5 m ℓ (0.2 US fl oz, 0.2 Imp fl oz) of lubricant at this time.

Do not add this 5 m ℓ (0.2 US fl oz, 0.2 Imp fl oz) of lubricant when replaces the compressor only.

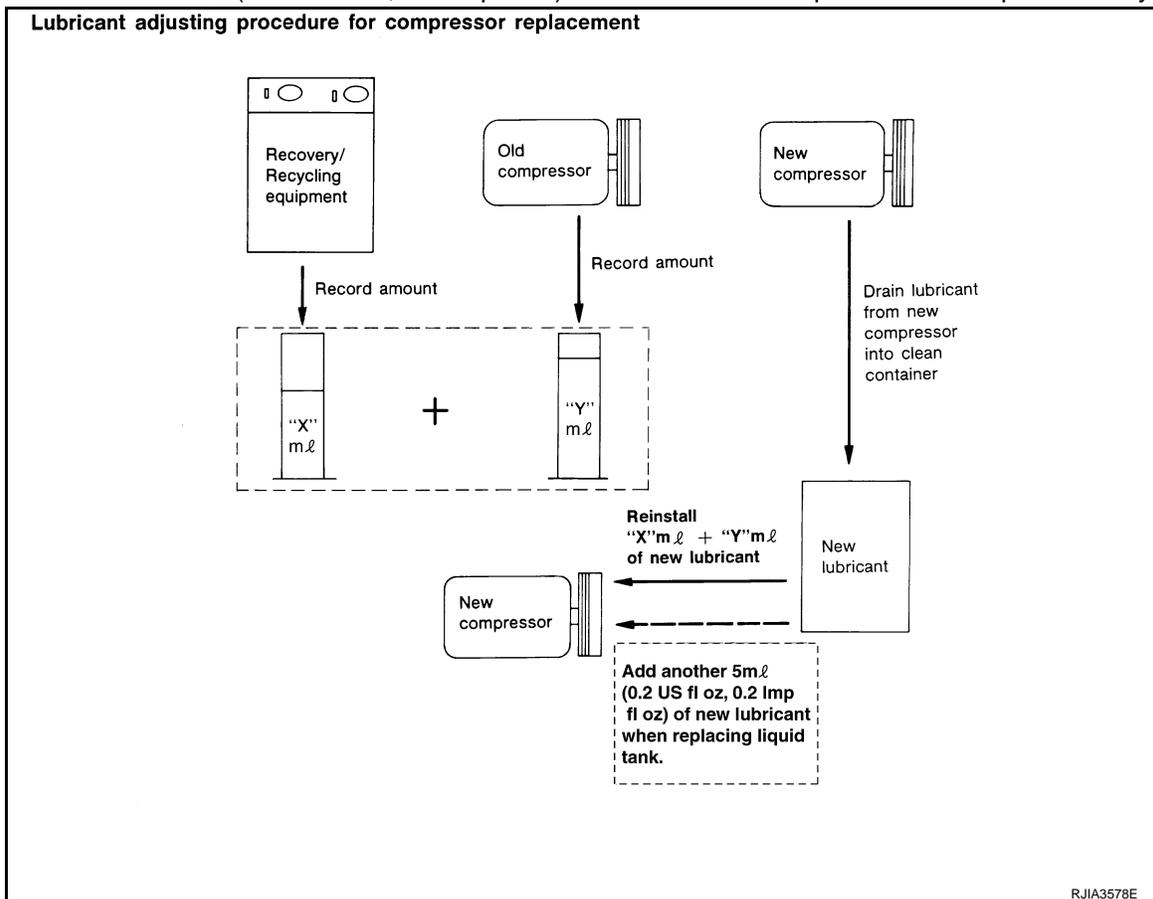

# AIR CONDITIONER CONTROL

< SERVICE INFORMATION >


## AIR CONDITIONER CONTROL

### Description of Air Conditioner LAN Control System

INFOID:000000004655748

The LAN (Local Area Network) system consists of unified meter and A/C amp., mode door motor, air mix door motor and intake door motor.

A configuration of these components is shown in the figure below.

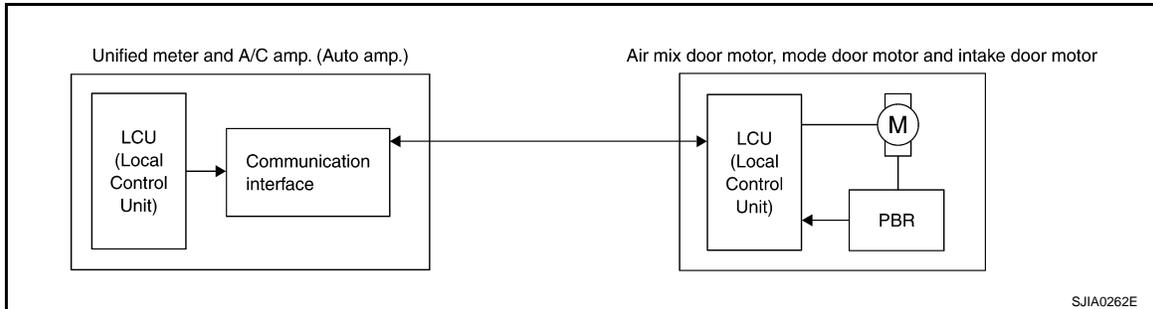

### System Construction


INFOID:000000004655749

A small network is constructed between unified meter and A/C amp., air mix door motor, mode door motor and intake door motor. The unified meter and A/C amp. and motors are connected by data transmission lines and motor power supply lines. The LAN network is built through the ground circuits of each door motor.

Addresses, motor opening angle signals, motor stop signals and error checking messages are all transmitted through the data transmission lines connecting the unified meter and A/C amp. and each door motor.

The following functions are contained in LCUs built into the air mix door motor, the mode door motor and the intake door motor.

- Address
- Motor opening angle signal
- Data transmission
- Motor stop and drive decision
- Opening angle sensor (PBR function)
- Comparison
- Decision (Unified meter and A/C amp. indicated value and motor opening angle comparison)

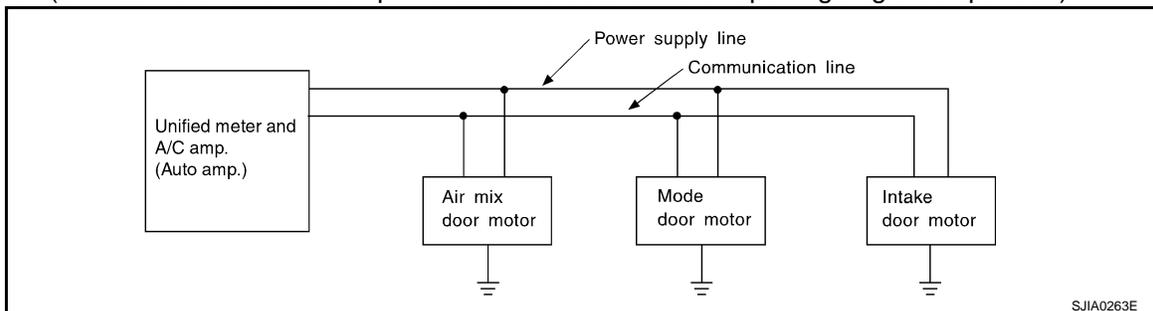

### OPERATION


The unified meter and A/C amp. receives data from each of the sensors. The unified meter and A/C amp. sends mode door, air mix door and intake door opening angle data to the mode door motor LCU, air mix door motor LCU and intake door motor LCU.

The mode door motor, air mix door motor and intake door motor read their respective signals according to the address signal. Opening angle indication signals received from the unified meter and A/C amp. and each of the motor position sensors is compared by the LCUs in each motor with the existing decision and opening

# AIR CONDITIONER CONTROL

## < SERVICE INFORMATION >

angles. Subsequently, HOT/COLD, DEF/VENT and FRE/REC operation is selected. The new selection data are returned to the unified meter and A/C amp.

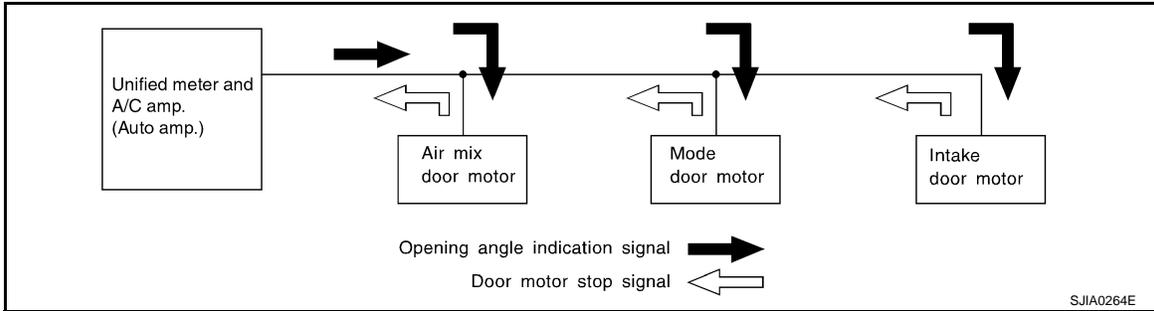

## TRANSMISSION DATA AND TRANSMISSION ORDER

Unified meter and A/C amp. data is transmitted consecutively to each of the door motors following the form shown in figure below.

**Start:**

Initial compulsory signal sent to each of the door motors.

**Address:**

Data sent from the unified meter and A/C amp. are selected according to data-based decisions made by the air mix door motor, mode door motor and intake door motor.

If the addresses are identical, the opening angle data and error check signals are received by the door motor LCUs. The LCUs then make the appropriate error decision. If the opening angle data have no error, door control begins.

If an error exists, the received data are rejected and corrected data received. Finally, door control is based upon the corrected opening angle data.

**Opening Angle:**

Data that shows the indicated door opening angle of each door motor.


**Error Check:**

In this procedure, transmitted and received data are checked for errors. Error data are then compiled. The error check prevents corrupted data from being used by the air mix door motor, the mode door motor and the intake door motor. Error data can be related to the following symptoms.

- Malfunction of electrical frequency
- Poor electrical connections
- Signal leakage from transmission lines
- Signal level fluctuation

**Stop Signal:**

At the end of each transmission, a stop operation, in-operation, or internal malfunction message is delivered to the unified meter and A/C amp. This completes one data transmission and control cycle.

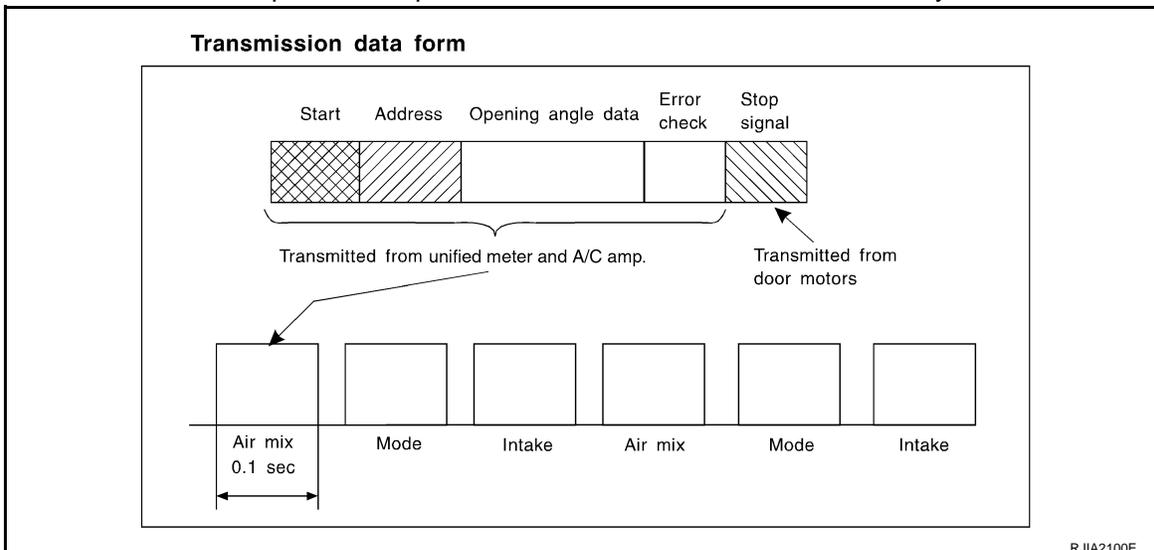

## AIR MIX DOOR CONTROL (AUTOMATIC TEMPERATURE CONTROL)

# AIR CONDITIONER CONTROL

## < SERVICE INFORMATION >

The air mix door is automatically controlled so that in-vehicle temperature is maintained at a predetermined value by the temperature setting, ambient temperature, in-vehicle temperature and amount of sunload.

### FAN SPEED CONTROL

Blower speed is automatically controlled by the temperature setting, ambient temperature, in-vehicle temperature, intake temperature, amount of sunload and air mix door position.

With FAN control dial set to AUTO, the blower motor starts to gradually increase air flow volume.

When engine coolant temperature is low, the blower motor operation is delayed to prevent cool air from flowing.


### INTAKE DOOR CONTROL

The intake doors are automatically controlled by the temperature setting, ambient temperature, in-vehicle temperature, intake temperature, amount of sunload and ON/OFF operation of the compressor.

### MODE DOOR CONTROL

The mode door is automatically controlled by the temperature setting, ambient temperature, in-vehicle temperature, intake temperature and amount of sunload.

### MAGNET CLUTCH CONTROL

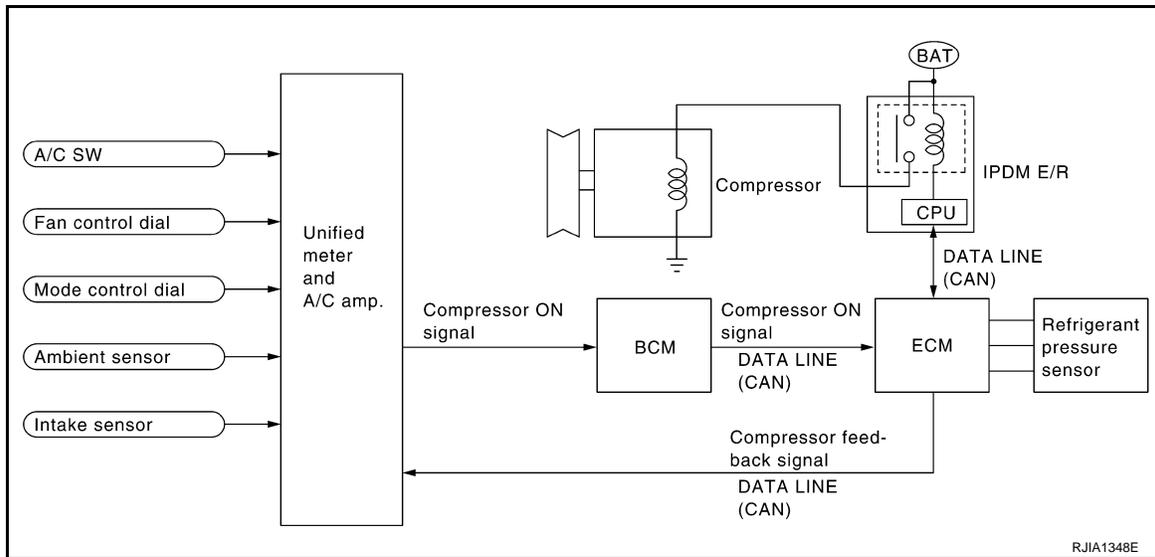

When A/C switch is pressed, turn fan control dial to ON or set mode control dial to D/F, D/F2 or DEF position, unified meter and A/C amp. transmits compressor ON signal to BCM.

BCM sends compressor ON signal to ECM, via CAN communication.

ECM judges whether compressor can be turned ON, based on each sensor status (refrigerant-pressure sensor signal, throttle angle, etc.). If it judges compressor can be turned ON, it sends compressor ON signal to IPDM E/R, via CAN communication.

Upon receipt of compressor ON signal from ECM, IPDM E/R turns air conditioner relay ON to operate compressor.

When sending compressor ON signal to IPDM E/R via CAN communication line, ECM simultaneously sends compressor feedback signal to unified meter and A/C amp. via CAN communication line.

Unified meter and A/C amp., then, uses input compressor feedback signal to control air inlet.

### SELF-DIAGNOSIS SYSTEM

The self-diagnosis system is built into the unified meter and A/C amp. to quickly locate the cause of malfunctions.


# AIR CONDITIONER CONTROL

< SERVICE INFORMATION >

## Description of Control System

INFOID:000000004655750


The control system consists of input sensors, switches, unified meter and A/C amp. (microcomputer) and outputs. The relationship of these components is shown in the figure below:

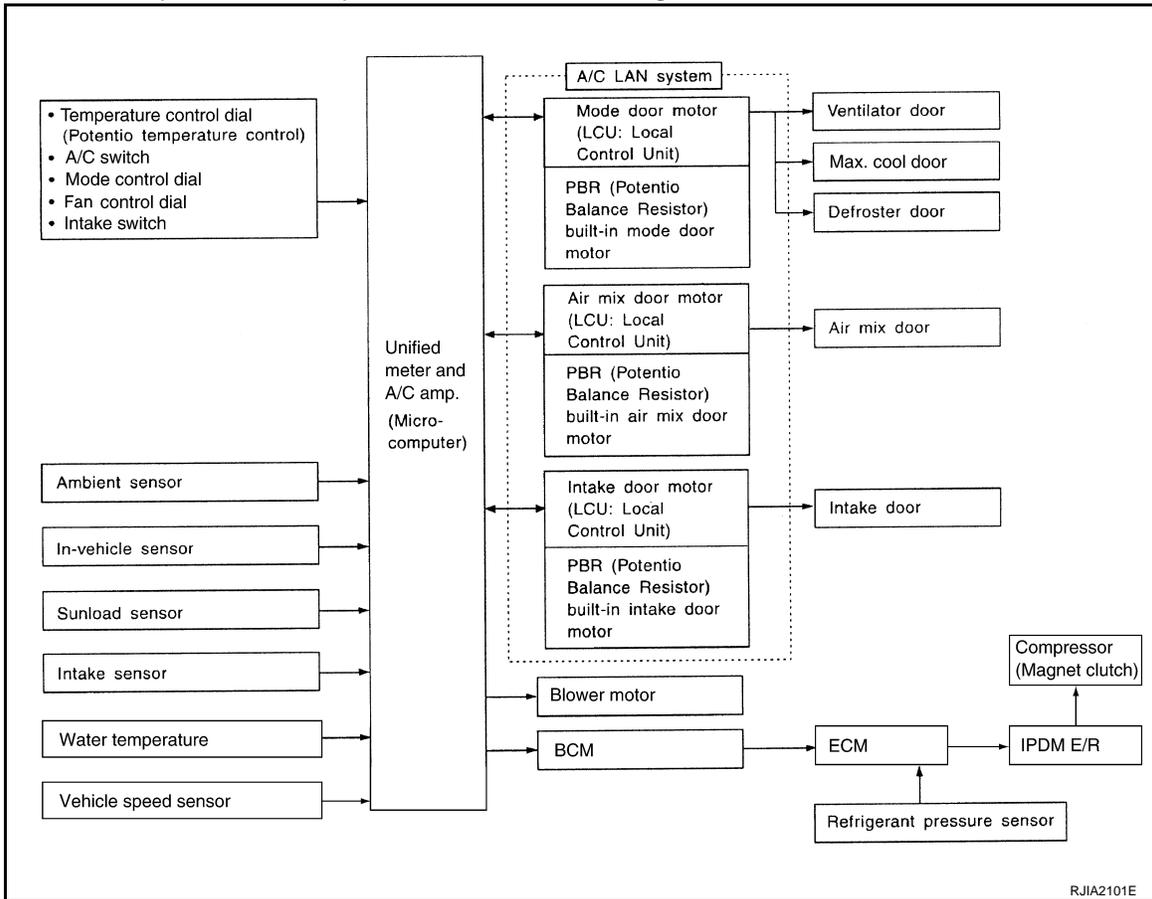

RJIA2101E

## Control Operation

INFOID:000000004655751

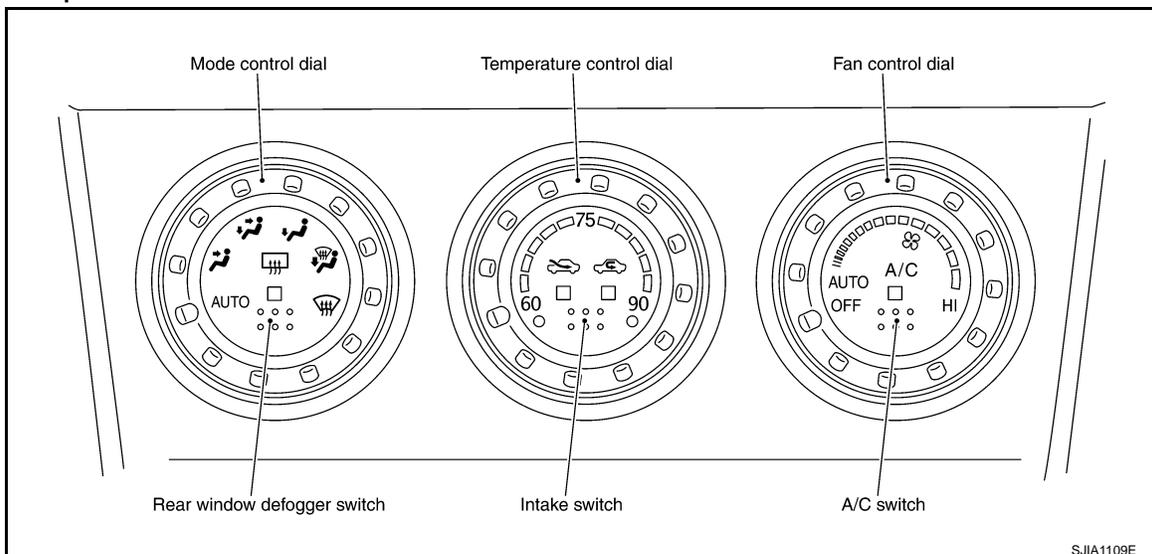

SJIA1109E

### MODE CONTROL DIAL

The air discharge outlets are controlled with this dial.

Mode doors are set to the defrost position with this dial. Also, intake doors are set to the outside air position.

When shifting mode control dial to D/F, D/F2 or DEF position under the following conditions, compressor is turned ON. (A/C LED ON)

- FAN: ON

# AIR CONDITIONER CONTROL

## < SERVICE INFORMATION >

---

- A/C: OFF

### TEMPERATURE CONTROL DIAL (POTENTIO TEMPERATURE CONTROL)

The set temperature is increased or decreased with this dial.

### FAN CONTROL DIAL

The blower speed is automatically or manually controlled with this dial. Twenty-five speeds are available for manual control.

Shifting fan control dial to AUTO, compressor is turned ON automatically.

### REAR WINDOW DEFOGGER SWITCH

When illumination is ON, rear window is defogged.

### INTAKE SWITCH

- When intake switch is ON, REC LED turns ON, and air inlet is fixed to REC.
- When press intake switch again, FRE LED turns ON, and air inlet is fixed to FRE.
- When intake switch is pressed for approximately 1.5 seconds or longer, REC and FRE LEDs blink twice. Then, automatic control mode is entered. Inlet status is displayed even during automatic control.
- When FRE LED is turned ON, shifting mode control dial to D/F, D/F2 or DEF, or when compressor is turned from ON to OFF, intake switch is automatically turned OFF (fixed to FRE mode). REC mode can be re-entered by pressing intake switch again, and then compressor is turned ON. (Except D/F, D/F2 or DEF position)

### A/C SWITCH

Compressor is ON or OFF with this switch.

(Pressing the A/C switch when the fan control dial is ON, will turn OFF the A/C switch and compressor.)

A

B

C

D

E

F

G

H

I

ATC

K

L

M

N

O


P

# AIR CONDITIONER CONTROL

< SERVICE INFORMATION >

## Discharge Air Flow

INFOID:000000004655752

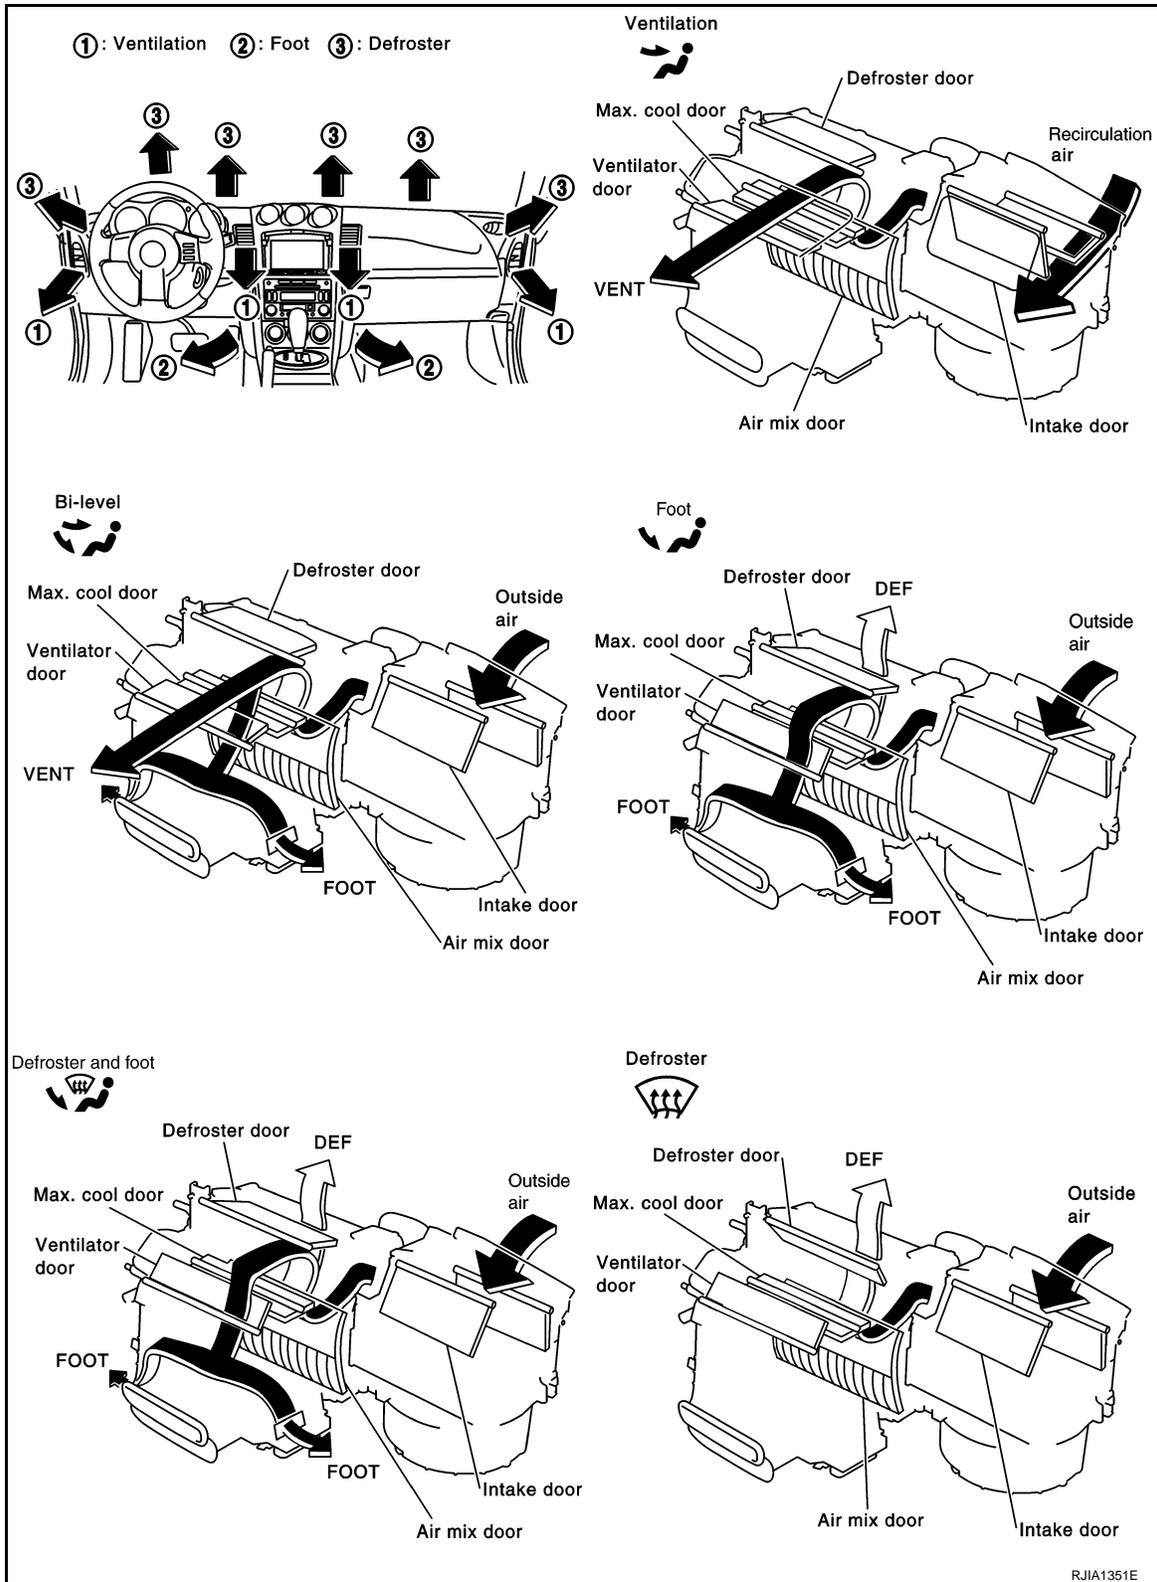


# AIR CONDITIONER CONTROL

< SERVICE INFORMATION >

## System Description

INFOID:000000004655753

### SWITCHES AND THEIR CONTROL FUNCTION

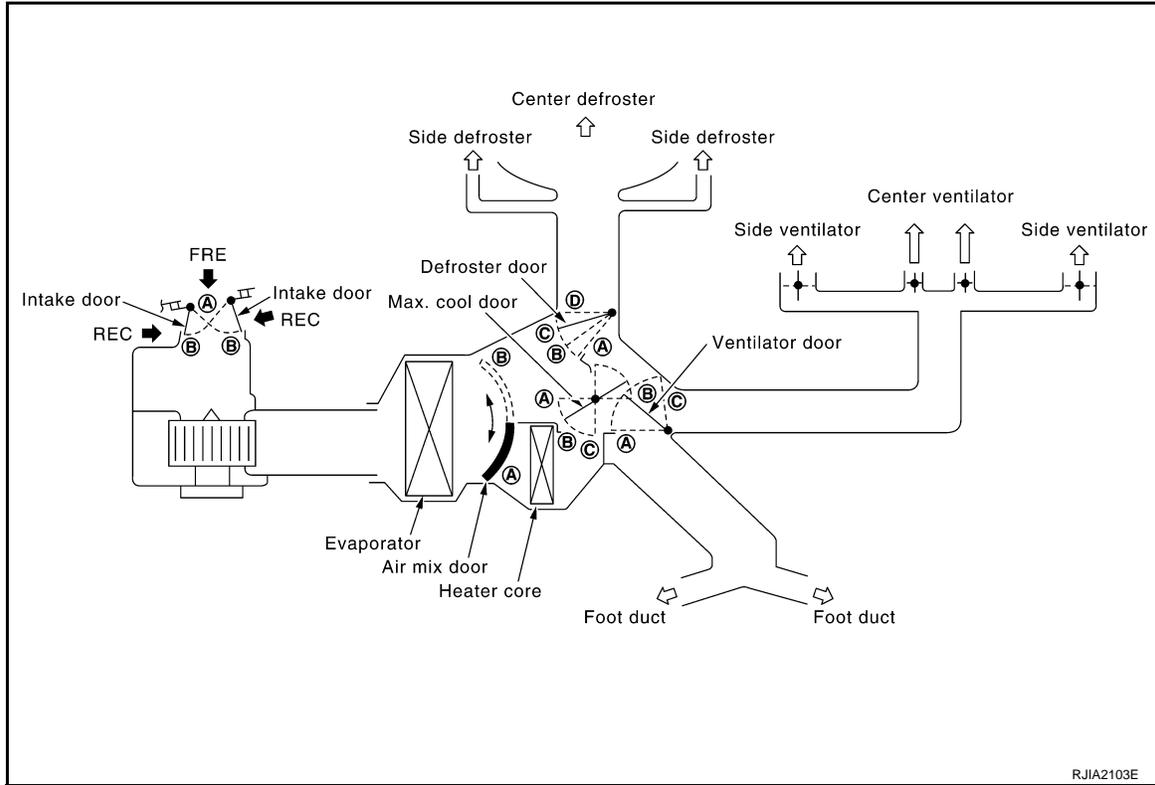

RJIA2103E

Position or switch	MODE control dial						Intake SW		Temperature control dial			
	VENT	B/L	FOOT	D/F	DEF	AUTO						
Door						—						
Ventilator door	(A)	(B)	(C)	(C)	(C)	AUTO	—	—	18°C (60°F)	↔	32°C (90°F)	
Max. cool door	(A)	(B)	(B)	(B)	(C)		—	—	—			
Defroster door	(D)	(D)	(D <sub>or</sub> C) <sup>*1</sup>	(B)	(A)		—	—	—			
Intake door	—			(B)	(B)	—	(A) <sup>*2</sup>	(B) <sup>*2</sup>				
Air mix door	—					—	—	—	(A)	AUTO	(B)	

\*1: This position is selected only when the mode door is automatically controlled.

\*2: Inlet status is displayed during automatic control.

SJIA1884E

### CAN Communication System Description

INFOID:000000004655754

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only. For details, refer to [LAN-41, "CAN System Specification Chart"](#).

# TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

## TROUBLE DIAGNOSIS

### CONSULT-III Function (BCM)

INFOID:000000004655755

CONSULT-III can display each diagnosis item using the diagnosis test modes shown following.

System part	Check item, diagnosis mode	Description
BCM	Data monitor	Displays BCM input data in real time.

### DATA MONITOR


#### Display Item List

Monitor Item	Condition	Value/Status	
IGNITION SW	Ignition switch OFF → ON	OFF → ON	
HEATER FAN SW	Ignition switch ON	Blower fan motor switch ON	ON
		Blower fan motor switch OFF	OFF
AIR COND SIG	Ignition switch ON	Compressor ON	ON
		Compressor OFF	OFF
AC PRESS SEN	<ul style="list-style-type: none"> <li>Engine is running</li> <li>Warm-up condition</li> <li>Both A/C switch and blower fan motor switch: ON (Compressor operates)</li> </ul>	1.0 - 4.0 V	

### How to Perform Trouble Diagnosis for Quick and Accurate Repair

INFOID:000000004655756

#### WORK FLOW

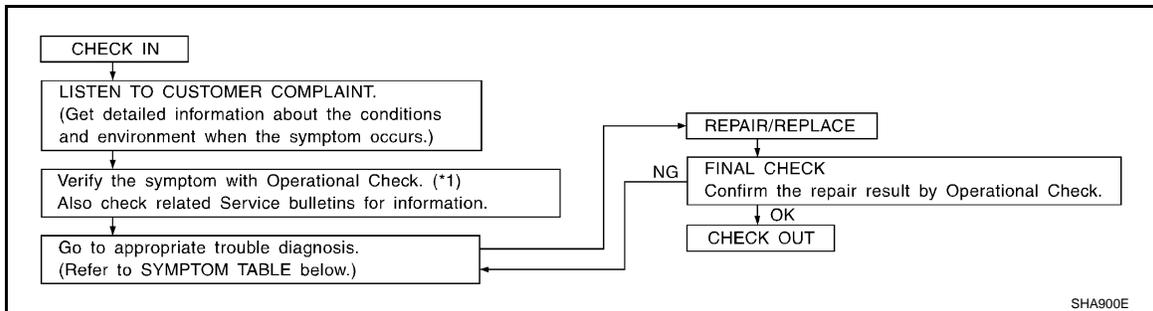

SHA900E

\*1 [ATC-45, "Operational Check"](#)

#### SYMPTOM TABLE

Symptom	Reference Page
A/C system does not activate.	Go to Trouble Diagnosis Procedure for A/C system. <a href="#">ATC-46, "Power Supply and Ground Circuit for Auto Amp"</a>
Air outlet does not change.	Go to Trouble Diagnosis Procedure for Mode Door Motor. (LAN) <a href="#">ATC-51, "Mode Door Motor Circuit"</a>
Mode door motor does not operate normally.	
Discharge air temperature does not change.	Go to Trouble Diagnosis Procedure for Air Mix Door Motor. (LAN) <a href="#">ATC-53, "Air Mix Door Motor Circuit"</a>
Air mix door motor does not operate normally.	
Intake door does not change.	Go to Trouble Diagnosis Procedure for Intake Door Motor. (LAN) <a href="#">ATC-56, "Intake Door Motor Circuit"</a>
Intake door motor does not operate normally.	

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

Symptom	Reference Page	
Blower motor operation is malfunctioning.	Go to Trouble Diagnosis Procedure for Blower Motor.	<a href="#">ATC-58, "Blower Motor Circuit"</a>
Magnet clutch does not engage.	Go to Trouble Diagnosis Procedure for Magnet Clutch.	<a href="#">ATC-63, "Magnet Clutch Circuit"</a>
Insufficient cooling	Go to Trouble Diagnosis Procedure for Insufficient Cooling.	<a href="#">ATC-68, "Insufficient Cooling"</a>
Insufficient heating	Go to Trouble Diagnosis Procedure for Insufficient Heating.	<a href="#">ATC-75, "Insufficient Heating"</a>
Noise	Go to Trouble Diagnosis Procedure for Noise.	<a href="#">ATC-76, "Noise"</a>
Self-diagnosis cannot be performed.	Go to Trouble Diagnosis Procedure for Self-diagnosis.	<a href="#">ATC-77, "Self-Diagnosis"</a>

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M  
N  
O  
P

ATC


# TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

## Component Parts and Harness Connector Location

INFOID:000000004655757


### ENGINE COMPARTMENT

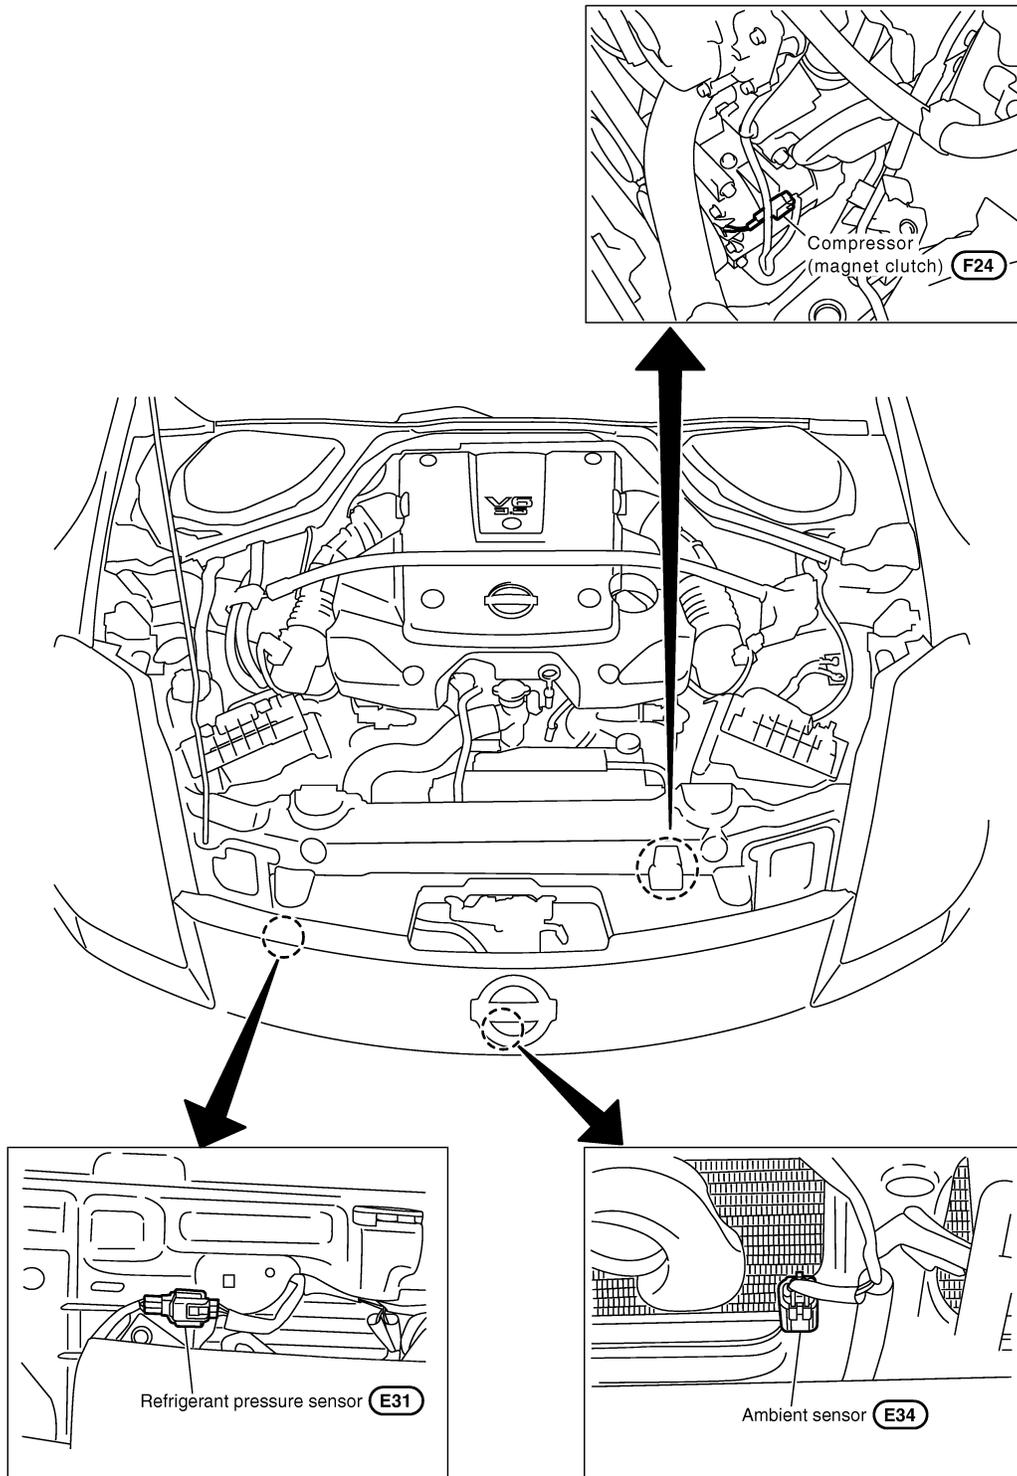

PJIA0175E

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION > PASSENGER COMPARTMENT

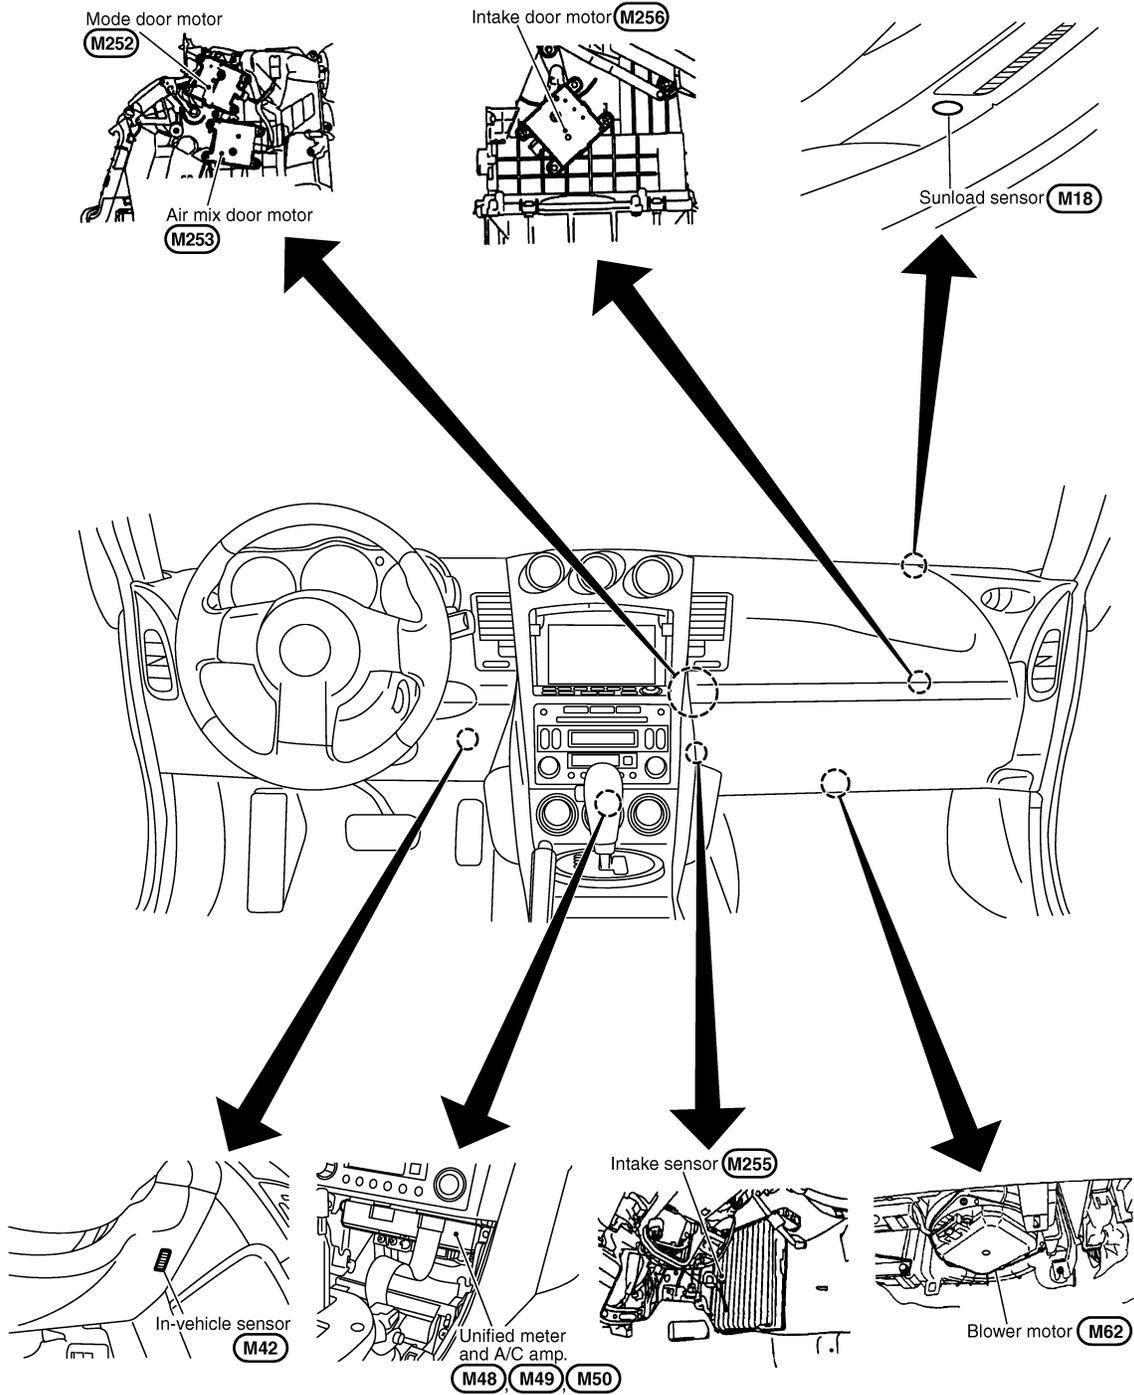

A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M  
N  
O  
P


PJA0167E

# TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

## Schematic

INFOID:0000000465578

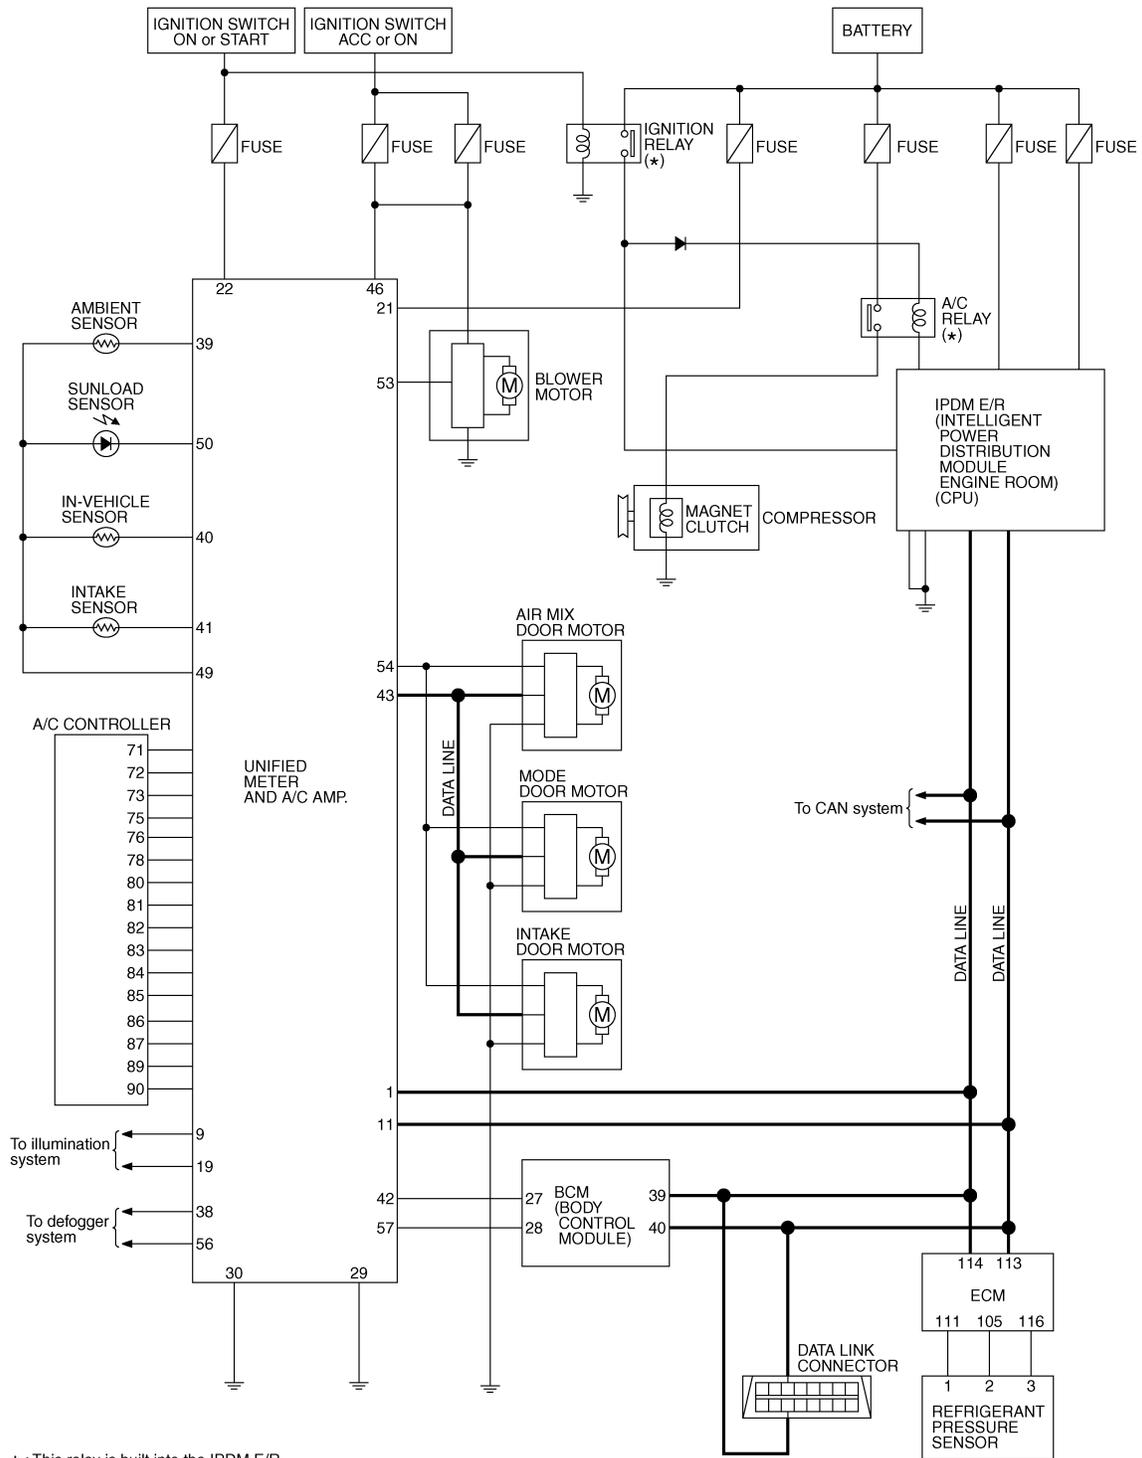

\* : This relay is built into the IPDM E/R (Intelligent power distribution module engine room).

TJW0259E



# TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

## Wiring Diagram - A/C -

INFOID:000000004655759

ATC-A/C-01

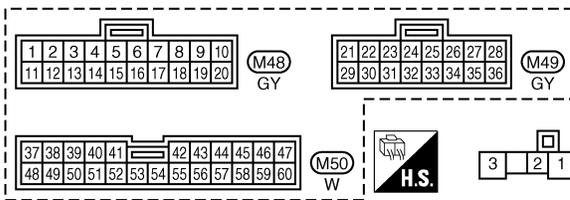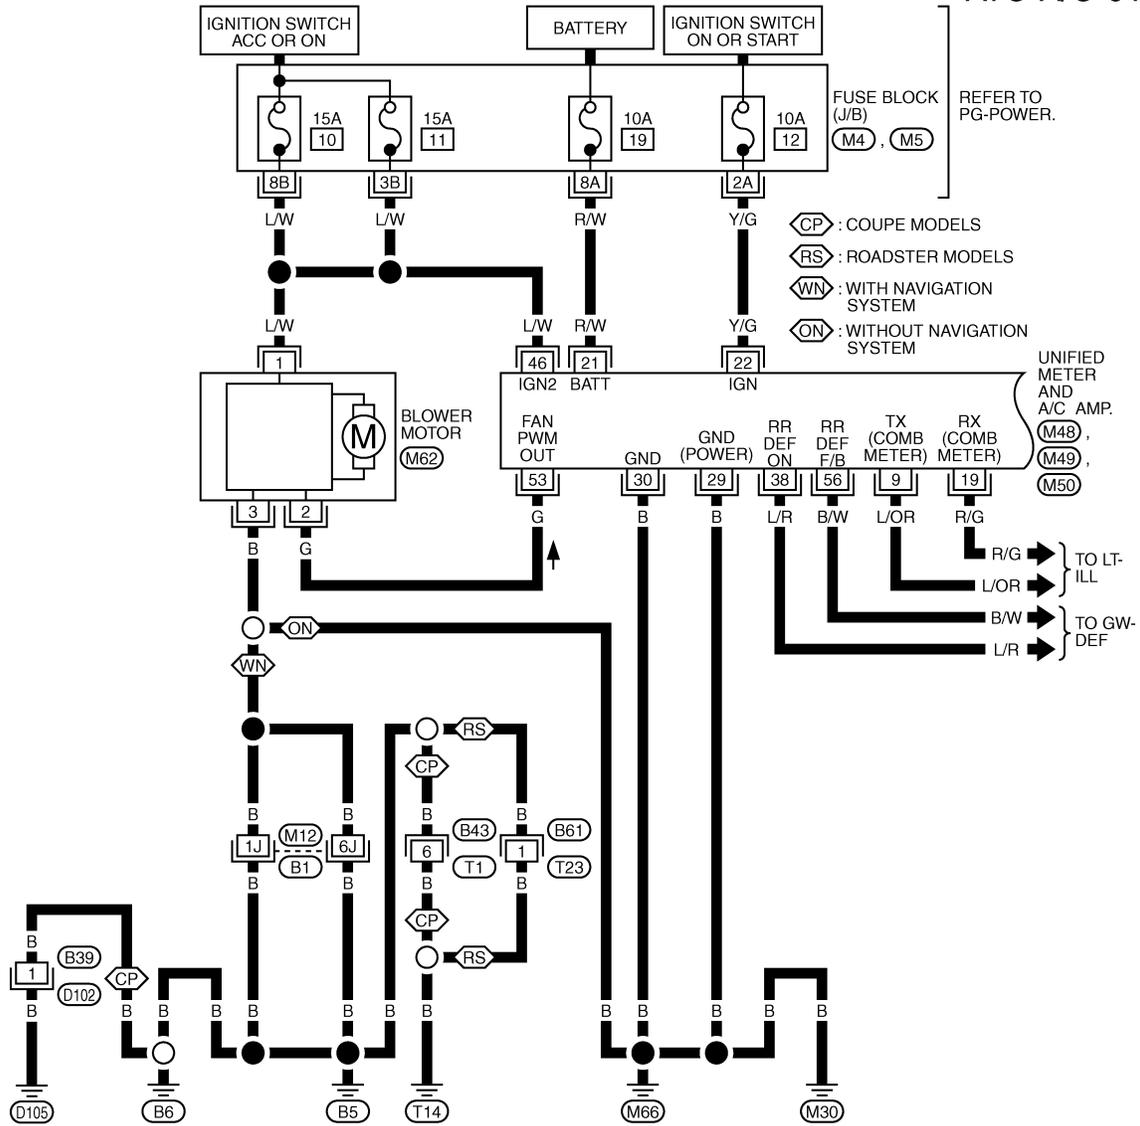

REFER TO THE FOLLOWING.

- (B1) -SUPER MULTIPLE JUNCTION (SMJ)
- (M4), (M5) -FUSE BLOCK-JUNCTION BOX (J/B)

TJWT0092E


A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M  
N  
O  
P

ATC

# TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

ATC-A/C-02

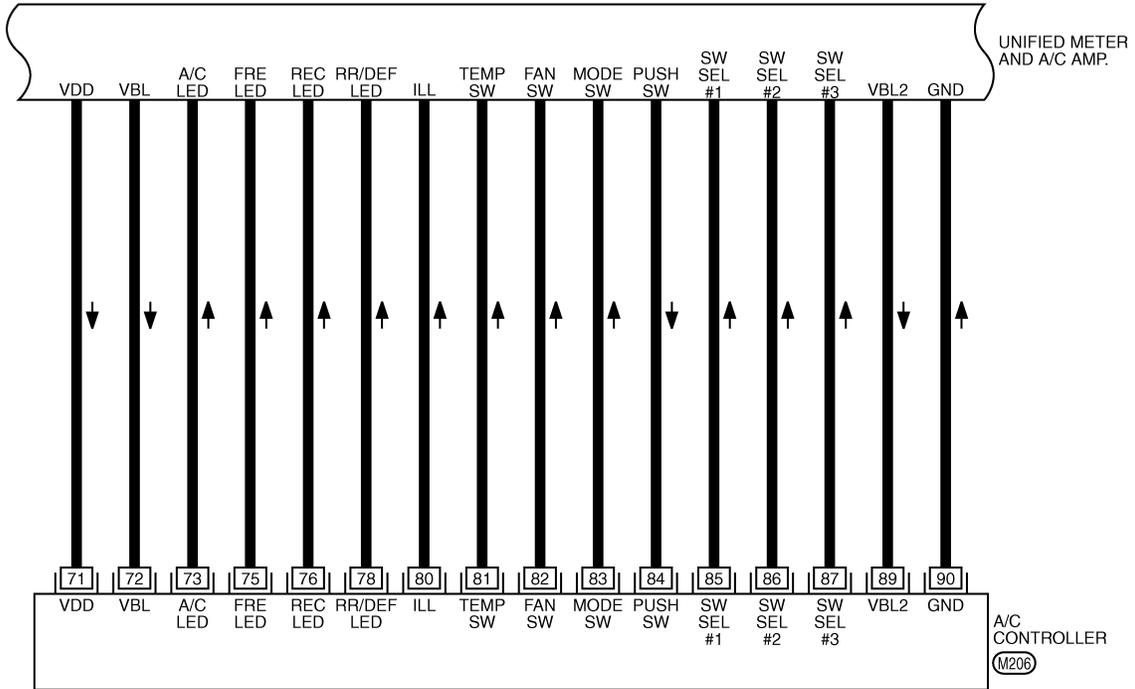

\*: THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT", PG SECTION.



TJW0169E

# TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

ATC-A/C-03

▬ : DATA LINE

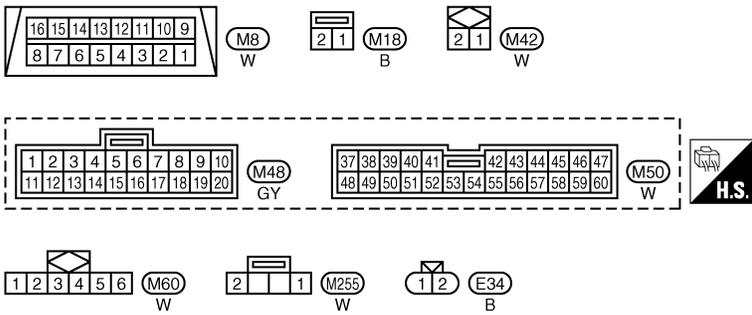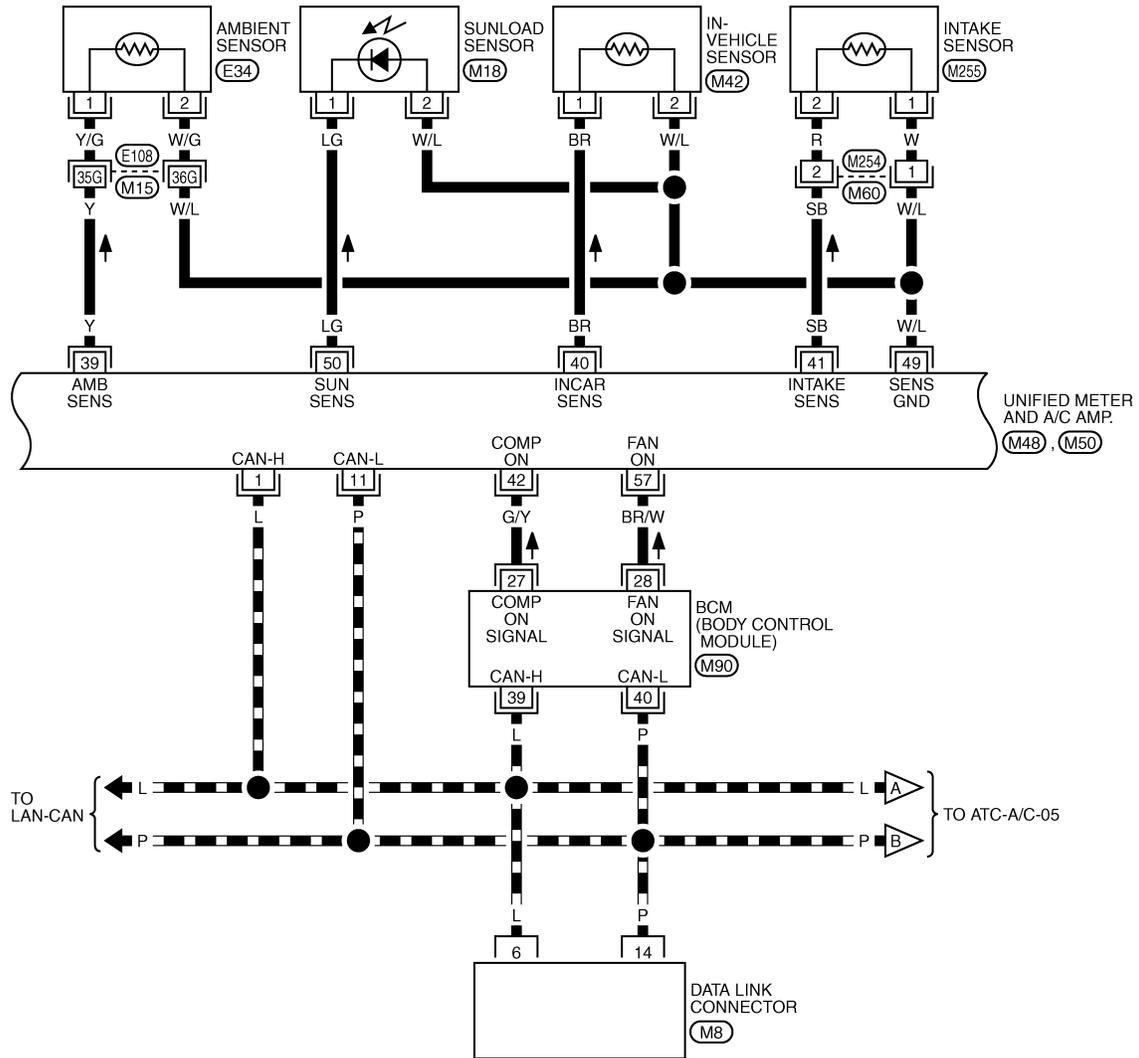





REFER TO THE FOLLOWING.  
 (E108) -SUPER MULTIPLE JUNCTION (SMJ)  
 (M90) -ELECTRICAL UNITS

TJW0260E

# TROUBLE DIAGNOSIS
   
< SERVICE INFORMATION >

ATC-A/C-04



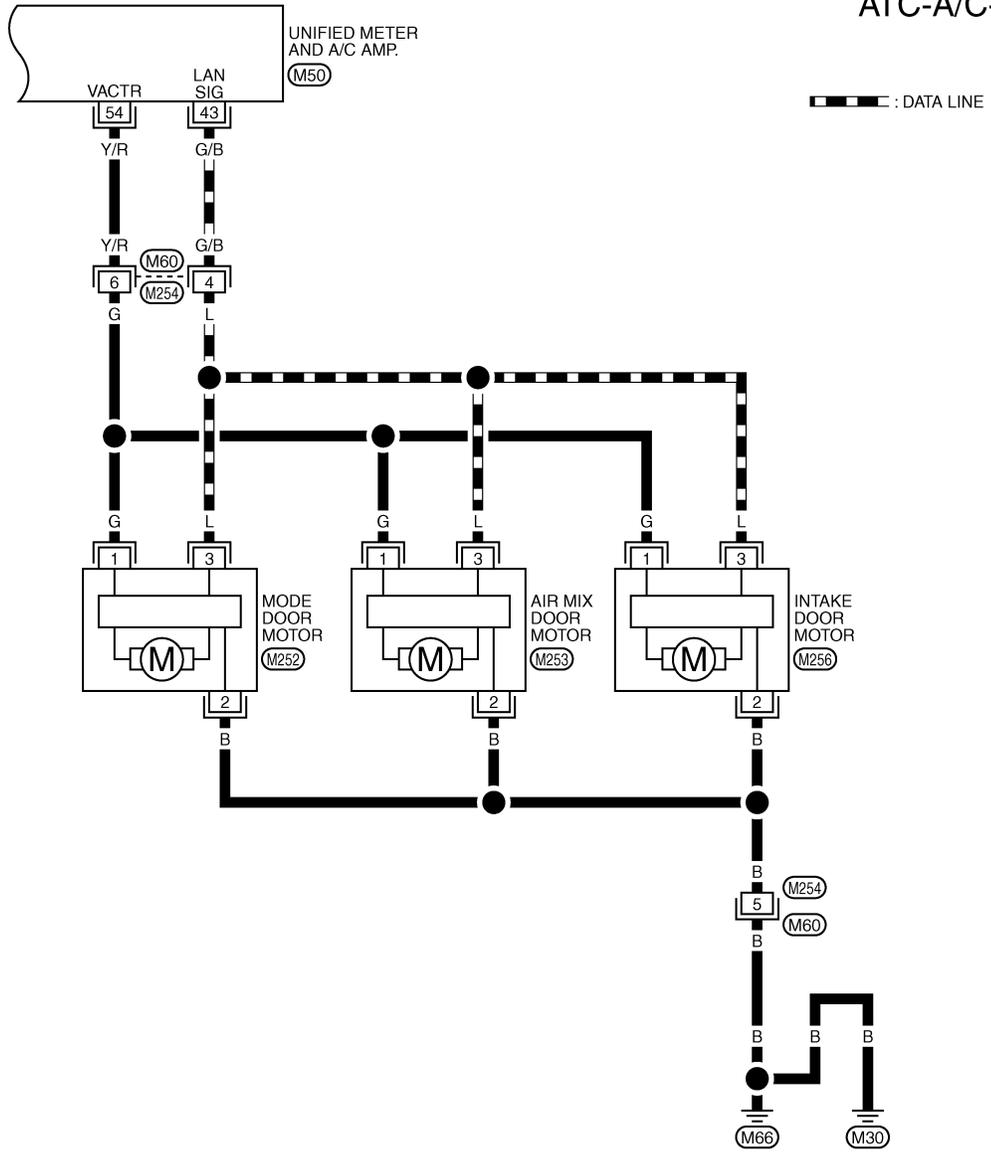


TJWT0171E

# TROUBLE DIAGNOSIS
  
< SERVICE INFORMATION >

ATC-A/C-05

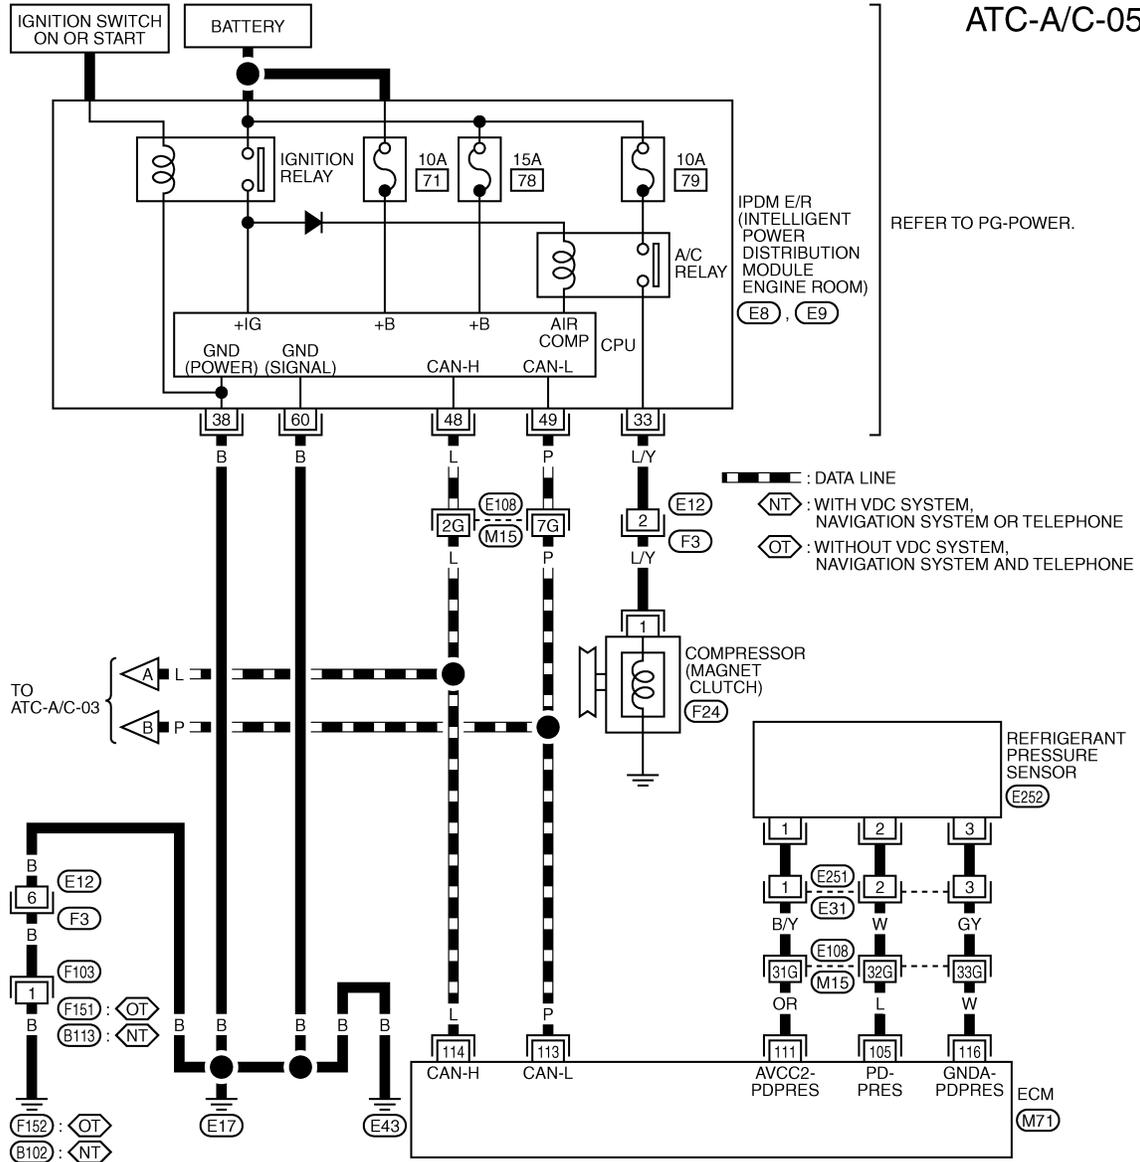

REFER TO THE FOLLOWING.

(E108) -SUPER MULTIPLE JUNCTION (SMJ)

(M71) -ELECTRICAL UNITS

TJWT0261E

A

B

C

D

E

F

G

H

I

ATC

K

L

M

N

O

P


# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

### Auto Amp. Terminal and Reference Value


INFOID:000000004655760

Measure voltage between each terminal and ground by referring terminals and reference value for unified meter and A/C amp.

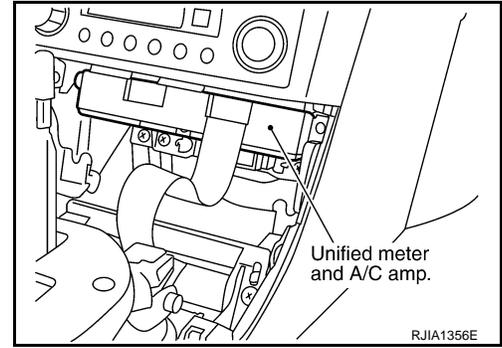

RJIA1356E

### PIN CONNECTOR TERMINAL LAYOUT

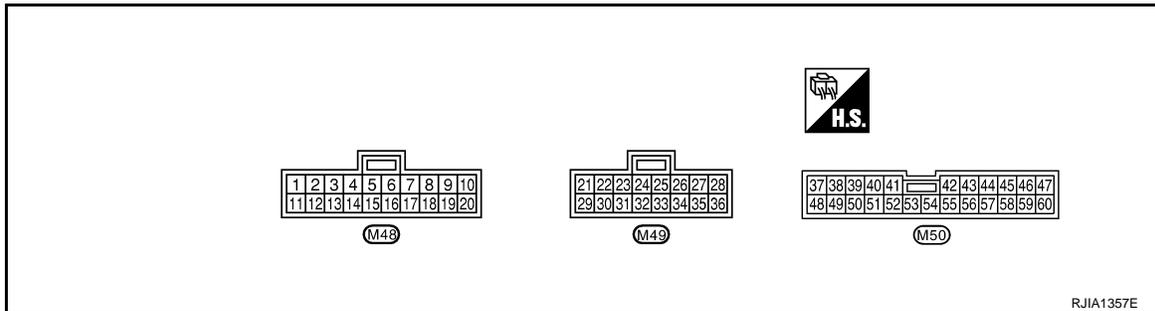




RJIA1357E

### TERMINALS AND REFERENCE VALUE FOR UNIFIED METER AND A/C AMP.

Terminal No.	Wire color	Item	Ignition switch	Condition	Voltage (V)
1	L	CAN-H	—	—	—
9	L/OR	Multiplex communication signal (TX)	—	—	—
11	P	CAN-L	—	—	—
19	R/G	Multiplex communication signal (RX)	—	—	—
21	R/W	Power supply from BATT	OFF	—	Battery voltage
22	Y/G	Power supply from IGN	ON	—	Battery voltage
29	B	Ground (Power)	ON	—	Approx. 0
30	B	Ground	ON	—	Approx. 0
38	L/R	Rear window defogger ON signal	ON	Rear window defogger switch is depressed.	Approx. 0
				Rear window defogger switch is released.	Approx. 12
39	Y	Ambient sensor	—	—	—
40	BR	In-vehicle sensor	—	—	—
41	SB	Intake sensor	—	—	—

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

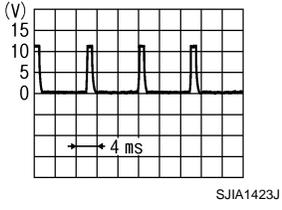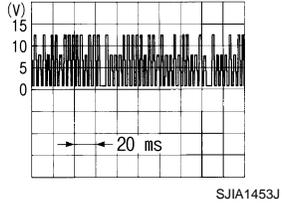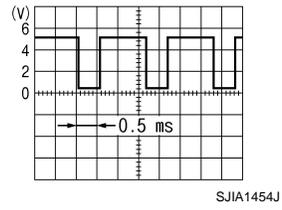Terminal No.	Wire color	Item	Ignition switch	Condition	Voltage (V)
42	G/Y	Compressor ON signal	ON	A/C switch: ON (Blower motor operates.)	Approx. 0
				A/C switch: OFF	
43	G/B	A/C LAN signal	ON	—	
46	L/W	Power supply from IGN2	ACC or ON	—	Battery voltage
49	W/L	Sensor ground	ON	—	Approx. 0
50	LG	Sunload sensor	—	—	—
53	G	Blower motor control signal	ON	Blower speed: 1st speed (manual)	
54	Y/R	Power supply for each door motor	ON	—	Battery voltage
56	B/W	Rear window defogger feedback signal	ON	Rear window defogger switch: ON	Approx. 12
				Rear window defogger switch: OFF	Approx. 0
57	BR/W	Blower motor ON signal	ON	Fan control dial: ON (A/C system operates)	Approx. 0
				Fan control dial: OFF	Approx. 5

## Self-Diagnosis Function

INFOID:000000004655761

### DESCRIPTION

The self-diagnosis system diagnoses sensors, door motors, blower motor, etc. by system line. Self-diagnosis is STEP-1 to 7. There are two ways of changing method during self-diagnosis.

- Switching to self-diagnosis STEP-1 to 4.

Shifting from normal control to the self-diagnosis system is accomplished by starting the engine (turning the ignition switch from OFF to ON) and pressing A/C switch for at least 5 seconds. The A/C switch must be pressed within 10 seconds after starting the engine (ignition switch is turned ON). This system will be canceled by either pressing intake switch or turning the ignition switch OFF. Shifting to the next step is accomplished by means of turning fan control dial, as required.

- Switching to self-diagnosis STEP-5 to 7 (Auxiliary mechanism).


Shifting from normal control to the self-diagnosis system is accomplished by starting the engine (turning the ignition switch from OFF to ON) and pressing intake switch for at least 5 seconds. The intake switch must be pressed within 10 seconds after starting the engine (ignition switch is turned ON). This system will be can-

# TROUBLE DIAGNOSIS


## < SERVICE INFORMATION >

ceeded by either pressing A/C switch or turning the ignition switch OFF. Shifting to the next step is accomplished by means of turning fan control dial, as required.

### STEP-1 to 4

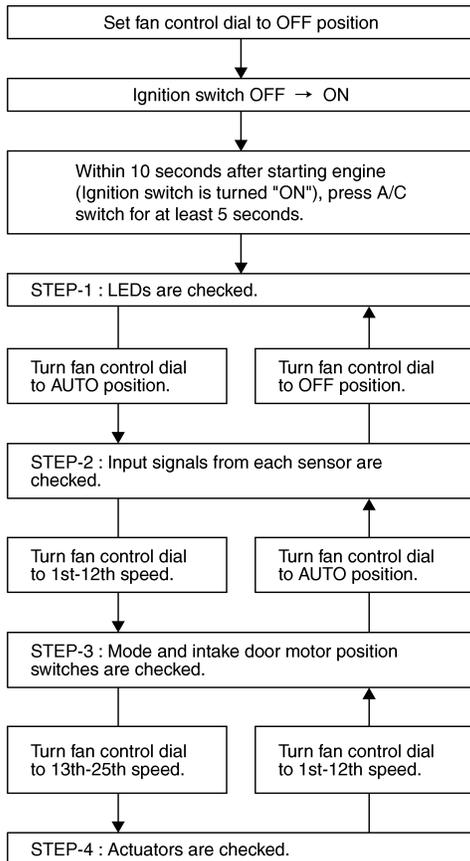

### STEP-5 to 7 (Auxiliary mechanism)

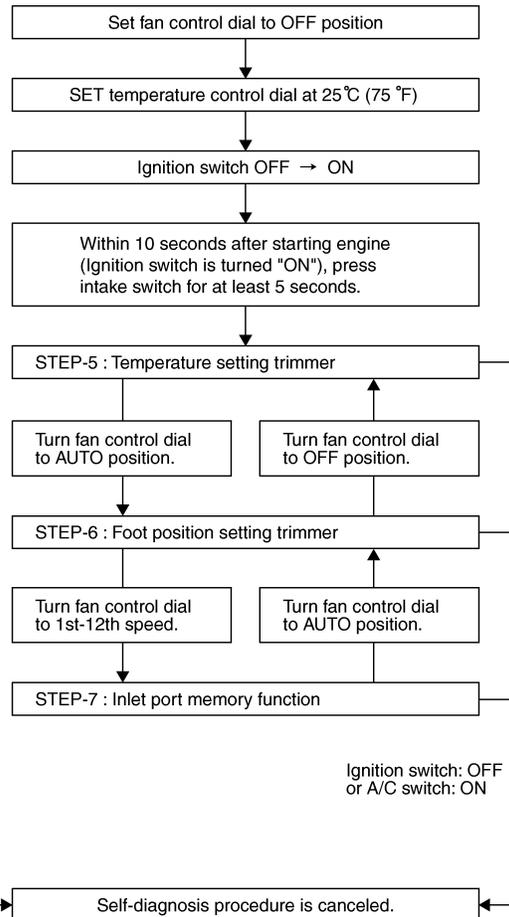

Ignition switch: OFF  
or Intake switch: ON

SJIA1139E

## FUNCTION CONFIRMATION PROCEDURE

### 1. SET IN SELF-DIAGNOSIS MODE (STEP-1 TO 4)

1. Set the fan control dial to OFF position.
2. Turn ignition switch ON.
3. Set in self-diagnosis mode as follows. Within 10 seconds after starting engine (ignition switch is turned ON.), press A/C switch for at least 5 seconds.

#### NOTE:

If battery voltage drops below 12 V during diagnosis STEP-3, door motor speed becomes slower and as a result, the system may generate an error even when operation is normal. To avoid this, start engine before performing this diagnosis.

>> GO TO 2.


### 2. STEP-1: LEDS ARE CHECKED

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

### Check intake and A/C switch LEDs illumination.

- OK >> GO TO 3.  
 NG >> Refer to [ATC-77. "Self-Diagnosis"](#).

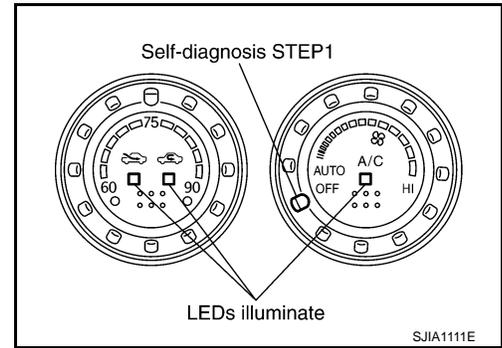


### 3. CHECK TO ADVANCE SELF-DIAGNOSIS STEP-2

- Turn fan control dial to AUTO position.  
**NOTE:**  
 When switched to STEP-2, LED of REC position blinks for approximately 25 seconds.
- Check A/C switch LED illumination.

#### Advance to self-diagnosis STEP-2?

- YES >> GO TO 4.  
 NO >> Replace A/C controller. (Fan control dial is malfunctioning.)

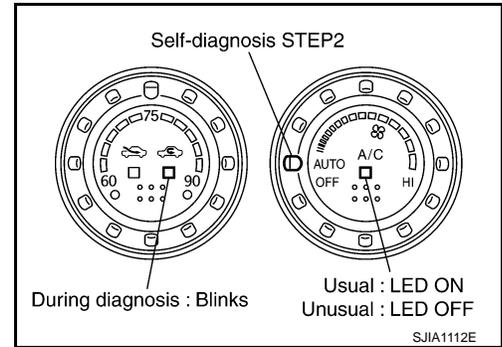

### 4. CHECK TO RETURN SELF-DIAGNOSIS STEP-1

Turn fan control dial to OFF position.

#### Return to self-diagnosis STEP-1?


- YES >> GO TO 5.  
 NO >> Replace A/C controller. (Fan control dial is malfunctioning.)

### 5. STEP-2: SENSOR CIRCUITS ARE CHECKED FOR OPEN OR SHORT CIRCUIT

- Turn fan control dial to AUTO position.
- Turn mode control dial to AUTO position.  
**NOTE:**  
 When switched to STEP-2, LED of REC position blinks for approximately 25 seconds.
- Check A/C switch LED is illuminate.

#### OK or NG

- OK >> GO TO 6.  
 NG >> GO TO 9.

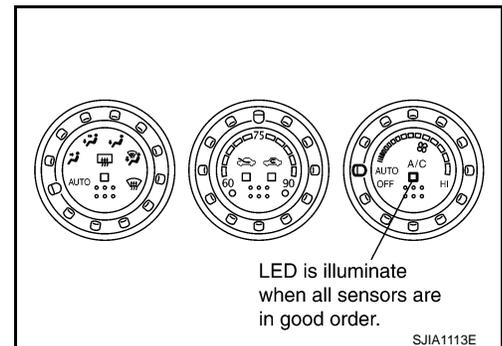


### 6. STEP-3: MODE DOOR AND INTAKE DOOR POSITIONS ARE CHECKED

- Turn fan control dial to 1st - 12th speed.  
**NOTE:**  
 When switched to STEP-3, LED of REC position blinks for approximately 50 seconds.
- Check A/C switch LED is illuminate.

#### OK or NG

- OK >> GO TO 7.  
 NG >> GO TO 10.

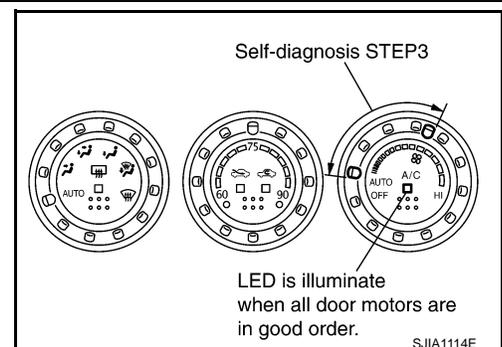


### 7. STEP-4: OPERATION OF EACH ACTUATOR IS CHECKED

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

1. Turn fan control dial to 13th - 25th speed.
2. Change operation status of air conditioner by changing mode control dial position.

>> GO TO 8.

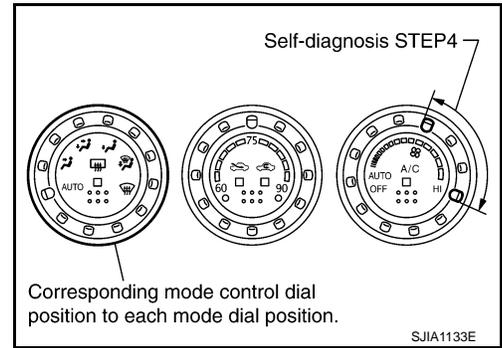

## 8. CHECK ACTUATORS

Refer to the following chart and confirm discharge air flow, air temperature, blower motor duty ratio and compressor operation.

Mode door position	Air outlet/distribution		
	Vent	Foot	Defroster
	100%	-	-
	54%	46%	-
	-	76% (100%)	24% ( - )
	-	57%	43%
	-	-	100%

( ): Manually control

RJA2110E

STEP-No. *1	STEP-41	STEP-42	STEP-43	STEP-44	STEP-45	STEP-46
Mode control dial position	AUTO	VENT	B/L	FOOT	D/F	DEF
Mode door position	VENT	VENT2	B/L	FOOT *2	D/F	DEF
Intake door position	REC	REC	REC	FRE	FRE	FRE
Air mix door position	FULL COLD	FULL COLD	FULL COLD	FULL HOT	FULL HOT	FULL HOT
Blower motor duty ratio	25%	25%	41%	57%	75%	91%
Compressor	ON	ON	OFF	OFF	ON	ON

Checks must be made visually, by listening the sound, or by touching air outlets with hand, etc. for improper operation.

\*1: STEP-No. 41 to 46 are for differentiation and will not be displayed.

\*2: FOOT position during automatic control. Refer to "AUXILIARY MECHANISM: FOOT POSITION SETTING TRIMMER".

### OK or NG

- OK >> 1. Turn ignition switch OFF or intake switch ON.  
2. INSPECTION END

- NG >> • Air outlet does not change.  
Go to Mode Door Motor Circuit. Refer to [ATC-51, "Mode Door Motor Circuit"](#).  
• Intake door does not change.  
Go to Intake Door Motor Circuit. Refer to [ATC-56, "Intake Door Motor Circuit"](#).  
• Discharge air temperature does not change.  
Go to Air Mix Door Motor Circuit. Refer to [ATC-53, "Air Mix Door Motor Circuit"](#).  
• Blower motor operation is malfunctioning.  
Go to Blower Motor Circuit. Refer to [ATC-58, "Blower Motor Circuit"](#).  
• Magnet clutch does not engage.  
Go to Magnet Clutch Circuit. Refer to [ATC-63, "Magnet Clutch Circuit"](#).

## 9. CHECK MALFUNCTIONING SENSOR AND DOOR MOTOR


# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

Refer to the following chart.

### NOTE:

When switched to STEP-2, LED of REC position blinks for approximately 25 seconds.

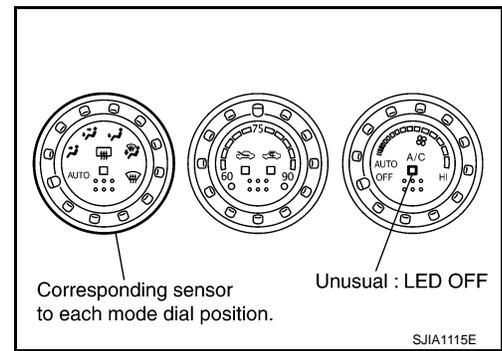

Mode control dial position	Unusual	Malfunctioning sensor and door motor (Including circuits)	Reference page
VENT	A/C LED: OFF	Ambient sensor	*2
B/L		In-vehicle sensor	*3
FOOT		Sunload sensor *1	*4
D/F		Intake sensor	*5
DEF		Air mix door motor (LCU) PBR	*6

\*1: Perform self-diagnosis STEP-2 under sunshine.

When performing indoors, aim a light (more than 60 W) at sunload sensor, otherwise LED of A/C switch will not indicate despite that sunload sensor is functioning properly.

\*2: [ATC-78. "Ambient Sensor Circuit"](#).

\*3: [ATC-80. "In-vehicle Sensor Circuit"](#).

\*4: [ATC-83. "Sunload Sensor Circuit"](#).

\*5: [ATC-86. "Intake Sensor Circuit"](#).

\*6: [ATC-56. "Air Mix Door Motor PBR Circuit"](#).

>> INSPECTION END

## 10. CHECK MALFUNCTIONING DOOR MOTOR POSITION SWITCH

Mode and/or intake door motor PBR(s) is/are malfunctioning.


### NOTE:

When switched to STEP-3, LED of REC position blinks for approximately 50 seconds.

Unusual	Mode or intake door position	Reference page
REC LED: ON	Mode door motor	*1
FRE LED: ON	Intake door motor	*2

\*1: [ATC-51. "Mode Door Motor Circuit"](#).

\*2: [ATC-56. "Intake Door Motor Circuit"](#).

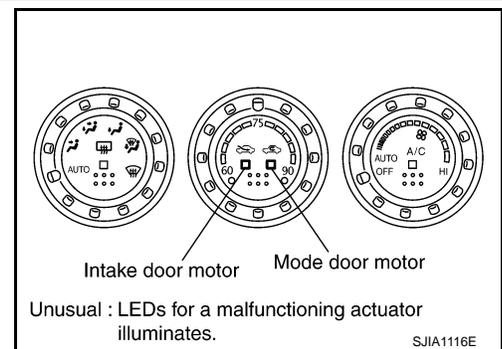

>> INSPECTION END

## AUXILIARY MECHANISM: TEMPERATURE SETTING TRIMMER

The trimmer compensates for differences in range of  $\pm 3^{\circ}\text{C}$  ( $\pm 6^{\circ}\text{F}$ ) between temperature setting (temperature control dial position) and temperature felt by customer.

Operating procedures for this trimmer are as follows:

1. Set fan control dial to OFF.
2. Turn ignition switch ON.
3. Set in self-diagnosis mode as follows. Within 10 seconds after starting engine (ignition switch is turned ON.), press intake switch for at least 5 seconds.
4. When intake switch is pressed, temperature shifts in following order:  $0^{\circ}\text{C}$  ( $0^{\circ}\text{F}$ )  $\rightarrow$   $1^{\circ}\text{C}$  ( $2^{\circ}\text{F}$ )  $\rightarrow$   $2^{\circ}\text{C}$  ( $4^{\circ}\text{F}$ )  $\rightarrow$   $3^{\circ}\text{C}$  ( $6^{\circ}\text{F}$ )  $\rightarrow$   $-3^{\circ}\text{C}$  ( $-6^{\circ}\text{F}$ )  $\rightarrow$   $-2^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ )  $\rightarrow$   $-1^{\circ}\text{C}$  ( $-2^{\circ}\text{F}$ )  $\rightarrow$  return to  $0^{\circ}\text{C}$  ( $0^{\circ}\text{F}$ ).

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

Setting temperature	LED status of each switch		
	FRE	REC	A/C
+3°C (+6°F)	OFF	ON	ON
+2°C (+4°F)	OFF	ON	OFF
+1°C (+2°F)	OFF	OFF	ON
0°C (0°F) (Initial setting)	OFF	OFF	OFF
-1°C (-2°F)	ON	OFF	ON
-2°C (-4°F)	ON	ON	OFF
-3°C (-6°F)	ON	ON	ON

When battery cable is disconnected or battery voltage is below 9 V, trimmer operation is canceled. Temperature set becomes that of initial condition, i.e. 0°C (0°F).

### AUXILIARY MECHANISM: FOOT POSITION SETTING TRIMMER

Wind distribution ratio in FOOT mode can be set.

Operating procedures for this trimmer are as follows:

1. Set fan control dial to OFF.
2. Turn ignition switch ON.
3. Set in self-diagnosis mode as follows. Within 10 seconds after starting engine (ignition switch is turned ON.), press intake switch for at least 5 seconds.
4. Set fan control dial to AUTO.
5. Press intake switch as desired.

Type	Discharge air flow			
	Automatically controls the mode door		Manually controls the mode door	
	FOOT	DEF	FOOT	DEF
Type-A (initial setting)	<b>76%</b>	<b>24%</b>	<b>100%</b>	—
Type-B	<b>76%</b>	<b>24%</b>	<b>100%</b>	—
Type-C	<b>100%</b>	—	<b>100%</b>	—
Type-D	<b>100%</b>	—	<b>100%</b>	—

R.JIA1365E

Type	LED status of each switch		
	FRE	REC	A/C
Type-A (Initial setting)	OFF	OFF	ON
Type-B	OFF	ON	OFF
Type-C	OFF	ON	ON
Type-D	ON	OFF	OFF

When battery cable is disconnected or battery voltage is below 9 V, trimmer operation is canceled. Wind distribution ratio set becomes that of initial condition.

### AUXILIARY MECHANISM: INLET PORT MEMORY FUNCTION

When ignition switch is turned from OFF to ON, inlet port memory function at manual mode can be set.

Operating procedures for this trimmer are as follows:

1. Set fan control dial to OFF.

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

2. Turn ignition switch ON.
3. Set in self-diagnosis mode as follows. Within 10 seconds after starting engine (ignition switch is turned ON.), press intake switch for at least 5 seconds.
4. Set fan control dial to 1st - 12th speed.
5. Press intake switch as desired.

LED status of FRE position	LED status of REC position	Setting status		Setting changeover method
		FRE	REC	
OFF	OFF	AUTO control	AUTO control	Intake switch: ON
OFF	ON	AUTO control (Initial setting)	Manual REC status is memorized. (Initial setting)	
ON	ON	Manual FRE status is memorized.	AUTO control	
ON	OFF	Manual FRE status is memorized.	Manual REC status is memorized.	

When battery cable is disconnected or battery voltage is below 9 V, memory function is canceled. Memory function set becomes that of initial condition.

## Operational Check

INFOID:000000004655762

The purpose of the operational check is to check if the individual system operates properly.

**Conditions : Engine running at normal operating temperature**

### CHECKING BLOWER

1. Turn fan control dial to 1st speed. Blower should operate at low speed.
2. Turn fan control dial to 2nd speed, and continue checking blower speed until all speeds are checked.
3. Leave blower at max. speed.

If NG, go to trouble diagnosis procedure for [ATC-58, "Blower Motor Circuit"](#).

If OK, continue the check.

### CHECKING DISCHARGE AIR

1. Turn mode control dial to each position.
2. Confirm that discharge air comes out according to the air distribution table. Refer to [ATC-26, "Discharge Air Flow"](#).

Intake door position is checked in the next step.

If NG, go to trouble diagnosis procedure for [ATC-51, "Mode Door Motor Circuit"](#).

If OK, continue the check.

#### NOTE:

Confirm that the compressor clutch is engaged (sound or visual inspection) and intake door position is at FRESH when the D/F, D/F2 or DEF position are selected.

Discharge air flow			
Mode door position	Air outlet/distribution		
	Vent	Foot	Defroster
	100%	-	-
	54%	46%	-
	-	76% (100%)	24% ( - )
	-	57%	43%
	-	-	100%

( ) : Manually control RJA2110E

### CHECKING INTAKE DOOR

1. Press intake switch. Recirculation LED turns on.
2. Press intake switch again. Fresh LED turns on.
3. Listen for intake door position change. (Slight change of blower sound can be heard.)

If NG, go to trouble diagnosis procedure for [ATC-56, "Intake Door Motor Circuit"](#).

If OK, continue the check.

### CHECKING TEMPERATURE DECREASE

1. Turn temperature control dial until 18°C (60°F).
2. Check for cool air at discharge air outlets.

If NG, go to trouble diagnosis procedure for [ATC-68, "Insufficient Cooling"](#).

If OK, continue the check.

### CHECKING TEMPERATURE INCREASE

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

1. Turn temperature control dial until 32°C (90°F).
2. Check for warm air at discharge air outlets.

If NG, go to trouble diagnosis procedure for [ATC-75. "Insufficient Heating"](#).  
If OK, continue the check.

### CHECKING A/C SWITCH

Turn fan control dial to AUTO position. (Compressor is turned ON automatically.)

- Confirm that the compressor clutch engages (sound or visual inspection). (Discharge air and blower speed will depend on ambient, in-vehicle, and set temperatures.)

If NG, go to trouble diagnosis procedure for [ATC-46. "Power Supply and Ground Circuit for Auto Amp"](#), then if necessary, trouble diagnosis procedure for [ATC-63. "Magnet Clutch Circuit"](#).


If all operational checks are OK (symptom cannot be duplicated), go to Incident Simulation Tests in [GI-24. "How to Perform Efficient Diagnosis for an Electrical Incident"](#) and perform tests as outlined to simulate driving conditions environment. If symptom appears, refer to [ATC-28. "How to Perform Trouble Diagnosis for Quick and Accurate Repair"](#) and perform applicable trouble diagnosis procedures.

## Power Supply and Ground Circuit for Auto Amp

INFOID:000000004655763

SYMPTOM: A/C system does not activate.

### INSPECTION FLOW

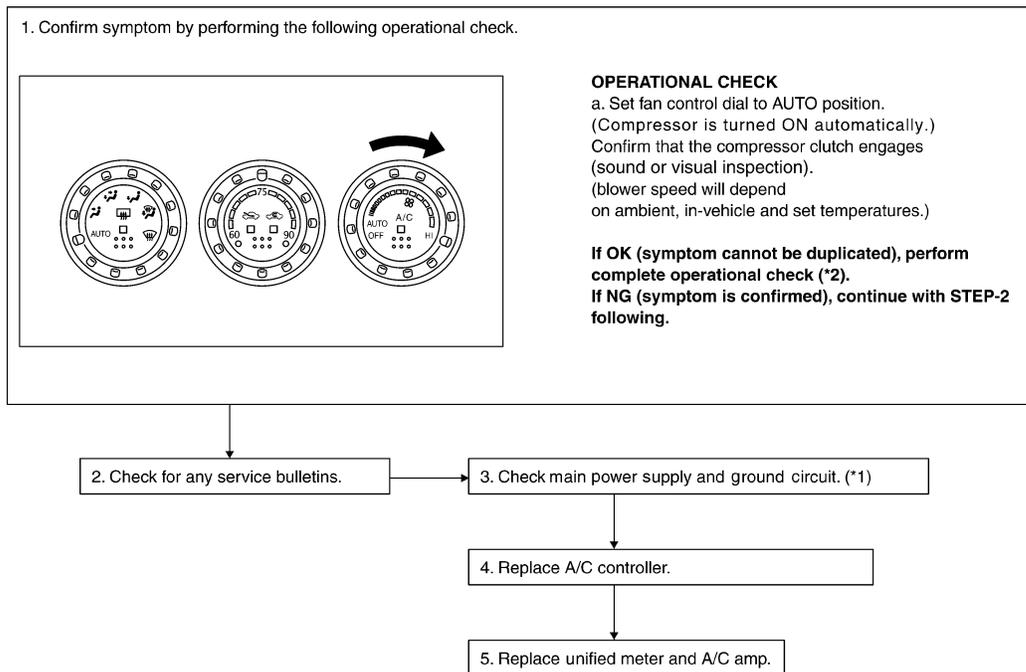

SJIA1123E

\*1 "DIAGNOSIS PROCEDURE FOR A/C SYSTEM" \*2 [ATC-45. "Operational Check"](#)


### COMPONENT DESCRIPTION

Unified Meter and A/C amp. (Automatic Amplifier)

# TROUBLE DIAGNOSIS


## < SERVICE INFORMATION >

The unified meter and A/C amp. has a built-in microcomputer which processes information sent from various sensors needed for air conditioner operation. The air mix door motor, mode door motor, intake door motor, blower motor and compressor are then controlled. When the various switches and temperature control dial are operated, data is input to the unified meter and A/C amp. from the A/C controller using multiplex communication. Self-diagnosis functions are also built into unified meter and A/C amp. to provide quick check of malfunctions in the auto air conditioner system.

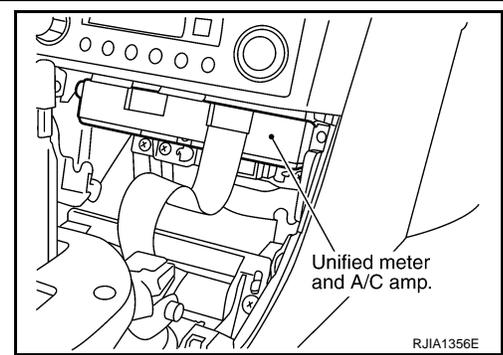


### Potential Temperature Control (PTC)

The PTC is built into the A/C controller. It can be set at an interval of 1°C (2.0°F) in the 18°C (60°F) to 32°C (90°F) temperature range by turning the temperature control dial.

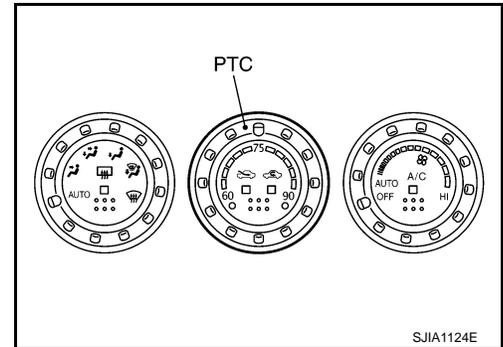


## DIAGNOSIS PROCEDURE FOR A/C SYSTEM

SYMPTOM: A/C system does not activate.

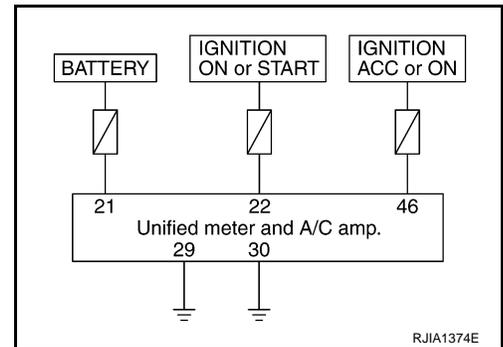

### 1. CHECK POWER SUPPLY CIRCUIT FOR UNIFIED METER AND A/C AMP.

1. Disconnect unified meter connector and A/C amp. connector.
2. Check voltage between unified meter and A/C amp. harness connector M49 terminal 21 and 22, unified meter and A/C amp. harness connector M50 terminal 46 and ground.

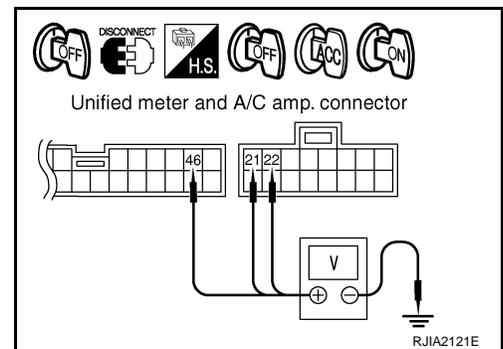

Terminals		Ignition switch position			
(+)		(-)	OFF	ACC	ON
Unified meter and A/C amp. connector	Terminal No.				
M49	21	Ground	Battery voltage	Battery voltage	Battery voltage
M49	22		Approx. 0 V	Approx. 0 V	Battery voltage
M50	46		Approx. 0 V	Battery voltage	Battery voltage

OK or NG

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

- OK >> GO TO 2.  
 NG >> Check 10A and 15A fuses [Nos. 10, 11, 12 and 19, located in the fuse block (J/B)]. Refer to [PG-83](#).
- If fuses are OK, check harness for open circuit. Repair or replace if necessary.
  - If fuses are NG, check harness for short circuit and replace fuse.


## 2. CHECK GROUND CIRCUIT FOR UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Check continuity between unified meter and A/C amp. harness connector M49 terminal 29, 30 and ground.

**29, 30 – Ground : Continuity should exist.**

### OK or NG


- OK >> Replace unified meter and A/C amp.  
 NG >> Repair harness or connector.

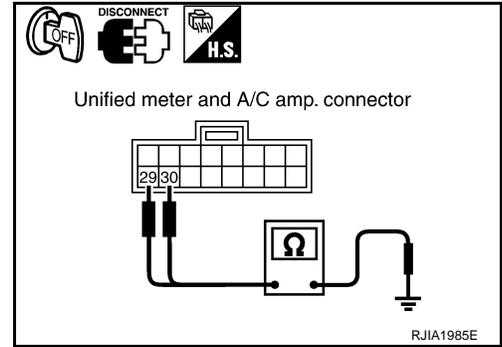

## LAN System Circuit

INFOID:000000004655764

SYMPTOM: Mode door motor, intake door motor and/or air mix door motor does not operate normally.

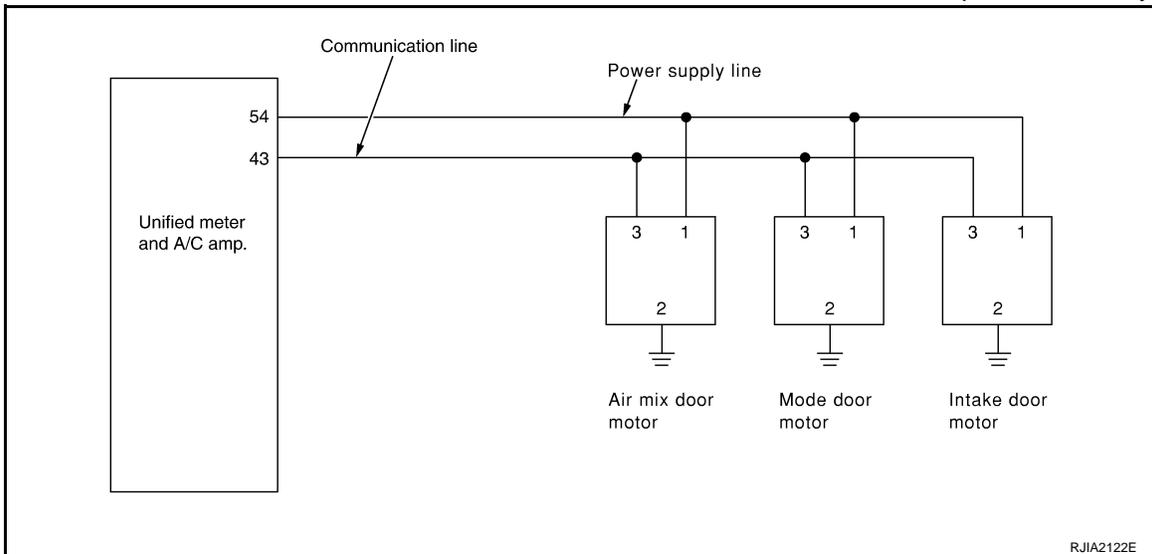

## DIAGNOSIS PROCEDURE FOR LAN CIRCUIT


### 1. CHECK POWER SUPPLY FOR UNIFIED METER AND A/C AMP.

1. Turn ignition switch ON.
2. Check voltage between unified meter and A/C amp. harness connector M50 terminal 54 and ground.

**54 – Ground : Battery voltage**

### OK or NG

- OK >> GO TO 2.  
 NG >> Replace unified meter and A/C amp.

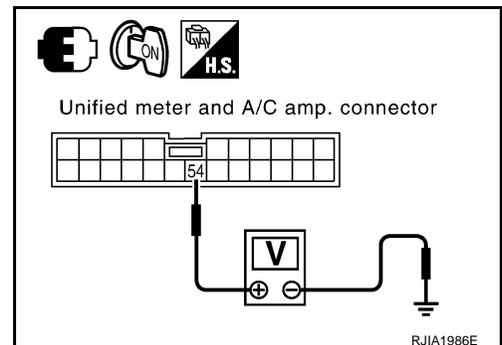



### 2. CHECK SIGNAL FOR UNIFIED METER AND A/C AMP.

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

Confirm A/C LAN signal between unified meter and A/C amp. harness connector M50 terminal 43 and ground using an oscilloscope.

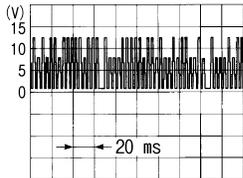Terminals		(-)	Voltage
(+) Terminal No.			
Unified meter and A/C amp. connector			
M50	43	Ground	 <p style="text-align: right;">SJIA1453J</p>

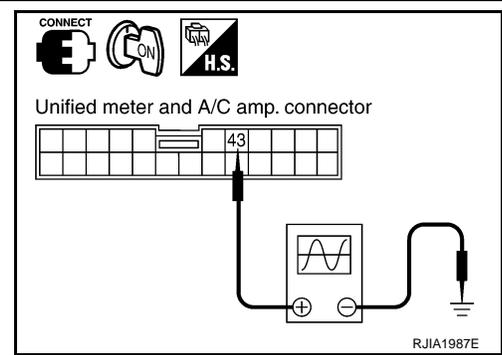

### OK or NG

- OK >> GO TO 3.
- NG >> Replace unified meter and A/C amp.


## 3. CHECK POWER SUPPLY FOR EACH DOOR MOTOR

Check voltage between each door motor harness connector terminal 1 and ground.

**1 – Ground : Battery voltage**


### OK or NG


- OK >> GO TO 4.
- NG >> Repair harness or connector.

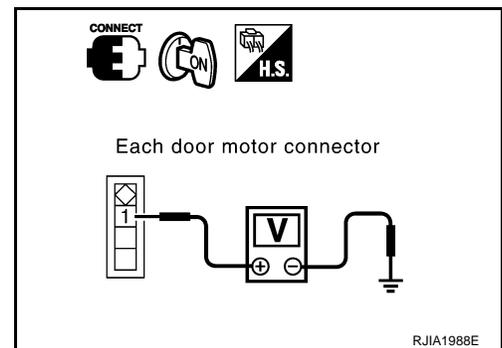

## 4. CHECK SIGNAL FOR EACH DOOR MOTOR

Confirm A/C LAN signal between each door motor harness connector terminal 3 and ground using an oscilloscope.

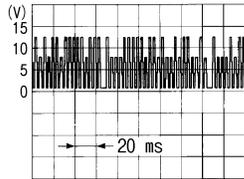Door motor	Terminals		(-)	Voltage
	Connector	Terminal No.		
Mode	M252	3	Ground	 <p style="text-align: right;">SJIA1453J</p>
Air mix	M253	3		
Intake	M256	3		

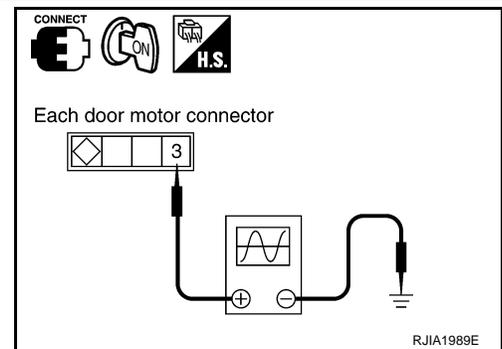

### OK or NG

- OK >> GO TO 5.
- NG >> Repair harness or connector.

## 5. CHECK MOTOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect each door motor connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M  
N  
O  
P

# TROUBLE DIAGNOSIS


## < SERVICE INFORMATION >

3. Check continuity between each door motor harness connector terminal 2 and ground.

**2 – Ground : Continuity should exist.**

### OK or NG

- OK >> GO TO 6.  
NG >> Repair harness or connector.

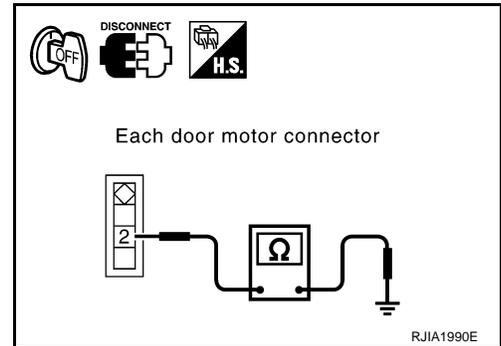

## 6. CHECK MOTOR OPERATION

1. Reconnect each door motor connector.
2. Turn ignition switch ON.
3. Confirm operation of each door motor.

### OK or NG

- OK >> Return to operate normally.  
• Poor contact in motor connector  
NG >> Does not operate normally.  
• GO TO 7.

## 7. CHECK AIR MIX DOOR MOTOR AND INTAKE DOOR MOTOR OPERATION

1. Turn ignition switch OFF.
2. Disconnect mode door motor, air mix door motor and intake door motor connector.
3. Reconnect air mix door motor and intake door motor connector.
4. Turn ignition switch ON.
5. Confirm operation of air mix door motor and intake door motor.

### OK or NG

- OK >> Air mix door motor and intake door motor operate normally.  
• Replace mode door motor.  
NG >> Air mix door motor and intake door motor does not operate normally.  
• GO TO 8.

## 8. CHECK MODE DOOR MOTOR AND INTAKE DOOR MOTOR OPERATION

1. Turn ignition switch OFF.
2. Disconnect air mix door motor connector.
3. Reconnect mode door motor connector.
4. Turn ignition switch ON.
5. Confirm operation of mode door motor and intake door motor.

### OK or NG

- OK >> Mode door motor and intake door motor operate normally.  
• Replace air mix door motor.  
NG >> Mode door motor and intake door motor does not operate normally.  
• GO TO 9.

## 9. CHECK MODE DOOR MOTOR AND AIR MIX DOOR MOTOR OPERATION

1. Turn ignition switch OFF.
2. Disconnect intake door motor connector.
3. Reconnect air mix door motor connector.
4. Turn ignition switch ON.
5. Confirm operation of mode door motor and air mix door motor.

### OK or NG

- OK >> Mode door motor and air mix door motor operate normally.  
• Replace intake door motor.  
NG >> Mode door motor and air mix door motor does not operate normally.  
• Replace unified meter and A/C amp.

# TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

## Mode Door Motor Circuit


INFOID:000000004655765

### SYMPTOM

- Air outlet does not change.
- Mode door motor does not operate normally.

### INSPECTION FLOW

1. Confirm symptom by performing the following operational check.

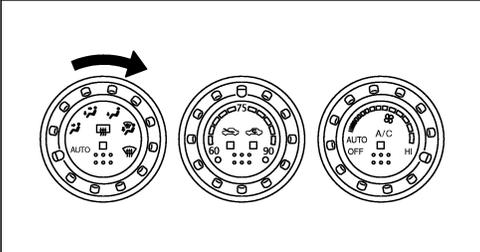

**OPERATIONAL CHECK – Discharge air**


a. Turn mode control dial to each position.

b. Confirm that discharge air comes out according to the air distribution table at left.  
Refer to "Discharge Air Flow" (\*1).

- If OK (symptom cannot be duplicated), perform complete operational check (\*2).
- If NG (symptom is confirmed), continue with STEP-2 following.
- Confirm that the compressor clutch is engaged (sound or visual inspection) and intake door position is at FRESH when is selected.

Mode door position	Air outlet/distribution		
	Vent	Foot	Defroster
	100%	–	–
	54%	46%	–
	–	76% (100%)	24% ( – )
	–	57%	43%
	–	–	100%

( ): Manually control

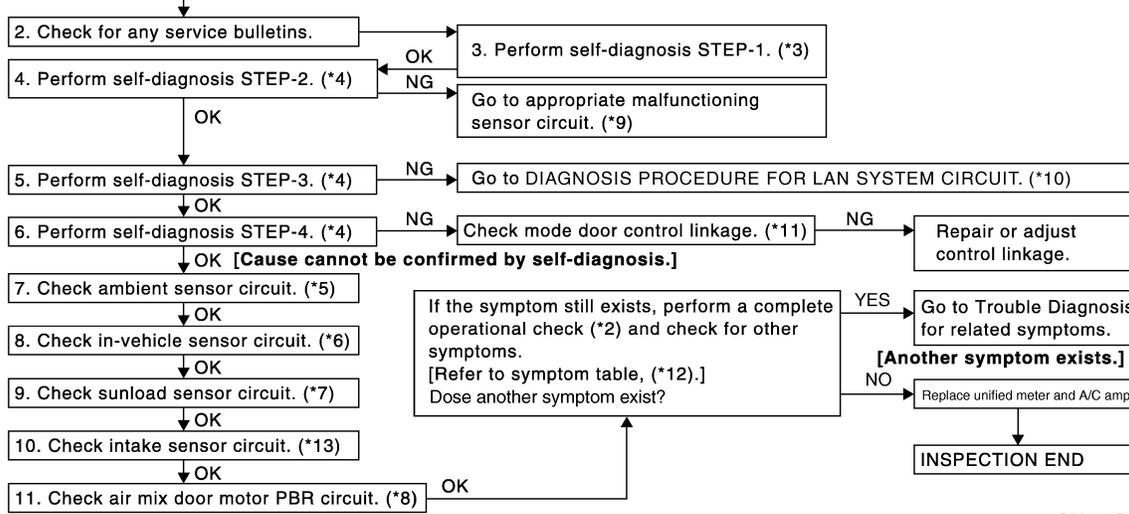

SJIA1850E

- |   |   |  |
|---|---|--|
| *1 <a href="#">ATC-26. "Discharge Air Flow"</a>                       | *2 <a href="#">ATC-45. "Operational Check"</a>              | *3 <a href="#">ATC-39. "Self-Diagnosis Function", see No. 1.</a>                             |
| *4 <a href="#">ATC-39. "Self-Diagnosis Function", see No. 5 to 7.</a> | *5 <a href="#">ATC-78. "Ambient Sensor Circuit"</a>         | *6 <a href="#">ATC-80. "In-vehicle Sensor Circuit"</a>                                       |
| *7 <a href="#">ATC-83. "Sunload Sensor Circuit"</a>                   | *8 <a href="#">ATC-56. "Air Mix Door Motor PBR Circuit"</a> | *9 <a href="#">ATC-39. "Self-Diagnosis Function", see No. 9.</a>                             |
| *10 <a href="#">ATC-48. "LAN System Circuit"</a>                      | *11 <a href="#">ATC-103. "Removal and Installation"</a>     | *12 <a href="#">ATC-28. "How to Perform Trouble Diagnosis for Quick and Accurate Repair"</a> |
| *13 <a href="#">ATC-86. "Intake Sensor Circuit"</a>                   |   |  |

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

### SYSTEM DESCRIPTION

#### Component Parts


Mode door control system components are:

- Unified meter and A/C amp.
- Mode door motor (LCU)
- A/C LAN system (PBR built-in mode door motor, air mix door motor and intake door motor)
- In-vehicle sensor
- Ambient sensor
- Sunload sensor
- Intake sensor

#### System Operation

The unified meter and A/C amp. receives data from each of the sensors. The unified meter and A/C amp. sends air mix door, mode door and intake door opening angle data to the air mix door motor LCU, mode door motor LCU and intake door motor LCU.


The air mix door motor, mode door motor and intake door motor read their respective signals according to the address signal. Opening angle indication signals received from the unified meter and A/C amp. and each of the motor position sensors are compared by the LCUs in each door motor with the existing decision and opening angles. Subsequently, HOT/COLD, DEF/VENT and FRE/REC operation is selected. The new selection data are returned to the unified meter and A/C amp.

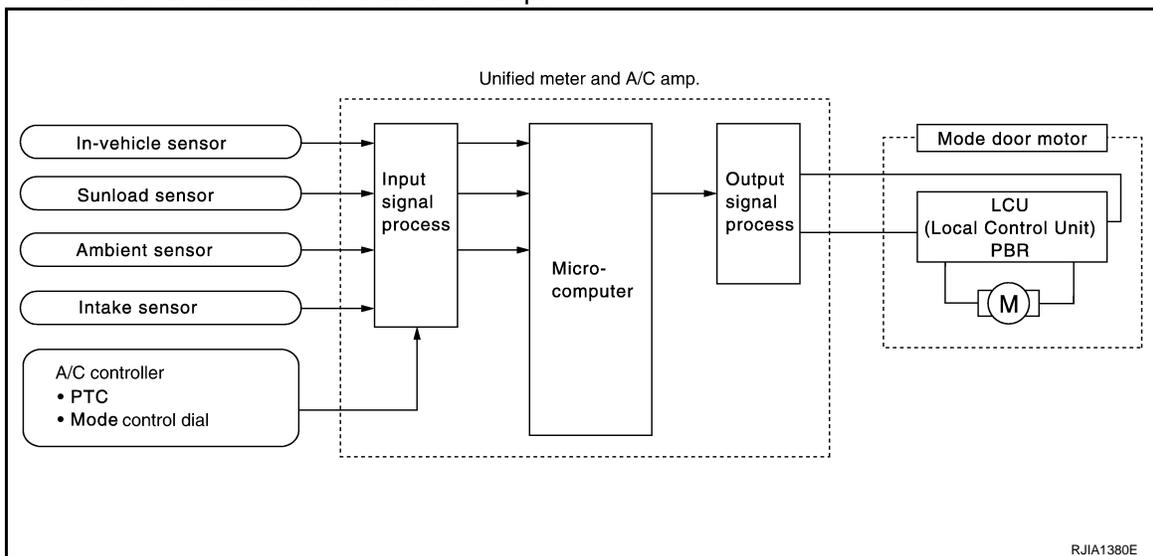

#### Mode Door Control Specification

### COMPONENT DESCRIPTION


#### Mode Door Motor

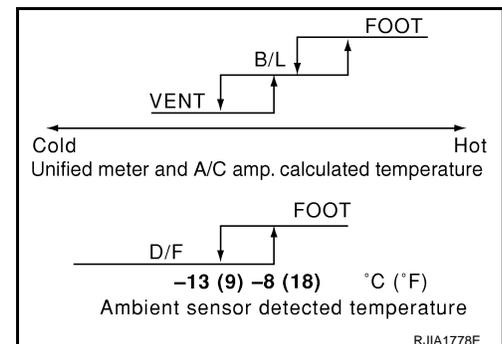

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

The mode door motor is attached to the heater & cooling unit assembly. It rotates so that air is discharged from the outlet set by the unified meter and A/C amp. Motor rotation is conveyed to a link which activates the mode door.

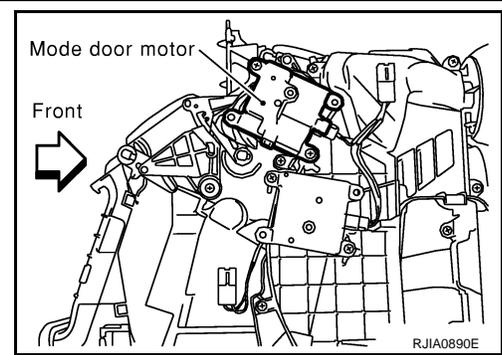

### DIAGNOSIS PROCEDURE FOR MODE DOOR MOTOR

SYMPTOM: Mode door motor does not operate normally.

Perform diagnosis procedure. Refer to [ATC-48, "LAN System Circuit"](#).

### Air Mix Door Motor Circuit

INFOID:000000004655766

#### SYMPTOM

- Discharge air temperature does not change.
- Air mix door motor does not operate normally.


#### INSPECTION FLOW

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M  
N  
O  
P

ATC

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

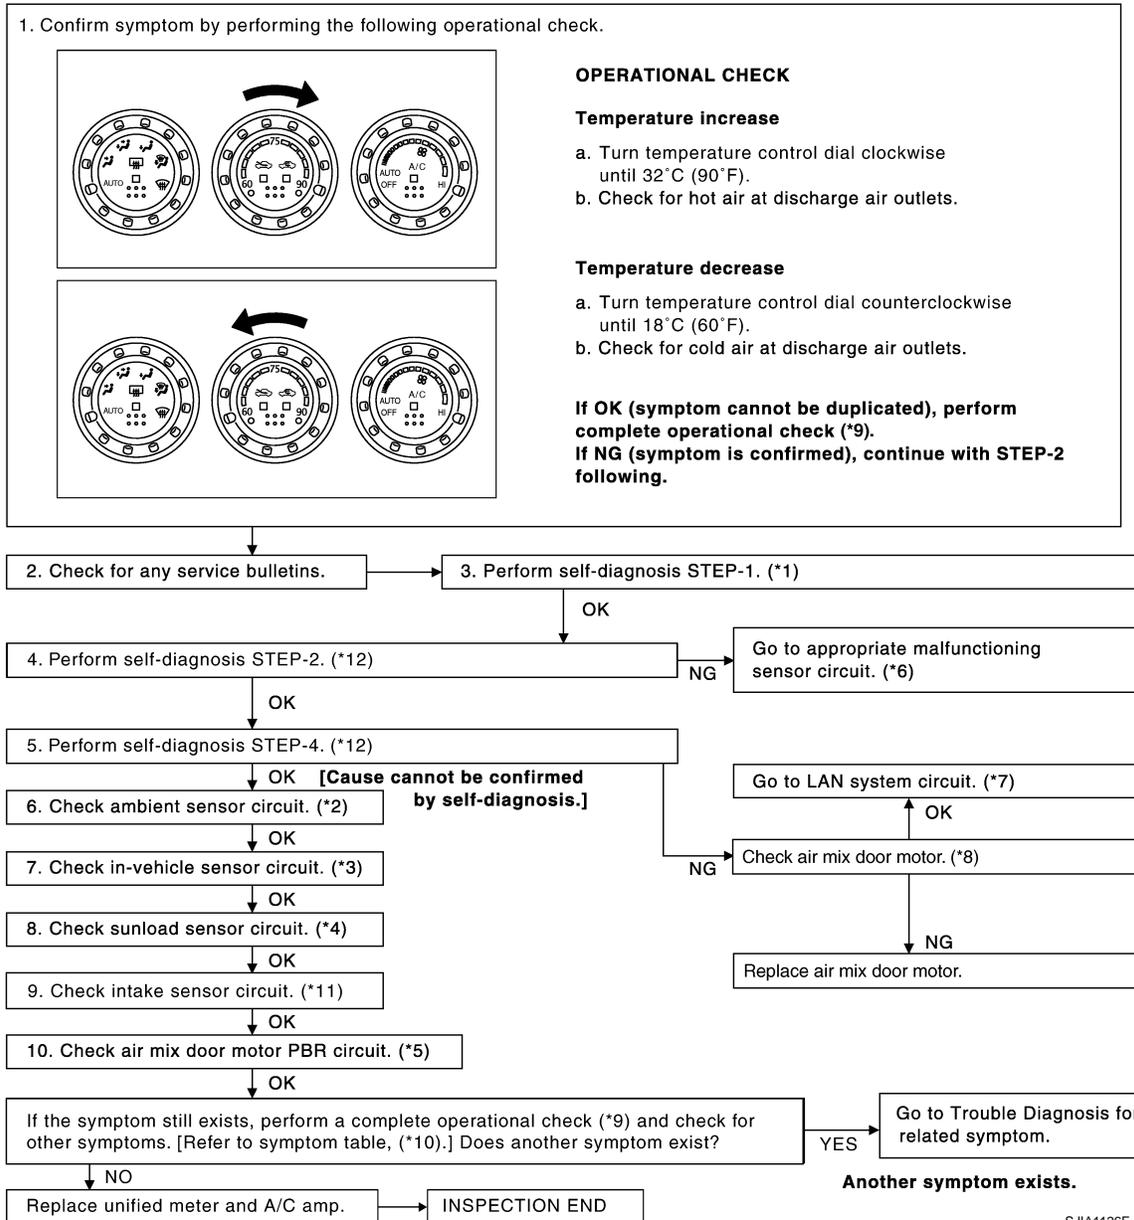

- |  |   |  |
|--|---|--|
| *1 <a href="#">ATC-39. "Self-Diagnosis Function", see No. 1.</a>                             | *2 <a href="#">ATC-78. "Ambient Sensor Circuit"</a>         | *3 <a href="#">ATC-80. "In-vehicle Sensor Circuit"</a>                 |
| *4 <a href="#">ATC-83. "Sunload Sensor Circuit"</a>  | *5 <a href="#">ATC-56. "Air Mix Door Motor PBR Circuit"</a> | *6 <a href="#">ATC-39. "Self-Diagnosis Function", see No. 9.</a>       |
| *7 <a href="#">ATC-48. "LAN System Circuit"</a>  | *8 <a href="#">ATC-104. "Removal and Installation"</a>      | *9 <a href="#">ATC-45. "Operational Check"</a>                         |
| *10 <a href="#">ATC-28. "How to Perform Trouble Diagnosis for Quick and Accurate Repair"</a> | *11 <a href="#">ATC-86. "Intake Sensor Circuit"</a>         | *12 <a href="#">ATC-39. "Self-Diagnosis Function", see No. 5 to 7.</a> |

## SYSTEM DESCRIPTION

### Component Parts

Air mix door control system components are:

- Unified meter and A/C amp.
- Air mix door motor (LCU)
- A/C LAN system (PBR built-in mode door motor, air mix door motor and intake door motor)
- In-vehicle sensor
- Ambient sensor

# TROUBLE DIAGNOSIS


## < SERVICE INFORMATION >

- Sunload sensor
- Intake sensor


### System Operation

The unified meter and A/C amp. receives data from each of the sensors. The unified meter and A/C amp. sends air mix door, mode door and intake door opening angle data to the air mix door motor LCU, mode door motor LCU and intake door motor LCU.

The air mix door motor, mode door motor and intake door motor read their respective signals according to the address signal. Opening angle indication signals received from the unified meter and A/C amp. and each of the motor position sensors are compared by the LCUs in each door motor with the existing decision and opening angles. Subsequently, HOT/COLD, DEF/VENT and FRE/REC operation is selected. The new selection data are returned to the unified meter and A/C amp.

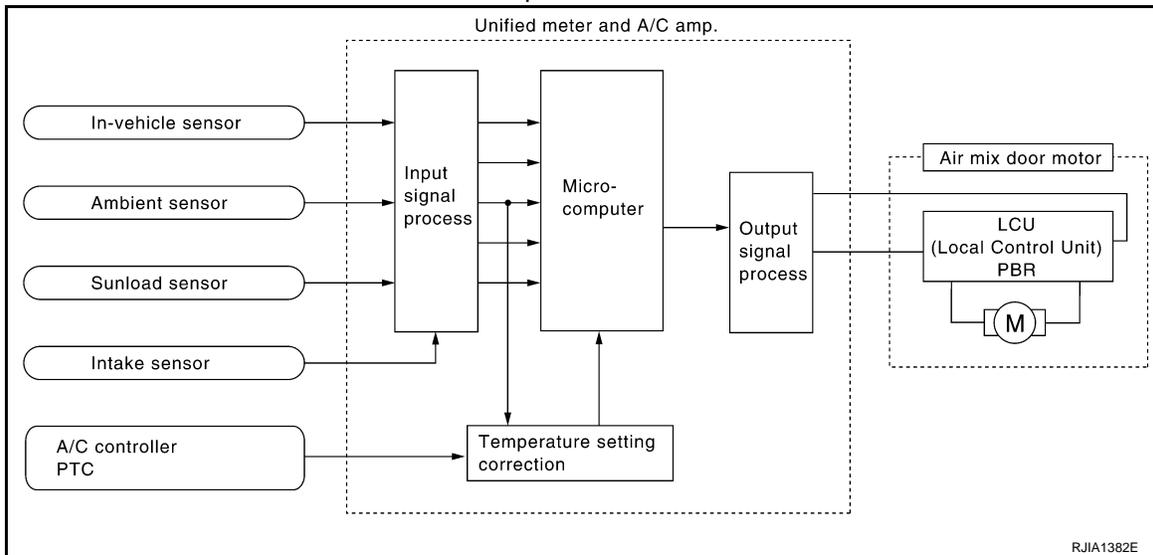


### Air Mix Door Control Specification

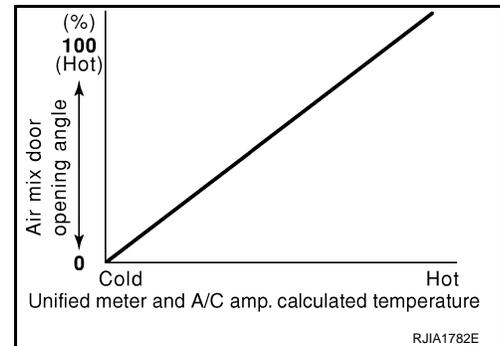

## COMPONENT DESCRIPTION

### Air Mix Door Motor

The air mix door motor is attached to the heater & cooling unit assembly. It rotates so that the air mix door is opened or closed to a position set by the unified meter and A/C amp. Motor rotation is then sent conveyed through a shaft and the air mix door position feedback is then sent to the unified meter and A/C amp. by PBR built-in air mix door motor.

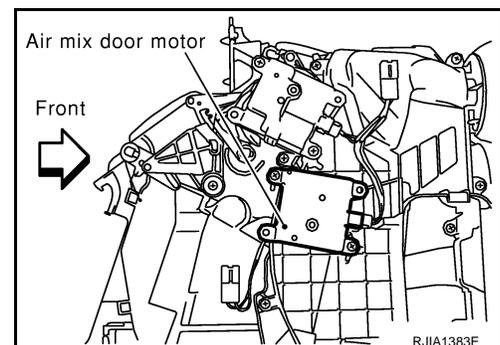

## DIAGNOSIS PROCEDURE FOR AIR MIX DOOR

SYMPTOM: Discharge air temperature does not change.

Perform diagnosis procedure. Refer to [ATC-48. "LAN System Circuit"](#).

# TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

## Air Mix Door Motor PBR Circuit

INFOID:000000004655767

### SYMPTOM

- Discharge air temperature does not change.
- PBR circuit is open or shorted.

### DIAGNOSIS PROCEDURE FOR AIR MIX DOOR MOTOR PBR

Perform diagnosis procedure. Refer to [ATC-48, "LAN System Circuit"](#).


## Intake Door Motor Circuit

INFOID:000000004655768

### SYMPTOM

- Intake door does not change.
- Intake door motor does not operate normally.

### INSPECTION FLOW

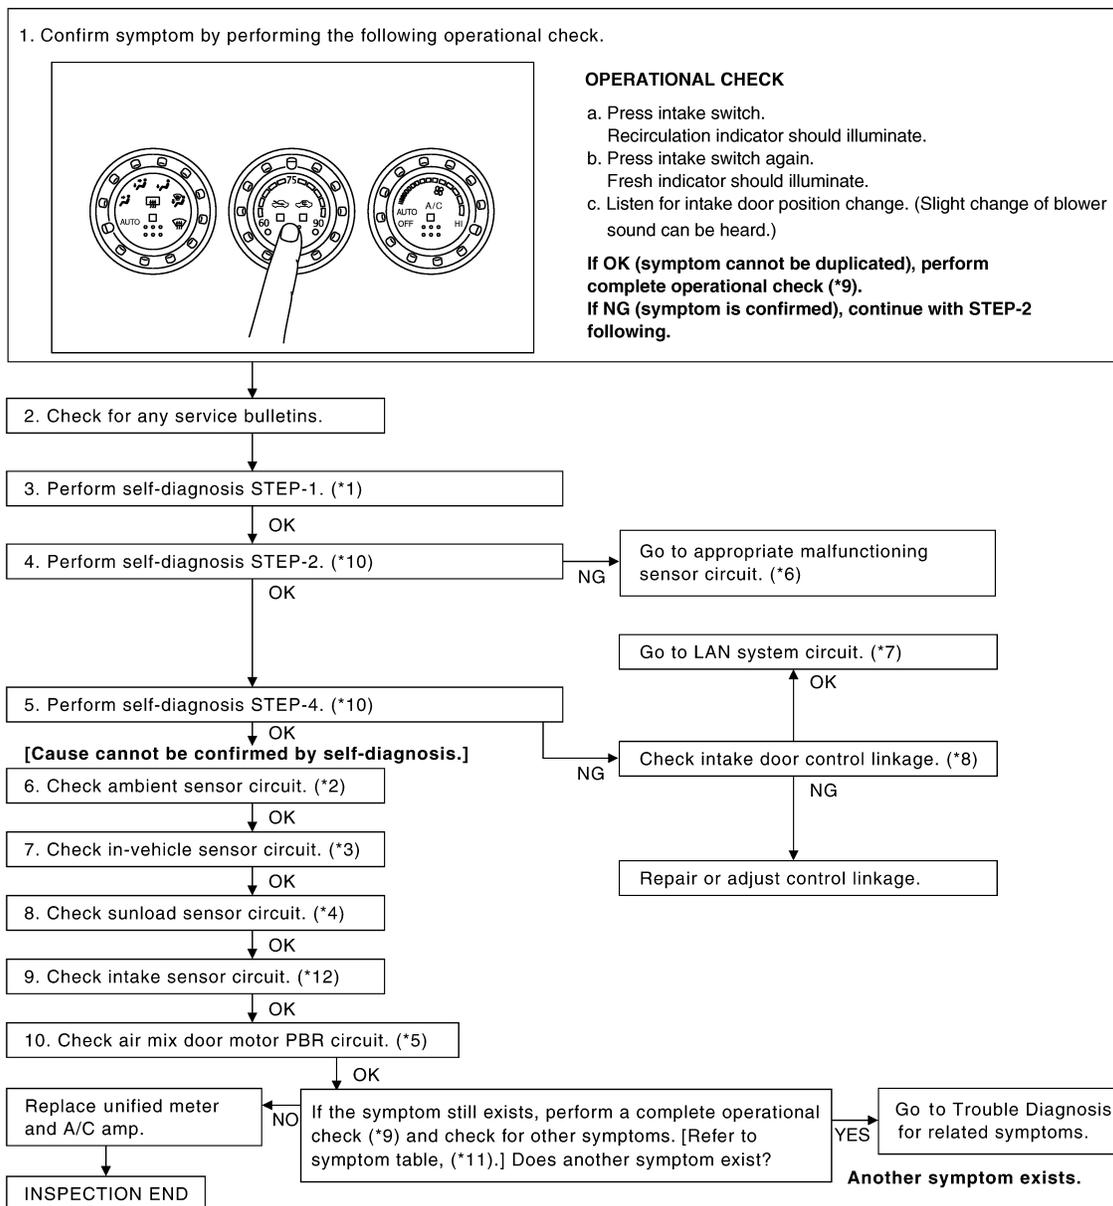

SJIA1127E

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

- |  |  |  |
|--|--|--|
| *1 <a href="#">ATC-39, "Self-Diagnosis Function", see No. 1.</a>       | *2 <a href="#">ATC-78, "Ambient Sensor Circuit"</a>  | *3 <a href="#">ATC-80, "In-vehicle Sensor Circuit"</a>           |
| *4 <a href="#">ATC-83, "Sunload Sensor Circuit"</a>                    | *5 <a href="#">ATC-56, "Air Mix Door Motor PBR Circuit"</a>                                  | *6 <a href="#">ATC-39, "Self-Diagnosis Function", see No. 9.</a> |
| *7 <a href="#">ATC-48, "LAN System Circuit"</a>                        | *8 <a href="#">ATC-98, "Removal and Installation"</a>  | *9 <a href="#">ATC-45, "Operational Check"</a>                   |
| *10 <a href="#">ATC-39, "Self-Diagnosis Function", see No. 5 to 7.</a> | *11 <a href="#">ATC-28, "How to Perform Trouble Diagnosis for Quick and Accurate Repair"</a> | *12 <a href="#">ATC-86, "Intake Sensor Circuit"</a>              |

## SYSTEM DESCRIPTION


### Component Parts

Intake door control system components are:


- Unified meter and A/C amp.
- Intake door motor (LCU)
- A/C LAN system (PBR built-in mode door motor, air mix door motor and intake door motor)
- In-vehicle sensor
- Ambient sensor
- Sunload sensor
- Intake sensor

### System Operation

The intake door control determines intake door position based on the ambient temperature, the intake air temperature and the in-vehicle temperature. When setting mode control dial to D/F, D/F2 or DEF position, fan control dial OFF position, the unified meter and A/C amp. sets the intake door at the FRE position.

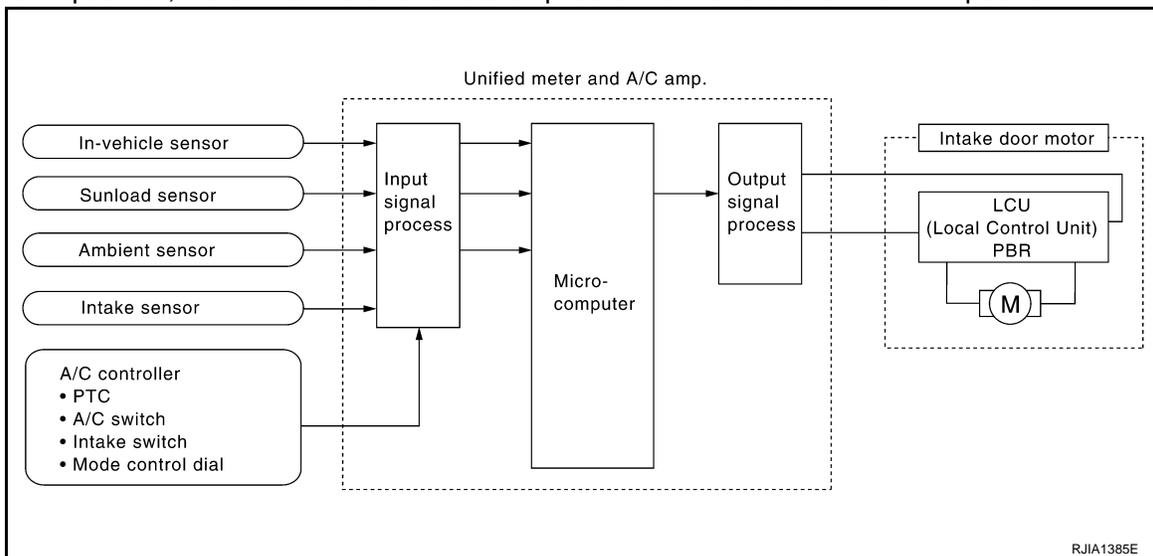

### Intake Door Control Specification

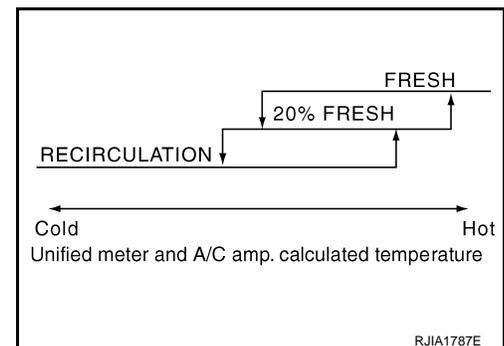


## COMPONENT DESCRIPTION

### Intake Door Motor

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

The intake door motor is attached to the blower unit. It rotates so that air is drawn from inlets set by the unified meter and A/C amp. Motor rotation is conveyed to a lever which activates the intake door.

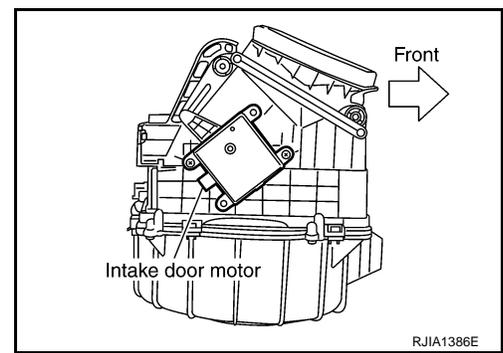

## DIAGNOSIS PROCEDURE FOR INTAKE DOOR MOTOR

SYMPTOM: Intake door motor does not operate normally.

Perform diagnosis procedure. Refer to [ATC-48, "LAN System Circuit"](#).

## Blower Motor Circuit


INFOID:000000004655769

SYMPTOM: Blower motor operation is malfunctioning.

## INSPECTION FLOW

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

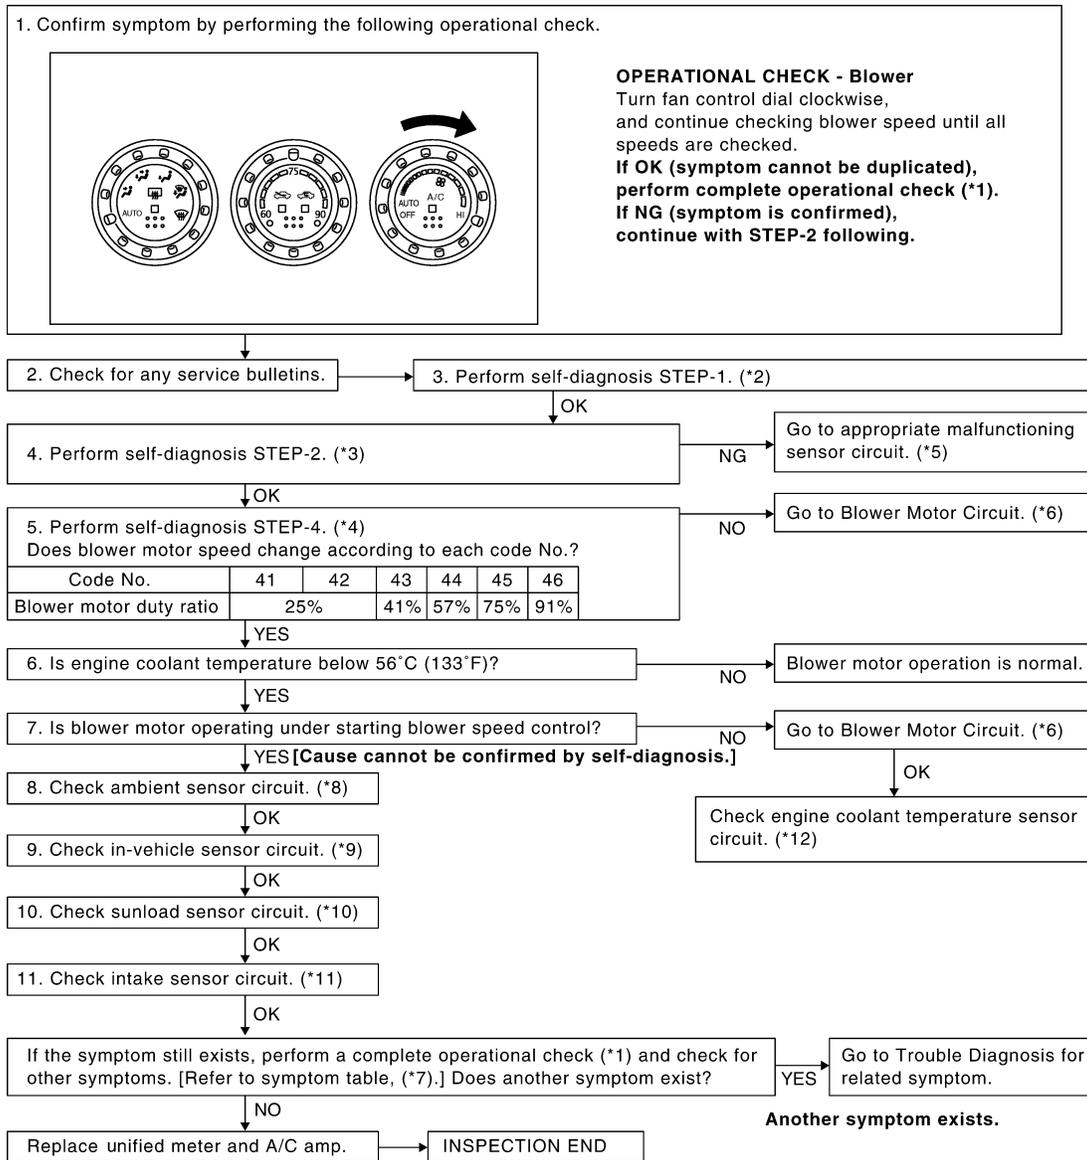

SJIA1128E

- \*1 [ATC-45, "Operational Check"](#)
- \*2 [ATC-39, "Self-Diagnosis Function", see No. 1.](#)
- \*3 [ATC-39, "Self-Diagnosis Function", see No. 5.](#)
- \*4 [ATC-39, "Self-Diagnosis Function", see No. 7.](#)
- \*5 [ATC-39, "Self-Diagnosis Function", see No. 9.](#)
- \*6 "DIAGNOSIS PROCEDURE FOR BLOWER MOTOR"
- \*7 [ATC-28, "How to Perform Trouble Diagnosis for Quick and Accurate Repair"](#)
- \*8 [ATC-78, "Ambient Sensor Circuit"](#)
- \*9 [ATC-80, "In-vehicle Sensor Circuit"](#)
- \*10 [ATC-83, "Sunload Sensor Circuit"](#)
- \*11 [ATC-86, "Intake Sensor Circuit"](#)
- \*12 [EC-216](#)

## SYSTEM DESCRIPTION

### Component Parts

Fan speed control system components are:


- Unified meter and A/C amp.
- A/C LAN system (PBR built-in mode door motor, air mix door motor and intake door motor)
- In-vehicle sensor
- Ambient sensor
- Sunload sensor

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

- Intake sensor

### System Operation

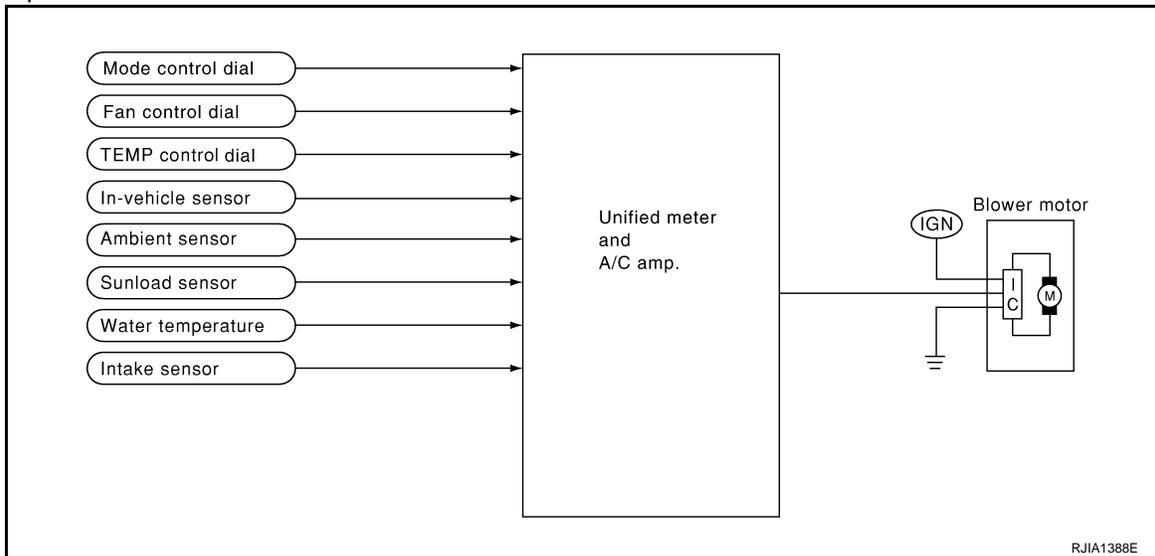

### Automatic Mode

In the automatic mode, the blower motor speed is calculated by the unified meter and A/C amp. based on the input from the PBR, in-vehicle sensor, sunload sensor, intake sensor and ambient sensor.

When the air flow is increased, the duty ratio of the blower motor's drive signal is changed at 8%/sec. to prevent a sudden increase in air flow.

In addition to manual air flow control and the usual automatic air flow control, starting air flow control, low water temperature starting control and high passenger compartment temperature starting control are available.

### Starting Fan Speed Control

#### Start up from COLD SOAK Condition (Automatic mode)

In a cold start up condition where the engine coolant temperature is below 56°C (133°F), the blower will not operate for a short period of time (up to 150 seconds). The exact start delay time varies depending on the ambient and engine coolant temperature.

In the most extreme case (very low ambient) the blower starting delay will be 150 seconds as described above. After this delay, the blower will operate at low speed until the engine coolant temperature rises above 56°C (133°F), and then the blower speed will increase to the objective speed.

#### Start up from usual or HOT SOAK Condition (Automatic mode)


The blower will begin operation momentarily after the fan control dial to AUTO position. The blower speed will gradually rise to the objective speed over a time period of 3 seconds or less (actual time depends on the objective blower speed).

### Blower Speed Compensation

#### Sunload

When the in-vehicle temperature and the set temperature are very close, the blower will be operating at low speed. The low speed will vary depending on the sunload. During conditions of low or no sunload, the blower speed is at duty ratio 25%. During high sunload conditions, the unified meter and A/C amp. raise the blower speed. (duty ratio 49%).

### Fan Speed Control Specification

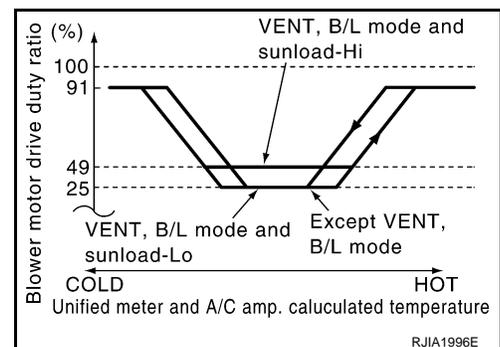


# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

### COMPONENT DESCRIPTION


#### Brush-less Motor

The blower motor utilizes a brush-less motor with a rotating magnet. Quietness is improved over previous motors where the brush was the point of contact and the coil rotated.

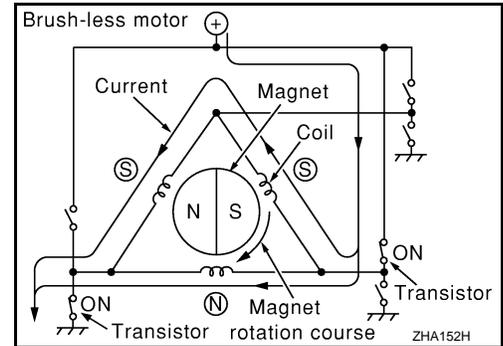

### DIAGNOSIS PROCEDURE FOR BLOWER MOTOR

SYMPTOM: Blower motor operation is malfunctioning.

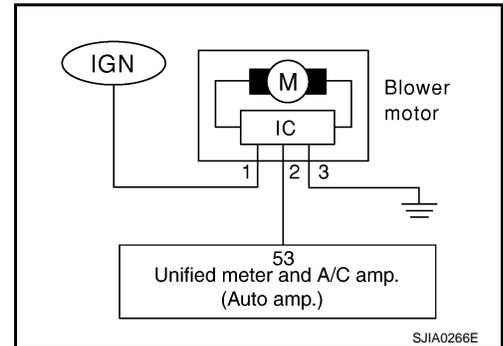


### 1. CHECK POWER SUPPLY FOR BLOWER MOTOR

1. Disconnect blower motor connector.
2. Turn ignition switch ON.
3. Check voltage between blower motor harness connector M62 terminal 1 and ground.

**1 – Ground : Battery voltage**

#### OK or NG

- OK >> GO TO 2.
- NG >> Check power supply circuit and 15A fuses [Nos. 10 and 11, located in the fuse block (J/B)]. Refer to [PG-83](#).
  - If fuse are OK, check harness for open circuit. Repair or replace if necessary.
  - If fuse are NG, check harness for short circuit and replace fuse.

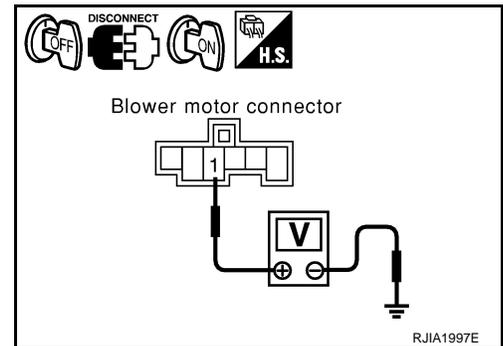


### 2. CHECK GROUND CIRCUIT FOR BLOWER MOTOR

1. Turn ignition switch OFF.
2. Check continuity between blower motor harness connector M62 terminal 3 and ground.

**3 – Ground : Continuity should exist.**

#### OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

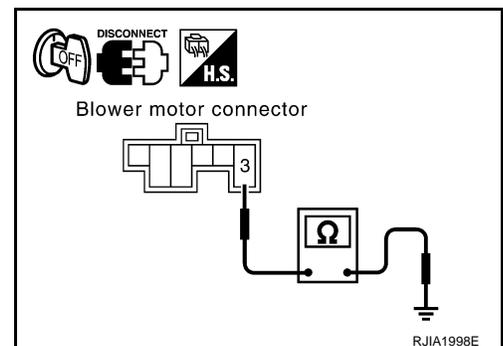

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >


### 3. CHECK CIRCUIT CONTINUITY BETWEEN BLOWER MOTOR AND UNIFIED METER AND A/C AMP.

1. Disconnect unified meter connector and A/C amp. connector.
2. Check continuity between blower motor harness connector M62 terminal 2 and unified meter and A/C amp. harness connector M50 terminal 53.

**2 – 53 : Continuity should exist.**


#### OK or NG

- OK >> GO TO 4.  
 NG >> Repair harness or connector.

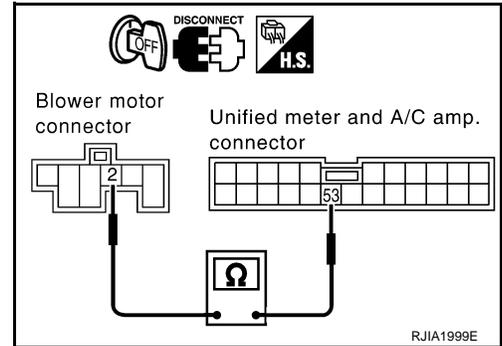

### 4. CHECK UNIFIED METER AND A/C AMP. OUTPUT SIGNAL

1. Reconnect blower motor connector and unified meter and A/C amp. connector.
2. Turn ignition switch ON.
3. Change the fan speed from Lo to Hi, and check the duty ratios between blower motor harness connector M62 terminal 2 and ground by using an oscilloscope. Normal terminal 2 drive signal duty ratios are shown in the table below.

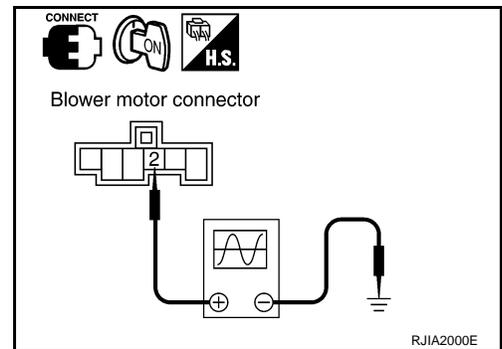

Blower fan speed	1st	5th	10th	15th	20th	25th
Blower motor connector M62 Terminal No. 2 (Oscilloscope)						
Duty ratio	Approx. 25%	Approx. 37%	Approx. 47%	Approx. 57%	Approx. 71%	Approx. 91%

NOTE: Duty ratio =  $\frac{T_x}{\text{Approx. 1.6 ms}} \times 100 (\%)$

RJIA1390E

#### OK or NG

- OK >> Replace blower motor after confirming the fan air flow does not change.  
 NG >> Replace unified meter and A/C amp.

### COMPONENT INSPECTION


Blower Motor

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

Confirm smooth rotation of the blower motor.

- Ensure that there are no foreign particles inside the blower unit.

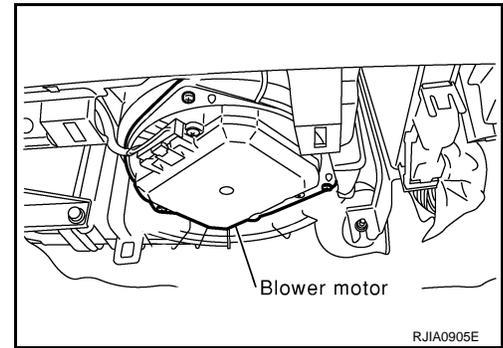


INFOID:000000004655770

## Magnet Clutch Circuit

SYMPTOM: Magnet clutch does not engage.

### INSPECTION FLOW

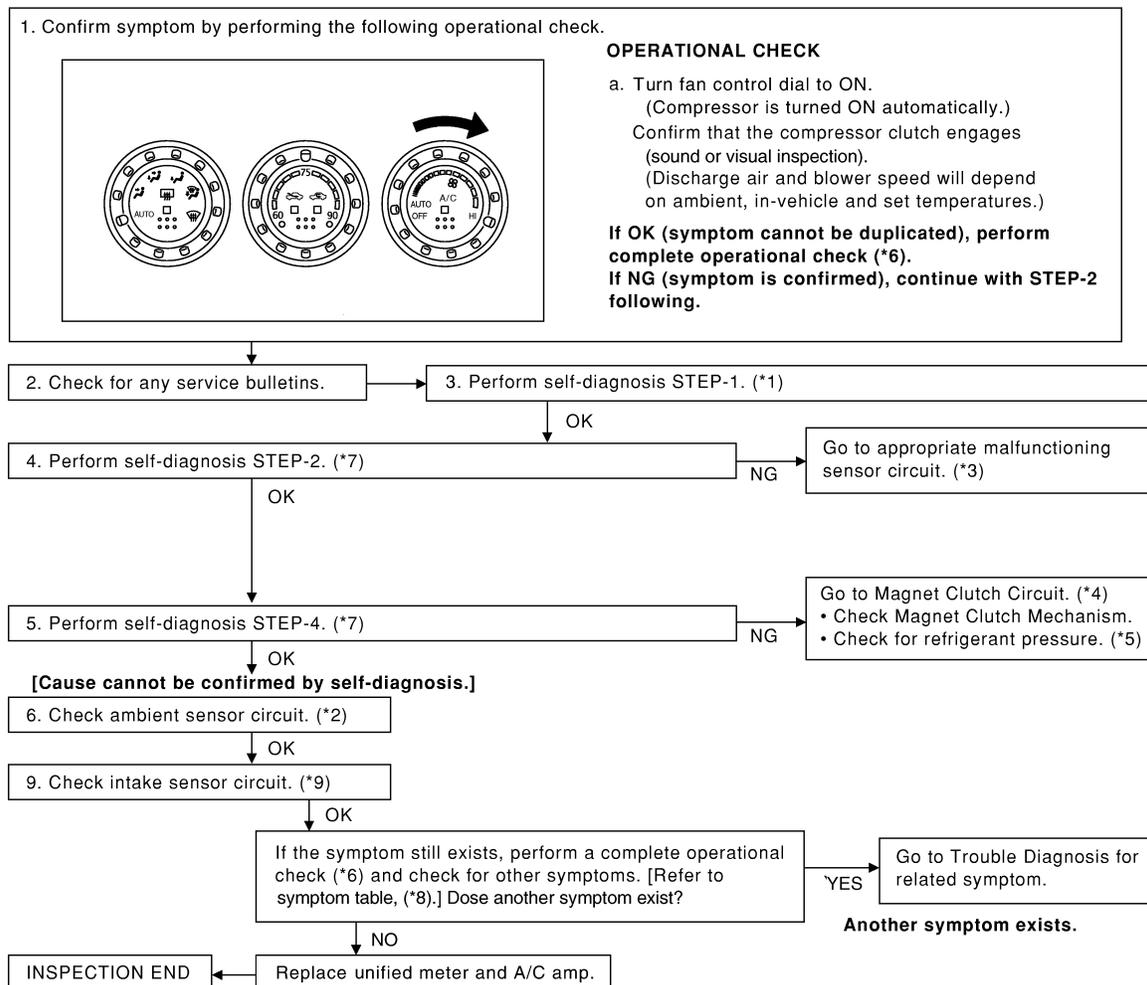

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M  
N  
O  
P

ATC

SJIA1129E

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

- \*1 [ATC-39, "Self-Diagnosis Function"](#), see No. 1.
- \*2 [ATC-78, "Ambient Sensor Circuit"](#)
- \*3 [ATC-39, "Self-Diagnosis Function"](#), see No. 9.
- \*4 "DIAGNOSIS PROCEDURE FOR MAGNET CLUTCH"
- \*5 [ATC-68, "Insufficient Cooling"](#)
- \*6 [ATC-45, "Operational Check"](#)
- \*7 [ATC-39, "Self-Diagnosis Function"](#), see No. 5 to 7.
- \*8 [ATC-28, "How to Perform Trouble Diagnosis for Quick and Accurate Repair"](#)
- \*9 [ATC-86, "Intake Sensor Circuit"](#)


## SYSTEM DESCRIPTION

Unified meter and A/C amp. controls compressor operation by ambient temperature, intake air temperature and signal from ECM.


### Low Temperature Protection Control

Unified meter and A/C amp. will turn compressor ON or OFF as determined by a signal detected by ambient sensor and intake sensor.

When ambient temperature is higher than  $-2^{\circ}\text{C}$  ( $28^{\circ}\text{F}$ ), the compressor turns ON. The compressor turns OFF when ambient temperature is lower than  $-5^{\circ}\text{C}$  ( $23^{\circ}\text{F}$ ).

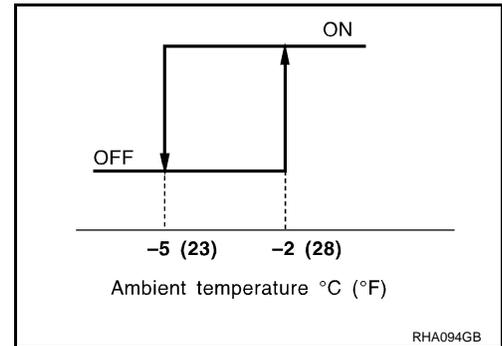


When intake air temperature is higher than  $1^{\circ}\text{C}$  ( $34^{\circ}\text{F}$ ), the compressor turns ON. The compressor turns OFF when intake air temperature is lower than  $-5^{\circ}\text{C}$  ( $23^{\circ}\text{F}$ ).

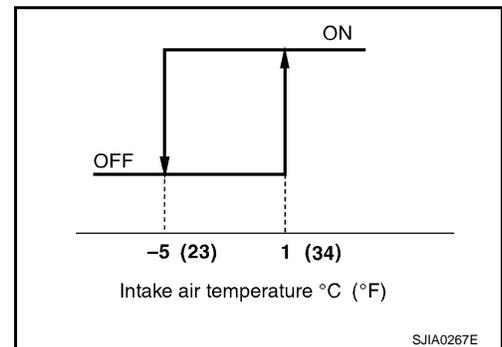

## DIAGNOSIS PROCEDURE FOR MAGNET CLUTCH

SYMPTOM: Magnet clutch does not engage when A/C switch is ON.

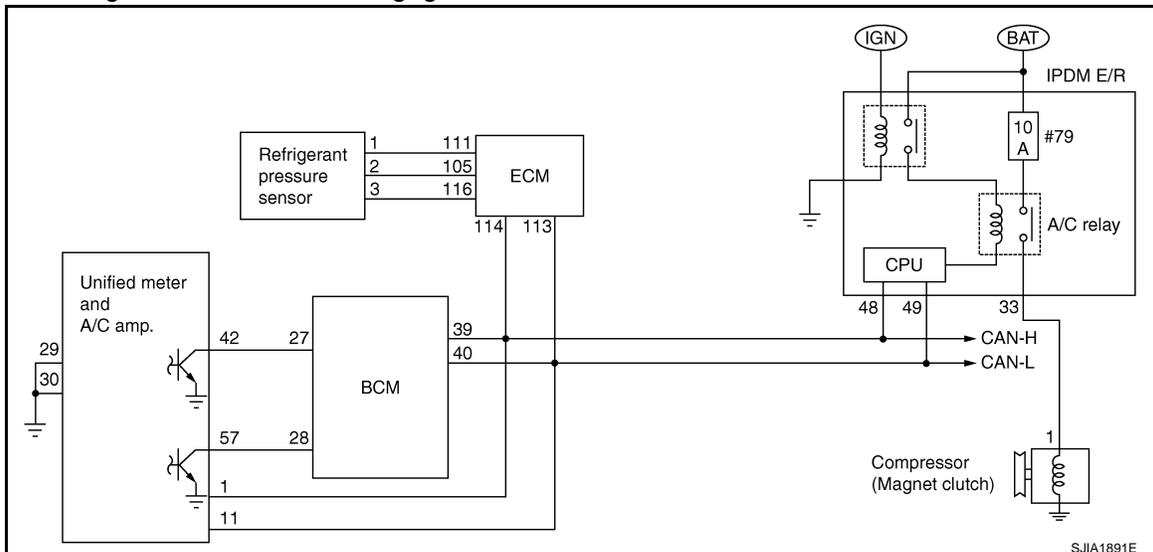

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

### 1. CHECK AMBIENT SENSOR CIRCUIT AND INTAKE SENSOR CIRCUIT

Check ambient sensor and intake sensor. Refer to [ATC-39. "Self-Diagnosis Function"](#), see No. 9.

OK or NG

OK >> GO TO 2.

NG >> • Malfunctioning ambient sensor: Refer to [ATC-78. "Ambient Sensor Circuit"](#).  
• Malfunctioning intake sensor: Refer to [ATC-86. "Intake Sensor Circuit"](#).

### 2. PERFORM AUTO ACTIVE TEST

Refer to [PG-19. "Auto Active Test"](#).

Dose the magnet clutch operate?

YES >> •  WITH CONSULT-III: GO TO 5.  
•  WITHOUT CONSULT-III: GO TO 6.

NO >> Check 10A fuse (No. 79, located in IPDM E/R), and GO TO 3. Refer to [PG-22. "IPDM E/R Terminal Arrangement"](#).

### 3. CHECK CIRCUIT CONTINUITY BETWEEN IPDM E/R AND COMPRESSOR


1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and compressor connector.
3. Check continuity between IPDM E/R harness connector E8 terminal 33 and compressor harness connector F24 terminal 1.

**33 – 1 : Continuity should exist.**

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

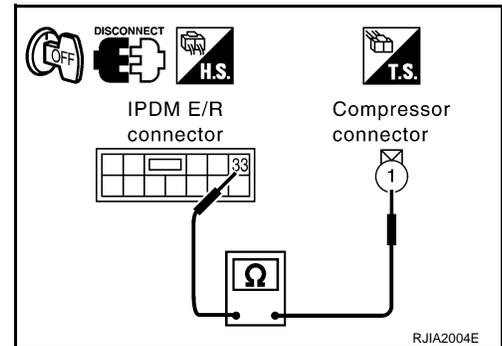


### 4. CHECK MAGNET CLUTCH CIRCUIT

Check for operation sound when applying battery voltage direct current to terminal.

OK or NG

OK >> 1. Replace IPDM E/R.  
2. Go to self-diagnosis procedure [ATC-39. "Self-Diagnosis Function"](#) and perform self-diagnosis STEP-4. Confirm that magnet clutch operation normal.

NG >> 1. Replace magnet clutch.  
2. Go to self-diagnosis procedure [ATC-39. "Self-Diagnosis Function"](#) and perform self-diagnosis STEP-4. Confirm that magnet clutch operation normal.

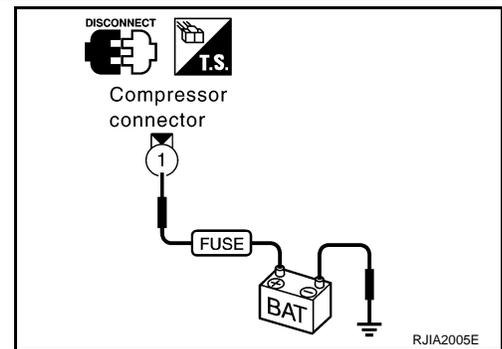

### 5. CHECK BCM INPUT (COMPRESSOR ON) SIGNAL

Check compressor ON/OFF signal. Refer to [ATC-28. "CONSULT-III Function \(BCM\)"](#).

**A/C SW ON : AIR COND SIG On**

**A/C SW OFF : AIR COND SIG Off**

OK or NG

OK >> GO TO 8.

NG >> GO TO 6.

### 6. CHECK CIRCUIT CONTINUITY BETWEEN BCM AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect BCM connector and unified meter and A/C amp. connector.

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >


- Check continuity between BCM harness connector M90 terminal 27 and unified meter and A/C amp. harness connector M50 terminal 42.

**27 – 42**

**: Continuity should exist.**

### OK or NG


- OK >> GO TO 7.  
 NG >> Repair harness or connector.

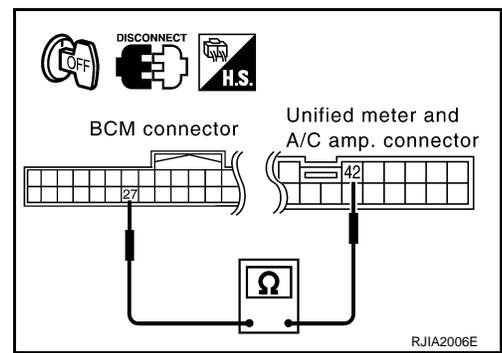

## 7. CHECK VOLTAGE FOR UNIFIED METER AND A/C AMP. (COMPRESSOR ON SIGNAL)

- Reconnect BCM connector and unified meter and A/C amp. connector.
- Turn ignition switch ON.
- Check voltage between unified meter and A/C amp. harness connector M50 terminal 42 and ground.

Terminals		(-)	Condition	Voltage
(+)	Terminal No.			
Unified meter and A/C amp. connector				
M50	42	Ground	A/C switch: ON (Blower motor operates.)	Approx. 0 V
			A/C switch: OFF	Approx. 5 V

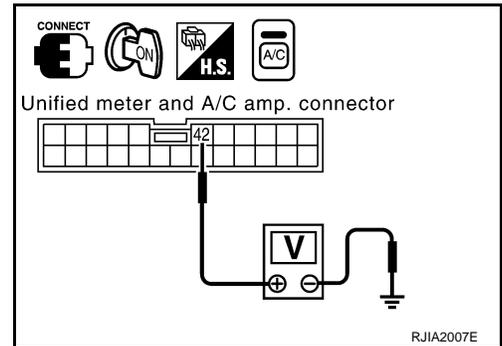

### OK or NG

- OK >> GO TO 8.  
 NG-1 >> If the voltage is approx. 5 V when A/C switch is ON: Replace unified meter and A/C amp.  
 NG-2 >> If the voltage is approx. 0 V when A/C switch is OFF: Replace BCM.

## 8. CHECK REFRIGERANT PRESSURE SENSOR

### Ⓟ WITH CONSULT-III

- Start the engine.
- Check voltage of refrigerant pressure sensor. Refer to [EC-121, "CONSULT-III Reference Value in Data Monitor"](#).

### ⓧ WITHOUT CONSULT-III

- Start the engine.
- Check voltage between ECM harness connector M71 terminal 105 and ground.

Terminals		(-)	Condition	Voltage
(+)	Terminal No.			
ECM connector				
M71	105	Ground	A/C switch: ON (Blower motor operates.)	Approx. 1.0 - 4.0 V

### OK or NG

- OK >> • Ⓟ WITH CONSULT-III: GO TO 9.  
 • ⓧ WITHOUT CONSULT-III: GO TO 10.  
 NG >> Refer to [EC-657](#).

## 9. CHECK BCM INPUT (FAN ON) SIGNAL

Check FAN ON/OFF signal. Refer to [ATC-28, "CONSULT-III Function \(BCM\)"](#).

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

**FAN SW ON** : HEATER FAN SW On  
**FAN SW OFF** : HEATER FAN SW Off

### OK or NG

OK >> GO TO 12.  
 NG >> GO TO 10.


## 10. CHECK CIRCUIT CONTINUITY BETWEEN BCM AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect BCM connector and unified meter and A/C amp. connector.
3. Check continuity between BCM harness connector M90 terminal 28 and unified meter and A/C amp. harness connector M50 terminal 57.

**28 – 57** : Continuity should exist.

### OK or NG


OK >> GO TO 11.  
 NG >> Repair harness or connector.

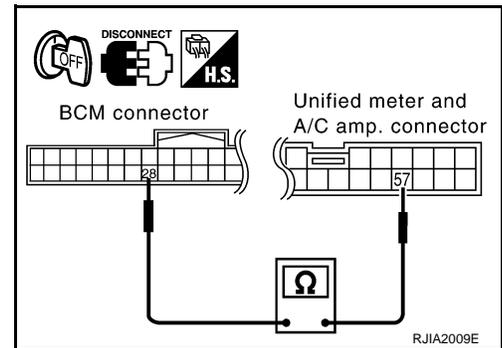

## 11. CHECK VOLTAGE FOR UNIFIED METER AND A/C AMP. (FAN ON SIGNAL)

1. Reconnect BCM connector and unified meter and A/C amp. connector.
2. Turn ignition switch ON.
3. Check voltage between unified meter and A/C amp. harness connector M50 terminal 57 and ground.

Terminals		Condition	Voltage
(+)	(-)		
Unified meter and A/C amp. connector	Terminal No.		
M50	57	Fan control dial: ON (Blower motor operates.)	Approx. 0 V
		Fan control dial: OFF	Approx. 5 V

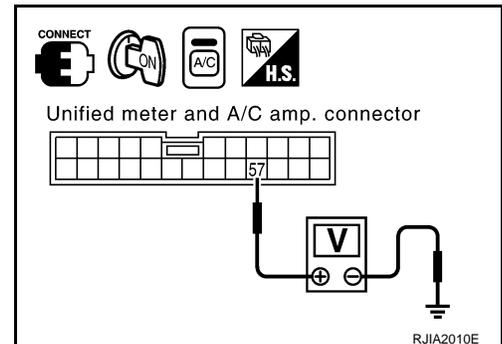

### OK or NG

OK >> GO TO 12.  
 NG-1 >> If the voltage is approx. 5 V when blower motor is ON: Replace unified meter and A/C amp.  
 NG-2 >> If the voltage is approx. 0 V when blower motor is OFF: Replace BCM.

## 12. CHECK CAN COMMUNICATION

Check CAN communication. Refer to [BCS-15. "U1000 CAN Communication Circuit"](#).

- BCM – ECM
- ECM – IPDM E/R
- ECM – Unified meter and A/C amp.

### OK or NG

OK >> Replace ECM.  
 NG >> Repair or replace malfunctioning part(s).


## COMPONENT INSPECTION

Refrigerant Pressure Sensor

# TROUBLE DIAGNOSIS


## < SERVICE INFORMATION >

The refrigerant pressure sensor is attached to the liquid tank.  
Make sure that the A/C refrigerant pressure and the sensor output voltage are within the specified range as shown in the A/C operating condition figure. Refer to [EC-657](#).

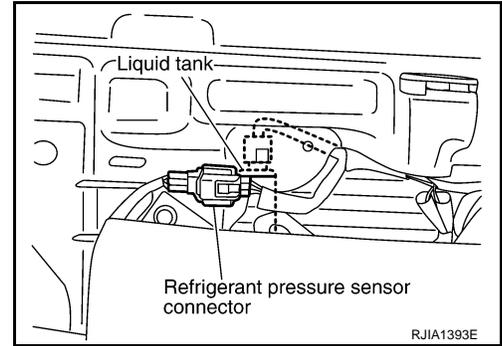

## Insufficient Cooling

INFOID:000000004655771

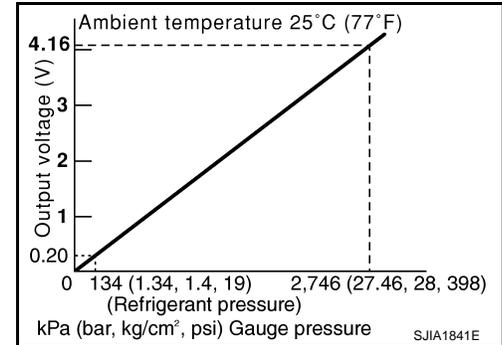


SYMPTOM: Insufficient cooling

INSPECTION FLOW

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

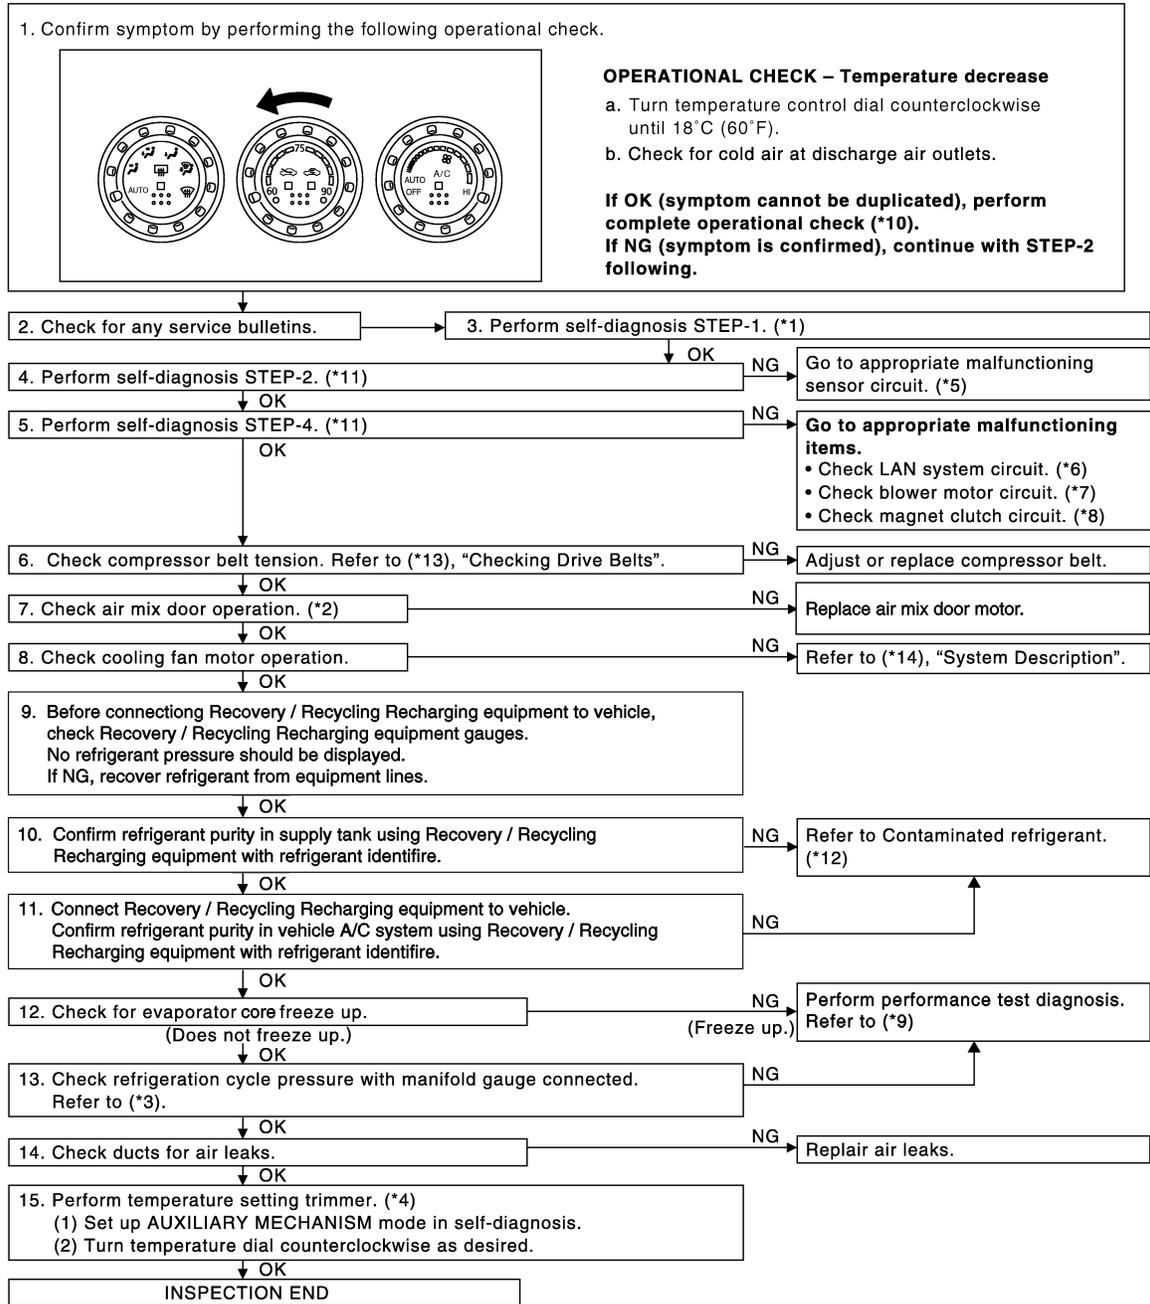


SJA1130E

- |   |   |  |
|---|---|--|
| *1 <a href="#">ATC-39, "Self-Diagnosis Function"</a> , see No. 1. | *2 <a href="#">ATC-53, "Air Mix Door Motor Circuit"</a>                 | *3 "Test Reading"  |
| *4 <a href="#">ATC-39, "Self-Diagnosis Function"</a>              | *5 <a href="#">ATC-39, "Self-Diagnosis Function"</a> , see No. 9.       | *6 <a href="#">ATC-48, "LAN System Circuit"</a>                            |
| *7 <a href="#">ATC-58, "Blower Motor Circuit"</a>                 | *8 <a href="#">ATC-63, "Magnet Clutch Circuit"</a>                      | *9 "PERFORMANCE TEST DIAGNOSIS"  |
| *10 <a href="#">ATC-45, "Operational Check"</a>                   | *11 <a href="#">ATC-39, "Self-Diagnosis Function"</a> , see No. 5 to 7. | *12 <a href="#">ATC-3, "Precaution for Working with HFC-134a (R-134a)"</a> |
| *13 <a href="#">EM-13, "Checking Drive Belts"</a>                 | *14 <a href="#">EC-509, "Description"</a>                               |  |

## PERFORMANCE TEST DIAGNOSIS

# TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

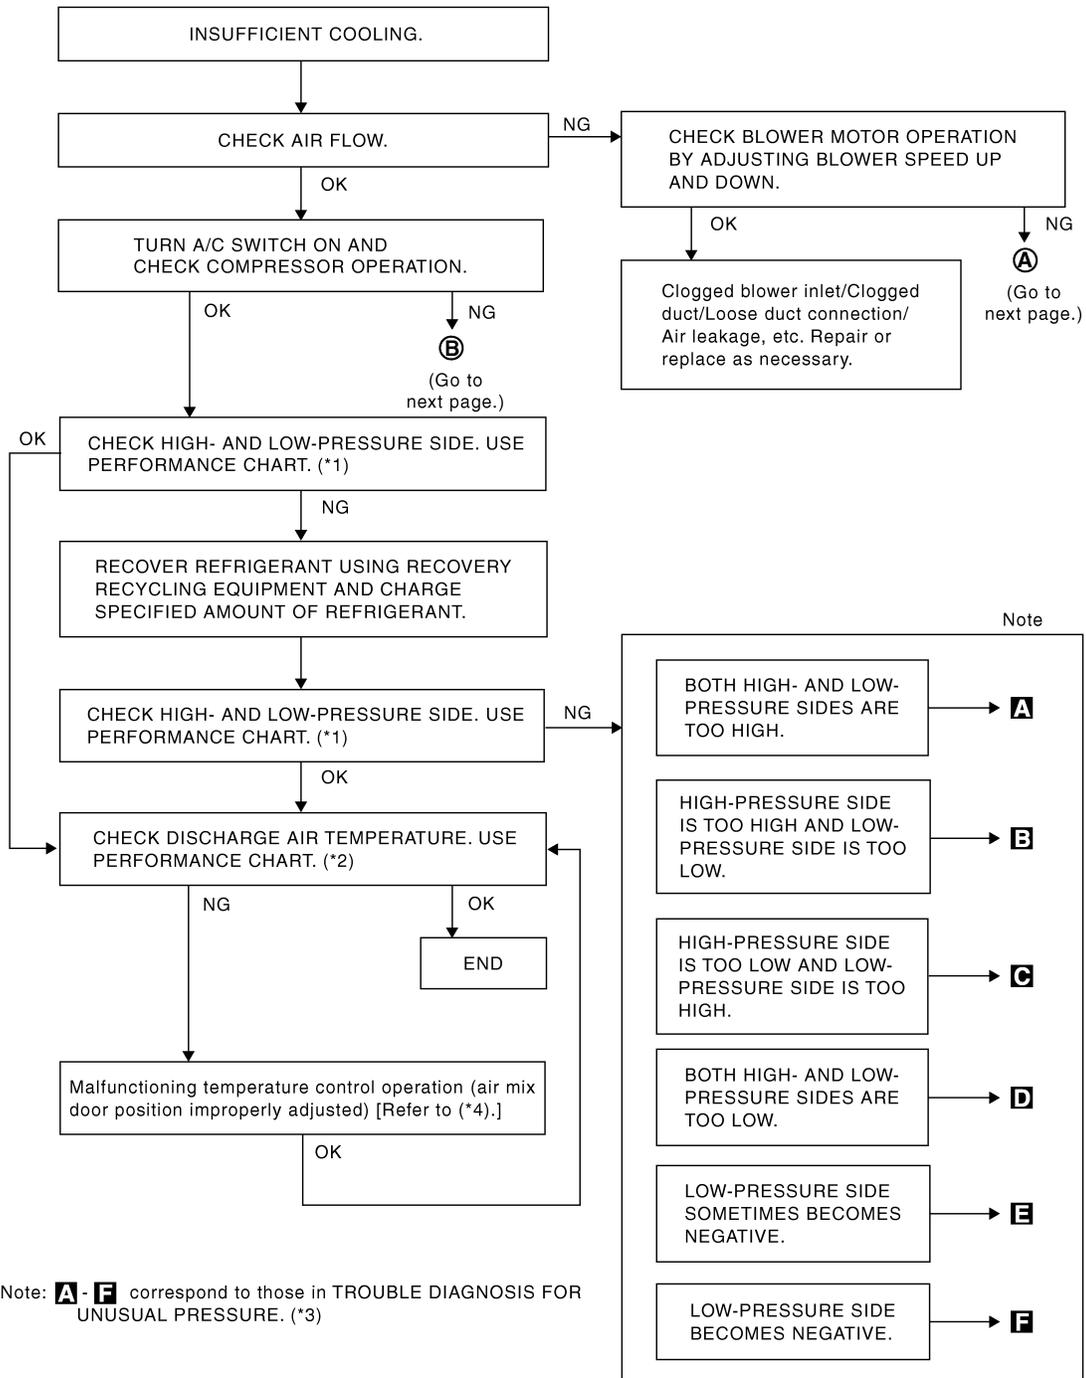

\*1 "PERFORMANCE CHART"


\*2 "PERFORMANCE CHART"

\*3 "TROUBLE DIAGNOSIS FOR UNUSUAL PRESSURE"

\*4 [ATC-53, "Air Mix Door Motor Circuit"](#)

# TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

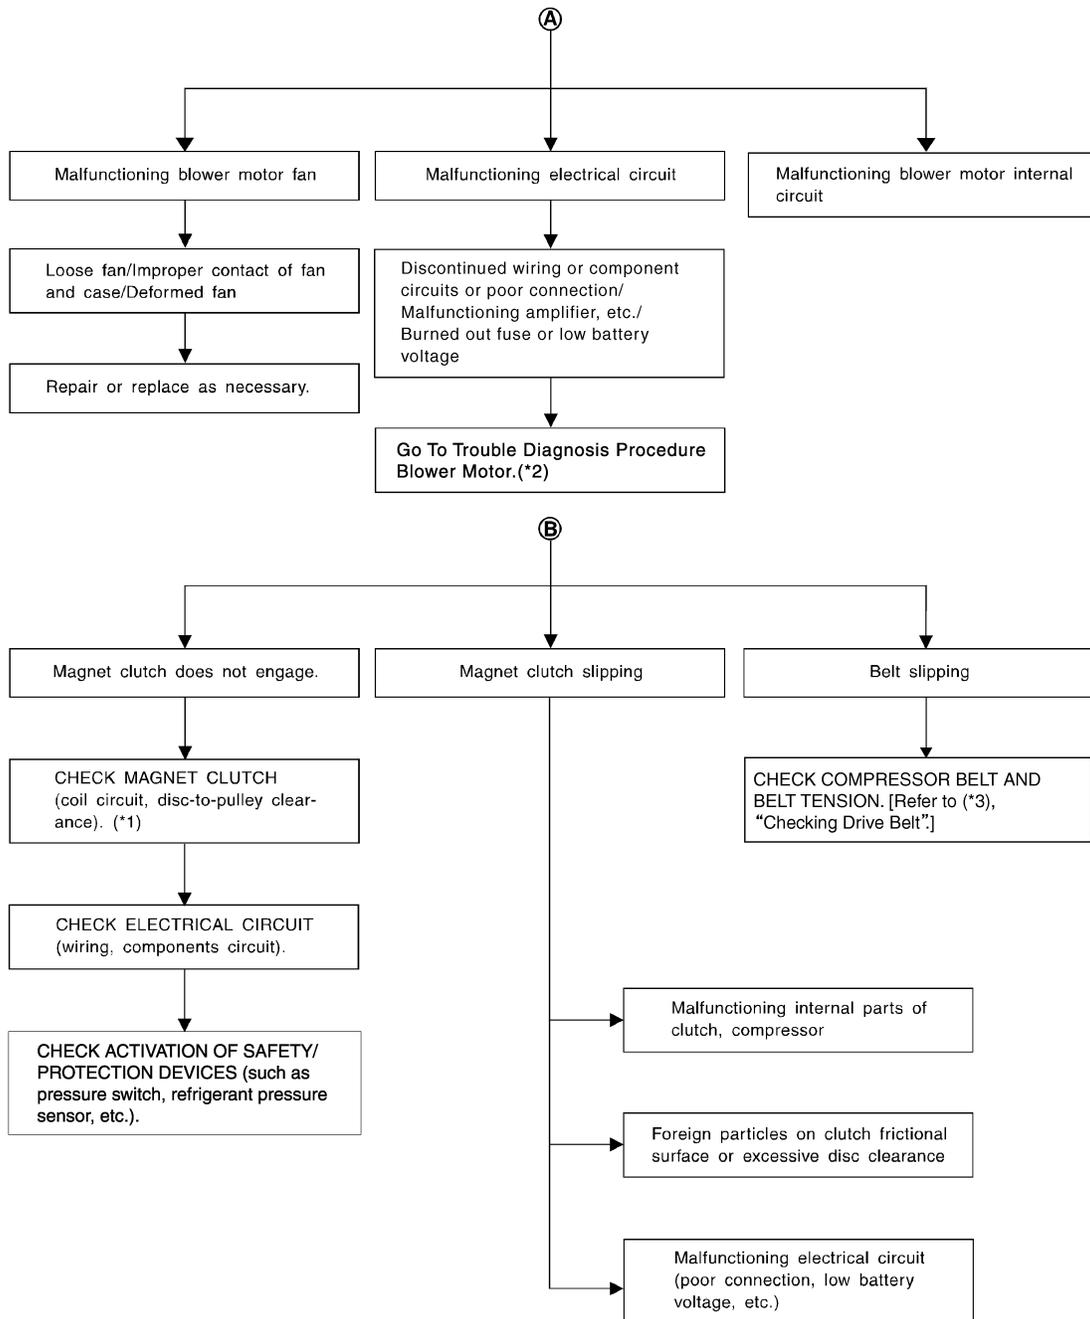

SJIA1642E

\*1 [ATC-111, "Removal and Installation of Compressor"](#)

\*2 [ATC-58, "Blower Motor Circuit"](#)

\*3 [EM-13, "Checking Drive Belts"](#)

## PERFORMANCE CHART

Test Condition

Testing must be performed as follows:

Vehicle condition	Indoors or in the shade (in a well-ventilated place)
Doors	Closed
Door windows	Open

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

Vehicle condition	Indoors or in the shade (in a well-ventilated place)
Hood	Open
TEMP.	Max. COLD
Mode control dial	 (Ventilation) set
Intake switch	 (Recirculation) set
 Fan (blower) speed	Max. speed set
Engine speed	Idle speed

Operate the air conditioning system for 10 minutes before taking measurements.

### Test Reading

Recirculating-to-discharge Air Temperature Table

Inside air (Recirculating air) at blower assembly inlet		Discharge air temperature at center ventilator °C (°F)
Relative humidity %	Air temperature °C (°F)	
50 - 60	20 (68)	6.1 - 8.7 (43 - 48)
	25 (77)	8.5 - 11.5 (47 - 53)
60 - 70	20 (68)	8.7 - 11.1 (48 - 52)
	25 (77)	11.5 - 14.5 (53 - 58)

Ambient Air Temperature-to-operating Pressure Table

Ambient air		High-pressure (Discharge side) kPa (kg/cm <sup>2</sup> , psi)	Low-pressure (Suction side) kPa (kg/cm <sup>2</sup> , psi)
Relative humidity %	Air temperature °C (°F)		
50 - 70	20 (68)	850 - 1,050 (8.67 - 10.71, 123.3 - 152.3)	180 - 230 (1.84 - 2.35, 26.1 - 33.4)
	25 (77)	1,020 - 1,260 (10.40 - 12.85, 147.9 - 182.7)	190 - 240 (1.94 - 2.45, 27.6 - 34.8)
	30 (86)	1,150 - 1,410 (11.73 - 14.38, 166.8 - 204.5)	210 - 250 (2.14 - 2.55, 30.5 - 36.3)
	35 (95)	1,240 - 1,510 (12.65 - 15.40, 179.8 - 219.0)	220 - 270 (2.24 - 2.75, 31.9 - 39.2)


### TROUBLE DIAGNOSIS FOR UNUSUAL PRESSURE

Whenever system's high and/or low side pressure(s) is/are unusual, diagnose using a manifold gauge. The marker above the gauge scale in the following tables indicates the standard (usual) pressure range. Since the standard (usual) pressure, however, differs from vehicle to vehicle, refer to above table (Ambient air temperature-to-operating pressure table).


Both High- and Low-pressure Sides are Too High

# TROUBLE DIAGNOSIS


## < SERVICE INFORMATION >

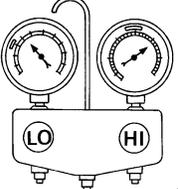Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Both high- and low-pressure sides are too high.</p>  <p style="text-align: right; font-size: small;">AC359A</p>	<p>The pressure returns to normal soon after water is splashed on condenser.</p>	<p>Excessive refrigerant charge in refrigeration cycle.</p>	<p>Reduce refrigerant until specified pressure is obtained.</p>
	<p>Air suction by cooling fan is insufficient.</p>	<p>Insufficient condenser cooling performance.</p> <p>↓</p> <ol style="list-style-type: none"> <li>1. Condenser fins are clogged.</li> <li>2. Improper fan rotation of cooling fan.</li> </ol>	<ul style="list-style-type: none"> <li>• Clean condenser.</li> <li>• Check and repair cooling fan as necessary.</li> </ul>
	<ul style="list-style-type: none"> <li>• Low-pressure pipe is not cold.</li> <li>• When compressor is stopped high-pressure value quickly drops by approximately 196 kPa (2 kg/cm<sup>2</sup>, 28 psi). It then decreases gradually thereafter.</li> </ul>	<p>Poor heat exchange in condenser (After compressor operation stops, high-pressure decreases too slowly.).</p> <p>↓</p> <p>Air in refrigeration cycle.</p>	<p>Evacuate repeatedly and re-charge system.</p>
	<p>Engine tends to overheat.</p>	<p>Engine cooling systems malfunction.</p>	<p>Check and repair each engine cooling system.</p>
	<ul style="list-style-type: none"> <li>• An area of the low-pressure pipe is colder than areas near the evaporator outlet.</li> <li>• Low-pressure pipe is sometimes covered with frost.</li> </ul>	<ul style="list-style-type: none"> <li>• Excessive liquid refrigerant on low-pressure side.</li> <li>• Excessive refrigerant discharge flow.</li> <li>• Expansion valve is open a little compared with the specification.</li> </ul> <p>↓</p> <p>Improper expansion valve adjustment.</p>	<p>Replace expansion valve.</p>

### High-pressure Side is Too High and Low-pressure Side is Too Low

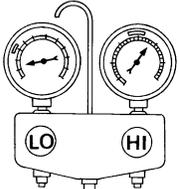Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>High-pressure side is too high and low-pressure side is too low.</p>  <p style="text-align: right; font-size: small;">AC360A</p>	<p>Upper side of condenser and high-pressure side are hot, however, liquid tank is not so hot.</p>	<p>High-pressure tube or parts located between compressor and condenser are clogged or crushed.</p>	<ul style="list-style-type: none"> <li>• Check and repair or replace malfunctioning parts.</li> <li>• Check lubricant for contamination.</li> </ul>


### High-pressure Side is Too Low and Low-pressure Side is Too High

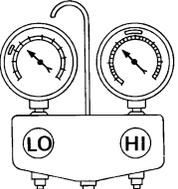Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>High-pressure side is too low and low-pressure side is too high.</p>  <p style="text-align: right; font-size: small;">AC356A</p>	<p>High- and low-pressure sides become equal soon after compressor operation stops.</p>	<p>Compressor pressure operation is improper.</p> <p>↓</p> <p>Damaged inside compressor packings.</p>	<p>Replace compressor.</p>
	<p>No temperature difference between high- and low-pressure sides.</p>	<p>Compressor pressure operation is improper.</p> <p>↓</p> <p>Damaged inside compressor packings.</p>	<p>Replace compressor.</p>


### Both High- and Low-pressure Sides are Too Low

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

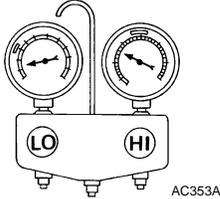Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Both high- and low-pressure sides are too low.</p>  <p style="text-align: right; font-size: small;">AC353A</p>	<ul style="list-style-type: none"> <li>There is a big temperature difference between liquid tank outlet and inlet. Outlet temperature is extremely low.</li> <li>Liquid tank inlet and expansion valve are frosted.</li> </ul>	Liquid tank inside is slightly clogged.	<ul style="list-style-type: none"> <li>Replace liquid tank.</li> <li>Check lubricant for contamination.</li> </ul>
	<ul style="list-style-type: none"> <li>Temperature of expansion valve inlet is extremely low as compared with areas near liquid tank.</li> <li>Expansion valve inlet is frosted.</li> <li>Temperature difference occurs somewhere in high-pressure side.</li> </ul>	High-pressure pipe located between liquid tank and expansion valve is clogged.	<ul style="list-style-type: none"> <li>Check and repair malfunctioning parts.</li> <li>Check lubricant for contamination.</li> </ul>
	Expansion valve and liquid tank are warm or slightly cool when touched.	Low refrigerant charge. ↓ Leaking fittings or components.	Check refrigerant for leaks. Refer to <a href="#">ATC-121, "Checking of Refrigerant Leaks"</a> .
	There is a big temperature difference between expansion valve inlet and outlet while the valve itself is frosted.	Expansion valve closes a little compared with the specification. ↓ 1. Improper expansion valve adjustment. 2. Malfunctioning expansion valve. 3. Outlet and inlet may be clogged.	<ul style="list-style-type: none"> <li>Remove foreign particles by using compressed air.</li> <li>Replace expansion valve.</li> <li>Check lubricant for contamination.</li> </ul>
	An area of the low-pressure pipe is colder than areas near the evaporator outlet.	Low-pressure pipe is clogged or crushed.	<ul style="list-style-type: none"> <li>Check and repair malfunctioning parts.</li> <li>Check lubricant for contamination.</li> </ul>
	Air flow volume is not enough or is too low.	Evaporator is frozen.	<ul style="list-style-type: none"> <li>Check intake sensor circuit. Refer to <a href="#">ATC-86, "Intake Sensor Circuit"</a>.</li> <li>Replace compressor.</li> <li>Repair evaporator fins.</li> <li>Replace evaporator.</li> <li>Check blower motor circuit. Refer to <a href="#">ATC-58, "Blower Motor Circuit"</a>.</li> </ul>


### Low-pressure Side Sometimes Becomes Negative

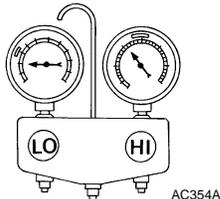Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Low-pressure side sometimes becomes negative.</p>  <p style="text-align: right; font-size: small;">AC354A</p>	<ul style="list-style-type: none"> <li>Air conditioning system does not function and does not cyclically cool the compartment air.</li> <li>The system constantly functions for a certain period of time after compressor is stopped and restarted.</li> </ul>	Refrigerant does not discharge cyclically. ↓ Moisture is frozen at expansion valve outlet and inlet. ↓ Water is mixed with refrigerant.	<ul style="list-style-type: none"> <li>Drain water from refrigerant or replace refrigerant.</li> <li>Replace liquid tank.</li> </ul>

### Low-pressure Side Becomes Negative

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

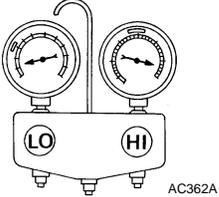Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Low-pressure side becomes negative.</p>  <p style="text-align: right; font-size: small;">AC362A</p>	<p>Liquid tank or front/rear side of expansion valve's pipe is frosted or wet with dew.</p>	<p>High-pressure side is closed and refrigerant does not flow. ↓ Expansion valve or liquid tank is frosted.</p>	<p>Leave the system at rest until no frost is present. Start it again to check whether or not the malfunction is caused by water or foreign particles.</p> <ul style="list-style-type: none"> <li>• If water is the cause, initially cooling is okay. Then the water freezes causing a blockage. Drain water from refrigerant or replace refrigerant.</li> <li>• If due to foreign particles, remove expansion valve and remove the particles with dry and compressed air (not shop air).</li> <li>• If either of the above methods cannot correct the malfunction, replace expansion valve.</li> <li>• Replace liquid tank.</li> <li>• Check lubricant for contamination.</li> </ul>

### Insufficient Heating

INFOID:000000004655772

SYMPTOM: Insufficient heating

INSPECTION FLOW


A  
B  
C  
D  
E  
F  
G  
H  
I

ATC

K  
L  
M  
N  
O  
P

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

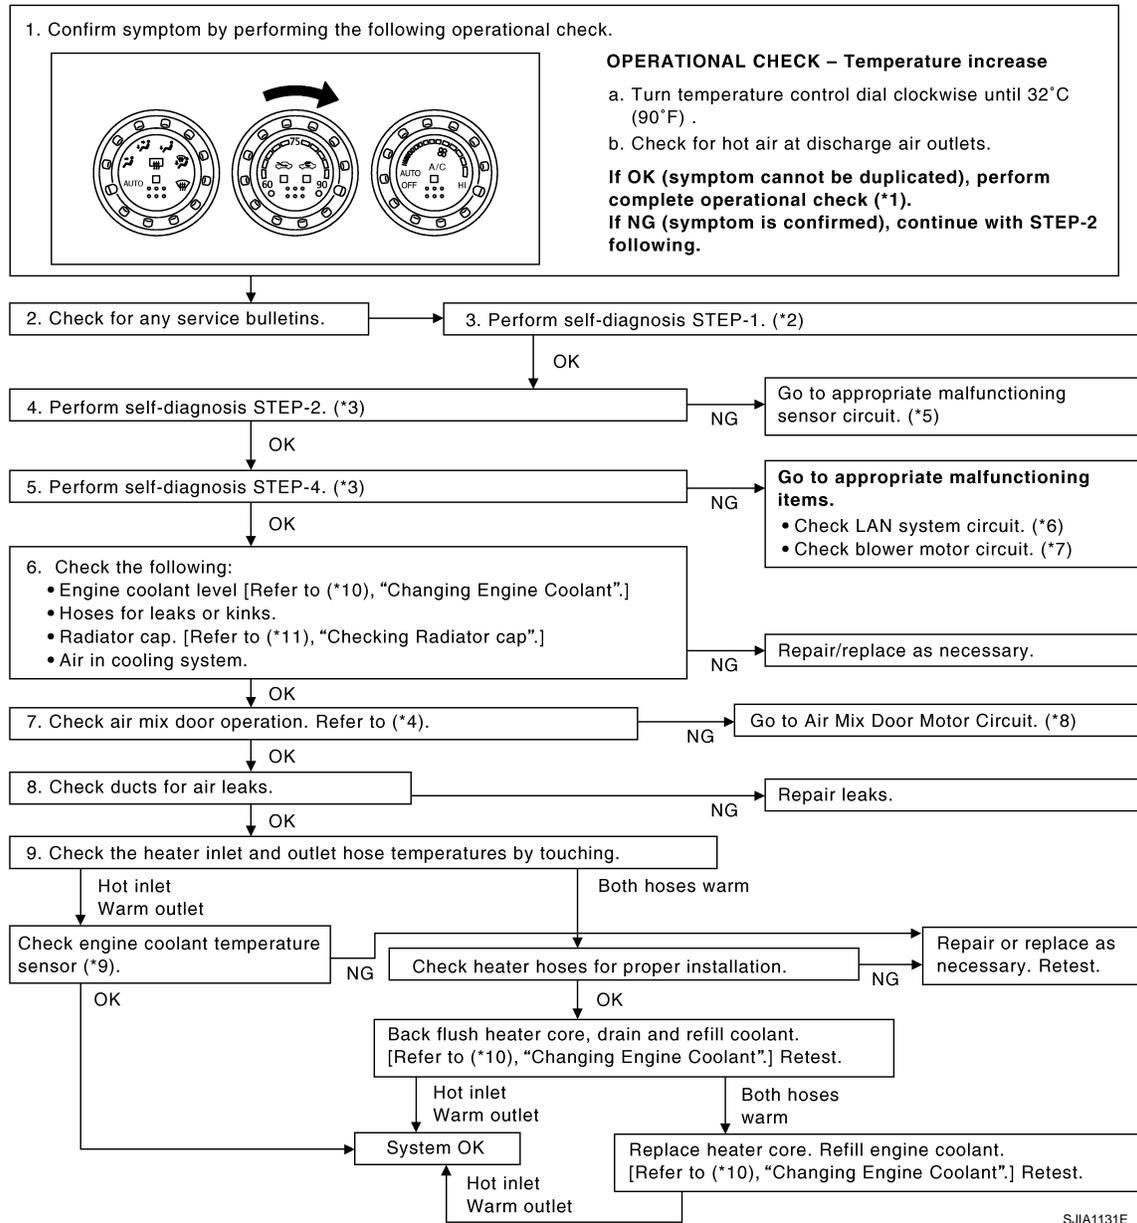

\*1 [ATC-45. "Operational Check"](#)

\*2 [ATC-39. "Self-Diagnosis Function"](#), see No. 1.

\*3 [ATC-39. "Self-Diagnosis Function"](#), see No. 5 to 7.

\*4 [ATC-53. "Air Mix Door Motor Circuit"](#)

\*5 [ATC-39. "Self-Diagnosis Function"](#), see No. 9.

\*6 [ATC-48. "LAN System Circuit"](#)

\*7 [ATC-58. "Blower Motor Circuit"](#)

\*8 [ATC-53. "Air Mix Door Motor Circuit"](#)

\*9 [EC-216](#)

\*10 [CO-9. "Changing Engine Coolant"](#)

\*11 [CO-14. "Checking Radiator Cap"](#)

## Noise


INFOID:000000004655773

SYMPTOM: Noise

INSPECTION FLOW

# TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

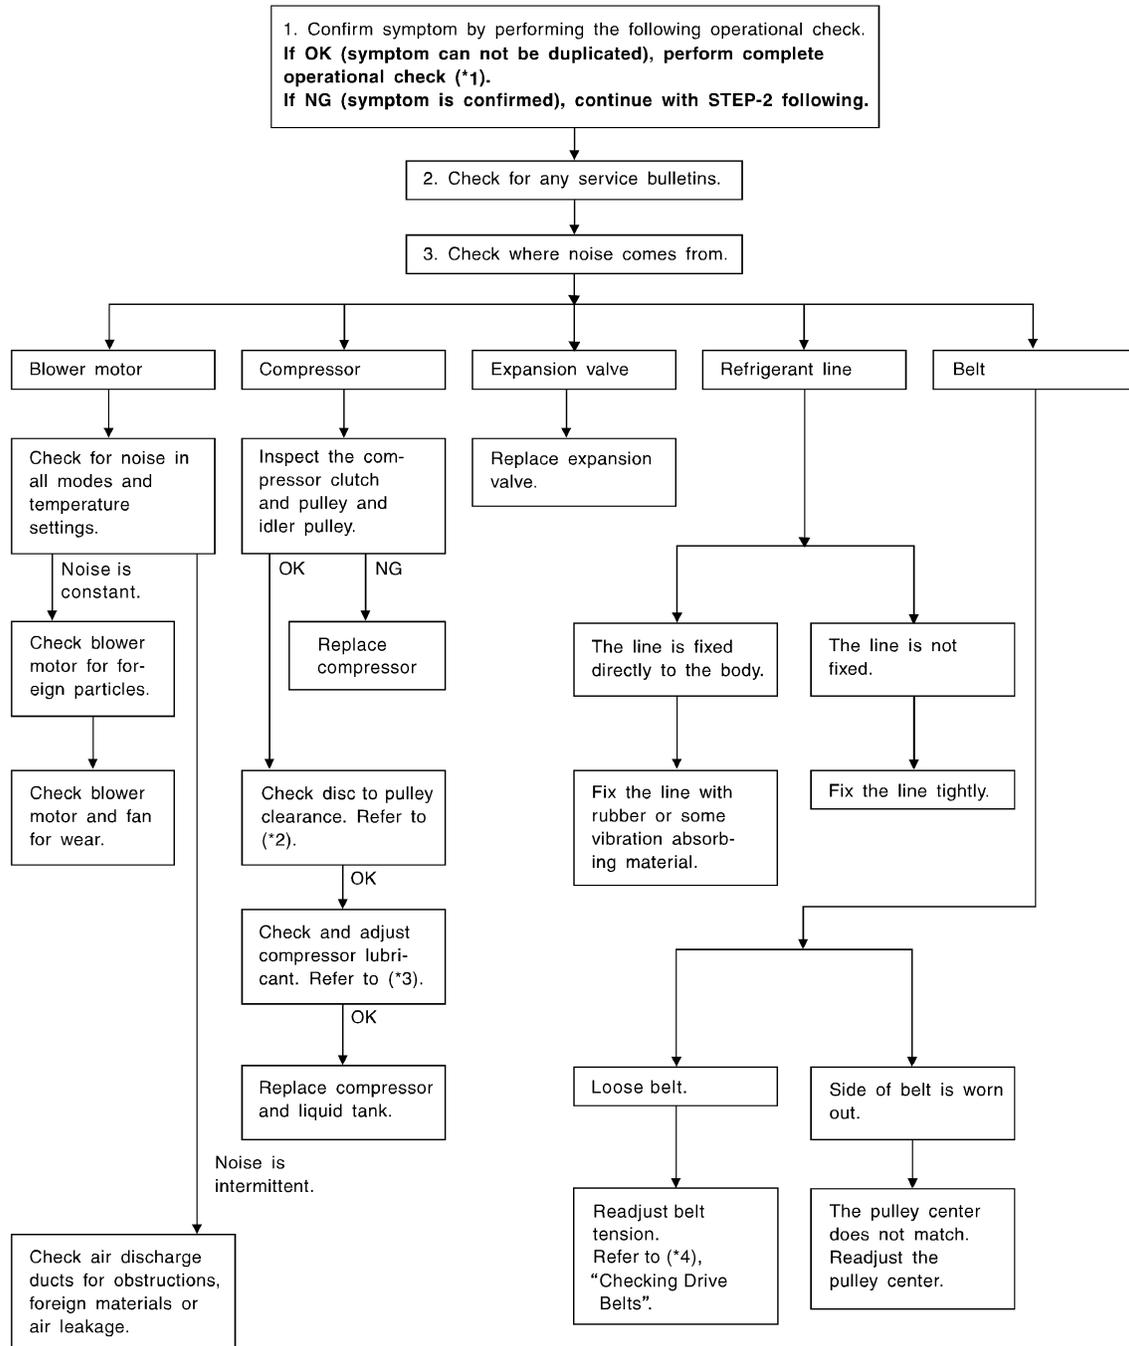

SJIA0843E

\*1 [ATC-45. "Operational Check"](#)

\*2 [ATC-112. "Check Disc to Pulley Clearance"](#)

\*3 [ATC-19. "Maintenance of Lubricant Quantity in Compressor"](#)

\*4 [EM-13. "Checking Drive Belts"](#)

## Self-Diagnosis


SYMPTOM: Self-diagnosis cannot be performed.

INSPECTION FLOW

INFOID:000000004655774

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

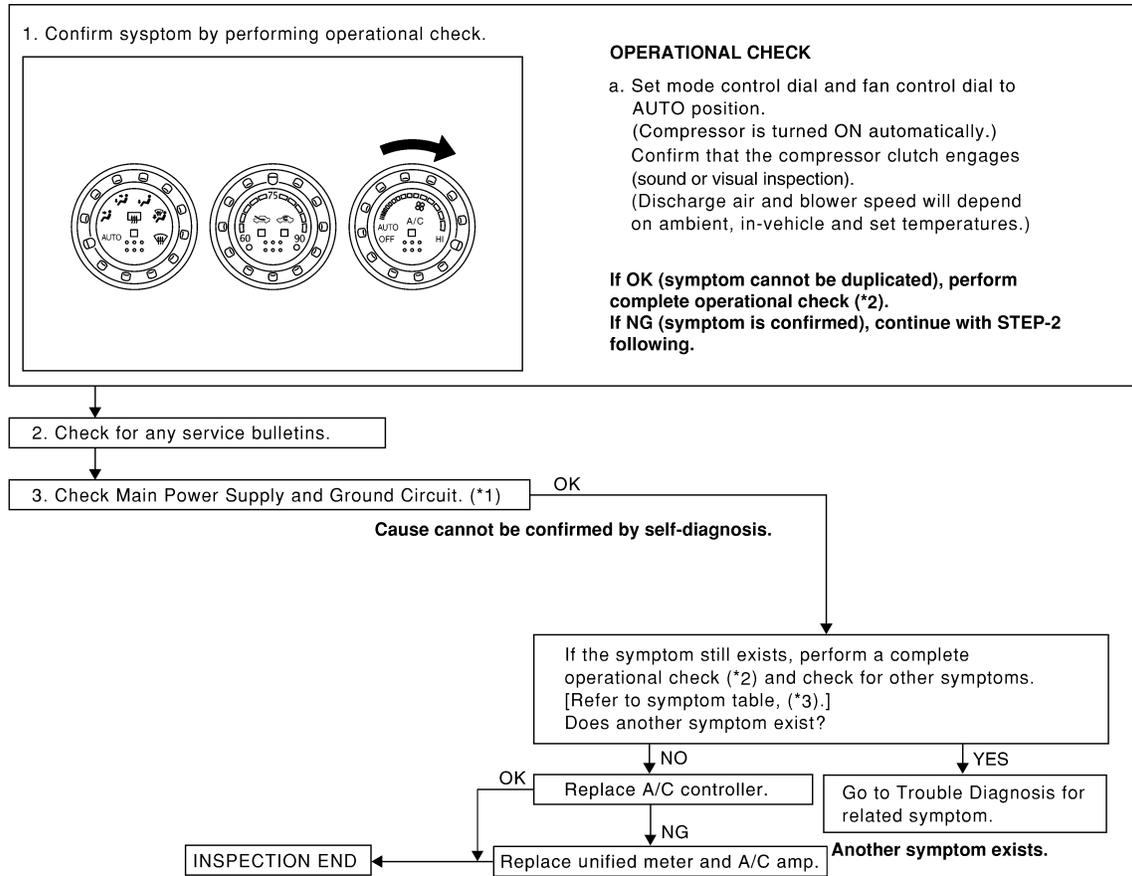

\*1 [ATC-46, "Power Supply and Ground Circuit for Auto Amp"](#) \*2 [ATC-45, "Operational Check"](#)

\*3 [ATC-28, "How to Perform Trouble Diagnosis for Quick and Accurate Repair"](#)


## Ambient Sensor Circuit

INFOID:000000004655775

### COMPONENT DESCRIPTION

#### Ambient Sensor

The ambient sensor is attached on the hood lock stay. It detects ambient temperature and converts it into a resistance value which is then input into the unified meter and A/C amp.

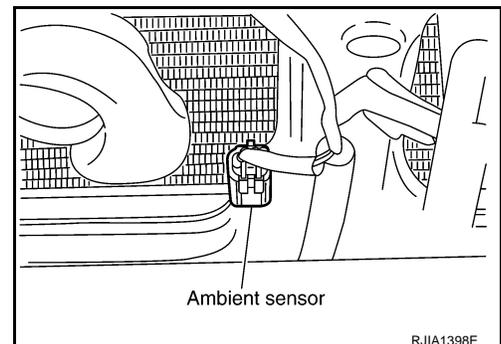

### AMBIENT TEMPERATURE INPUT PROCESS

The unified meter and A/C amp. includes a processing circuit for the ambient sensor input. However, when the temperature detected by the ambient sensor increases quickly, the processing circuit retards the unified meter and A/C amp. function. It only allows the unified meter and A/C amp. to recognize an ambient temperature increase of 0.33°C (0.6°F) per 100 seconds.


As an example, consider stopping for a few minutes after high speed driving. Although the actual ambient temperature has not changed, the temperature detected by the ambient sensor will increase. This is because the heat from the engine compartment can radiate to the front bumper area, location of the ambient sensor.

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

### DIAGNOSIS PROCEDURE FOR AMBIENT SENSOR

SYMPTOM: Ambient sensor circuit is open or shorted. (LED of A/C switch does not illuminate as a result of performing self-diagnosis STEP-2.)

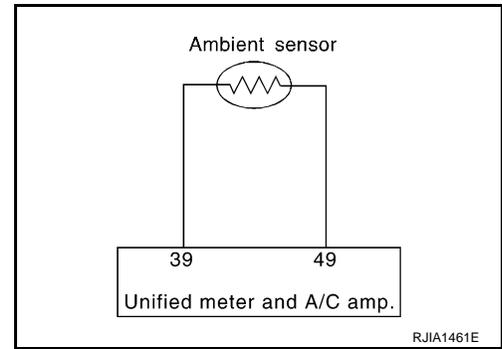


### 1. CHECK VOLTAGE BETWEEN AMBIENT SENSOR AND GROUND

1. Disconnect ambient sensor connector.
2. Turn ignition switch ON.
3. Check voltage between ambient sensor harness connector E34 terminal 1 and ground.

**1 – Ground : Approx. 5 V**

#### OK or NG

- OK >> GO TO 2.  
NG >> GO TO 4.

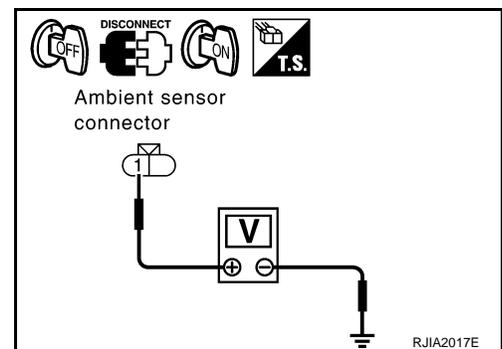


### 2. CHECK CIRCUIT CONTINUITY BETWEEN AMBIENT SENSOR AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Check continuity between ambient sensor harness connector E34 terminal 2 and unified meter and A/C amp. harness connector M50 terminal 49.

**2 – 49 : Continuity should exist.**

#### OK or NG

- OK >> GO TO 3.  
NG >> Repair harness or connector.

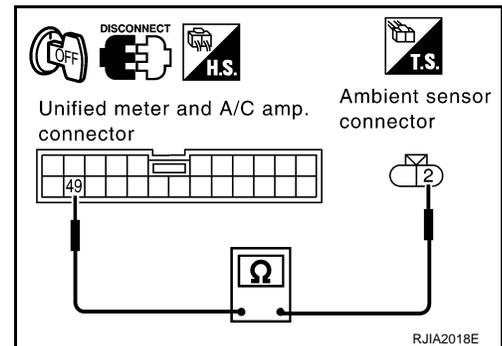

### 3. CHECK AMBIENT SENSOR

Refer to "Ambient Sensor".

#### OK or NG

- OK >> 1. Replace unified meter and A/C amp.  
2. Go to self-diagnosis [ATC-39, "Self-Diagnosis Function"](#) and perform self-diagnosis STEP-2.
- NG >> 1. Replace ambient sensor.  
2. Go to self-diagnosis [ATC-39, "Self-Diagnosis Function"](#) and perform self-diagnosis STEP-2.

### 4. CHECK CIRCUIT CONTINUITY BETWEEN AMBIENT SENSOR AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

3. Check continuity between ambient sensor harness connector E34 terminal 1 and unified meter and A/C amp. harness connector M50 terminal 39.

**1 – 39 : Continuity should exist.**

4. Check continuity between ambient sensor harness connector E34 terminal 1 and ground.

**1 – Ground : Continuity should not exist.**

### OK or NG

- OK >> 1. Replace unified meter and A/C amp.  
2. Go to self-diagnosis [ATC-39. "Self-Diagnosis Function"](#) and perform self-diagnosis STEP-2.
- NG >> Repair harness or connector.

## COMPONENT INSPECTION

### Ambient Sensor

After disconnecting ambient sensor connector E34, measure resistance between terminals 1 and 2 at sensor side. Refer to the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	12.73
-10 (14)	9.92
-5 (23)	7.80
0 (32)	6.19
5 (41)	4.95
10 (50)	3.99
15 (59)	3.24
20 (68)	2.65
25 (77)	2.19
30 (86)	1.81
35 (95)	1.51
40 (104)	1.27
45 (113)	1.07

If NG, replace ambient sensor.

## In-vehicle Sensor Circuit




INFOID:000000004655776

## COMPONENT DESCRIPTION

### In-vehicle Sensor

The in-vehicle sensor is located on instrument driver panel lower. It converts variations in temperature of compartment air drawn from the aspirator into a resistance value. It is then input into the unified meter and A/C amp.



Aspirator

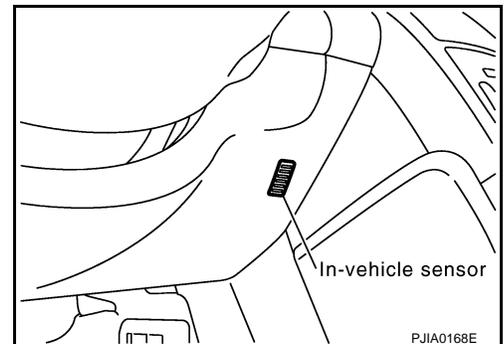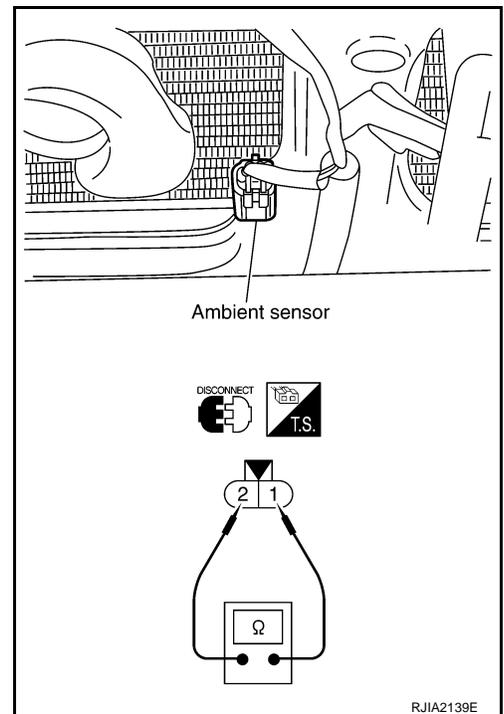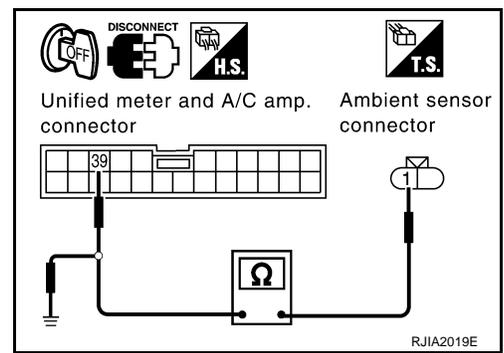

# TROUBLE DIAGNOSIS


## < SERVICE INFORMATION >

The aspirator is located on driver's side of heater & cooling unit assembly. It produces vacuum pressure due to air discharged from the heater & cooling unit assembly, continuously taking compartment air in the aspirator.

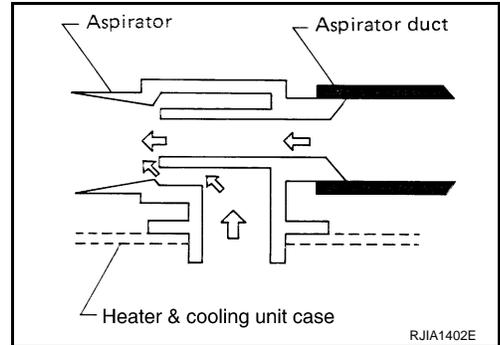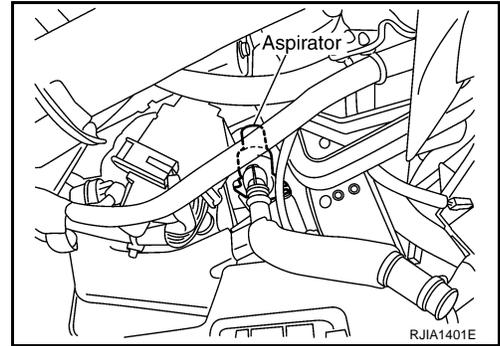

## DIAGNOSIS PROCEDURE FOR IN-VEHICLE SENSOR

SYMPTOM: In-vehicle sensor circuit is open or shorted. (LED of A/C switch does not illuminate as a result of performing self-diagnosis STEP-2.)

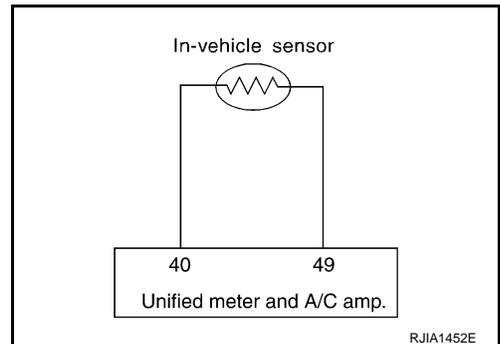


### 1. CHECK VOLTAGE BETWEEN IN-VEHICLE SENSOR AND GROUND

1. Disconnect in-vehicle sensor connector.
2. Turn ignition switch ON.
3. Check voltage between in-vehicle sensor harness connector M42 terminal 1 and ground.

**1 – Ground : Approx. 5 V**

OK or NG

- OK >> GO TO 2.  
NG >> GO TO 4.

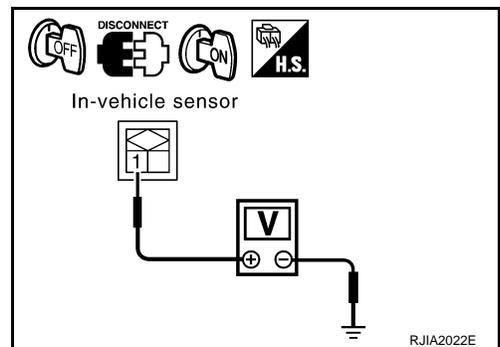

### 2. CHECK CIRCUIT CONTINUITY BETWEEN IN-VEHICLE SENSOR AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M  
N  
O  
P

# TROUBLE DIAGNOSIS


## < SERVICE INFORMATION >

3. Check continuity between in-vehicle sensor harness connector M42 terminal 2 and unified meter and A/C amp. harness connector M50 terminal 49.

**2 – 49 : Continuity should exist.**

### OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

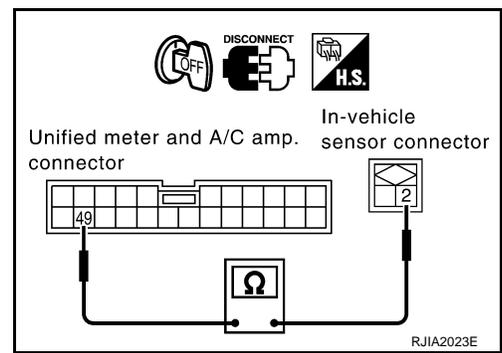

## 3. CHECK IN-VEHICLE SENSOR

Refer to "In-vehicle Sensor".

### OK or NG

- OK >> 1. Replace unified meter and A/C amp.  
2. Go to self-diagnosis [ATC-39, "Self-Diagnosis Function"](#) and perform self-diagnosis STEP-2.
- NG >> 1. Replace in-vehicle sensor.  
2. Go to self-diagnosis [ATC-39, "Self-Diagnosis Function"](#) and perform self-diagnosis STEP-2.

## 4. CHECK CIRCUIT CONTINUITY BETWEEN IN-VEHICLE SENSOR AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Check continuity between in-vehicle sensor harness connector M42 terminal 1 and unified meter and A/C amp. harness connector M50 terminal 40.


**1 – 40 : Continuity should exist.**

4. Check continuity between in-vehicle sensor harness connector M42 terminal 1 and ground.

**1 – Ground : Continuity should not exist.**

### OK or NG

- OK >> 1. Replace unified meter and A/C amp.  
2. Go to self-diagnosis [ATC-39, "Self-Diagnosis Function"](#) and perform self-diagnosis STEP-2.
- NG >> Repair harness or connector.

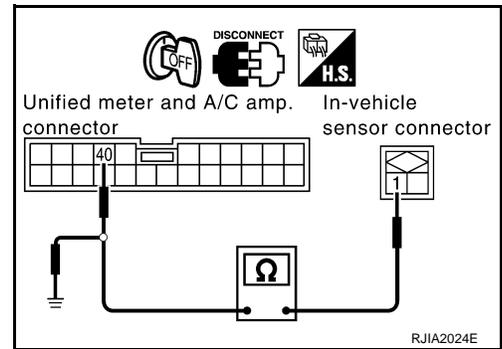

## COMPONENT INSPECTION

In-vehicle Sensor

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

After disconnecting in-vehicle sensor connector M42, measure resistance between terminals 1 and 2 at sensor side. Refer to the table below.


Temperature °C (°F)	Resistance kΩ
-15 (5)	12.73
-10 (14)	9.92
-5 (23)	7.80
0 (32)	6.19
5 (41)	4.95
10 (50)	3.99
15 (59)	3.24
20 (68)	2.65
25 (77)	2.19
30 (86)	1.81
35 (95)	1.51
40 (104)	1.27
45 (113)	1.07

If NG, replace in-vehicle sensor.


## Sunload Sensor Circuit

### COMPONENT DESCRIPTION

The sunload sensor is located on the passenger's side defroster grille. It detects sunload entering through windshield by means of a photo diode. The sensor converts the sunload into a current value which is then input into the unified meter and A/C amp.

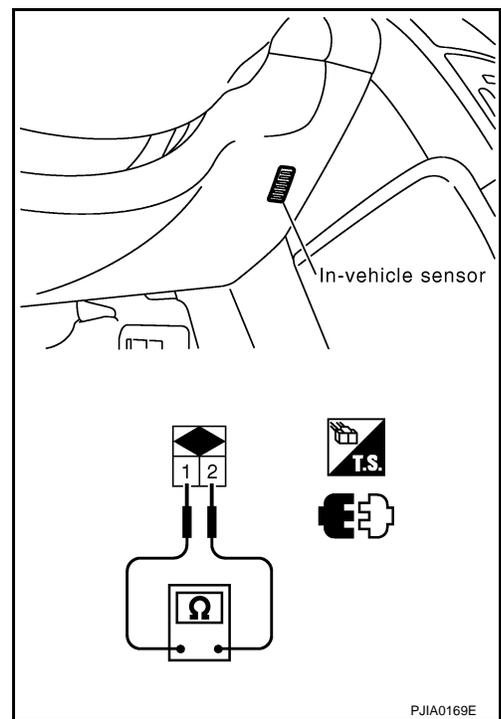

INFOID:000000004655777

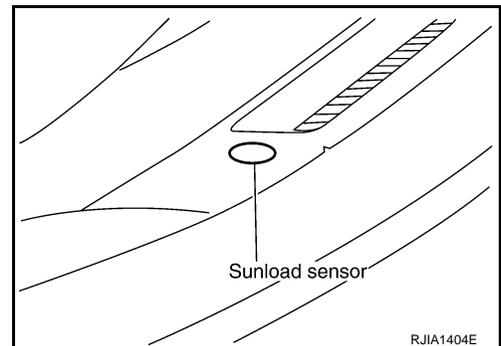

### SUNLOAD INPUT PROCESS

The unified meter and A/C amp. also includes a processing circuit which averages the variations in detected sunload over a period of time. This prevents drastic swings in the ATC system operation due to small or quick variations in detected sunload.

For example, consider driving along a road bordered by an occasional group of large trees. The sunload detected by the sunload sensor will vary whenever the trees obstruct the sunlight. The processing circuit averages the detected sunload over a period of time, so that the (insignificant) effect of the trees momentarily obstructing the sunlight does not cause any change in the ATC system operation. On the other hand, shortly after entering a long tunnel, the system will recognize the change in sunload, and the system will react accordingly.


### DIAGNOSIS PROCEDURE FOR SUNLOAD SENSOR

A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M  
N  
O  
P

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

SYMPTOM: Sunload sensor circuit is open or shorted. (LED of A/C switch does not illuminate as a result of performing self-diagnosis STEP-2.)

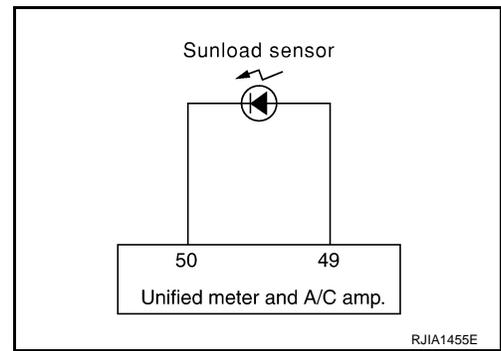


### 1. CHECK VOLTAGE BETWEEN SUNLOAD SENSOR AND GROUND

1. Disconnect sunload sensor connector.
2. Turn ignition switch ON.
3. Check voltage between sunload sensor harness connector M18 terminal 1 and ground.

**1 – Ground : Approx. 5 V**

#### OK or NG

- OK >> GO TO 2.  
NG >> GO TO 4.

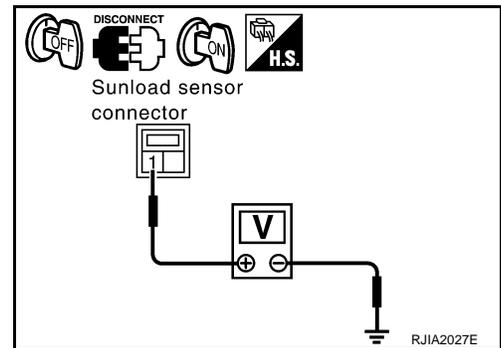


### 2. CHECK CIRCUIT CONTINUITY BETWEEN SUNLOAD SENSOR AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Check continuity between sunload sensor harness connector M18 terminal 2 and unified meter and A/C amp. harness connector M50 terminal 49.

**2 – 49 : Continuity should exist.**

#### OK or NG

- OK >> GO TO 3.  
NG >> Repair harness or connector.

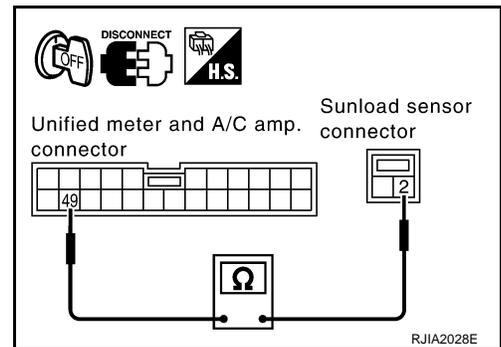

### 3. CHECK SUNLOAD SENSOR

1. Reconnect sunload sensor connector and unified meter and A/C amp. connector.
2. Refer to "Sunload Sensor".

#### OK or NG

- OK >> 1. Replace unified meter and A/C amp.  
2. Go to self-diagnosis [ATC-39, "Self-Diagnosis Function"](#) and perform self-diagnosis STEP-2.
- NG >> 1. Replace sunload sensor.  
2. Go to self-diagnosis [ATC-39, "Self-Diagnosis Function"](#) and perform self-diagnosis STEP-2.

### 4. CHECK CIRCUIT CONTINUITY BETWEEN SUNLOAD SENSOR AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

3. Check continuity between sunload sensor harness connector M18 terminal 1 and unified meter and A/C amp. harness connector M50 terminal 50.

**1 – 50 : Continuity should exist.**

4. Check continuity between sunload sensor harness connector M18 terminal 1 and ground.

**1 – Ground : Continuity should not exist.**



### OK or NG

- OK >> 1. Replace unified meter and A/C amp.  
2. Go to self-diagnosis [ATC-39. "Self-Diagnosis Function"](#) and perform self-diagnosis STEP-2.
- NG >> Repair harness or connector.

## COMPONENT INSPECTION

### Sunload Sensor

Measure voltage between unified meter and A/C amp. harness connector M50 terminal 50 and ground.

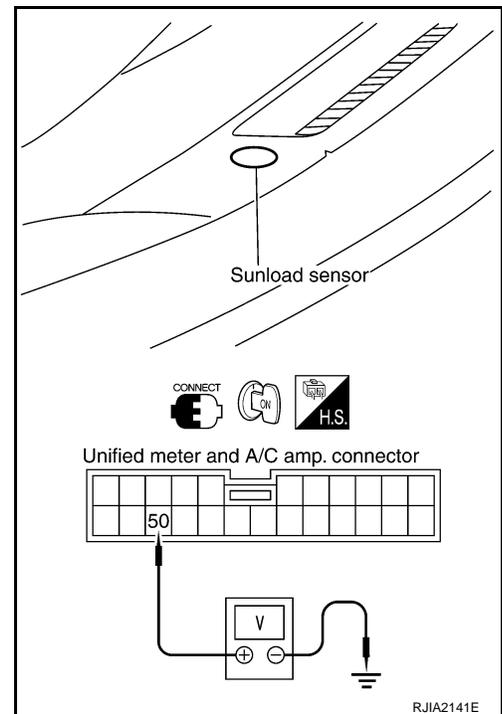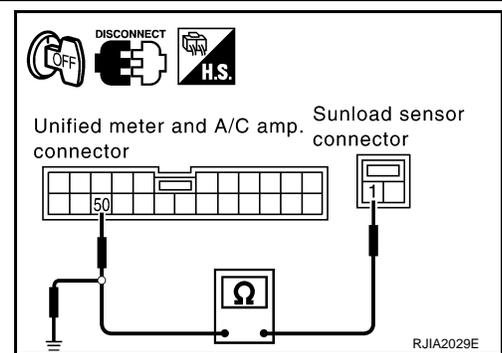


A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M  
N  
O  
P

# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

- When checking sunload sensor, select a place where sunshine directly on it.

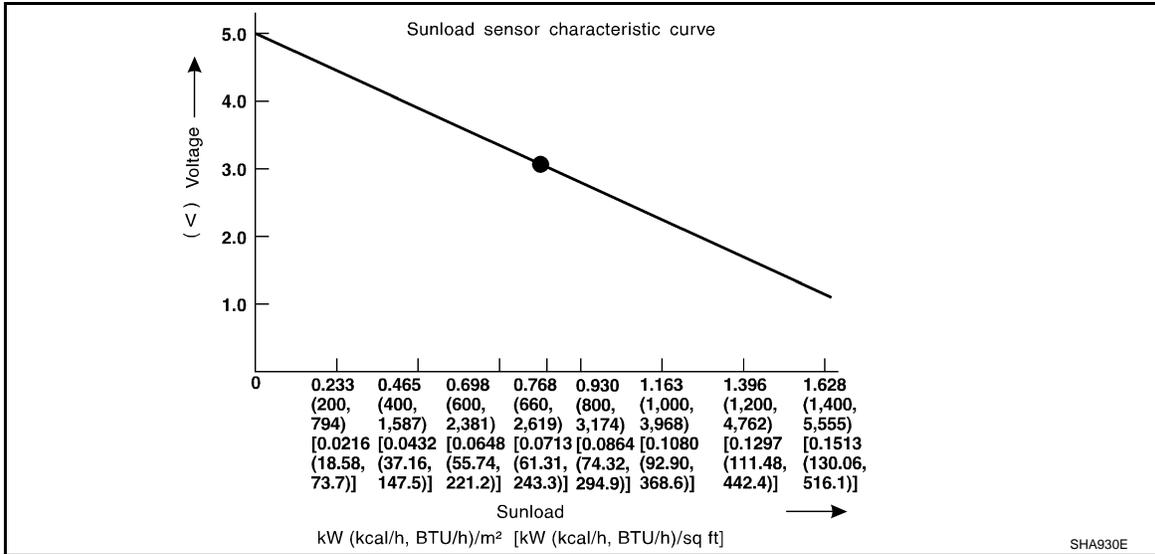

If NG, replace sunload sensor.


## Intake Sensor Circuit

INFOID:000000004655778

## COMPONENT DESCRIPTION


### Intake Sensor

The intake sensor is located on the evaporator. It converts temperature of air after it passes through the evaporator into a resistance value which is then input to the unified meter and A/C amp.

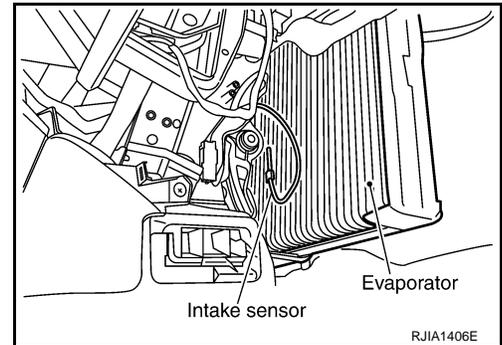

## DIAGNOSIS PROCEDURE FOR INTAKE SENSOR

SYMPTOM: Intake sensor circuit is open or shorted. (LED of A/C switch does not illuminate as a result of performing self-diagnosis STEP-2.)

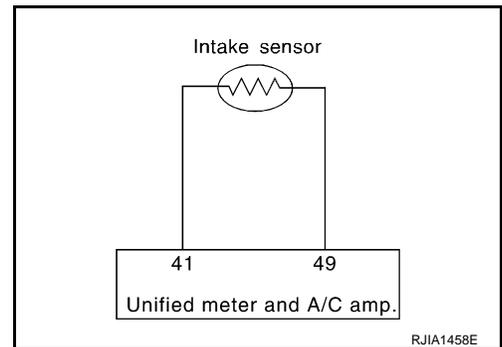

## 1. CHECK VOLTAGE BETWEEN INTAKE SENSOR AND GROUND

1. Disconnect intake sensor connector.
2. Turn ignition switch ON.

# TROUBLE DIAGNOSIS


## < SERVICE INFORMATION >

3. Check voltage between intake sensor harness connector M255 terminal 2 and ground.

**2 – Ground : Approx. 5 V**

### OK or NG

- OK >> GO TO 2.
- NG >> GO TO 4.

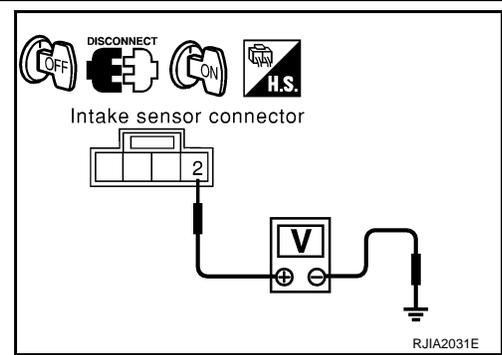


## 2. CHECK CIRCUIT CONTINUITY BETWEEN INTAKE SENSOR AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Check continuity between intake sensor harness connector M255 terminal 1 and unified meter and A/C amp. harness connector M50 terminal 49.

**1 – 49 : Continuity should exist.**

### OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

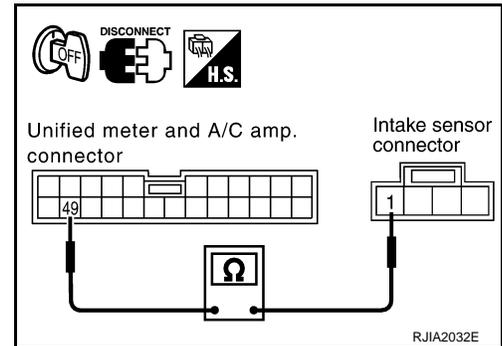

## 3. CHECK INTAKE SENSOR

Refer to "Intake Sensor".

### OK or NG

- OK >> 1. Replace unified meter and A/C amp.  
2. Go to self-diagnosis [ATC-39, "Self-Diagnosis Function"](#) and perform self-diagnosis STEP-2.
- NG >> 1. Replace intake sensor.  
2. Go to self-diagnosis [ATC-39, "Self-Diagnosis Function"](#) and perform self-diagnosis STEP-2.

## 4. CHECK CIRCUIT CONTINUITY BETWEEN INTAKE SENSOR AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Check continuity between intake sensor harness connector M255 terminal 2 and unified meter and A/C amp. harness connector M50 terminal 41.


**2 – 41 : Continuity should exist.**

4. Check continuity between intake sensor harness connector M255 terminal 2 and ground.

**2 – Ground : Continuity should not exist.**

### OK or NG

- OK >> 1. Replace unified meter and A/C amp.  
2. Go to self-diagnosis [ATC-39, "Self-Diagnosis Function"](#) and perform self-diagnosis STEP-2.
- NG >> Repair harness or connector.

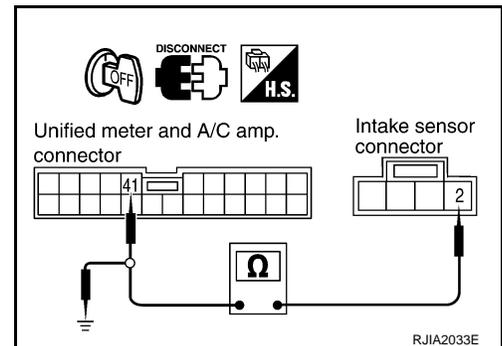

## COMPONENT INSPECTION

Intake Sensor


# TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

After disconnecting intake sensor connector M255, measure resistance between terminals 1 and 2 at sensor side. Refer to the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	12.34
-10 (14)	9.62
-5 (23)	7.56
0 (32)	6.00
5 (41)	4.80
10 (50)	3.87
15 (59)	3.15
20 (68)	2.57
25 (77)	2.12
30 (86)	1.76
35 (95)	1.47
40 (104)	1.23
45 (113)	1.04

If NG, replace intake sensor.

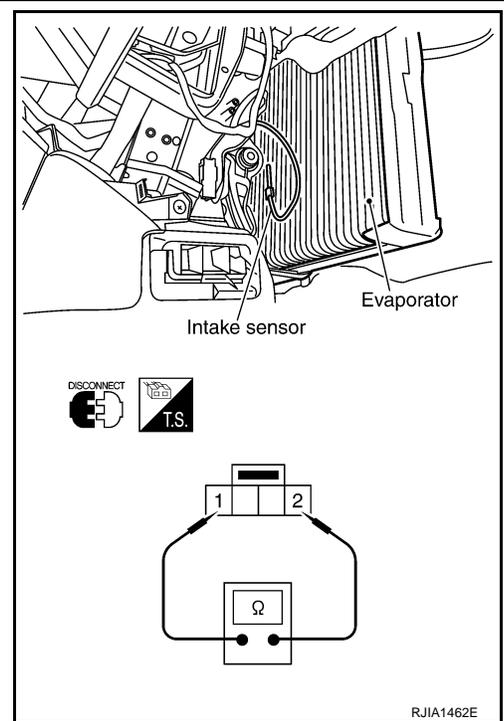

RJIA1462E

# A/C CONTROLLER

< SERVICE INFORMATION >


## A/C CONTROLLER

### Removal and Installation

INFOID:000000004655779

#### REMOVAL

1. Remove console finisher (A/T) or console boot (M/T). Refer to [IP-12](#).
2. Remove mounting screws (A) and clips (B), and then remove A/C controller (1) from console finisher (A/T) or console boot (M/T).

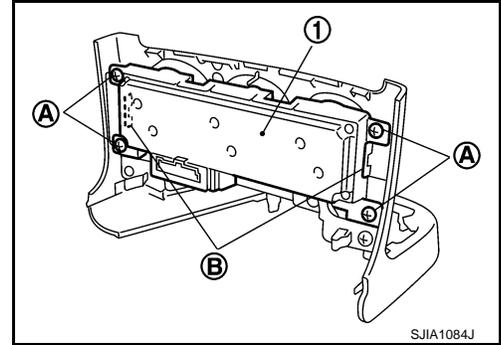


#### INSTALLATION

Installation is basically the reverse order of removal.

#### Disassembly and Assembly

INFOID:000000004655780

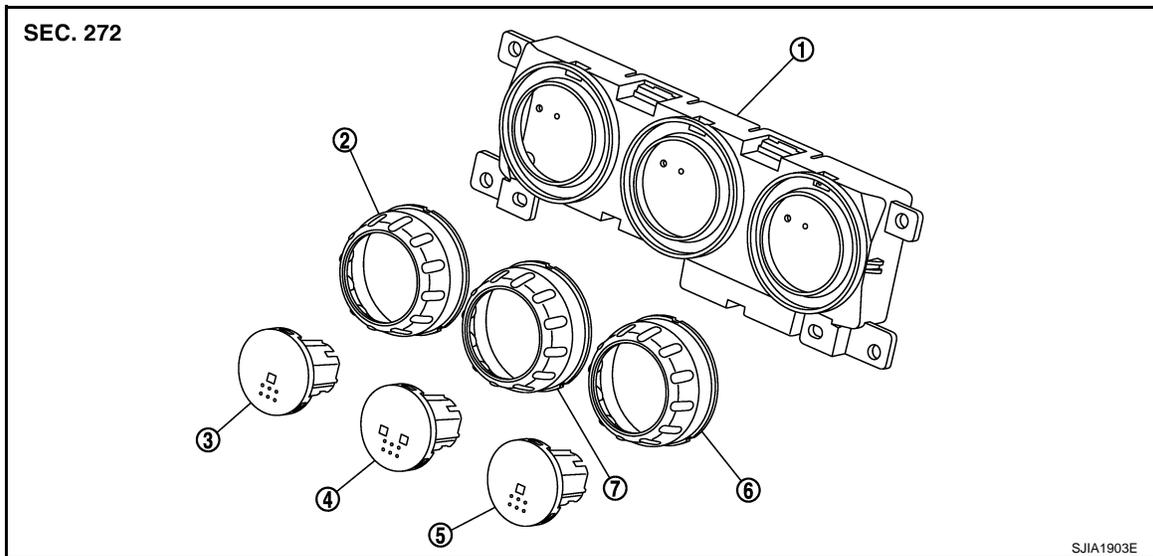

- |                             |                      |                                |
|-----------------------------|----------------------|--------------------------------|
| 1. A/C controller assembly  | 2. Mode control dial | 3. Rear window defogger switch |
| 4. Intake switch            | 5. A/C switch        | 6. Fan control dial            |
| 7. Temperature control dial |                      |                                |

#### NOTE:

When disassembling controller, wind gummed tape around each dial assembly and pull out the dial assembly together with switch from the A/C controller assembly.

# AUTO AMP

< SERVICE INFORMATION >


## AUTO AMP

### Removal and Installation of Unified Meter and A/C Amp

INFOID:000000004655781

#### REMOVAL

1. Remove console finisher (A/T) or console boot (M/T). Refer to [IP-12](#).
2. Remove mounting screws, and then remove unified meter and A/C amp.

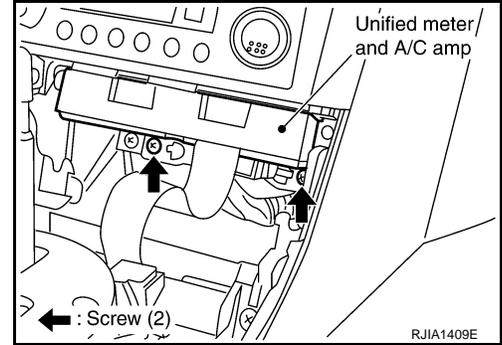

#### INSTALLATION

Installation is basically the reverse order of removal.

# AMBIENT SENSOR

< SERVICE INFORMATION >


## AMBIENT SENSOR

### Removal and Installation

INFOID:000000004655782

#### REMOVAL

1. Disconnect ambient sensor connector.
2. Remove ambient sensor.

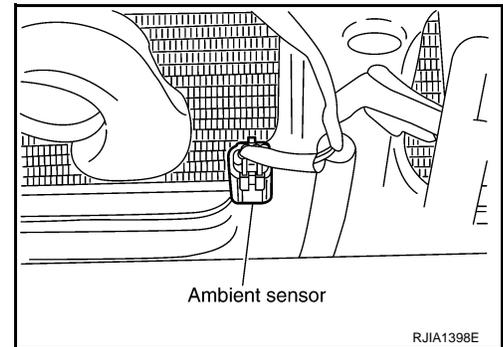

#### INSTALLATION

Installation is basically the reverse order of removal.

A

B

C

D

E

F

G

H

I

ATC

K

L

M

N

O

P

# IN-VEHICLE SENSOR

< SERVICE INFORMATION >


## IN-VEHICLE SENSOR

### Removal and Installation

INFOID:000000004655783

#### REMOVAL

1. Remove instrument driver panel lower. Refer to [IP-12](#).
2. Remove mounting screw (A), and then remove in-vehicle sensor (1).

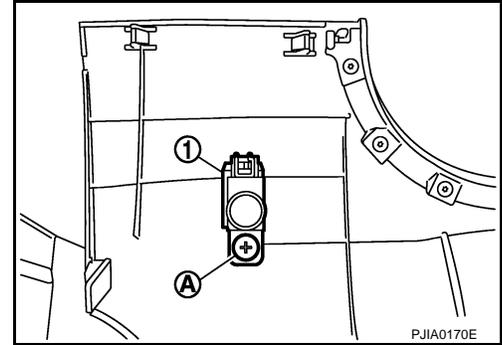

#### INSTALLATION

Installation is basically the reverse order of removal.

# SUNLOAD SENSOR

< SERVICE INFORMATION >


## SUNLOAD SENSOR

### Removal and Installation

INFOID:000000004655784

#### REMOVAL

1. Pull out sunload sensor from instrument panel.
2. Disconnect sunload sensor connector, and then remove sunload sensor.

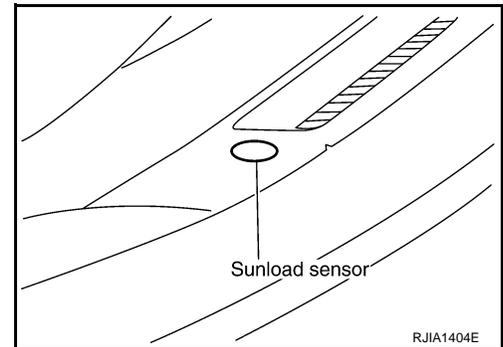

#### INSTALLATION

Installation is basically the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M  
N  
O  
P

ATC

# INTAKE SENSOR

< SERVICE INFORMATION >

## INTAKE SENSOR

### Removal and Installation

INFOID:000000004655785


#### REMOVAL

1. Remove low-pressure pipe 1 and high-pressure pipe 2. Refer to [ATC-116. "Removal and Installation of Low-Pressure Pipe 1 and High-pressure Pipe 2"](#).

**CAUTION:**

Cap or wrap the joint of evaporator, low-pressure pipe 1, 2 and high-pressure pipe 1, 2 with suitable material such as vinyl tape to avoid the entry of air.

2. Slide evaporator to passenger side, and then remove intake sensor.

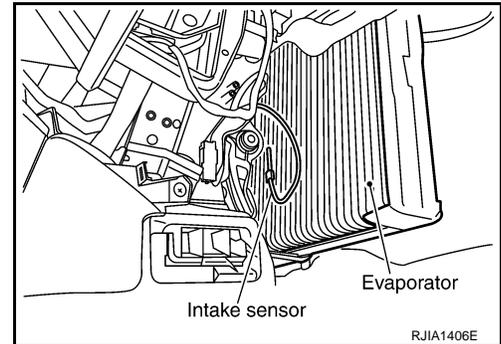

#### INSTALLATION

Installation is basically the reverse order of removal.

**CAUTION:**

- Replace O-rings of low-pressure pipe 1, 2 and high-pressure pipe 1, 2 with new ones, and then apply compressor oil to it when installing it.
- Mark the mounting position of intake sensor bracket prior to removal so that the reinstalled sensor can be located in the same position.
- Female-side piping connection is thin and easy to deform. Slowly insert the male-side piping straight in axial direction.
- Insert piping securely until a click is heard.
- After piping connection is completed, pull male-side piping by hand to make sure that connection does not come loose.
- When recharging refrigerant, check for leaks.

# BLOWER UNIT

< SERVICE INFORMATION >

## BLOWER UNIT

### Removal and Installation



INFOID:000000004655786

#### REMOVAL

1. Remove remote keyless entry receiver. Refer to [BL-81. "Removal and Installation of Remote Keyless Entry Receiver"](#).
2. Remove mounting nuts (A), and then remove ECM (1) with bracket attached.
3. Disconnect intake door motor and blower motor connector (B).
4. Remove mounting screws (C) and bolt (D), and then remove blower unit (2).

**CAUTION:**

Move blower unit rightward, and remove location pin (1 part) and joint. Then remove blower unit downward.

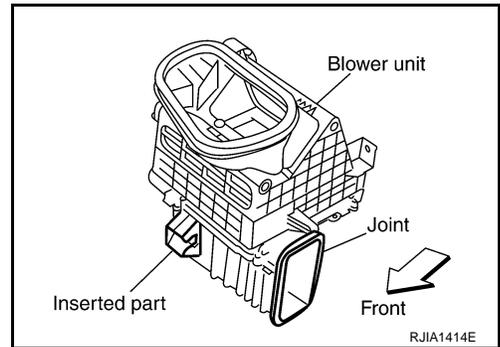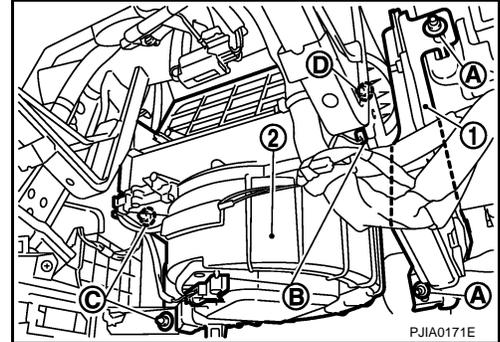

#### INSTALLATION

Installation is basically the reverse order of removal.

**CAUTION:**

Make sure location pin (1 part) and joint are securely inserted.


A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M  
N  
O  
P

# BLOWER UNIT

< SERVICE INFORMATION >

## Disassembly and Assembly

INFOID:000000004655787

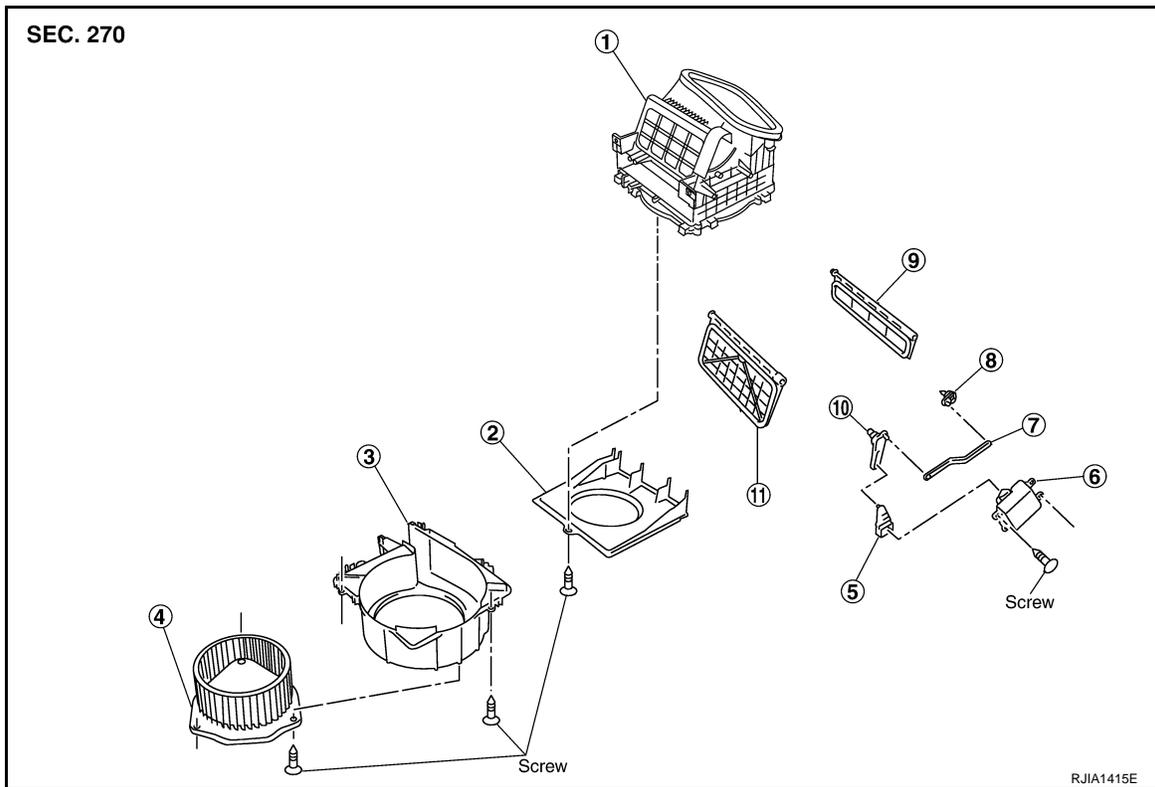

- |                          |                        |                      |
|--------------------------|------------------------|----------------------|
| 1. Intake upper case     | 2. Intake bell mouth   | 3. Intake lower case |
| 4. Blower motor assembly | 5. Intake door lever 2 | 6. Intake door motor |
| 7. Intake door link      | 8. Intake door lever 3 | 9. Intake door 2     |
| 10. Intake door lever 1  | 11. Intake door 1      |                      |

# BLOWER MOTOR

< SERVICE INFORMATION >


## BLOWER MOTOR

### Removal and Installation

INFOID:000000004655788

#### REMOVAL

1. Remove instrument passenger panel lower. Refer to [IP-12](#).
2. Disconnect blower motor connector.
3. Remove mounting screws, and then remove blower motor.

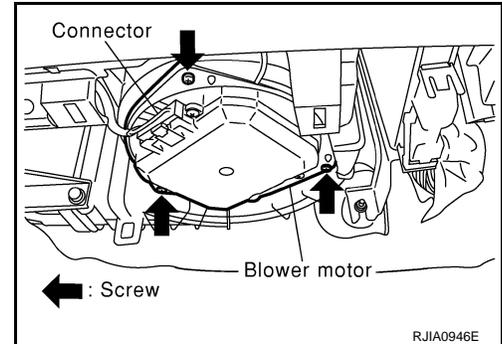

#### INSTALLATION

Installation is basically the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M  
N  
O  
P

ATC

# INTAKE DOOR MOTOR

< SERVICE INFORMATION >


## INTAKE DOOR MOTOR

### Removal and Installation

INFOID:000000004655789

#### REMOVAL

1. Remove blower unit. Refer to [ATC-95. "Removal and Installation"](#).
2. Remove mounting screws, and then remove intake door motor from blower unit.

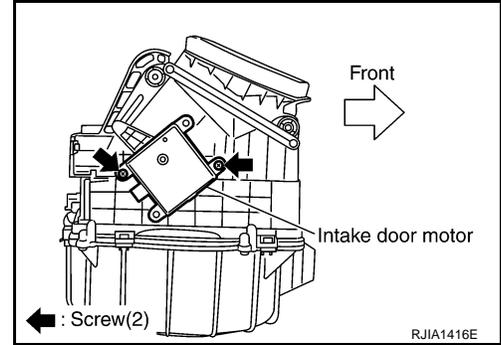

#### INSTALLATION

Installation is basically the reverse order of removal.

# HEATER & COOLING UNIT ASSEMBLY

< SERVICE INFORMATION >

## HEATER & COOLING UNIT ASSEMBLY

### Removal and Installation

INFOID:000000004655790

#### REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Drain coolant from cooling system. Refer to [CO-9, "Changing Engine Coolant"](#).
3. Remove cowl top cover. Refer to [EI-16, "Removal and Installation"](#).
4. Disconnect one-touch joint between low-pressure pipe 1 (1) and low-pressure pipe 2 (2) with disconnecter (SST: 9253089916) (A).

**CAUTION:**



Cap or wrap the joint of low-pressure pipe 1 and low-pressure pipe 2 with suitable material such as vinyl tape to avoid the entry of air.

5. Disconnect one-touch-joint between high-pressure pipe 1 (3) and high-pressure pipe 2 (4) with disconnecter (SST: 9253089908) (A).


**CAUTION:**

Cap or wrap the joint of high-pressure pipe 1 and high-pressure pipe 2 with suitable material such as vinyl tape to avoid the entry of air.

6. Remove clamps (A), and then disconnect two heater hoses (1) from heater core.

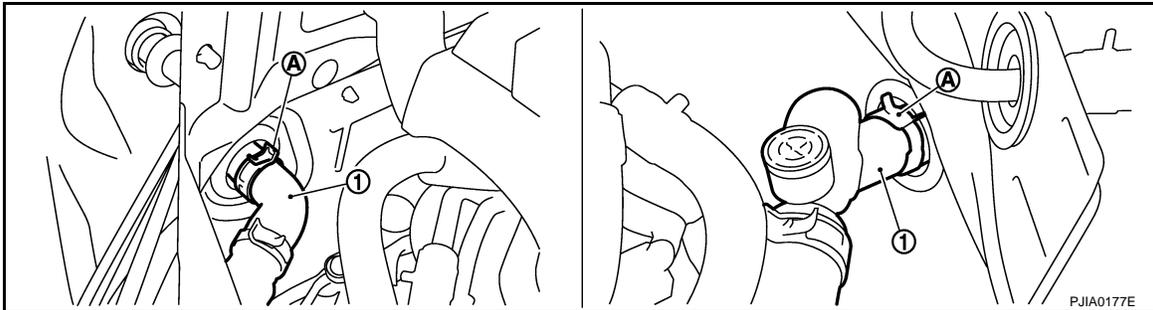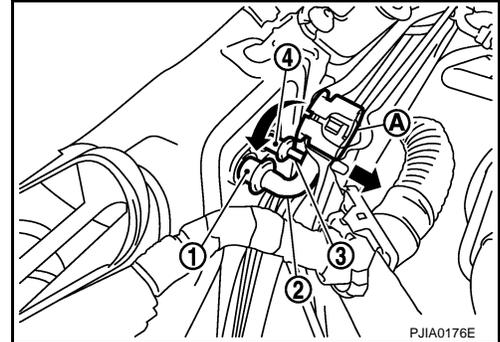

7. Remove instrument panel. Refer to [IP-12](#).
8. Remove blower unit. Refer to [ATC-95, "Removal and Installation"](#).
9. Remove clips of vehicle harness from steering member.
10. Remove mounting nuts and bolts, and then remove instrument stays (left and right).

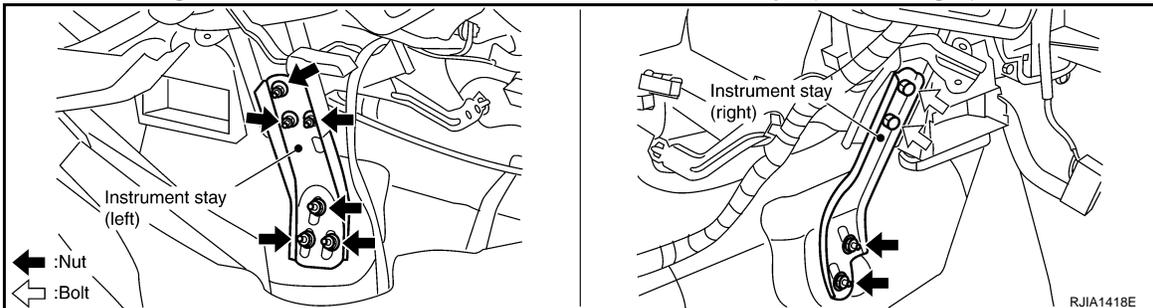

11. Remove defroster nozzle and ventilator ducts. Refer to [ATC-106, "Removal and Installation"](#).


A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M  
N  
O  
P

ATC

# HEATER & COOLING UNIT ASSEMBLY


## < SERVICE INFORMATION >

12. Remove mounting bolts from heater & cooling unit assembly.

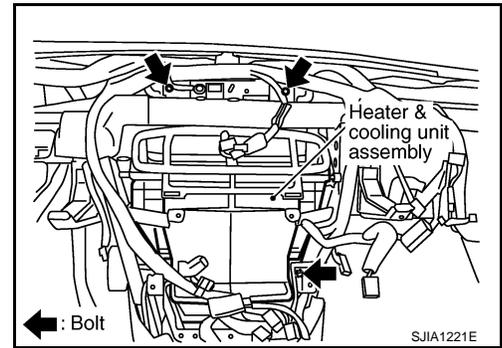

13. Remove steering column assembly mounting nuts and bolt.

14. Remove steering member mounting bolts, and then remove steering member.

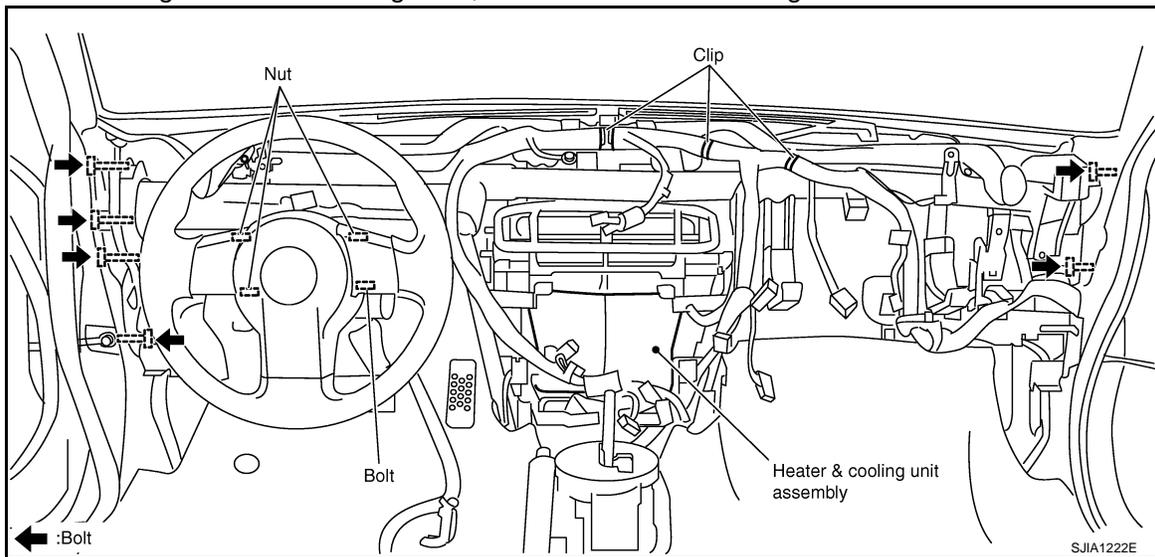

15. Remove heater & cooling unit assembly.

## INSTALLATION

Installation is basically the reverse order of removal.

### CAUTION:

- Replace O-rings of low-pressure pipe 2 and high-pressure pipe 1 with new ones, and then apply compressor oil to it when installing it.
- Female-side piping connection is thin and easy to deform. Slowly insert the male-side piping straight in axial direction.
- Insert piping securely until a click is heard.
- After piping connection is completed, pull male-side piping by hand to make sure that connection does not come loose.
- When recharging refrigerant, check for leaks.

### NOTE:

- When filling radiator with coolant, refer to [CO-9. "Changing Engine Coolant"](#).
- Recharge the refrigerant.

### Heater & cooling unit assembly mounting bolts

 : 6.9 N·m (0.7 kg-m, 61 in-lb)

### Steering member and steering column assembly mounting nuts and bolt


 : 12 N·m (1.2 kg-m, 9 ft-lb)

# HEATER & COOLING UNIT ASSEMBLY

< SERVICE INFORMATION >

## Disassembly and Assembly

INFOID:000000004655791

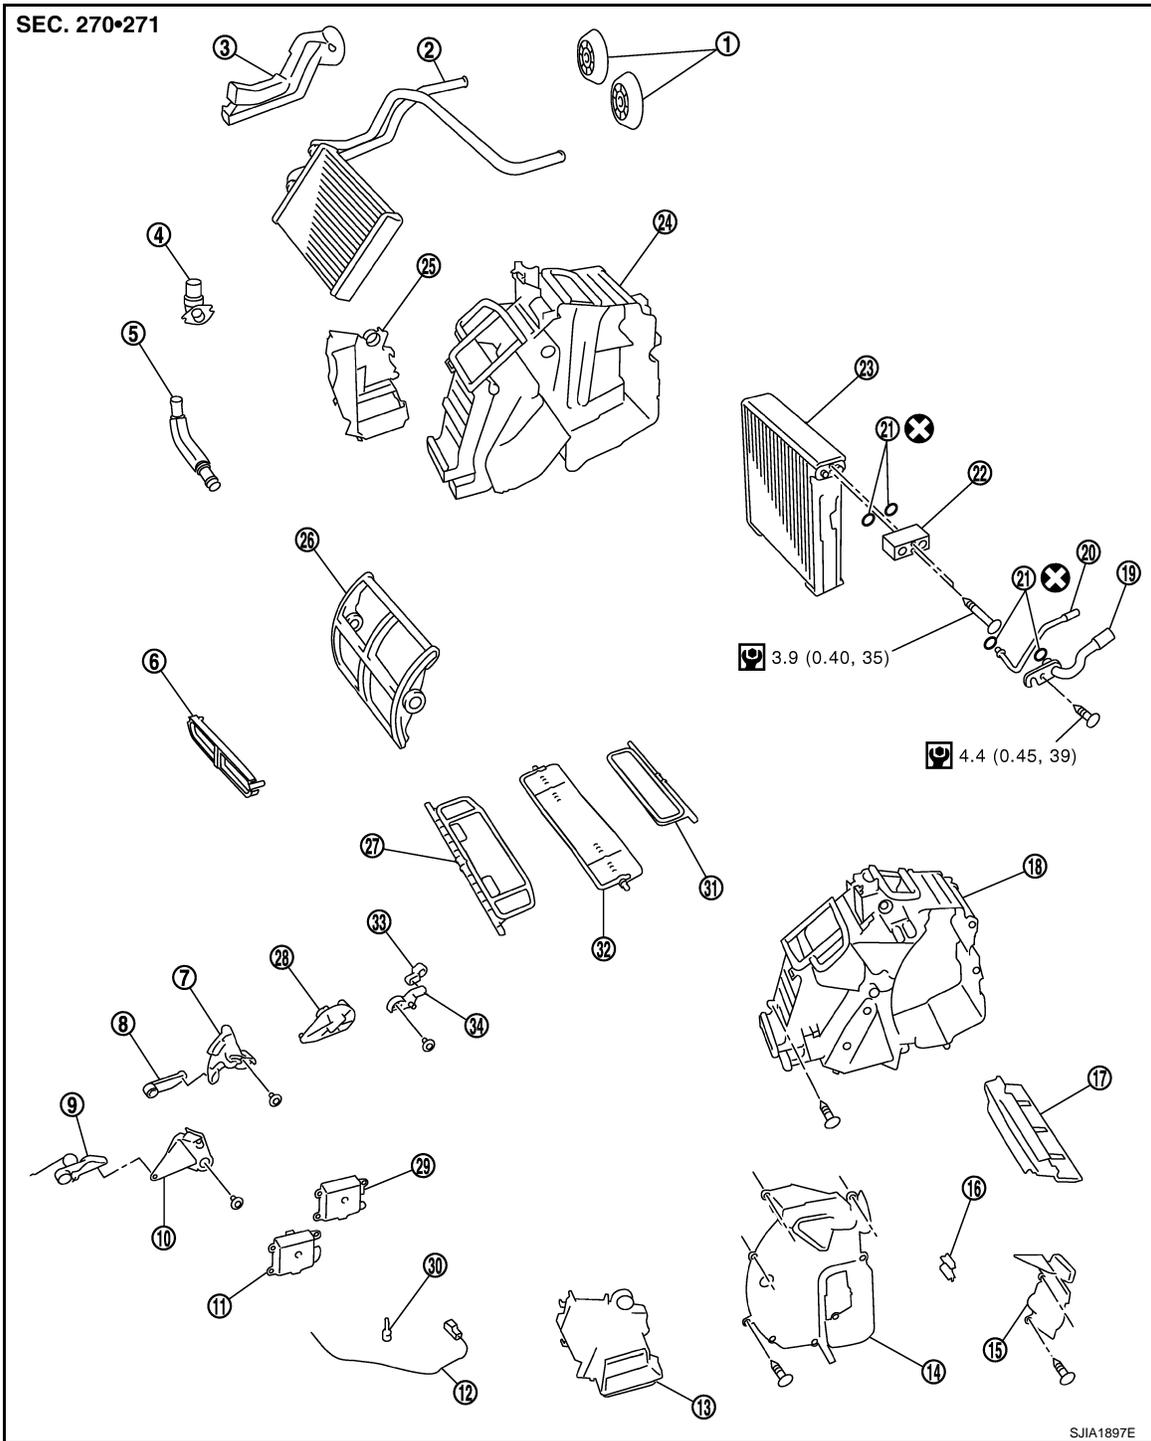

- |                          |                          |                              |
|--------------------------|--------------------------|------------------------------|
| 1. Heater pipe grommet   | 2. Heater core           | 3. Heater pipe cover         |
| 4. Aspirator             | 5. Aspirator duct        | 6. Rear foot cover           |
| 7. Max. cool door link   | 8. Max. cool door lever  | 9. Ventilator door lever     |
| 10. Ventilator door link | 11. Air mix door motor   | 12. Intake sensor            |
| 13. Foot duct (right)    | 14. Evaporator cover     | 15. Evaporator cover adapter |
| 16. Heater pipe bracket  | 17. Insulator            | 18. Heater case (right)      |
| 19. Low-pressure pipe 1  | 20. High-pressure pipe 2 | 21. O-ring                   |
| 22. Expansion valve      | 23. Evaporator           | 24. Heater case (left)       |

A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M  
N  
O  
P

# HEATER & COOLING UNIT ASSEMBLY

## < SERVICE INFORMATION >

---

- |                         |                               |                           |
|-------------------------|-------------------------------|---------------------------|
| 25. Foot duct (left)    | 26. Air mix door (slide door) | 27. Ventilator door       |
| 28. Side link           | 29. Mode door motor           | 30. Intake sensor bracket |
| 31. Defroster door      | 32. Max. cool door            | 33. Defroster door lever  |
| 34. Defroster door link |                               |                           |



**: N·m (kg-m, in-lb)**



**: Always replace after every disassembly.**

# MODE DOOR MOTOR

< SERVICE INFORMATION >


## MODE DOOR MOTOR

### Removal and Installation

INFOID:000000004655792

#### REMOVAL

1. Remove blower unit. Refer to [ATC-95. "Removal and Installation"](#).
2. Remove mounting screws from mode door motor.
3. Disconnect connector, and then remove mode door motor.

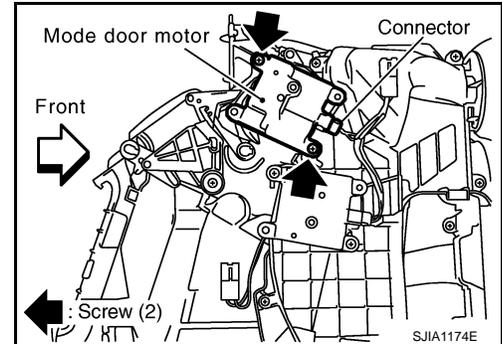

#### INSTALLATION

Installation is basically the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M  
N  
O  
P

ATC

# AIR MIX DOOR MOTOR

< SERVICE INFORMATION >

## AIR MIX DOOR MOTOR

### Removal and Installation

INFOID:000000004655793


#### REMOVAL

1. Set the temperature control dial at 18°C (60°F).
2. Open the driver and front passenger window, and then disconnect the battery cable from the negative terminal.

**CAUTION:**

**After the battery cables are disconnected, do not open/close the driver and/or front passenger door with the window in the full up position. The automatic window adjusting function will not work and the side roof panel may be damaged.**

3. Remove blower unit. Refer to [ATC-95, "Removal and Installation"](#).
4. Disconnect air mix door motor connector.
5. Remove mounting screws, and then remove air mix door motor.

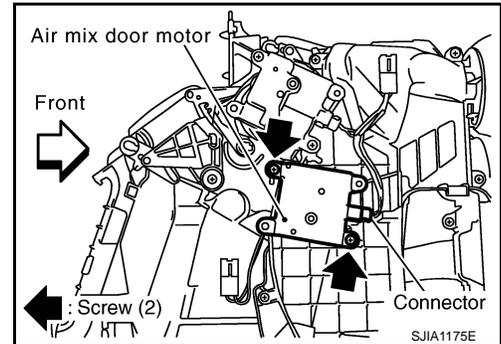

#### INSTALLATION

Installation is basically the reverse order of removal.

# HEATER CORE

< SERVICE INFORMATION >


## HEATER CORE

### Removal and Installation

INFOID:000000004655794

#### REMOVAL

1. Remove heater & cooling unit assembly. Refer to [ATC-99, "Removal and Installation"](#).
2. Remove foot duct (left). Refer to [ATC-106, "Removal and Installation"](#).

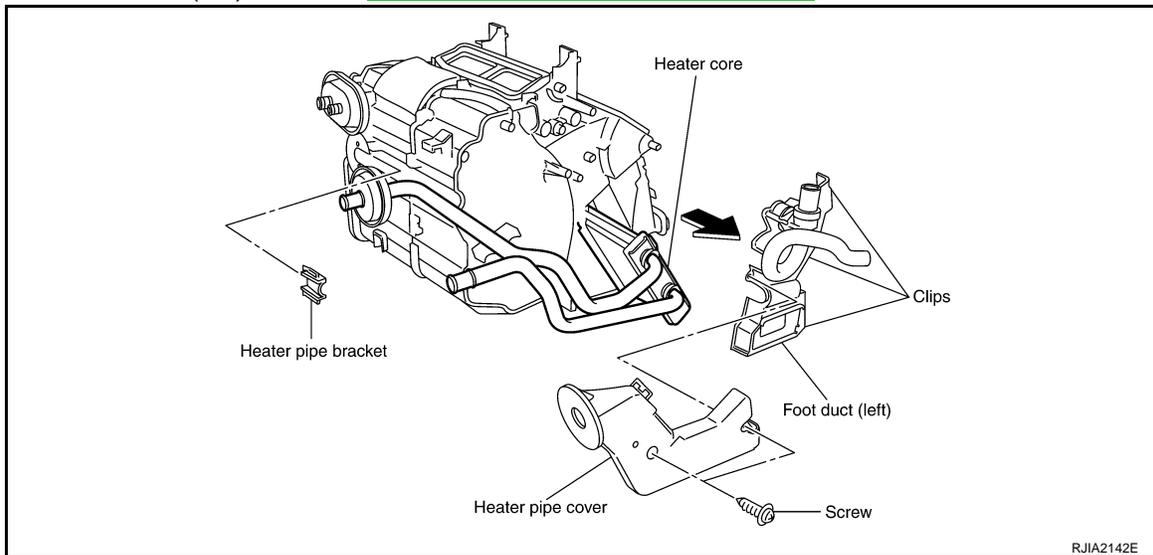

3. Remove mounting screws, and then remove heater pipe cover.
4. Remove heater pipe bracket and heater pipe grommet.
5. Slide heater core to leftward.

#### INSTALLATION

Installation is basically the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M  
N  
O  
P

ATC

# DUCTS AND GRILLES


< SERVICE INFORMATION >

## DUCTS AND GRILLES

### Removal and Installation

INFOID:000000004655795

### COMPONENT LAYOUT

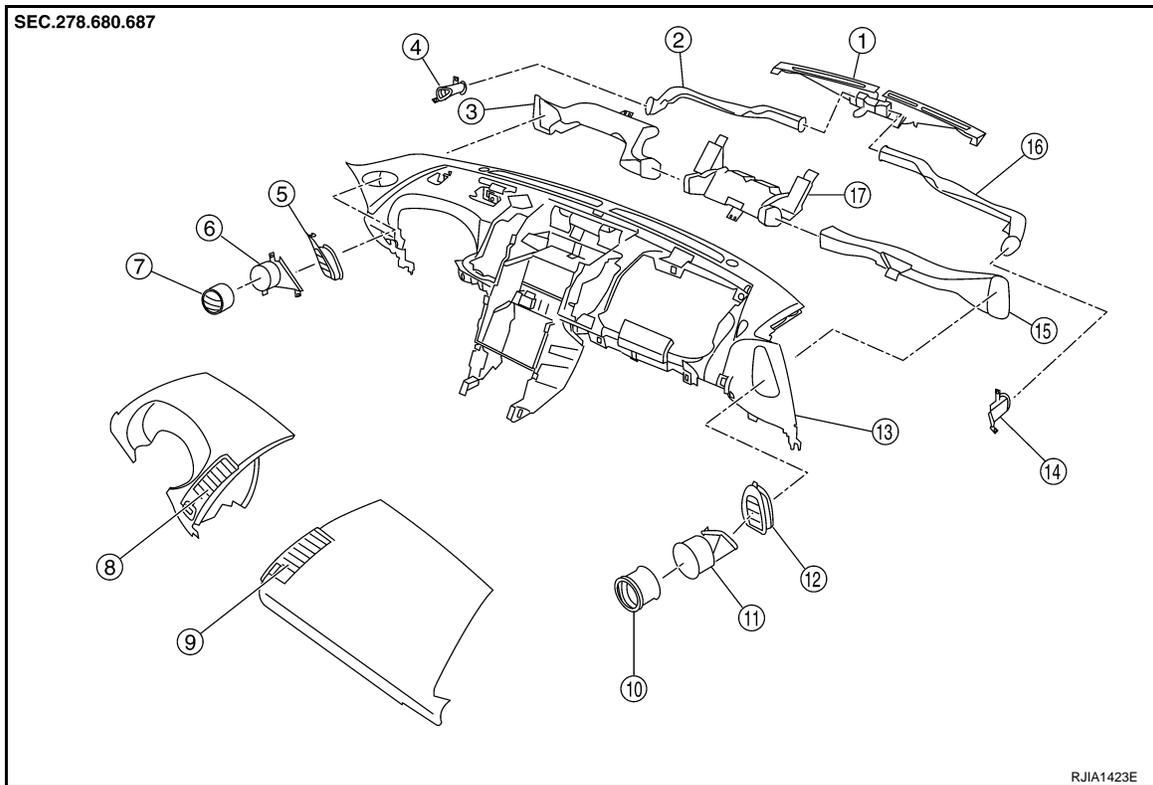


- |                                    |                                    |                                      |
|------------------------------------|------------------------------------|--------------------------------------|
| 1. Defroster nozzle                | 2. Side defroster duct 1 (left)    | 3. Side ventilator duct 1 (left)     |
| 4. Side defroster duct 2 (left)    | 5. Instrument side finisher (left) | 6. Side ventilator duct 2 (left)     |
| 7. Side ventilator grille (left)   | 8. Center ventilator grille (left) | 9. Center ventilator grille (right)  |
| 10. Side ventilator grille (right) | 11. Side ventilator duct 2 (right) | 12. Instrument side finisher (right) |
| 13. Instrument panel               | 14. Side defroster duct 2 (right)  | 15. Side ventilator duct 1 (right)   |
| 16. Side defroster duct 1 (right)  | 17. Center ventilator duct         |                                      |

### REMOVAL

#### Removal of Center Ventilator Grilles

1. Remove instrument driver and passenger panel upper. Refer to [IP-12](#).
2. Remove mounting screws, and then remove center ventilator grilles.

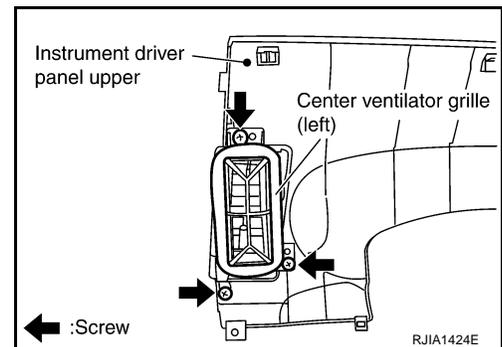


#### Removal of Side Ventilator Duct 2 and Grilles

1. Remove door finisher. Refer to [EI-28](#).


# DUCTS AND GRILLES

## < SERVICE INFORMATION >

2. Remove mounting screws, and then remove side ventilator duct 2 (left and right).

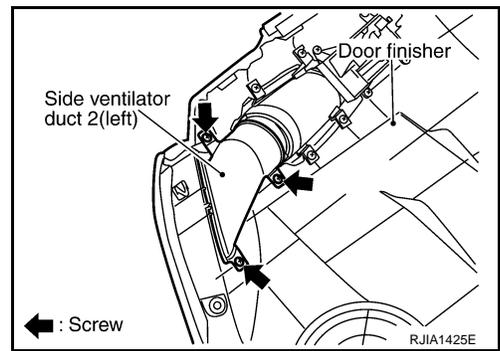


3. Remove mounting clips, and then remove side ventilator grilles (left and right).

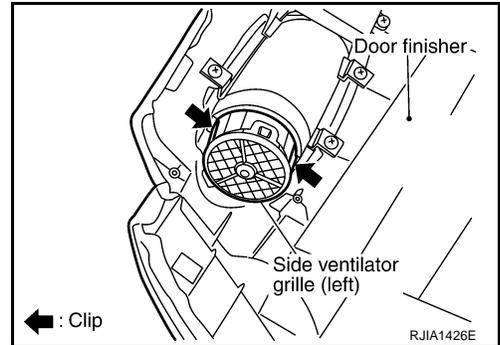


### Removal of Instrument Side Finishers

Remove mounting clips, and then remove instrument side finishers (left and right).

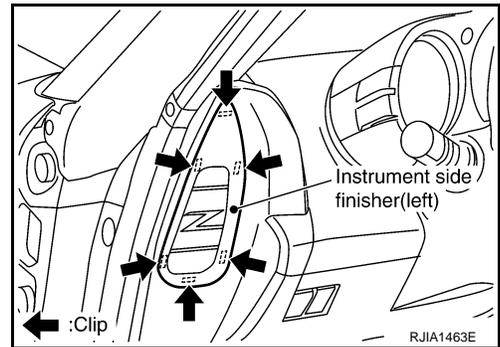

### Removal of Defroster Nozzle, Ducts and Ventilator Ducts

1. Remove instrument panel. Refer to [IP-12](#).
2. Remove mounting screws, and then remove side defroster duct 1 (left and right).
3. Remove steering member, and then remove defroster nozzle.

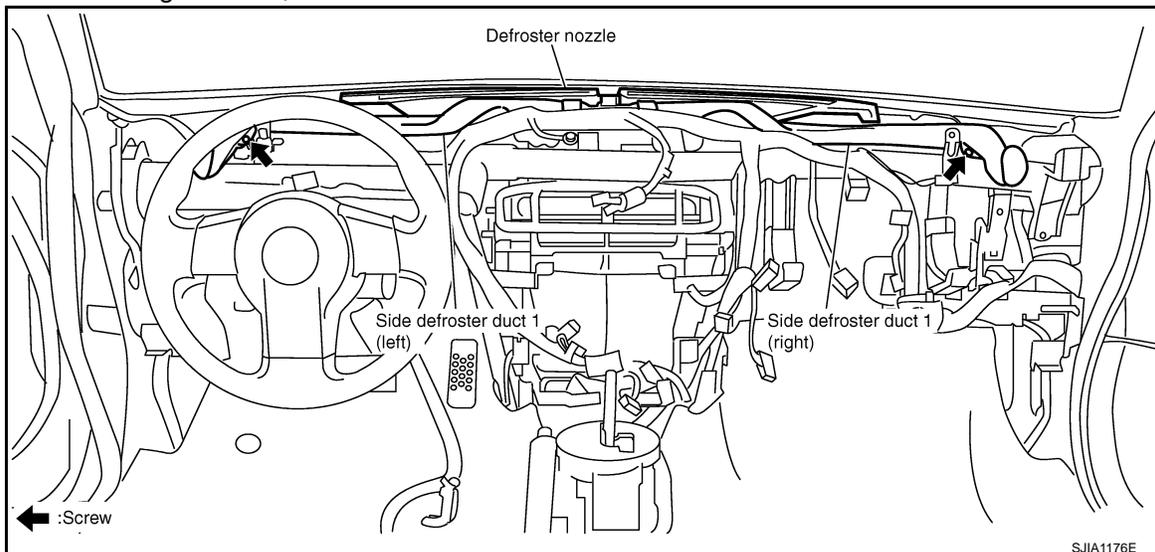


A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M  
N  
O  
P

ATC


# DUCTS AND GRILLES

## < SERVICE INFORMATION >

4. Remove mounting screws, and then remove side ventilator duct 1 (left and right) and center ventilator duct from instrument panel.

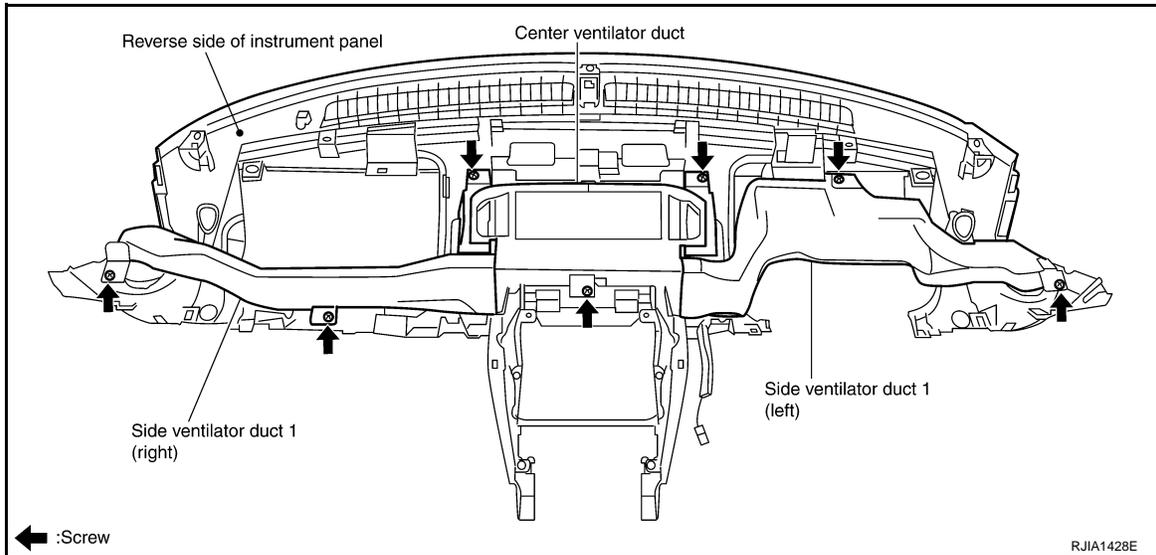


5. Remove mounting screws, and then remove side defroster duct 2 (left and right).

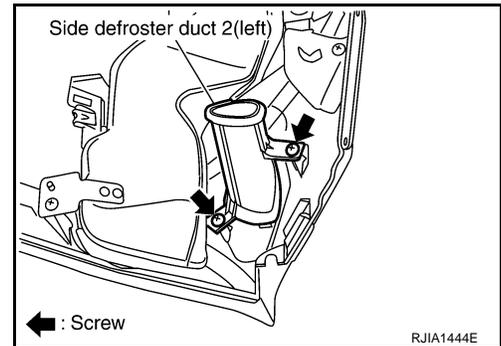

### Removal of Foot Ducts

1. Remove heater & cooling unit assembly. Refer to [ATC-99. "Removal and Installation"](#).
2. Remove evaporator cover, and then remove foot duct (right).
3. Remove aspirator and heater pipe cover.
4. Remove mounting clips, and then remove foot duct (left).

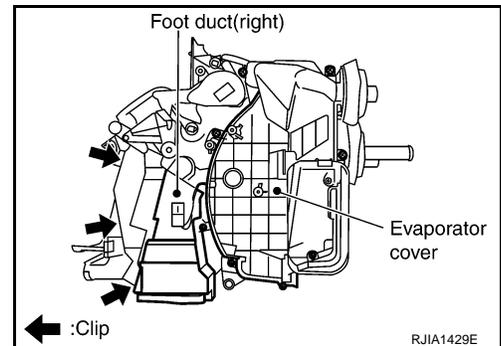

## INSTALLATION

Installation is basically the reverse order of removal.

# REFRIGERANT LINES

< SERVICE INFORMATION >

## REFRIGERANT LINES

### HFC-134a (R-134a) Service Procedure


INFOID:000000004655796

#### SETTING OF SERVICE TOOLS AND EQUIPMENT


##### Discharging Refrigerant

**WARNING:**

Avoid breathing A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose and throat. Remove HFC-134a (R-134a) from A/C system using certified service equipment meeting requirements of SAE J-2210 [HFC-134a (R-134a) recycling equipment] or J-2209 [HFC-134a (R-134a) recovery equipment]. If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from refrigerant and lubricant manufacturers.

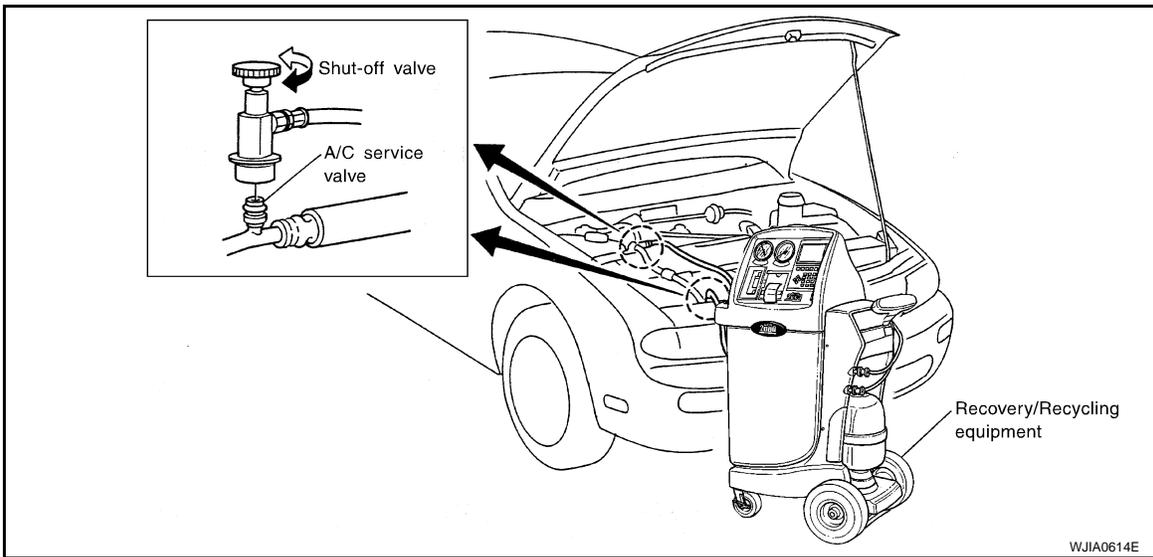


##### Evacuating System and Charging Refrigerant

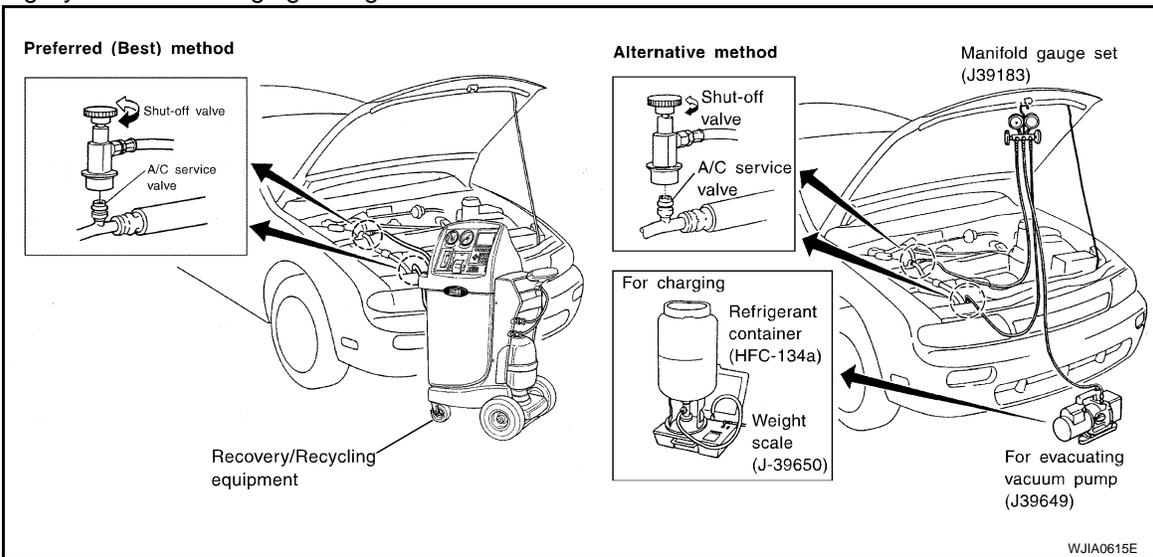

A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M  
N  
O  
P

# REFRIGERANT LINES

## < SERVICE INFORMATION >

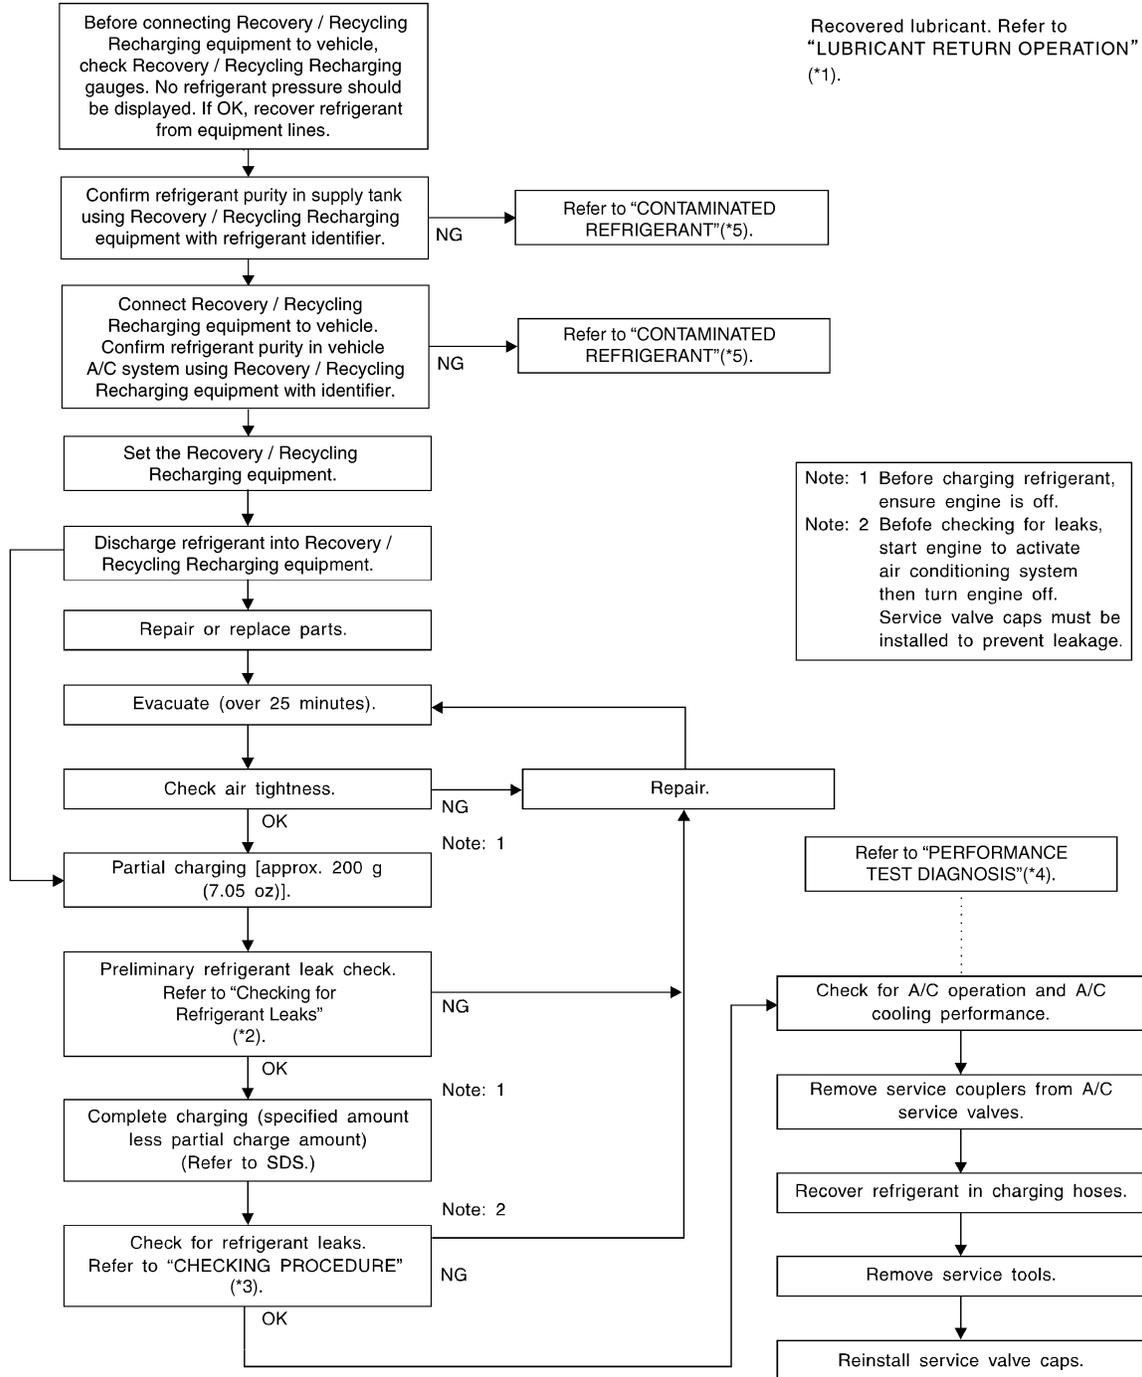

SJIA1275E

\*1 [ATC-19. "Maintenance of Lubricant Quantity in Compressor"](#)

\*2 [ATC-121. "Checking of Refrigerant Leaks"](#)

\*3 [ATC-122. "Electrical Leak Detector"](#)

\*4 [ATC-68. "Insufficient Cooling"](#)

\*5 [ATC-3. "Precaution for Working with HFC-134a \(R-134a\)"](#)


# REFRIGERANT LINES

< SERVICE INFORMATION >

## Component

INFOID:000000004655797


Refer to [ATC-4, "Precaution for Refrigerant Connection"](#).

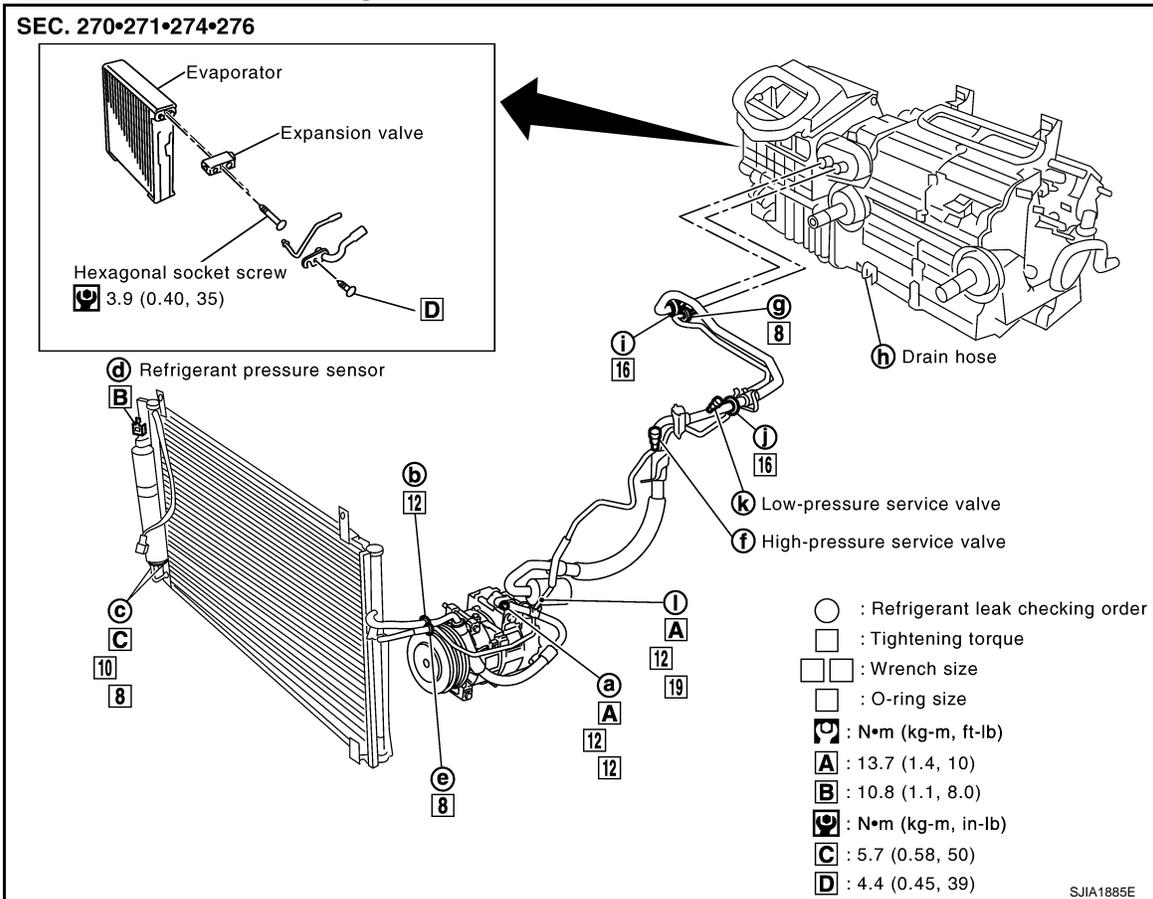

## Removal and Installation of Compressor

INFOID:000000004655798

### REMOVAL

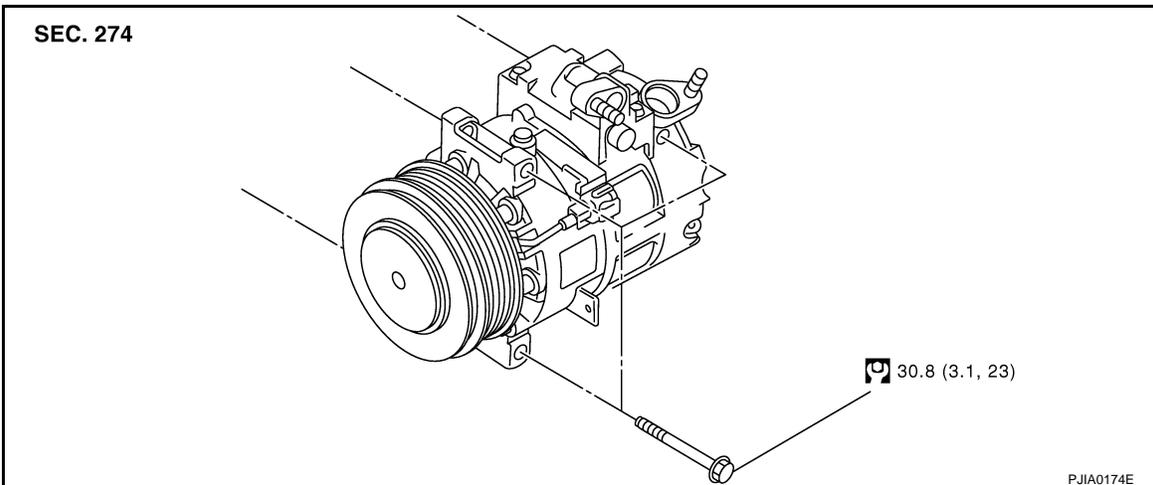


: N-m (kg-m, ft-lb)

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove tower bar. Refer to [FSU-18](#).
3. Remove engine cover. Refer to [EM-18](#).
4. Remove air cleaner case (LH) and air duct (LH). Refer to [EM-16](#).


## REFRIGERANT LINES

### < SERVICE INFORMATION >

5. Remove mounting nuts (A) from low-pressure flexible hose (1).
6. Remove mounting nuts (B) from high-pressure flexible hose (2).  
**CAUTION:**  
**Cap or wrap the joint of compressor, low-pressure flexible hose and high-pressure flexible hose with suitable material such as vinyl tape to avoid the entry of air.**
7. Disconnect compressor connector (C).
8. Remove drive belt. Refer to [EM-13](#).

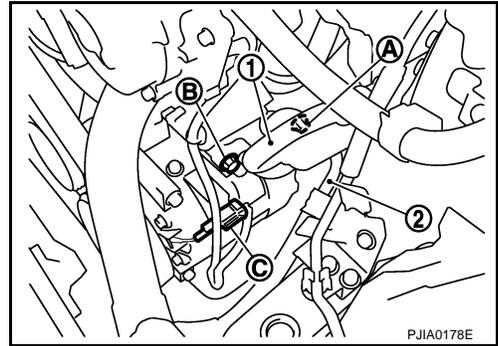

9. Remove mounting bolts (A) from compressor, using power tools.
10. Remove compressor (1) upward of vehicle.

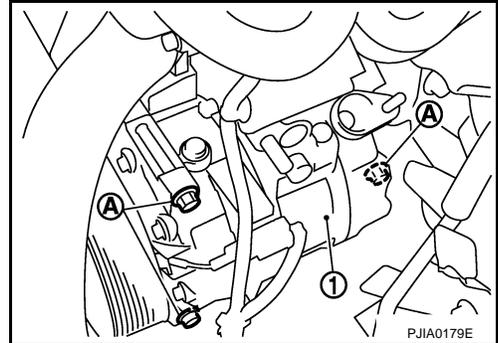

### INSTALLATION

Installation is basically the reverse order of removal.

#### **CAUTION:**

- Replace O-rings of low-pressure flexible hose and high-pressure flexible hose with new ones, and then apply compressor oil to it when installing it.
- When recharging refrigerant, check for leaks.


### Check Disc to Pulley Clearance

INFOID:000000004655799

Check the clearance (B) between pulley assembly (1) and clutch disc (2) around the entire periphery with feeler gauge (A).

**Disc to pulley : 0.30 - 0.60 mm (0.012 - 0.024 in) clearance**

If specified clearance is not obtained, replace compressor.

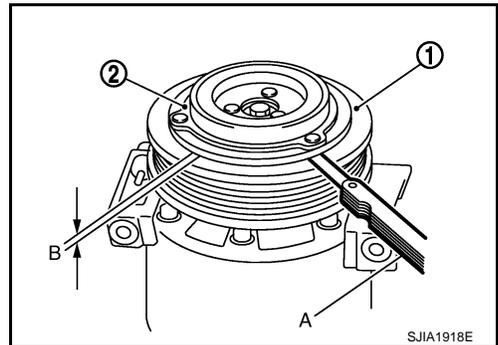

### Removal and Installation of Low-Pressure Flexible Hose and Pipe 2

INFOID:000000004655800


#### REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove cowl top cover. Refer to [EI-16](#).
3. Remove tower bar. Refer to [FSU-18](#).
4. Remove engine cover. Refer to [EM-18](#).
5. Remove air cleaner case (LH) and air duct (LH). Refer to [EM-16](#).

# REFRIGERANT LINES

## < SERVICE INFORMATION >


6. Remove mounting bolt (A) from low-pressure flexible hose bracket (1).
7. Remove high-pressure pipe 1 (2) from vehicle clip (B).

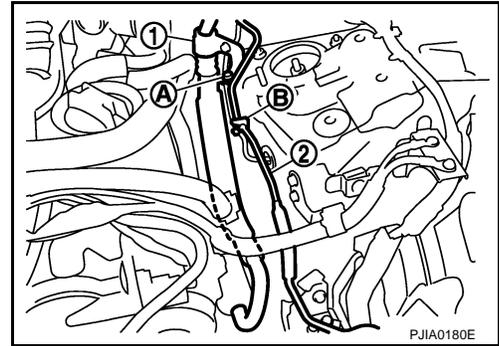

8. Disconnect one-touch joint between low-pressure flexible hose (1) and low-pressure pipe 2 (2) with disconnecter (SST: 9253089916) (A).

**CAUTION:**


Cap or wrap the joint of low-pressure flexible hose and low-pressure pipe 2 with suitable material such as vinyl tape to avoid the entry of air.

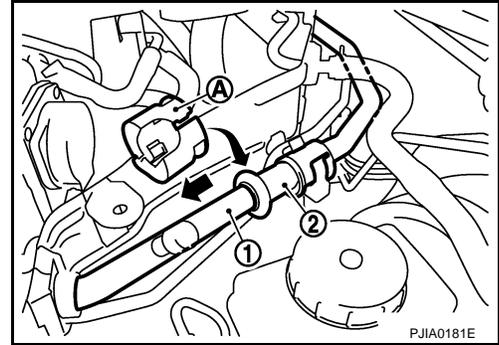

9. Disconnect one-touch joint between low-pressure pipe 1 (1) and low-pressure pipe 2 (2) with disconnecter (SST: 9253089916) (A).

**CAUTION:**

Cap or wrap the joint of low-pressure pipe 1 and low-pressure pipe 2 with suitable material such as vinyl tape to avoid the entry of air.

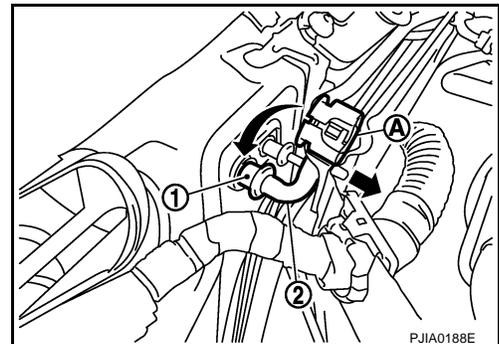


10. Remove mounting nut (A) from low-pressure flexible hose (1). (Compressor side)

**CAUTION:**

Cap or wrap the joint of compressor and low-pressure flexible hose with suitable material such as vinyl tape to avoid the entry of air.

11. Remove low-pressure flexible hose.

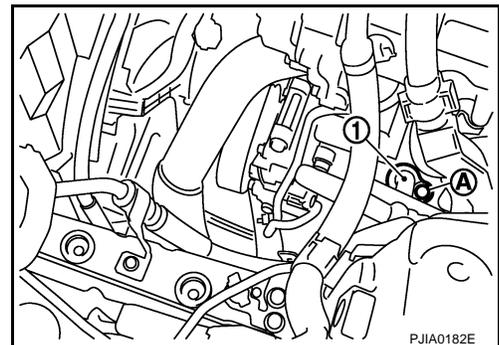

## INSTALLATION

Installation is basically the reverse order of removal.

**CAUTION:**

- Replace O-rings of low-pressure flexible hose and low-pressure pipe 2 with new ones, and then apply compressor oil to it when installing it.
- Female-side piping connection is thin and easy to deform. Slowly insert the male-side piping straight in axial direction.
- Insert piping securely until a click is heard.
- After piping connection is completed, pull male-side piping by hand to make sure that connection does not come loose.
- When recharging refrigerant, check for leaks.

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M  
N  
O  
P

ATC

# REFRIGERANT LINES

< SERVICE INFORMATION >

## Low-pressure flexible hose bracket mounting bolt




: 4.2 N·m (0.43 kg-m, 37 in-lb)

## Removal and Installation of High-pressure Flexible Hose

INFOID:000000004655801

### REMOVAL


1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove tower bar. Refer to [FSU-18](#).
3. Remove engine cover. Refer to [EM-18](#).
4. Remove air cleaner case (LH) and air duct (LH). Refer to [EM-16](#).
5. Remove mounting bolt (A) from high-pressure flexible hose bracket (1).

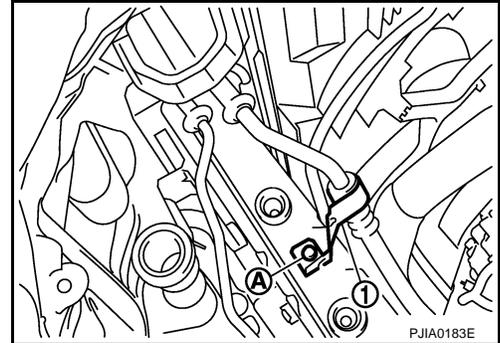

6. Disconnect one-touch joint between high-pressure flexible hose (1) and condenser with disconnecter (SST: 9253089912) (A).

#### **CAUTION:**


Cap or wrap the joint of high-pressure flexible hose and condenser with suitable material such as vinyl tape to avoid the entry of air.

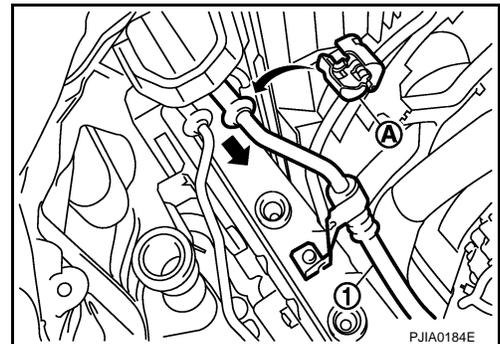

7. Remove mounting nut (A) from high-pressure flexible hose (1), and then remove high-pressure flexible hose.

#### **CAUTION:**

Cap or wrap the joint of high-pressure flexible hose and compressor with suitable material such as vinyl tape to avoid the entry of air.

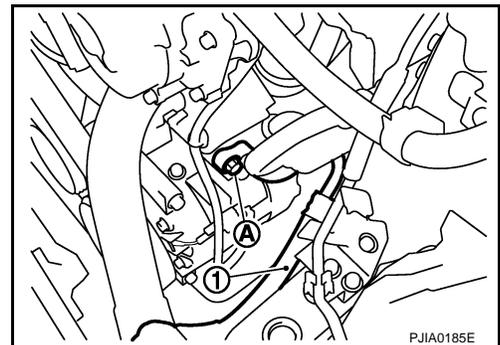

### INSTALLATION

Installation is basically the reverse order of removal.

#### **CAUTION:**

- Replace O-rings of high-pressure flexible hose with new ones, and then apply compressor oil to it when installing it.
- Female-side piping connection is thin and easy to deform. Slowly insert the male-side piping straight in axial direction.
- Insert piping securely until a click is heard.
- After piping connection is completed, pull male-side piping by hand to make sure that connection does not come loose.

# REFRIGERANT LINES

## < SERVICE INFORMATION >

- When recharging refrigerant, check for leaks.

### High-pressure flexible hose bracket mounting bolt

 : 4.2 N·m (0.43 kg·m, 37 in·lb)

## Removal and Installation of High-pressure Pipe 1 (Engine Compartment)

INFOID:000000004655802

### REMOVAL


1. Remove low-pressure flexible hose and pipe 2. Refer to [ATC-112. "Removal and Installation of Low-Pressure Flexible Hose and Pipe 2"](#).
2. Remove high-pressure pipe 1 (1) from vehicle clip (A).



3. Disconnect one-touch joint between high-pressure pipe 1 (1) and condenser with disconnecter (SST: 9253089908) (A).

#### **CAUTION:**

Cap or wrap the joint of condenser and high-pressure pipe 1 with suitable material such as vinyl tape to avoid the entry of air.

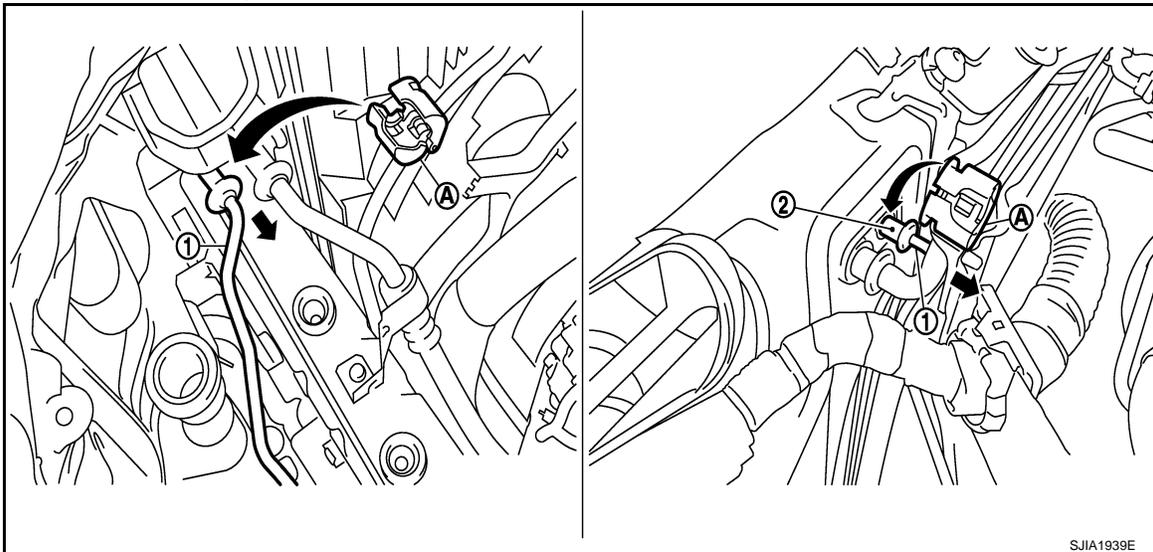

4. Disconnect one-touch joint between high-pressure pipe 1 (1) and high-pressure pipe 2 (2) with disconnecter (SST: 9253089908) (A).

#### **CAUTION:**

Cap or wrap the joint of high-pressure pipe 1 and 2 with suitable material such as vinyl tape to avoid the entry of air.

5. Remove high-pressure pipe 1.

### INSTALLATION

Installation is basically the reverse order of removal.

#### **CAUTION:**

- Replace O-rings of high-pressure pipe 1 with new ones, and then apply compressor oil to it when installing it.
- Female-side piping connection is thin and easy to deform. Slowly insert the male-side piping straight in axial direction.

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M  
N  
O  
P

ATC

# REFRIGERANT LINES

## < SERVICE INFORMATION >

- Insert piping securely until a click is heard.
- After piping connection is completed, pull male-side piping by hand to make sure that connection does not come loose.
- When recharging refrigerant, check for leaks.

### High-pressure flexible hose bracket mounting bolt


 : 4.2 N·m (0.43 kg·m, 37 in·lb)

## Removal and Installation of Low-Pressure Pipe 1 and High-pressure Pipe 2

INFOID:000000004655803

### REMOVAL

1. Set the temperature control dial at 18°C (60°F).
2. Open the driver and passenger window, and then disconnect the battery cable from the negative terminal.  
**CAUTION:**  
After the battery cables are disconnected, never open/close the driver and/or front passenger door with the window in the full up position. The automatic window adjusting function will not work and the side roof panel may be damaged.
3. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
4. Remove cowl top cover. Refer to [EI-16](#).
5. Remove mounting bolt (A) from low-pressure flexible hose bracket (1).
6. Remove high-pressure pipe 1 (2) from vehicle clip (B).

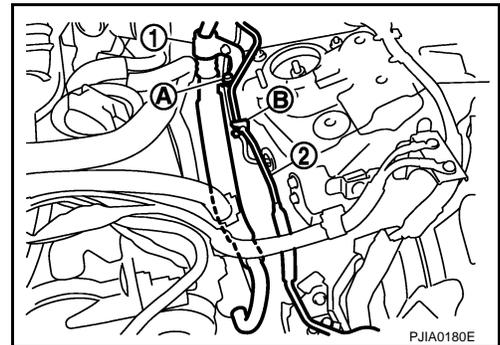

7. Disconnect one-touch joint between low-pressure pipe 1 (1) and low-pressure pipe 2 (2) with disconnecter (SST: 9253089916) (A).


### **CAUTION:**

Cap or wrap the joint of low-pressure pipe 1 and low-pressure pipe 2 with suitable material such as vinyl tape to avoid the entry of air.

8. Disconnect one-touch joint between high-pressure pipe 1 (3) and high-pressure pipe 2 (4) with disconnecter (SST: 9253089908) (A).

### **CAUTION:**

Cap or wrap the joint of high-pressure pipe 1 and high-pressure pipe 2 with suitable material such as vinyl tape to avoid the entry of air.

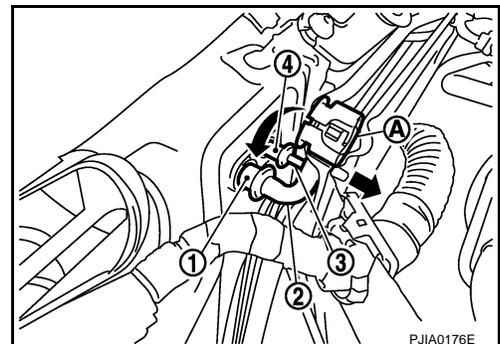


9. Remove instrument passenger panel lower. Refer to [IP-12](#).
10. Remove blower unit. Refer to [ATC-95, "Removal and Installation"](#).
11. Remove air mix door motor and mode door motor. Refer to [ATC-104, "Removal and Installation"](#) and [ATC-103, "Removal and Installation"](#).

# REFRIGERANT LINES

## < SERVICE INFORMATION >


12. Remove mounting screws, and then remove evaporator cover.

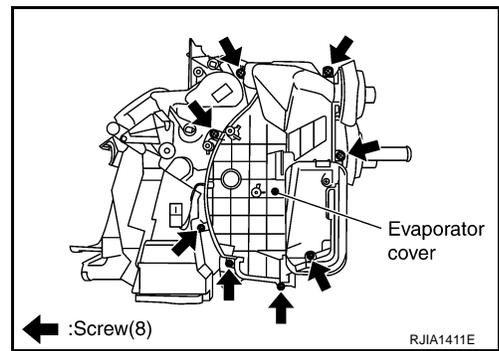

13. Remove mounting bolt (A), and then remove low-pressure pipe 1 (1) and high-pressure pipe 2 (2).

**CAUTION:**

Cap or wrap the joint of evaporator, low-pressure pipe 1, 2 and high-pressure pipe 1, 2 with suitable material such as vinyl tape to avoid the entry of air.

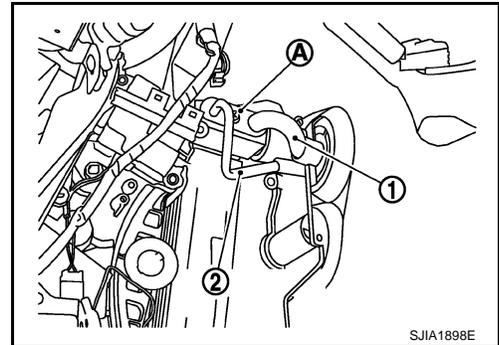

## INSTALLATION

Installation is basically the reverse order of removal.

**CAUTION:**

- Replace O-rings of low-pressure pipe 1, 2 and high-pressure pipe 1, 2 with new ones, and then apply compressor oil to it when installing it.
- Female-side piping connection is thin and easy to deform. Slowly insert the male-side piping straight in axial direction.
- Insert piping securely until a click is heard.
- After piping connection is completed, pull male-side piping by hand to make sure that connection does not come loose.
- When recharging refrigerant, check for leaks.

**Low-pressure flexible hose bracket mounting bolt**

: 4.2 N·m (0.43 kg-m, 37 in-lb)

## Removal and Installation of Liquid Tank

INFOID:000000004655804


### REMOVAL

1. Remove condenser. Refer to [ATC-118, "Removal and Installation of Condenser"](#).
2. Clean liquid tank and its surrounding area, and remove dust and rust from liquid tank.

**CAUTION:**

Be sure to clean carefully.


3. Remove mounting bolts (A), (B) from liquid tank (1).

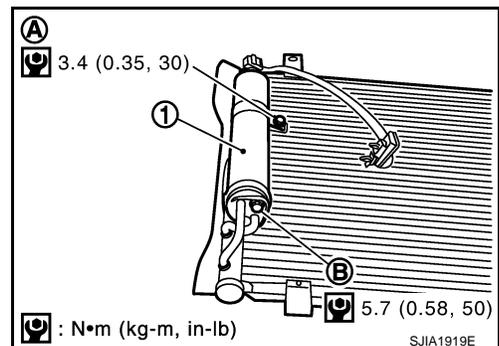

# REFRIGERANT LINES

## < SERVICE INFORMATION >

4. Lift liquid tank bracket upward. Remove liquid tank bracket from protruding part of condenser.
5. Slide liquid tank upward, and then remove liquid tank.

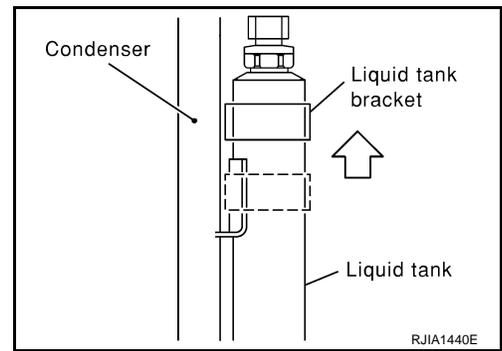


## INSTALLATION

Installation is basically the reverse order of removal.

### CAUTION:

- Make sure liquid tank bracket is securely installed at protrusion of condenser.
- Make sure liquid tank bracket does not move to a position below center of liquid tank.
- Replace O-rings of condenser pipe with new ones, and then apply compressor oil to it when installing it.
- When recharging refrigerant, check for leaks.

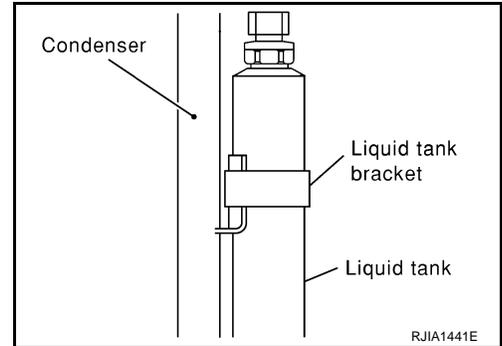


## Removal and Installation of Condenser


INFOID:000000004655805

## REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Drain engine coolant. Refer to [CO-9, "Changing Engine Coolant"](#).
3. Remove cover for condenser mounting bolt.

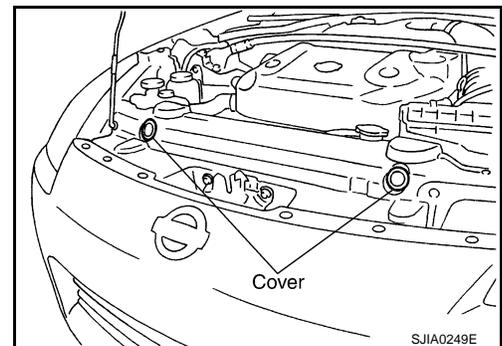

4. Remove tower bar. Refer to [FSU-18](#).
5. Remove engine cover. Refer to [EM-18](#).
6. Remove air cleaner case (LH) and air duct (LH). Refer to and [EM-16](#).
7. Remove radiator fan shroud after removing radiator upper hose.
8. Remove mounting bolt for condenser.
9. Remove mounting bolt (A) from high-pressure flexible hose bracket (1).

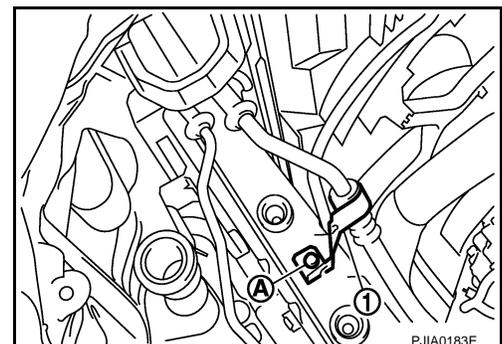

# REFRIGERANT LINES

## < SERVICE INFORMATION >

10. Disconnect one-touch joint between high-pressure flexible hose (1) and condenser with disconnecter (SST: 9253089912).


**CAUTION:**

Cap or wrap the high-pressure flexible hose and condenser with suitable material such as vinyl tape to avoid the entry of air.

Disconnect one-touch joint between high-pressure pipe 1 (2) and condenser with disconnecter (SST: 9253089908).


**CAUTION:**

Cap or wrap the joint of high-pressure pipe 1 and condenser with suitable material such as vinyl tape to avoid the entry of air.

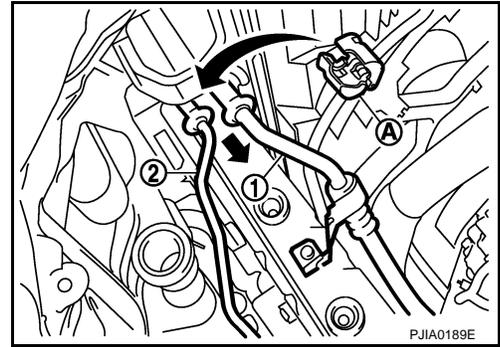


11. Remove radiator upper mount, move radiator and condenser to the engine side.

12. Disconnect refrigerant pressure sensor connector.

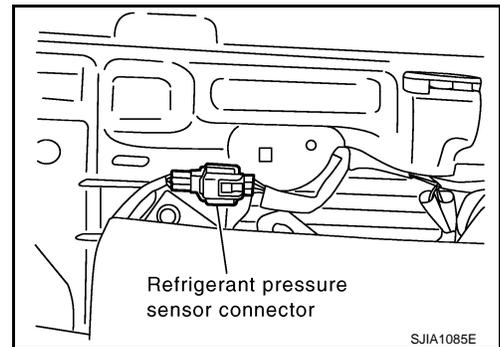


13. Lift condenser up slightly and tilt it toward front of vehicle. (This is because condenser lower bracket is on bottom of radiator tank.)

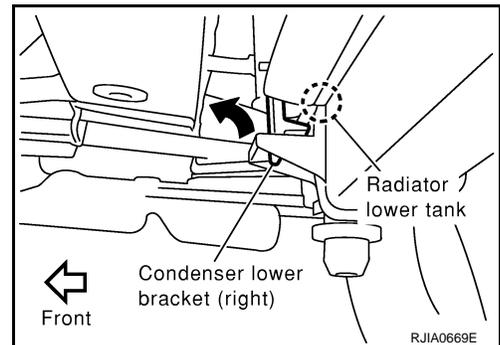

14. Pull condenser forward at an angle. Remove condenser from radiator.

**CAUTION:**

Be careful not to damage core surface of the condenser and the radiator.

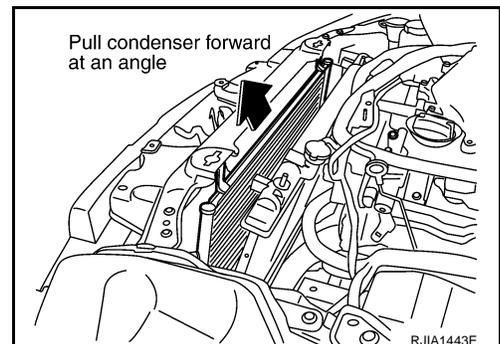

## INSTALLATION

Installation is basically the reverse order of removal.

**CAUTION:**

- Replace O-rings of high-pressure flexible hose and high-pressure pipe 1 with new ones, and then apply compressor oil to it when installing it.
- Female-side piping connection is thin and easy to deform. Slowly insert the male-side piping straight in axial direction.
- Insert piping securely until a click is heard.

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M  
N  
O  
P

ATC

# REFRIGERANT LINES

## < SERVICE INFORMATION >

- After piping connection is completed, pull male-side piping by hand to make sure that connection does not come loose.
- When recharging refrigerant, check for leaks.

### Condenser mounting bolt

 : 4.2 N·m (0.43 kg-m, 37 in-lb)

### High-pressure flexible hose bracket mounting bolt

 : 4.2 N·m (0.43 kg-m, 37 in-lb)

## Removal and Installation of Refrigerant Pressure Sensor


INFOID:000000004655806

### REMOVAL

1. Remove liquid tank. Refer to [ATC-117, "Removal and Installation of Liquid Tank"](#).
2. Using a vise, secure liquid tank, and then remove refrigerant pressure sensor.

#### CAUTION:

When working, be careful not to damage liquid tank.

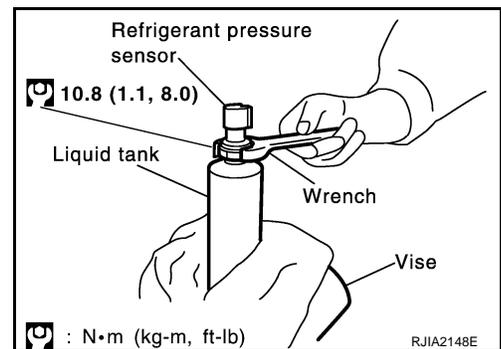

### INSTALLATION

Installation is basically the reverse order of removal.

#### CAUTION:

- Apply compressor oil to the O-ring of the refrigerant pressure sensor when installing it.
- When recharging refrigerant, check for leaks.

## Removal and Installation of Evaporator

INFOID:000000004655807


### REMOVAL

1. Remove low-pressure pipe 1 and high-pressure pipe 2. Refer to [ATC-116, "Removal and Installation of Low-Pressure Pipe 1 and High-pressure Pipe 2"](#).

#### CAUTION:

Cap or wrap the joint of evaporator, low-pressure pipe 1, 2 and high-pressure pipe 1, 2 with suitable material such as vinyl tape to avoid the entry of air.

2. Slide evaporator, and then remove it from heater & cooling unit assembly.
3. Remove intake sensor from evaporator, and then remove evaporator.

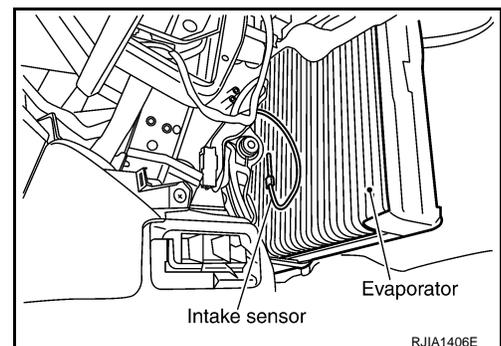

### INSTALLATION

Installation is basically the reverse order of removal.

#### CAUTION:

- Replace O-rings of low-pressure pipe 1, 2 and high-pressure pipe 1, 2 with new ones, and then apply compressor oil to it when installing it.

# REFRIGERANT LINES

## < SERVICE INFORMATION >

- Female-side piping connection is thin and easy to deform. Slowly insert the male-side piping straight in axial direction.
- Insert piping securely until a click is heard.
- After piping connection is completed, pull male-side piping by hand to make sure that connection does not come loose.
- O-rings are different from low-pressure pipe 1 (high-pressure pipe 1) and low-pressure pipe 2 (high-pressure pipe 2).
- Mark the mounting position of intake sensor bracket prior to removal so that the reinstalled sensor can be located in the same position.
- When recharging refrigerant, check for leaks.

### Low-pressure flexible hose bracket mounting bolt


 : 4.2 N·m (0.43 kg-m, 37 in-lb)

## Removal and Installation of Expansion Valve

INFOID:000000004655808

### REMOVAL

1. Remove low-pressure pipe 1 and high-pressure pipe 2. Refer to [ATC-116, "Removal and Installation of Low-Pressure Pipe 1 and High-pressure Pipe 2"](#).
2. Remove mounting bolts, and then remove expansion valve.  
**CAUTION:**  
Cap or wrap the joint of evaporator with suitable material such as vinyl tape to avoid the entry of air.

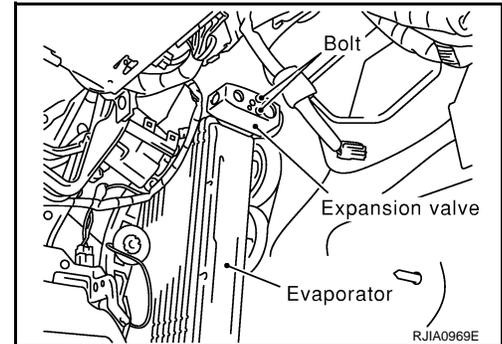

### INSTALLATION

Installation is basically the reverse order of removal.

#### **CAUTION:**

- Replace O-rings of evaporator, expansion valve, low-pressure pipe 1, 2 and high-pressure pipe 1, 2 with new ones, and then apply compressor oil to them when installing them.
- O-rings are different from low-pressure pipe 1 (high-pressure pipe 1) and low-pressure pipe 2 (high-pressure pipe 2).
- When recharging refrigerant, check for leaks.

## Checking of Refrigerant Leaks

INFOID:000000004655809

Perform a visual inspection of all refrigeration parts, fittings, hoses and components for signs of A/C lubricant leakage, damage and corrosion. A/C lubricant leakage may indicate an area of refrigerant leakage. Allow extra inspection time in these areas when using either an electrical leak detector or fluorescent dye leak detector (SST: J-42220).

If dye is observed, confirm the leak with an electrical leak detector. It is possible a prior leak was repaired and not properly cleaned.

When searching for leaks, do not stop when one leak is found but continue to check for additional leaks at all system components and connections.

When searching for refrigerant leaks using an electrical leak detector, move the probe along the suspected leak area at 1 to 2 inches per second and no further than 1/4 inch from the component.

#### **CAUTION:**

**Moving the electrical leak detector probe slower and closer to the suspected leak area will improve the chances of finding a leak.**

## Checking System for Leaks Using the Fluorescent Leak Detector

INFOID:000000004655810

1. Check A/C system for leaks using the UV lamp and safety goggles (SST: J-42220) in a low sunlight area (area without windows preferable). Illuminate all components, fittings and lines. The dye will appear as a

# REFRIGERANT LINES

## < SERVICE INFORMATION >

bright green/yellow area at the point of leakage. Fluorescent dye observed at the evaporator drain opening indicates an evaporator core assembly (tubes, core or expansion valve) leak.

2. If the suspected area is difficult to see, use an adjustable mirror or wipe the area with a clean shop rag or cloth, with the UV lamp for dye residue.
3. After the leak is repaired, remove any residual dye using dye cleaner (SST: J-43872) to prevent future misdiagnosis.
4. Perform a system performance check and verify the leak repair with an approved electrical leak detector.

### NOTE:

Other gases in the work area or substances on the A/C components, for example, anti-freeze, windshield washer fluid, solvents and lubricants, may falsely trigger the leak detector. Make sure the surfaces to be checked are clean.

Clean with a dry cloth or blow off with shop air.

Do not allow the sensor tip of the detector to contact with any substance. This can also cause false readings and may damage the detector.

## Dye Injection

INFOID:000000004655811

(This procedure is only necessary when recharging the system or when the compressor has seized and was replaced.)

1. Check A/C system static (at rest) pressure. Pressure must be at least 345 kPa (3.52 kg/cm<sup>2</sup>, 50 psi).
2. Pour one bottle (1/4 ounce / 7.4 cc) of the A/C refrigerant dye into the injector tool (SST: J-41459).
3. Connect the injector tool to the A/C low-pressure side service valve.
4. Start the engine and switch A/C ON.
5. When the A/C operating (compressor running), inject one bottle (1/4 ounce / 7.4 cc) of fluorescent dye through the low-pressure service valve using dye injector tool (SST: J-41459) (refer to the manufacturer's operating instructions).
6. With the engine still running, disconnect the injector tool from the service valve.

### CAUTION:

**Be careful the A/C system or replacing a component, pour the dye directly into the open system connection and proceed with the service procedures.**

7. Operate the A/C system for a minimum of 20 minutes to mix the dye with the system oil. Depending on the leak size, operating conditions and location of the leak, it may take from minutes to days for the dye to penetrate a leak and become visible.
8. Attach a blue label as necessary.


## Electrical Leak Detector

INFOID:000000004655812

### PRECAUTIONS FOR HANDLING LEAK DETECTOR

When performing a refrigerant leak check, use an A/C electrical leak detector (SST) or equivalent. Ensure that the instrument is calibrated and set properly per the operating instructions.


The leak detector is a delicate device. In order to use the leak detector properly, read the operating instructions and perform any specified maintenance.

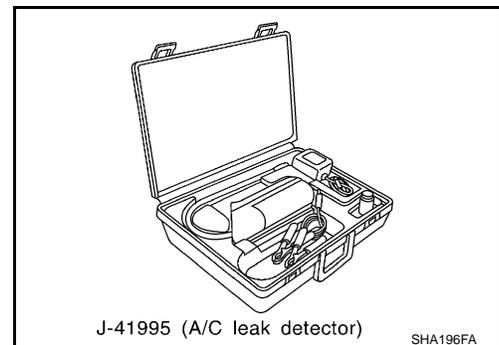


# REFRIGERANT LINES

## < SERVICE INFORMATION >


1. Position probe approximately 5 mm (3/16 in) away from point to be checked.

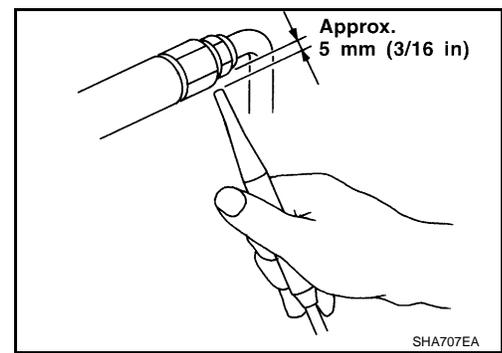

2. When testing, circle each fitting completely with probe.

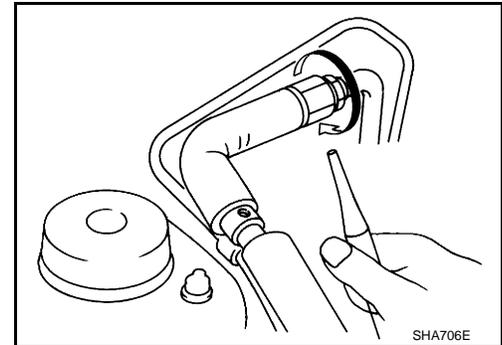

3. Move probe along component approximately 25 to 50 mm (1 to 2 in)/sec.

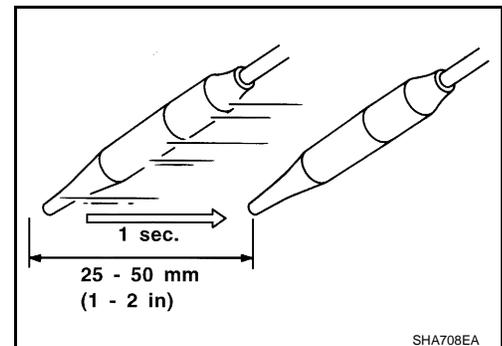

## CHECKING PROCEDURE

To prevent inaccurate or false readings, make sure there is no refrigerant vapor, shop chemicals, or cigarette smoke in the vicinity of the vehicle. Perform the leak test in calm area (low air/wind movement) so that the leaking refrigerant is not dispersed.

1. Stop the engine.
2. Connect a suitable A/C manifold gauge set (SST:J-39183) to the A/C service valves.
3. Check if the A/C refrigerant pressure is at least 345 kPa (3.52 kg/cm<sup>2</sup>, 50 psi) above 16°C (61°F). If less than specification, recover/evacuate and recharge the system with the specified amount of refrigerant.

### NOTE:

At temperatures below 16°C (61°F), leaks may not be detected since the system may not reach 345 kPa (3.52 kg/cm<sup>2</sup>, 50 psi).

4. Perform the leak test from the high-pressure side (compressor discharge a to evaporator inlet g) to the low-pressure side (evaporator drain hose h to shaft seal l). Refer to [ATC-111. "Component"](#). Perform a leak check for the following areas carefully. Clean the component to be checked and move the leak detected probe completely around the connection/component.

### Compressor

Check the fitting of high- and low-pressure flexible hoses, relief valve and shaft seal.

### Condenser

Check the fitting of high-pressure flexible hose and pipe.

### Liquid tank

Check the fitting of refrigerant connection.

### Service valves

# REFRIGERANT LINES

## < SERVICE INFORMATION >

Check all around the service valves. Ensure service valve caps are secured on the service valves (to prevent leaks).

### NOTE:

After removing A/C manifold gauge set from service valves, wipe any residue from valves to prevent any false readings by leak detector.


### Cooling unit (Evaporator)

With engine OFF, turn blower fan on "High" for at least 15 seconds to dissipate any refrigerant trace in the cooling unit. Wait a minimum of 10 minutes accumulation time (refer to the manufacturer's recommended procedure for actual wait time) before inserting the leak detector probe into the drain hose.

Keep the probe inserted for at least 10 seconds. Use caution not to contaminate the probe tip with water or dirt that may be in the drain hose.

5. If a leak detector detects a leak, verify at least once by blowing compressed air into area of suspected leak, then repeat check as outlined above.
6. Do not stop when one leak is found. Continue to check for additional leaks at all system components. If no leaks are found, perform steps 7 - 10.
7. Start the engine.
8. Set the A/C control as follows;
  - a. A/C switch: ON
  - b. Air flow: VENT (Ventilation)
  - c. Intake door position: Recirculation
  - d. Temperature setting: Max. cold
  - e. Fan speed: High
9. Run engine at 1,500 rpm for at least 2 minutes.
10. Stop the engine and perform leak check again following steps 4 through 6 above.

Refrigerant leaks should be checked immediately after stopping the engine. Begin with the leak detector at the compressor. The pressure on the high-pressure side will gradually drop after refrigerant circulation stops and pressure on the low-pressure side will gradually rise, as shown in the graph. Some leaks are more easily detected when pressure is high.

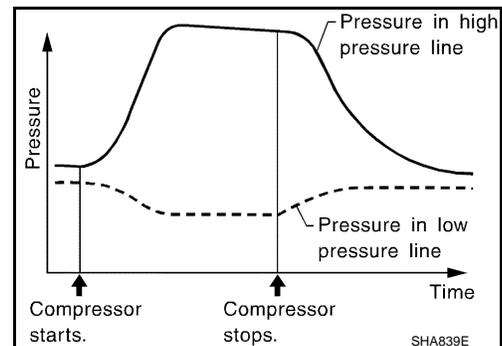

11. Before connecting recovery/recycling recharging equipment to vehicle, check recovery/recycling recharging equipment gauges. No refrigerant pressure should be displayed. If pressure is displayed, recover refrigerant from equipment lines and then check refrigerant purity.
12. Confirm refrigerant purity in supply tank using recovery/recycling recharging equipment and refrigerant identifier.
13. Confirm refrigerant purity in vehicle A/C system using recovery/recycling recharging equipment and refrigerant identifier.
14. Discharge A/C system using approved refrigerant recovery/recycling recharging equipment. Repair the leaking fitting or component if necessary.
15. Evacuate and recharge A/C system and perform the leak test to confirm no refrigerant leaks.
16. Perform A/C performance test to ensure system works properly.

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE INFORMATION >

## SERVICE DATA AND SPECIFICATIONS (SDS)

### Compressor

INFOID:000000004655813

Model	VALEO THERMAL SYSTEMS JAPAN make DCS-171C	
Type	Variable displacement swash plate	
Displacement cm <sup>3</sup> (cu in)/rev	Max.	171 (10.4)
Cylinder bore × stroke mm (in)	32 (1.26) × 30.5 (1.20)	
Direction of rotation	Clockwise (viewed from drive end)	
Drive belt	Poly V	

### Lubricant

INFOID:000000004655814

Model	VALEO THERMAL SYSTEMS JAPAN make DCS-171C	
Name	Nissan A/C System Oil Type S (DH-PS)	
Capacity m ℓ (US fl oz, Imp fl oz)	Total in system	150 (5.07, 5.3)
	Compressor (Service part) charging amount	150 (5.07, 5.3)

### Refrigerant

INFOID:000000004655815

Type	HFC-134a (R-134a)
Capacity kg (lb)	0.55 (1.21)

ATC

### Engine Idling Speed

INFOID:000000004655816

Refer to [EC-664, "Idle Speed and Ignition Timing"](#).

### Belt Tension

INFOID:000000004655817

Refer to [EM-13](#).