

# SECTION GI

## GENERAL INFORMATION

### CONTENTS

|                                                                                                  |           |                                                                                                                   |           |
|--------------------------------------------------------------------------------------------------|-----------|-------------------------------------------------------------------------------------------------------------------|-----------|
| <b>SERVICE INFORMATION .....</b>                                                                 | <b>2</b>  | <b>CONSULT-III/GST CHECKING SYSTEM .....</b>                                                                      | <b>33</b> |
| <b>PRECAUTIONS .....</b>                                                                         | <b>2</b>  | Description .....                                                                                                 | 33        |
| Description .....                                                                                | 2         | CONSULT-III Function and System Application*1...                                                                  | 33        |
| Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" ..... | 2         | CONSULT-III Data Link Connector (DLC) Circuit....                                                                 | 34        |
| Precaution for Battery Service .....                                                             | 2         | <b>LIFTING POINT .....</b>                                                                                        | <b>36</b> |
| Precaution for Procedure without Cowl Top Cover....                                              | 2         | Commercial Service Tool .....                                                                                     | 36        |
| General Precaution .....                                                                         | 3         | Garage Jack and Safety Stand .....                                                                                | 36        |
| Precaution for Three Way Catalyst .....                                                          | 4         | 2-Pole Lift .....                                                                                                 | 37        |
| Precaution for Fuel (Unleaded Premium Gasoline Required) .....                                   | 4         | Board-on Lift .....                                                                                               | 37        |
| Precaution for Multiport Fuel Injection System or Engine Control System .....                    | 5         | <b>TOW TRUCK TOWING .....</b>                                                                                     | <b>39</b> |
| Precaution for Hoses .....                                                                       | 5         | Tow Truck Towing .....                                                                                            | 39        |
| Precaution for Engine Oils .....                                                                 | 6         | Vehicle Recovery (Freeing a Stuck Vehicle) .....                                                                  | 39        |
| Precaution for Air Conditioning .....                                                            | 6         | <b>TIGHTENING TORQUE OF STANDARD BOLTS .....</b>                                                                  | <b>41</b> |
| Precaution for Propeller Shaft .....                                                             | 6         | Tightening Torque Table .....                                                                                     | 41        |
| <b>HOW TO USE THIS MANUAL .....</b>                                                              | <b>7</b>  | <b>RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS .....</b>                                                           | <b>42</b> |
| Description .....                                                                                | 7         | Recommended Chemical Product and Sealant .....                                                                    | 42        |
| Terms .....                                                                                      | 7         | <b>IDENTIFICATION INFORMATION .....</b>                                                                           | <b>43</b> |
| Units .....                                                                                      | 7         | Model Variation .....                                                                                             | 43        |
| Contents .....                                                                                   | 7         | Dimensions .....                                                                                                  | 45        |
| Relation between Illustrations and Descriptions .....                                            | 8         | Wheels & Tires .....                                                                                              | 45        |
| Component .....                                                                                  | 8         | <b>TERMINOLOGY .....</b>                                                                                          | <b>47</b> |
| How to Follow Trouble Diagnosis .....                                                            | 9         | SAE J1930 Terminology List .....                                                                                  | 47        |
| How to Read Wiring Diagram .....                                                                 | 13        | <b>INSPECTION AND ADJUSTMENT .....</b>                                                                            | <b>51</b> |
| Abbreviations .....                                                                              | 19        | <b>ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL .....</b>                                           | <b>51</b> |
| <b>SERVICE INFORMATION FOR ELECTRICAL INCIDENT .....</b>                                         | <b>21</b> | ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Required Procedure After Battery Disconnection ..... | 51        |
| How to Check Terminal .....                                                                      | 21        |                                                                                                                   |           |
| How to Perform Efficient Diagnosis for an Electrical Incident .....                              | 24        |                                                                                                                   |           |
| Control Units and Electrical Parts .....                                                         | 31        |                                                                                                                   |           |

# PRECAUTIONS

< SERVICE INFORMATION >

## SERVICE INFORMATION

### PRECAUTIONS

#### Description

INFOID:000000001645360

Observe the following precautions to ensure safe and proper servicing. These precautions are not described in each individual section.

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003093580

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SUPPLEMENTAL RESTRAINT SYSTEM" and "SEAT BELTS" of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SUPPLEMENTAL RESTRAINT SYSTEM".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution for Battery Service


INFOID:000000003093589

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

#### Precaution for Procedure without Cowl Top Cover

INFOID:000000003093590

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

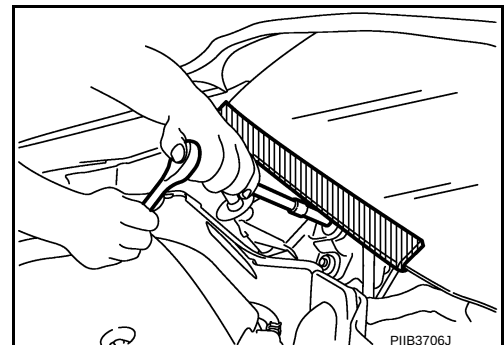


# PRECAUTIONS

## < SERVICE INFORMATION >


### General Precaution

INFOID:000000001645364


- Do not operate the engine for an extended period of time without proper exhaust ventilation.  
Keep the work area well ventilated and free of any flammable materials. Special care should be taken when handling any flammable or poisonous materials, such as gasoline, refrigerant gas, etc. When working in a pit or other enclosed area, be sure to properly ventilate the area before working with hazardous materials. Do not smoke while working on the vehicle.

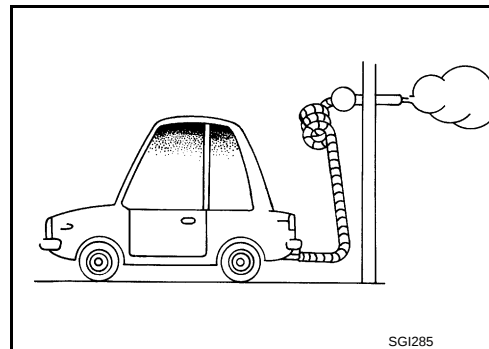


- Before jacking up the vehicle, apply wheel chocks or other tire blocks to the wheels to prevent the vehicle from moving. After jacking up the vehicle, support the vehicle weight with safety stands at the points designated for proper lifting before working on the vehicle.  
These operations should be done on a level surface.
- When removing a heavy component such as the engine or transaxle/transmission, be careful not to lose your balance and drop them. Also, do not allow them to strike adjacent parts, especially the brake tubes and master cylinder.

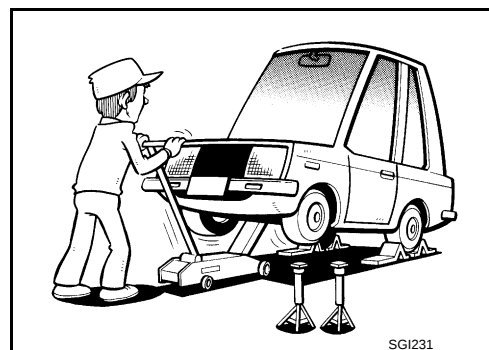

- Before starting repairs which do not require battery power:  
Turn off ignition switch.  
Disconnect the negative battery terminal.
- If the battery terminals are disconnected, recorded memory of radio and each control unit is erased.
- Battery posts, terminals and related accessories contain lead and lead compounds. Wash hands after handling.

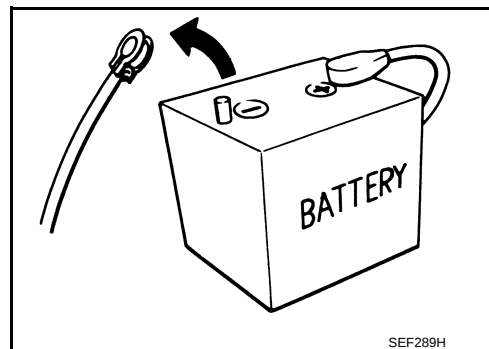


- To prevent serious burns:  
Avoid contact with hot metal parts.  
Do not remove the radiator cap when the engine is hot.
- Dispose of or recycle drained oil or the solvent used for cleaning parts in an appropriate manner.
- Do not attempt to top off the fuel tank after the fuel pump nozzle shuts off automatically.  
Continued refueling may cause fuel overflow, resulting in fuel spray and possibly a fire.
- Clean all disassembled parts in the designated liquid or solvent prior to inspection or assembly.
- Replace oil seals, gaskets, packings, O-rings, locking washers, cotter pins, self-locking nuts, etc. with new ones.
- Replace inner and outer races of tapered roller bearings and needle bearings as a set.
- Arrange the disassembled parts in accordance with their assembled locations and sequence.
- Do not touch the terminals of electrical components which use microcomputers (such as ECM).  
Static electricity may damage internal electronic components.
- After disconnecting vacuum or air hoses, attach a tag to indicate the proper connection.
- Use only the fluids and lubricants specified in this manual.
- Use approved bonding agent, sealants or their equivalents when required.

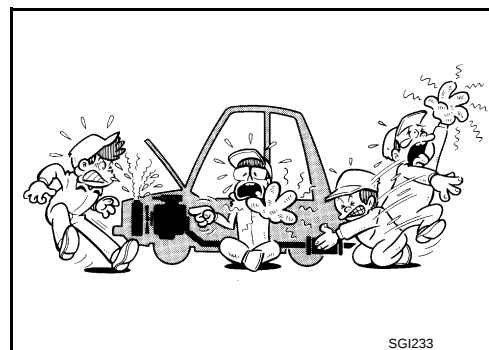


## PRECAUTIONS

### < SERVICE INFORMATION >

- Use hand tools, power tools (disassembly only) and recommended special tools where specified for safe and efficient service repairs.
- When repairing the fuel, oil, water, vacuum or exhaust systems, check all affected lines for leaks.

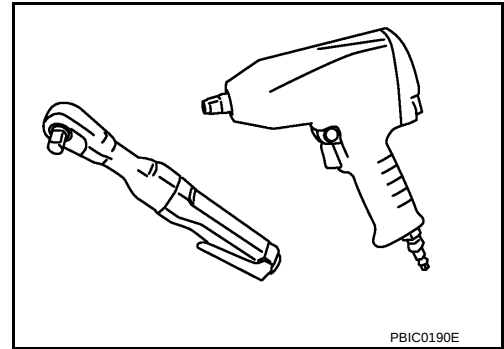

- Before servicing the vehicle:  
Protect fenders, upholstery and carpeting with appropriate covers.  
Take caution that keys, buckles or buttons do not scratch paint.

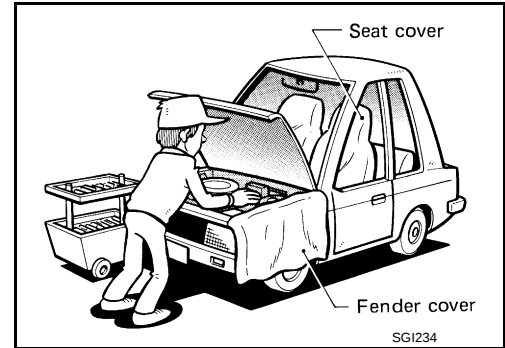

### **WARNING:**

To prevent ECM from storing the diagnostic trouble codes, do not carelessly disconnect the harness connectors which are related to the engine control system and TCM (transmission control module) system. The connectors should be disconnected only when working according to the **WORK FLOW** of **TROUBLE DIAGNOSES** in EC and AT sections.

### Precaution for Three Way Catalyst

INFOID:000000001645365

If a large amount of unburned fuel flows into the catalyst, the catalyst temperature will be excessively high. To prevent this, follow the instructions.

- Use unleaded gasoline only. Leaded gasoline will seriously damage the three way catalyst.
- When checking for ignition spark or measuring engine compression, make tests quickly and only when necessary.
- Do not run engine when the fuel tank level is low, otherwise the engine may misfire, causing damage to the catalyst.

Do not place the vehicle on flammable material. Keep flammable material off the exhaust pipe and the three way catalyst.

### Precaution for Fuel (Unleaded Premium Gasoline Required)

INFOID:000000001645366

Use unleaded premium gasoline with an octane rating of at least 91 AKI (Anti-Knock Index) number (Research octane number 96).

If unleaded premium gasoline is not available, unleaded regular gasoline with an octane rating of at least 87 AKI number (Research octane number 91) can be used, but only under the following precautions:

- have the fuel tank filled only partially with unleaded regular gasoline, and fill up with unleaded premium gasoline as soon as possible.
- avoid full throttle driving and abrupt acceleration.

**However, for maximum vehicle performance, the use of unleaded premium gasoline is recommended.**

### **CAUTION:**

**Do not use leaded gasoline. Using leaded gasoline will damage the three way catalyst. Do not use E-85 fuel (85% fuel ethanol, 15% unleaded gasoline) unless the vehicle is specifically designed for E-85 fuel (i.e. Flexible Fuel Vehicle - FFV models). Using a fuel other than that specified could adversely affect the emission control devices and systems, and could also affect the warranty coverage validity.**

# PRECAUTIONS

## < SERVICE INFORMATION >

### Precaution for Multiport Fuel Injection System or Engine Control System

INFOID:000000001645367

- Before connecting or disconnecting any harness connector for the multiport fuel injection system or ECM:  
Turn ignition switch to "OFF" position.  
Disconnect negative battery terminal.  
Otherwise, there may be damage to ECM.
- Before disconnecting pressurized fuel line from fuel pump to injectors, be sure to release fuel pressure.
- Be careful not to jar components such as ECM and mass air flow sensor.




### Precaution for Hoses


INFOID:000000001645368

#### HOSE REMOVAL AND INSTALLATION

- To prevent damage to rubber hose, do not pry off rubber hose with tapered tool or screwdriver.

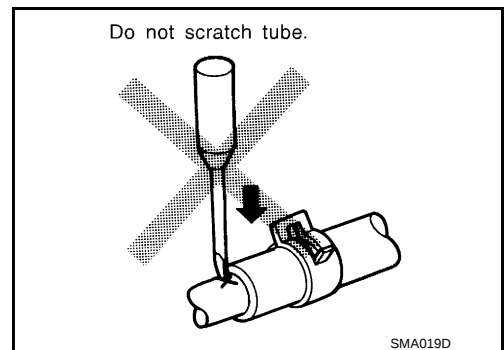


- To reinstall the rubber hose securely, make sure that hose insertion length and orientation is correct. (If tube is equipped with hose stopper, insert rubber hose into tube until it butts up against hose stopper.)

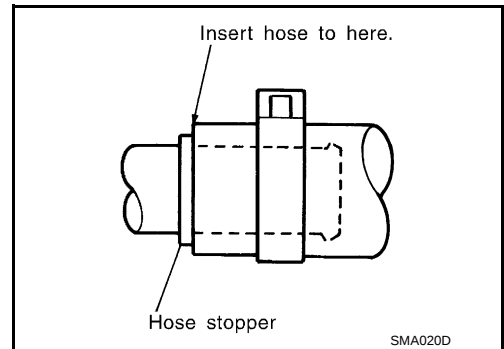

#### HOSE CLAMPING


- If old rubber hose is re-used, install hose clamp in its original position (at the indentation where the old clamp was). If there is a trace of tube bulging left on the old rubber hose, align rubber hose at that position.
- Discard old clamps; replace with new ones.

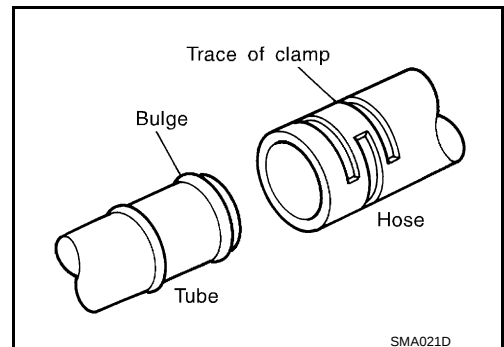

## PRECAUTIONS

### < SERVICE INFORMATION >

- After installing plate clamps, apply force to them in the direction of the arrow, tightening rubber hose equally all around.

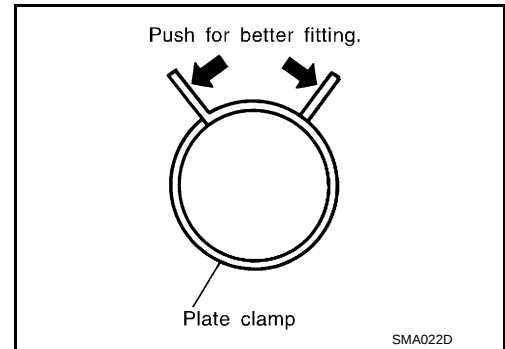

### Precaution for Engine Oils

INFOID:000000001645369

Prolonged and repeated contact with used engine oil may cause skin cancer. Try to avoid direct skin contact with used oil.

If skin contact is made, wash thoroughly with soap or hand cleaner as soon as possible.

#### HEALTH PROTECTION PRECAUTIONS

- Avoid prolonged and repeated contact with oils, particularly used engine oils.
- Wear protective clothing, including impervious gloves where practicable.
- Do not put oily rags in pockets.
- Avoid contaminating clothes, particularly underpants, with oil.
- Heavily soiled clothing and oil-impregnated footwear should not be worn. Overalls must be cleaned regularly.
- First aid treatment should be obtained immediately for open cuts and wounds.
- Use barrier creams, applying them before each work period, to help the removal of oil from the skin.
- Wash with soap and water to ensure all oil is removed (skin cleansers and nail brushes will help). Preparations containing lanolin replace the natural skin oils which have been removed.
- Do not use gasoline, kerosene, diesel fuel, gas oil, thinners or solvents for cleaning skin.
- If skin disorders develop, obtain medical advice without delay.
- Where practical, degrease components prior to handling.
- Where there is a risk of eye contact, eye protection should be worn, for example, chemical goggles or face shields; in addition an eye wash facility should be provided.

#### ENVIRONMENTAL PROTECTION PRECAUTIONS

Dispose of used oil and used oil filters through authorized waste disposal contractors to licensed waste disposal sites, or to the waste oil reclamation trade. If in doubt, contact the local authority for advice on disposal facilities.

It is illegal to pour used oil on to the ground, down sewers or drains, or into water sources.

The regulations concerning pollution vary between regions.

### Precaution for Air Conditioning


INFOID:000000001645370

Use an approved refrigerant recovery unit any time the air conditioning system must be discharged. Refer to ATC/MTC section "HFC-134a (R-134a) Service Procedure", "REFRIGERANT LINES" for specific instructions.

### Precaution for Propeller Shaft

INFOID:000000001645371

- If propeller shaft is dropped, replace propeller shaft with new one.
- Do not hit, impact, or damage tube.
- If damage such as cracks or peeling off in sealing (joint between yoke and tube) is found, replace propeller shaft with new one.
- If there is chipping or looseness in tube, replace propeller shaft with new one.
- Check that the clearance is between tube and yoke flange. If there is no clearance at each position, replace propeller shaft.
- Protect propeller shaft with protector (special service tool) during work.

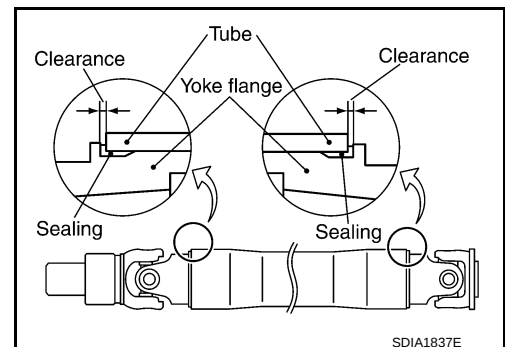

# HOW TO USE THIS MANUAL

< SERVICE INFORMATION >

## HOW TO USE THIS MANUAL

GI

### Description

INFOID:000000001645372

This volume explains “Removal, Disassembly, Installation, Inspection and Adjustment” and “Trouble Diagnoses”.

### Terms

INFOID:000000001645373

- The captions **WARNING** and **CAUTION** warn you of steps that must be followed to prevent personal injury and/or damage to some part of the vehicle.  
**WARNING** indicates the possibility of personal injury if instructions are not followed.  
**CAUTION** indicates the possibility of component damage if instructions are not followed.  
**BOLD TYPED STATEMENTS** except **WARNING** and **CAUTION** give you helpful information.  
Standard value:Tolerance at inspection and adjustment.  
Limit value:The maximum or minimum limit value that should not be exceeded at inspection and adjustment.

### Units

INFOID:000000001645374

- The **UNITS** given in this manual are primarily expressed as the SI UNIT (International System of Unit), and alternatively expressed in the metric system and in the yard/pound system.  
Also with regard to tightening torque of bolts and nuts, there are descriptions both about range and about the standard tightening torque.

#### “Example”

##### Range

**Outer Socket Lock Nut : 59 - 78 N·m (6.0 - 8.0 kg-m, 43 - 58 ft-lb)**

##### Standard

**Drive Shaft Installation Bolt : 44.3 N·m (4.5 kg-m, 33 ft-lb)**

### Contents

INFOID:000000001645375

- **ALPHABETICAL INDEX** is provided at the end of this manual so that you can rapidly find the item and page you are searching for.
- **A QUICK REFERENCE INDEX**, a black tab (e.g. **BR**) is provided on the first page. You can quickly find the first page of each section by matching it to the section's black tab.
- **THE CONTENTS** are listed on the first page of each section.
- **THE TITLE** is indicated on the upper portion of each page and shows the part or system.
- **THE PAGE NUMBER** of each section consists of two or three letters which designate the particular section and a number (e.g. “BR-5”).
- **THE SMALL ILLUSTRATIONS** show the important steps such as inspection, use of special tools, knacks of work and hidden or tricky steps which are not shown in the previous large illustrations.  
Assembly, inspection and adjustment procedures for the complicated units such as the automatic transaxle or transmission, etc. are presented in a step-by-step format where necessary.


# HOW TO USE THIS MANUAL

## < SERVICE INFORMATION >

### Relation between Illustrations and Descriptions

INFOID:000000001645376

The following sample explains the relationship between the part description in an illustration, the part name in the text and the service procedures.

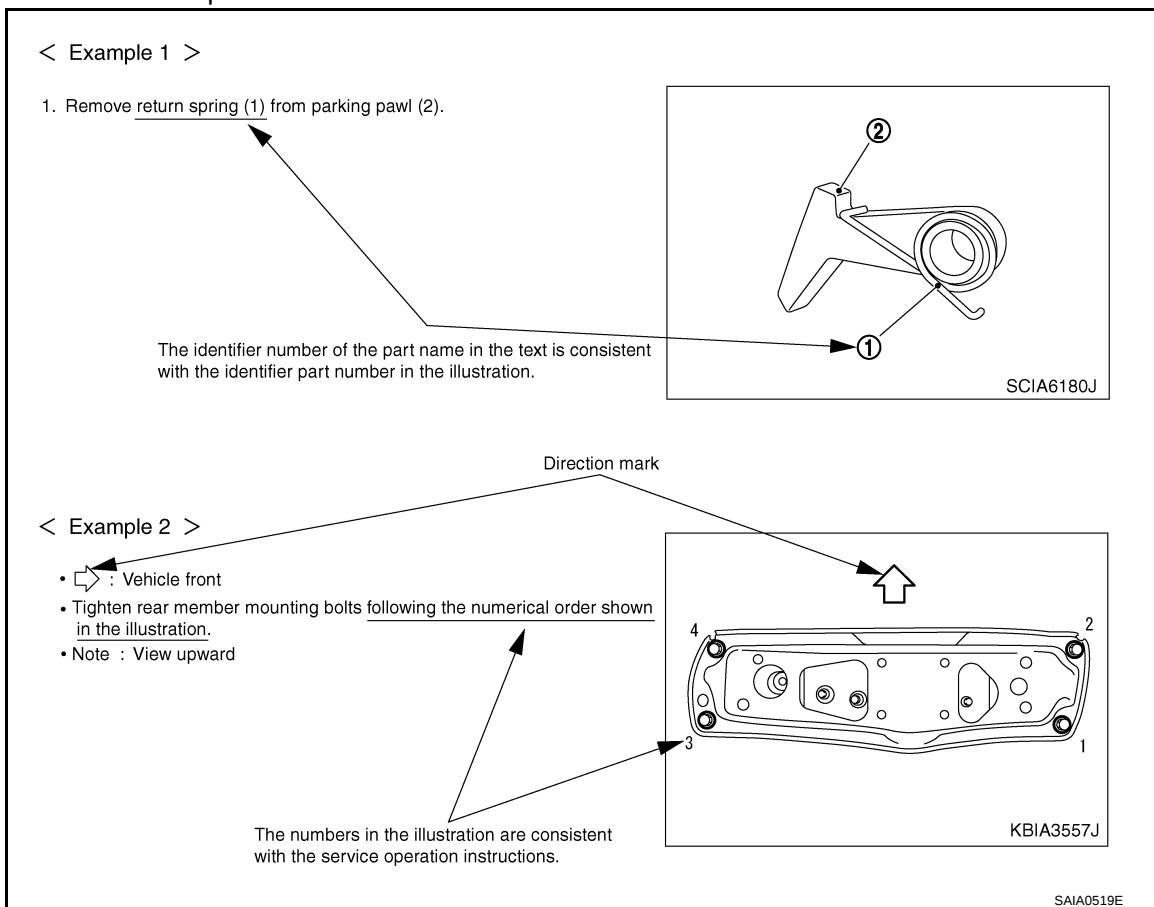

## Component

INFOID:000000001645377


- **THE LARGE ILLUSTRATIONS** are exploded views (see the following) and contain tightening torques, lubrication points, section number of the **PARTS CATALOG** (e.g. SEC. 440) and other information necessary to perform repairs.

The illustrations should be used in reference to service matters only. When ordering parts, refer to the appropriate **PARTS CATALOG**.

Components shown in an illustration may be identified by a circled number. When this style of illustration is used, the text description of the components will follow the illustration.

# HOW TO USE THIS MANUAL

< SERVICE INFORMATION >

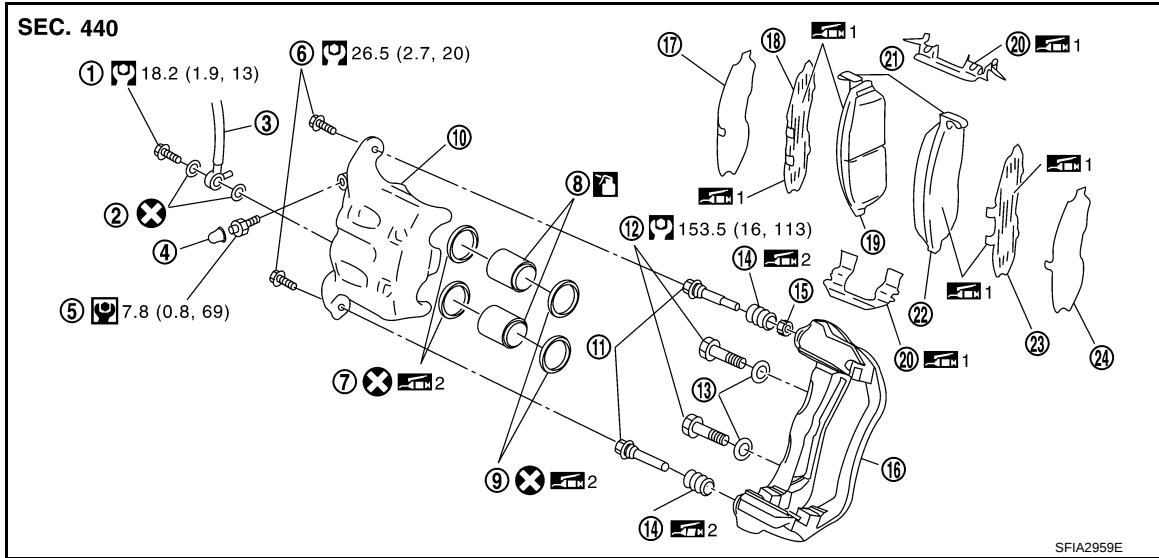

- |                   |                      |                                 |
|-------------------|----------------------|---------------------------------|
| 1. Union bolt     | 2. Copper washer     | 3. Brake hose                   |
| 4. Cap            | 5. Bleed valve       | 6. Sliding pin bolt             |
| 7. Piston seal    | 8. Piston            | 9. Piston boot                  |
| 10. Cylinder body | 11. Sliding pin      | 12. Torque member mounting bolt |
| 13. Washer        | 14. Sliding pin boot | 15. Bushing                     |
| 16. Torque member | 17. Inner shim cover | 18. Inner shim                  |
| 19. Inner pad     | 20. Pad retainer     | 21. Pad wear sensor             |
| 22. Outer pad     | 23. Outer shim       | 24. Outer shim cover            |
- 1: PBC (Poly Butyl Cuprysil) grease or silicone-based grease    
 2: Rubber grease  
 : Brake fluid

Refer to GI section for additional symbol definitions.

## SYMBOLS

| SYMBOL | DESCRIPTION                                                                                                                                     | SYMBOL | DESCRIPTION                             |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------|--------|-----------------------------------------|
|        | Tightening torque<br>The tightening torque specifications of bolts and nuts may be presented as either a range or a standard tightening torque. |        | Always replace after every disassembly. |
|        | : N•m (kg-m, ft-lb)<br>: N•m (kg-m, in-lb)                                                                                                      |        | Apply petroleum jelly.                  |
|        | Should be lubricated with grease. Unless otherwise indicated, use recommended multi-purpose grease.                                             |        | Apply molybdenum added petroleum jelly. |
|        | Should be lubricated with oil.                                                                                                                  |        | Apply ATF.                              |
|        | Sealing point                                                                                                                                   |        | Select with proper thickness.           |
|        | Sealing point with locking sealant.                                                                                                             |        | Adjustment is required.                 |
|        | Checking point                                                                                                                                  |        |                                         |

## How to Follow Trouble Diagnosis

INFOID:000000001645378

### DESCRIPTION

#### NOTICE:

Trouble diagnoses indicate work procedures required to diagnose problems effectively. Observe the following instructions before diagnosing.


- Before performing trouble diagnoses, read the “Preliminary Check”, the “Symptom Chart” or the “Work Flow”.
- After repairs, re-check that the problem has been completely eliminated.

# HOW TO USE THIS MANUAL

## < SERVICE INFORMATION >

3. Refer to Component Parts and Harness Connector Location for the Systems described in each section for identification/location of components and harness connectors.
4. Refer to the Circuit Diagram for quick pinpoint check.  
If you need to check circuit continuity between harness connectors in more detail, such as when a sub-harness is used, refer to Wiring Diagram in each individual section and Harness Layout in PG section for identification of harness connectors.
5. When checking circuit continuity, ignition switch should be OFF.
6. Before checking voltage at connectors, check battery voltage.
7. After accomplishing the Diagnostic Procedures and Electrical Components Inspection, make sure that all harness connectors are reconnected as they were.

## HOW TO FOLLOW TEST GROUPS IN TROUBLE DIAGNOSES

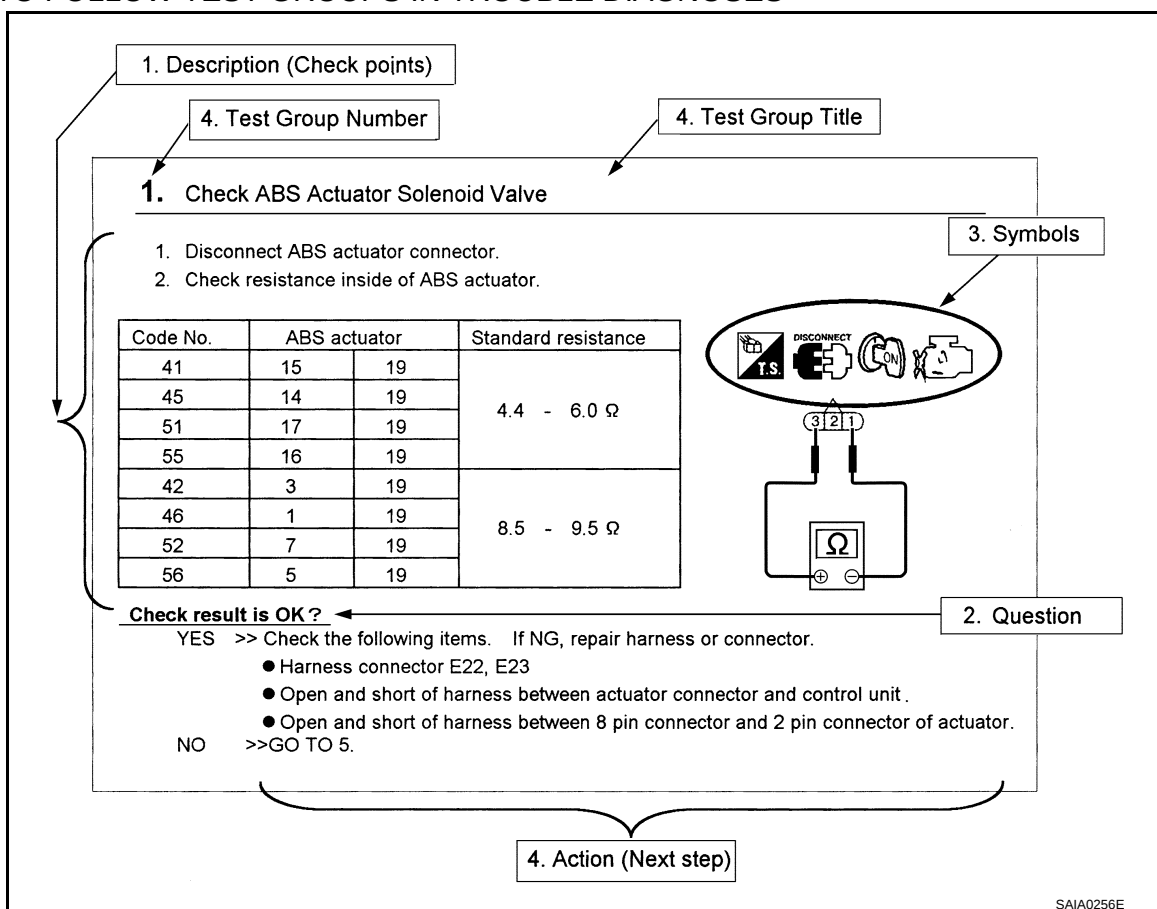

1. **Work and diagnostic procedure**  
Start to diagnose a problem using procedures indicated in enclosed test groups.
2. **Questions and required results**  
Questions and required results are indicated in bold type in test group.  
The meaning of are as follows:

a. **Battery voltage** → 11 - 14V or approximately 12V

b. **Voltage** : Approximately 0V → Less than 1V

3. **Symbol used in illustration**  
Symbols included in illustrations refer to measurements or procedures. Before diagnosing a problem, familiarize yourself with each symbol. Refer to "Connector Symbols" in GI Section and "KEY TO SYMBOLS SIGNIFYING MEASUREMENTS OR PROCEDURES" below.
4. **Action items**  
Next action for each test group is indicated based on result of each question. Test group number is shown in the left upper portion of each test group.

## HARNESS WIRE COLOR AND CONNECTOR NUMBER INDICATION


There are two types of harness wire color and connector number indication.

TYPE 1: Harness Wire Color and Connector Number are Shown in Illustration

# HOW TO USE THIS MANUAL

## < SERVICE INFORMATION >

- Letter designations next to test meter probe indicate harness wire color.
- Connector numbers in a single circle (e.g. M33) indicate harness connectors.
- Connector numbers in a double circle (e.g. F211) indicate component connectors.

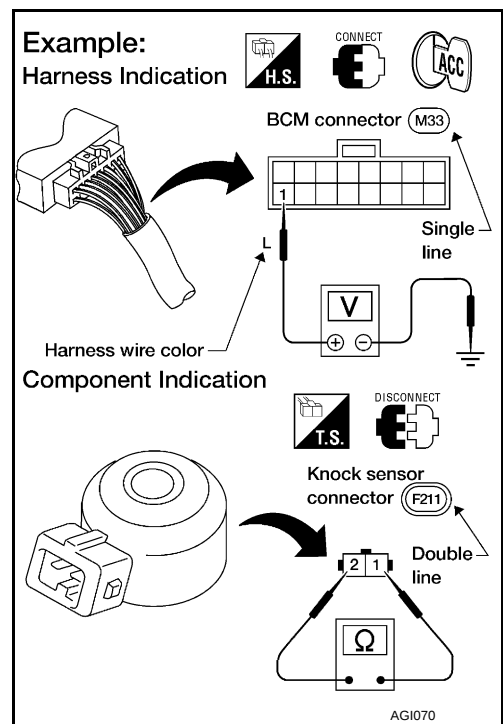


## TYPE 2: Harness Wire Color and Connector Number are Shown in Text


### Example 1:

#### 2 CHECK INTAKE SENSOR CIRCUIT BETWEEN INTAKE SENSOR AND AUTO AMP. (LCU)

1. Disconnect auto amp. (LCU) harness connector.
2. Check circuit continuity between intake sensor harness connector M59 terminal No. 2 (GW) and auto amp. (LCU) harness connector M56 terminal No. 11 (GW).

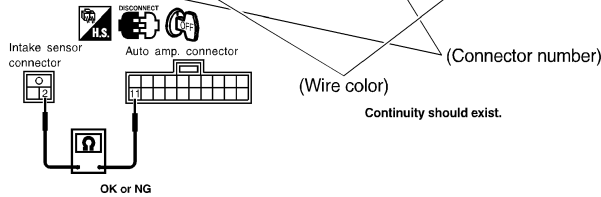

### Example 2:

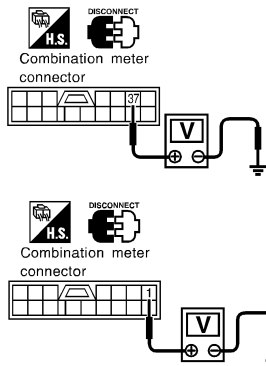

#### POWER SUPPLY AND GROUND CIRCUIT CHECK Power Supply Circuit Check

—NISC000-18807  
—NISC000-18807/01

| Terminals |                       | Ignition switch position |                 |                 |
|-----------|-----------------------|--------------------------|-----------------|-----------------|
| (+)       | (-)                   | OFF                      | ACC             | ON              |
| Connector | Terminal (Wire color) |                          |                 |                 |
| M40       | 37 (Y)                | Ground                   | Battery voltage | Battery voltage |
| M41       | 1 (Y)                 | Ground                   | 0V              | Battery voltage |

- If NG, check the following.
- 7.5A fuse (No. 5, located in fuse block (J/B))
  - 10A fuse (No. 11, located in fuse block (J/B))
  - Harness for open or short between fuse and combination meter


Connector number Wire color

SGI144A

# HOW TO USE THIS MANUAL

< SERVICE INFORMATION >

## KEY TO SYMBOLS SIGNIFYING MEASUREMENTS OR PROCEDURES

| SYMBOL                                                                            | DESCRIPTION                                             | SYMBOL                                                                            | DESCRIPTION                                                              |
|-----------------------------------------------------------------------------------|---------------------------------------------------------|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------|
|  | Check after disconnecting the connector to be measured. |  | Procedure with Generic Scan Tool.<br>(GST, OBD-II scan tool)             |
|  | Check after connecting the connector to be measured.    |  | Procedure without CONSULT-II, CONSULT-III<br>or GST                      |
|  | Insert key into ignition switch.                        |  | A/C switch is "OFF".                                                     |
|  | Remove key from ignition switch.                        |  | A/C switch is "ON".                                                      |
|  | Insert and remove key repeatedly.                       |  | REC switch is "ON".                                                      |
|  | Turn ignition switch to "OFF" position.                 |  | REC switch is "OFF".                                                     |
|  | Turn ignition switch to "ACC" position.                 |  | Fan switch is "ON".<br>(At any position except for "OFF" position)       |
|  | Turn ignition switch to "ON" position.                  |  | Fan switch is "OFF".                                                     |
|  | Turn ignition switch to "START" position.               |  | Apply fuse.                                                              |
|  | Turn ignition switch from "OFF" to "ACC" position.      |  | Apply positive voltage from battery with fuse<br>directly to components. |
|  | Turn ignition switch from "ACC" to "ON" position.       |                                                                                   |                                                                          |
|  | Turn ignition switch from "ACC" to "OFF" position.      |                                                                                   |                                                                          |

SAIA1539E

# HOW TO USE THIS MANUAL

## < SERVICE INFORMATION >

| SYMBOL | DESCRIPTION                                             | SYMBOL                                                                                                                                                                                                        | DESCRIPTION                        |
|--------|---------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------|
|        | Turn ignition switch from "OFF" to "ON" position.       |                                                                                                                                                                                                               | Drive vehicle.                     |
|        | Turn ignition switch from "ON" to "OFF" position.       |                                                                                                                                                                                                               |                                    |
|        | Do not start engine, or check with engine stopped.      |                                                                                                                                                                                                               | Disconnect battery negative cable. |
|        | Start engine, or check with engine running.             |                                                                                                                                                                                                               | Depress brake pedal.               |
|        | Apply parking brake.                                    |                                                                                                                                                                                                               | Release brake pedal.               |
|        | Release parking brake.                                  |                                                                                                                                                                                                               | Depress accelerator pedal.         |
|        | Release accelerator pedal.                              |                                                                                                                                                                                                               | Release accelerator pedal.         |
|        | Voltage should be measured with a voltmeter.            | <p>Pin terminal check for SMJ type ECM or TCM connectors.<br/> <b>For details regarding the terminal arrangement, refer to the "ELECTRICAL UNITS" electrical reference page at the end of the manual.</b></p> |                                    |
|        | Circuit resistance should be measured with an ohmmeter. |                                                                                                                                                                                                               |                                    |
|        | Current should be measured with an ammeter.             |                                                                                                                                                                                                               |                                    |
|        | Pulse signal should be checked with an oscilloscope.    |                                                                                                                                                                                                               |                                    |
|        | Procedure with CONSULT-III                              |                                                                                                                                                                                                               |                                    |
|        | Procedure without CONSULT-III                           |                                                                                                                                                                                                               |                                    |
|        | Place selector lever in "P" position.                   |                                                                                                                                                                                                               |                                    |
|        | Place selector lever in "N" position.                   |                                                                                                                                                                                                               |                                    |
|        | Jack up front portion.                                  |                                                                                                                                                                                                               |                                    |
|        | Jack up rear portion.                                   |                                                                                                                                                                                                               |                                    |
|        | Inspect under engine room.                              |                                                                                                                                                                                                               |                                    |
|        | Inspect under floor.                                    |                                                                                                                                                                                                               |                                    |
|        | Inspect rear under floor.                               |                                                                                                                                                                                                               |                                    |

SAIA1540E

## How to Read Wiring Diagram

INFOID:000000001645379


### CONNECTOR SYMBOLS

Most of connector symbols in wiring diagrams are shown from the terminal side.


## HOW TO USE THIS MANUAL

### < SERVICE INFORMATION >

- Connector symbols shown from the terminal side are enclosed by a single line and followed by the direction mark.
- Connector symbols shown from the harness side are enclosed by a double line and followed by the direction mark.
- Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector. For description and how to disconnect, refer to PG section, "Description", "HARNESS CONNECTOR".

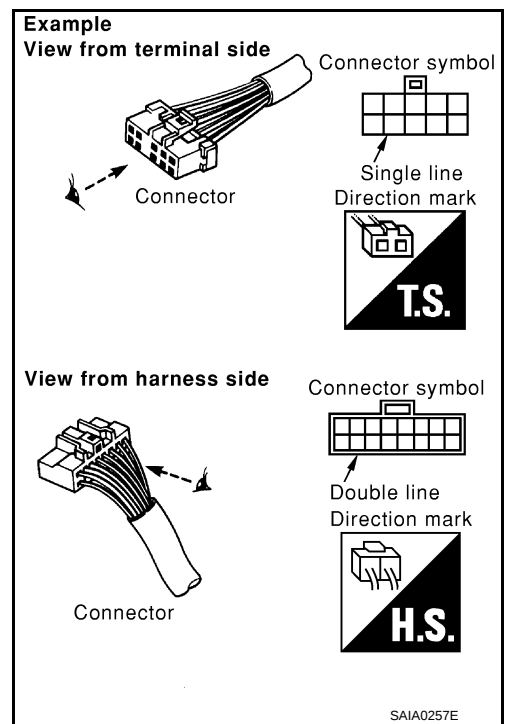

- Male and female terminals  
Connector guides for male terminals are shown in black and female terminals in white in wiring diagrams.

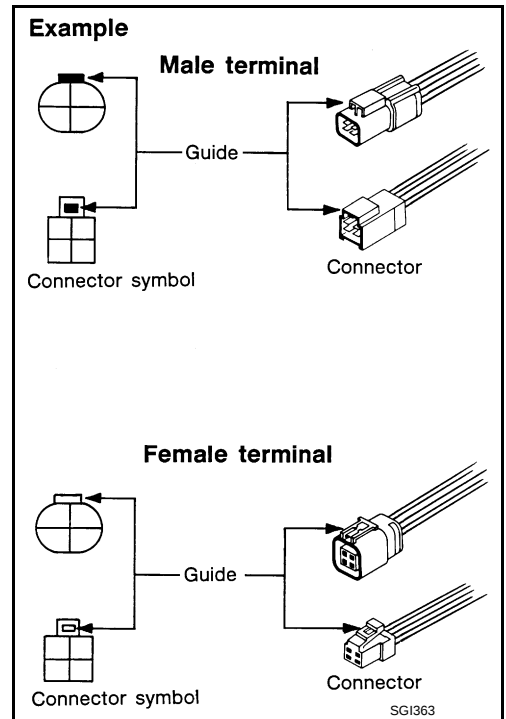


SAMPLE/WIRING DIAGRAM - EXAMPLE -

# HOW TO USE THIS MANUAL

## < SERVICE INFORMATION >


- For detail, refer to following "DESCRIPTION".

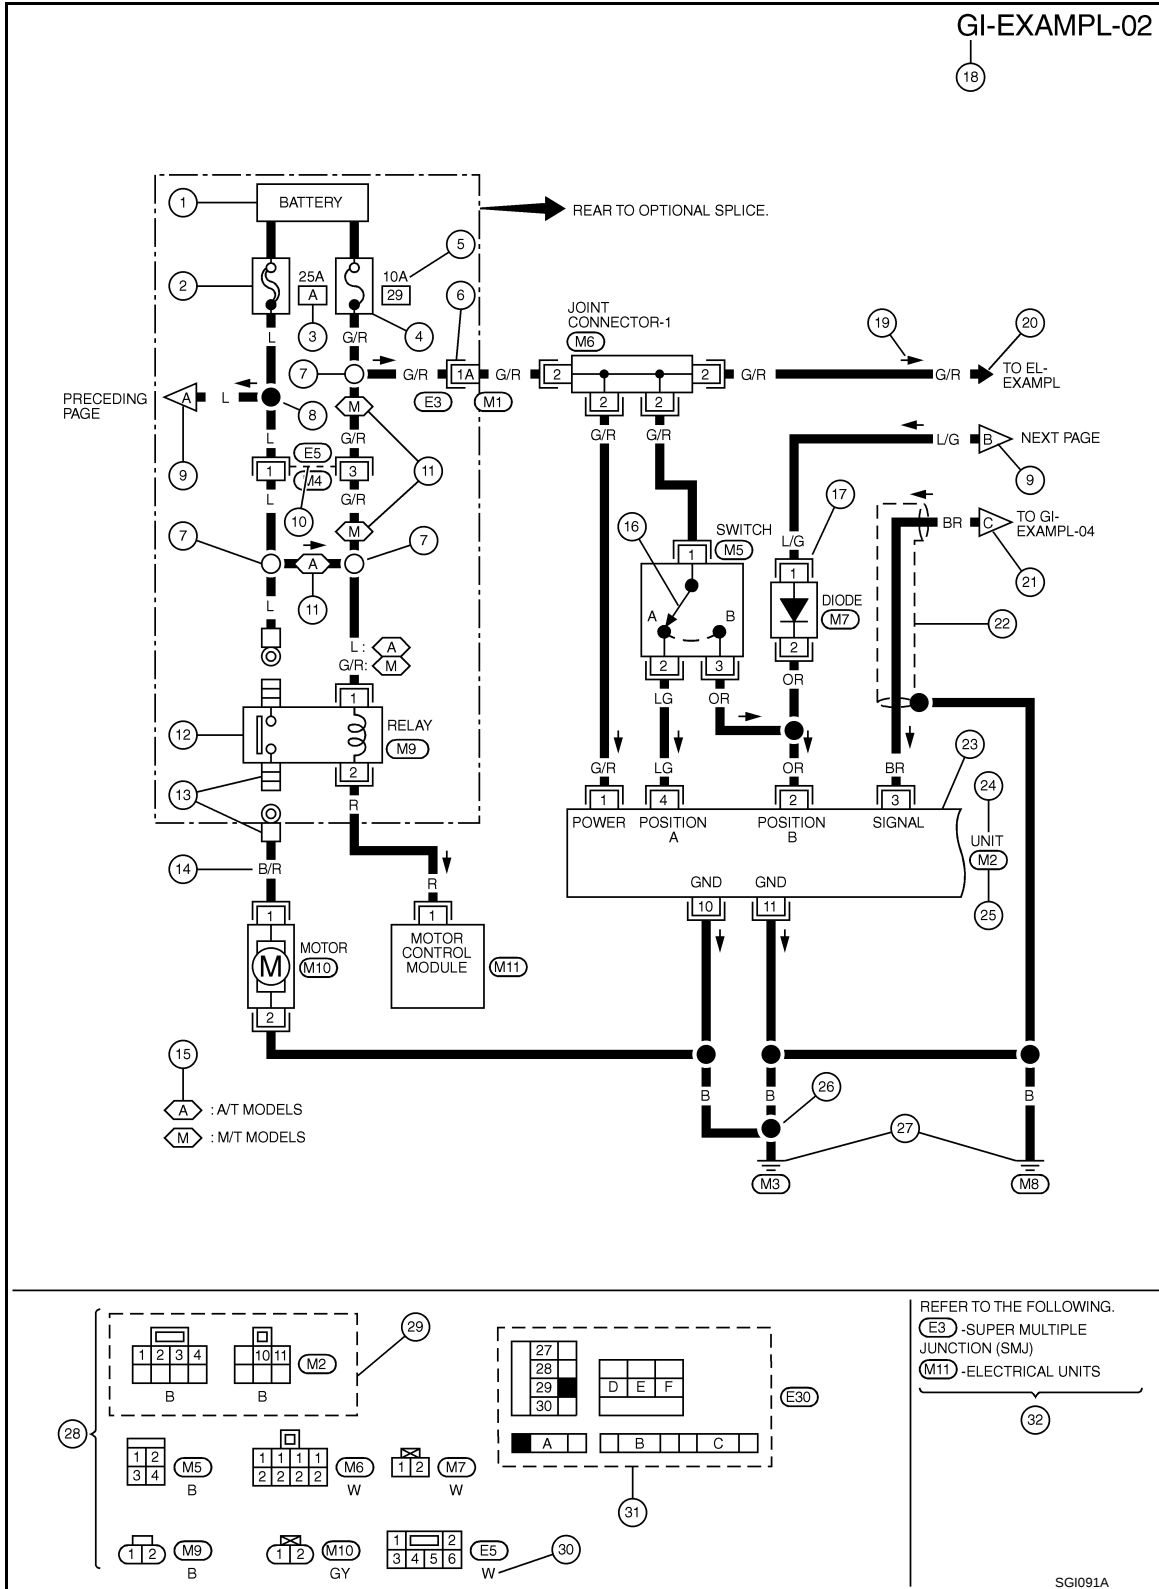

# HOW TO USE THIS MANUAL

## < SERVICE INFORMATION >

### Optional Splice

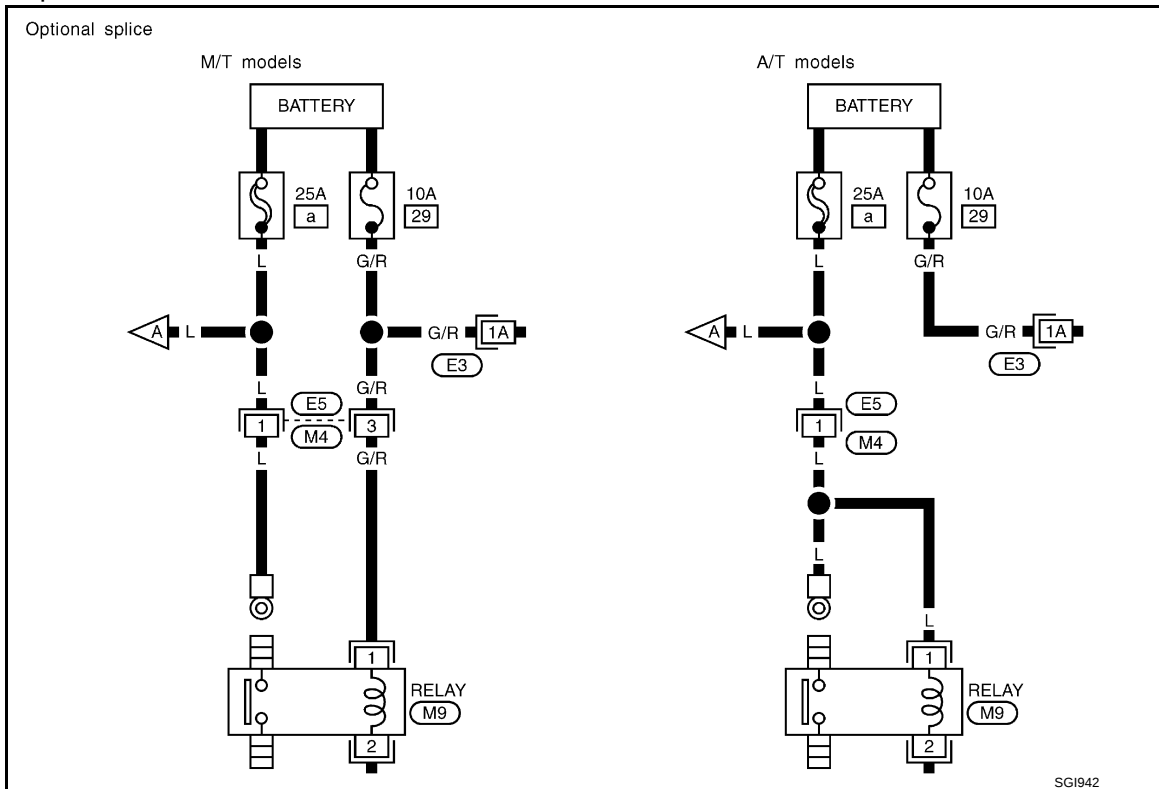

### DESCRIPTION

| Num-ber | Item                        | Description                                                                                                                                                                                                                                                                                                                                            |
|---------|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Power condition             | <ul style="list-style-type: none"> <li>This shows the condition when the system receives battery positive voltage (can be operated).</li> </ul>                                                                                                                                                                                                        |
| 2       | Fusible link                | <ul style="list-style-type: none"> <li>The double line shows that this is a fusible link.</li> <li>The open circle shows current flow in, and the shaded circle shows current flow out.</li> </ul>                                                                                                                                                     |
| 3       | Fusible link/fuse loca-tion | <ul style="list-style-type: none"> <li>This shows the location of the fusible link or fuse in the fusible link or fuse box. For arrange-ment, refer to PG section, POWER SUPPLY ROUTING.</li> </ul>                                                                                                                                                    |
| 4       | Fuse                        | <ul style="list-style-type: none"> <li>The single line shows that this is a fuse.</li> <li>The open circle shows current flow in, and the shaded circle shows current flow out.</li> </ul>                                                                                                                                                             |
| 5       | Current rating              | <ul style="list-style-type: none"> <li>This shows the current rating of the fusible link or fuse.</li> </ul>                                                                                                                                                                                                                                           |
| 6       | Connectors                  | <ul style="list-style-type: none"> <li>This shows that connector E3 is female and connector M1 is male.</li> <li>The G/R wire is located in the 1A terminal of both connectors.</li> <li>Terminal number with an alphabet (1A, 5B, etc.) indicates that the connector is SMJ connector. Refer to PG section, SMJ (SUPER MULTIPLE JUNCTION).</li> </ul> |
| 7       | Optional splice             | <ul style="list-style-type: none"> <li>The open circle shows that the splice is optional depending on vehicle application.</li> </ul>                                                                                                                                                                                                                  |
| 8       | Splice                      | <ul style="list-style-type: none"> <li>The shaded circle shows that the splice is always on the vehicle.</li> </ul>                                                                                                                                                                                                                                    |
| 9       | Page crossing               | <ul style="list-style-type: none"> <li>This arrow shows that the circuit continues to an adjacent page.</li> <li>The A will match with the A on the preceding or next page.</li> </ul>                                                                                                                                                                 |
| 10      | Common connector            | <ul style="list-style-type: none"> <li>The dotted lines between terminals show that these terminals are part of the same connector.</li> </ul>                                                                                                                                                                                                         |
| 11      | Option abbreviation         | <ul style="list-style-type: none"> <li>This shows that the circuit is optional depending on vehicle application.</li> </ul>                                                                                                                                                                                                                            |
| 12      | Relay                       | <ul style="list-style-type: none"> <li>This shows an internal representation of the relay. For details, refer to PG section, STAN-DARDIZED RELAY.</li> </ul>                                                                                                                                                                                           |
| 13      | Connectors                  | <ul style="list-style-type: none"> <li>This shows that the connector is connected to the body or a terminal with bolt or nut.</li> </ul>                                                                                                                                                                                                               |

# HOW TO USE THIS MANUAL

## < SERVICE INFORMATION >


| Num-ber                                                                                                                                              | Item                       | Description                                                                                                                                                                                                                                                                                                                                                                                                                      |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
|------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|------------|-----------|------------------|---------|----------|-----------|---------------------------|----------|-----------------|------------|---------------|------------------|-----------------|--|-----------------|
| 14                                                                                                                                                   | Wire color                 | <ul style="list-style-type: none"><li>This shows a code for the color of the wire.</li></ul>                                                                                                                                                                                                                                                                                                                                     |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
|                                                                                                                                                      |                            | <table><tr><td>B = Black</td><td>BR = Brown</td></tr><tr><td>W = White</td><td>OR or O = Orange</td></tr><tr><td>R = Red</td><td>P = Pink</td></tr><tr><td>G = Green</td><td>PU or V (Violet) = Purple</td></tr><tr><td>L = Blue</td><td>GY or GR = Gray</td></tr><tr><td>Y = Yellow</td><td>SB = Sky Blue</td></tr><tr><td>LG = Light Green</td><td>CH = Dark Brown</td></tr><tr><td></td><td>DG = Dark Green</td></tr></table> | B = Black  | BR = Brown | W = White | OR or O = Orange | R = Red | P = Pink | G = Green | PU or V (Violet) = Purple | L = Blue | GY or GR = Gray | Y = Yellow | SB = Sky Blue | LG = Light Green | CH = Dark Brown |  | DG = Dark Green |
|                                                                                                                                                      |                            | B = Black                                                                                                                                                                                                                                                                                                                                                                                                                        | BR = Brown |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| W = White                                                                                                                                            | OR or O = Orange           |                                                                                                                                                                                                                                                                                                                                                                                                                                  |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| R = Red                                                                                                                                              | P = Pink                   |                                                                                                                                                                                                                                                                                                                                                                                                                                  |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| G = Green                                                                                                                                            | PU or V (Violet) = Purple  |                                                                                                                                                                                                                                                                                                                                                                                                                                  |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| L = Blue                                                                                                                                             | GY or GR = Gray            |                                                                                                                                                                                                                                                                                                                                                                                                                                  |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| Y = Yellow                                                                                                                                           | SB = Sky Blue              |                                                                                                                                                                                                                                                                                                                                                                                                                                  |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| LG = Light Green                                                                                                                                     | CH = Dark Brown            |                                                                                                                                                                                                                                                                                                                                                                                                                                  |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
|                                                                                                                                                      | DG = Dark Green            |                                                                                                                                                                                                                                                                                                                                                                                                                                  |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| When the wire color is striped, the base color is given first, followed by the stripe color as shown below:<br>Example: L/W = Blue with White Stripe |                            |                                                                                                                                                                                                                                                                                                                                                                                                                                  |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 15                                                                                                                                                   | Option description         | <ul style="list-style-type: none"><li>This shows a description of the option abbreviation used on the page.</li></ul>                                                                                                                                                                                                                                                                                                            |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 16                                                                                                                                                   | Switch                     | <ul style="list-style-type: none"><li>This shows that continuity exists between terminals 1 and 2 when the switch is in the A position. Continuity exists between terminals 1 and 3 when the switch is in the B position.</li></ul>                                                                                                                                                                                              |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 17                                                                                                                                                   | Assembly parts             | <ul style="list-style-type: none"><li>Connector terminal in component shows that it is a harness incorporated assembly.</li></ul>                                                                                                                                                                                                                                                                                                |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 18                                                                                                                                                   | Cell code                  | <ul style="list-style-type: none"><li>This identifies each page of the wiring diagram by section, system and wiring diagram page number.</li></ul>                                                                                                                                                                                                                                                                               |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 19                                                                                                                                                   | Current flow arrow         | <ul style="list-style-type: none"><li>Arrow indicates electric current flow, especially where the direction of standard flow (vertically downward or horizontally from left to right) is difficult to follow.</li><li>A double arrow “” shows that current can flow in either direction depending on circuit operation.</li></ul>               |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 20                                                                                                                                                   | System branch              | <ul style="list-style-type: none"><li>This shows that the system branches to another system identified by cell code (section and system).</li></ul>                                                                                                                                                                                                                                                                              |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 21                                                                                                                                                   | Page crossing              | <ul style="list-style-type: none"><li>This arrow shows that the circuit continues to another page identified by cell code.</li><li>The C will match with the C on another page within the system other than the next or preceding pages.</li></ul>                                                                                                                                                                               |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 22                                                                                                                                                   | Shielded line              | <ul style="list-style-type: none"><li>The line enclosed by broken line circle shows shield wire.</li></ul>                                                                                                                                                                                                                                                                                                                       |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 23                                                                                                                                                   | Component box in wave line | <ul style="list-style-type: none"><li>This shows that another part of the component is also shown on another page (indicated by wave line) within the system.</li></ul>                                                                                                                                                                                                                                                          |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 24                                                                                                                                                   | Component name             | <ul style="list-style-type: none"><li>This shows the name of a component.</li></ul>                                                                                                                                                                                                                                                                                                                                              |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 25                                                                                                                                                   | Connector number           | <ul style="list-style-type: none"><li>This shows the connector number.</li><li>The letter shows which harness the connector is located in.</li><li>Example: <b>M</b>: main harness. For detail and to locate the connector, refer to PG section "Main Harness", "Harness Layout". A coordinate grid is included for complex harnesses to aid in locating connectors.</li></ul>                                                   |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 26                                                                                                                                                   | Ground (GND)               | <ul style="list-style-type: none"><li>The line spliced and grounded under wire color shows that ground line is spliced at the grounded connector.</li></ul>                                                                                                                                                                                                                                                                      |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 27                                                                                                                                                   | Ground (GND)               | <ul style="list-style-type: none"><li>This shows the ground connection. For detailed ground distribution information, refer to "Ground Distribution" in PG section.</li></ul>                                                                                                                                                                                                                                                    |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 28                                                                                                                                                   | Connector views            | <ul style="list-style-type: none"><li>This area shows the connector faces of the components in the wiring diagram on the page.</li></ul>                                                                                                                                                                                                                                                                                         |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 29                                                                                                                                                   | Common component           | <ul style="list-style-type: none"><li>Connectors enclosed in broken line show that these connectors belong to the same component.</li></ul>                                                                                                                                                                                                                                                                                      |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 30                                                                                                                                                   | Connector color            | <ul style="list-style-type: none"><li>This shows a code for the color of the connector. For code meaning, refer to wire color codes, Number 14 of this chart.</li></ul>                                                                                                                                                                                                                                                          |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 31                                                                                                                                                   | Fusible link and fuse box  | <ul style="list-style-type: none"><li>This shows the arrangement of fusible link(s) and fuse(s), used for connector views of "POWER SUPPLY ROUTING" in PG section.<br/>The open square shows current flow in, and the shaded square shows current flow out.</li></ul>                                                                                                                                                            |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |
| 32                                                                                                                                                   | Reference area             | <ul style="list-style-type: none"><li>This shows that more information on the Super Multiple Junction (SMJ) and Joint Connectors (J/C) exists on the PG section. Refer to "Reference Area" for details.</li></ul>                                                                                                                                                                                                                |            |            |           |                  |         |          |           |                           |          |                 |            |               |                  |                 |  |                 |

### Harness Indication

# HOW TO USE THIS MANUAL

## < SERVICE INFORMATION >

- Letter designations next to test meter probe indicate harness (connector) wire color.
- Connector numbers in a single circle M33 indicate harness connectors.

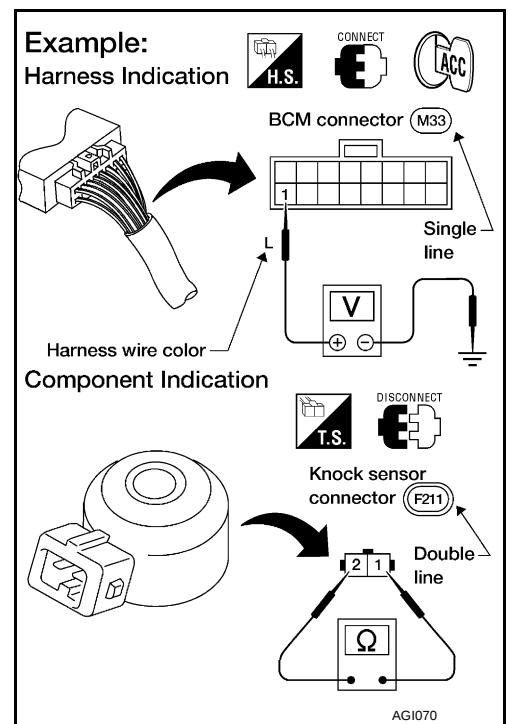

### Component Indication


Connector numbers in a double circle F211 indicate component connectors.

### Switch Positions

Switches are shown in wiring diagrams as if the vehicle is in the “normal” condition.

A vehicle is in the “normal” condition when:

- ignition switch is “OFF”,
- doors, hood and trunk lid/back door are closed,
- pedals are not depressed, and
- parking brake is released.

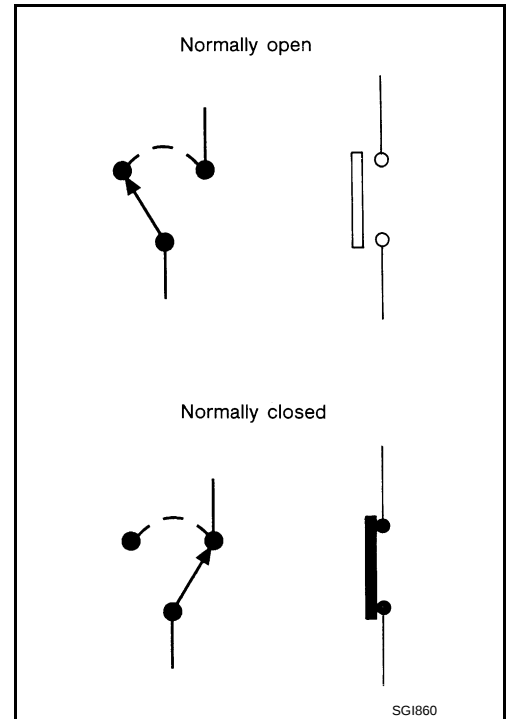


### Detectable Lines and Non-Detectable Lines

In some wiring diagrams, two kinds of lines, representing wires, with different weight are used.

# HOW TO USE THIS MANUAL

## < SERVICE INFORMATION >


- A line with regular weight (wider line) represents a “detectable line for DTC (Diagnostic Trouble Code)”. A “detectable line for DTC” is a circuit in which ECM can detect its malfunctions with the on board diagnostic system.
- A line with less weight (thinner line) represents a “non-detectable line for DTC”. A “non-detectable line for DTC” is a circuit in which ECM cannot detect its malfunctions with the on board diagnostic system.

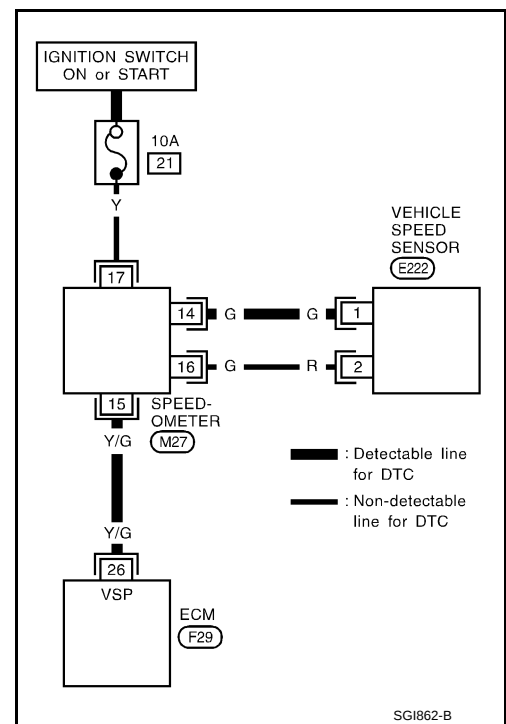

## Multiple Switch

The continuity of multiple switch is described in two ways as shown below.

- The switch chart is used in schematic diagrams.
- The switch diagram is used in wiring diagrams.

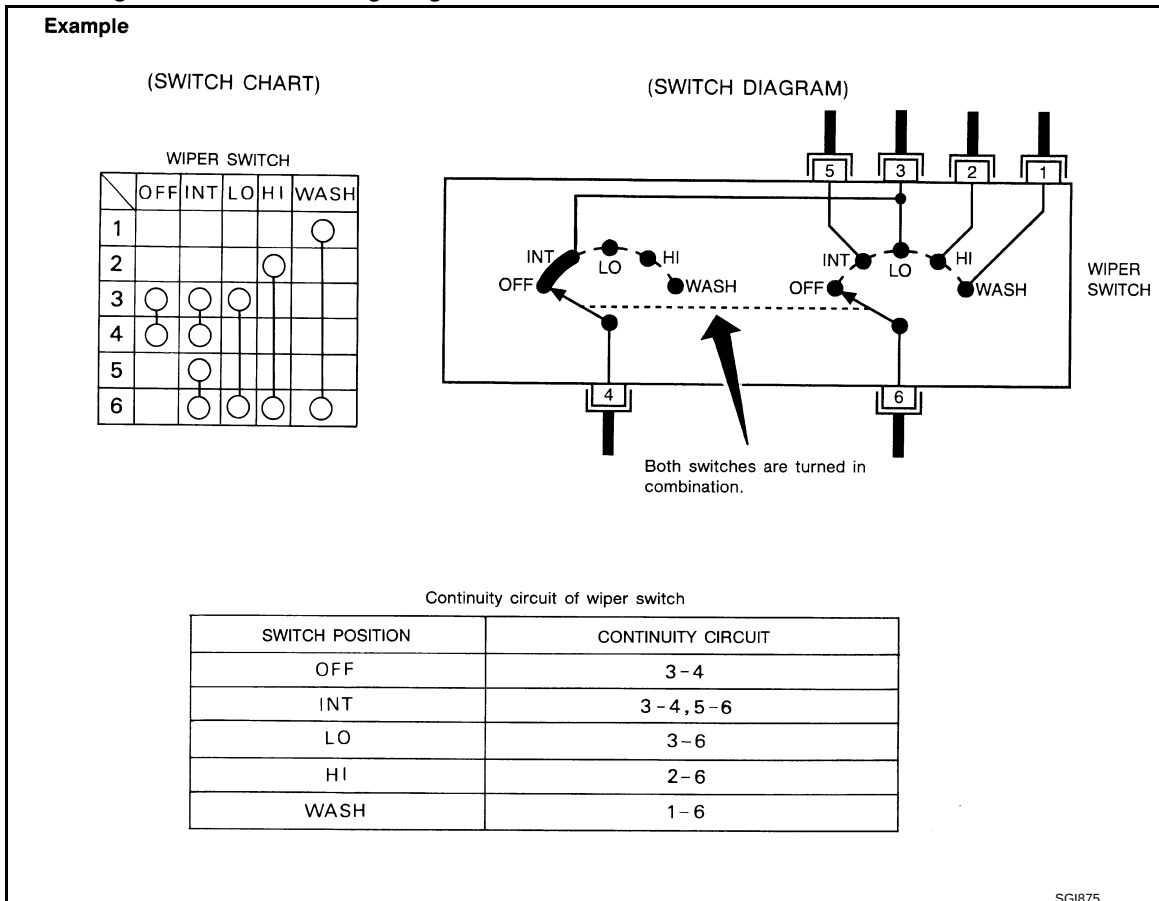

## Abbreviations

The following **ABBREVIATIONS** are used:

INFOID:000000001645380

## HOW TO USE THIS MANUAL

### < SERVICE INFORMATION >

| ABBREVIATION | DESCRIPTION                           |
|--------------|---------------------------------------|
| A/C          | Air Conditioner                       |
| A/T          | Automatic Transaxle/Transmission      |
| ATF          | Automatic Transmission Fluid          |
| D1           | Drive range first gear                |
| D2           | Drive range second gear               |
| D3           | Drive range third gear                |
| D4           | Drive range fourth gear               |
| FR, RR       | Front, Rear                           |
| LH, RH       | Left-Hand, Right-Hand                 |
| M/T          | Manual Transaxle/Transmission         |
| OD           | Overdrive                             |
| P/S          | Power Steering                        |
| SAE          | Society of Automotive Engineers, Inc. |
| SDS          | Service Data and Specifications       |
| SST          | Special Service Tools                 |
| 2WD          | 2-Wheel Drive                         |
| 22           | 2nd range second gear                 |
| 21           | 2nd range first gear                  |
| 12           | 1st range second gear                 |
| 11           | 1st range first gear                  |

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< SERVICE INFORMATION >


## SERVICE INFORMATION FOR ELECTRICAL INCIDENT

### How to Check Terminal

INFOID:000000001645381

#### CONNECTOR AND TERMINAL PIN KIT

Use the connector and terminal pin kits listed below when replacing connectors or terminals. The connector and terminal pin kits contain some of the most commonly used NISSAN/INFINITI connectors and terminals. For detailed connector and terminal pin replacement procedures, refer to the latest NISSAN/INFINITI CONNECTOR AND TERMINAL PIN SERVICE MANUAL.
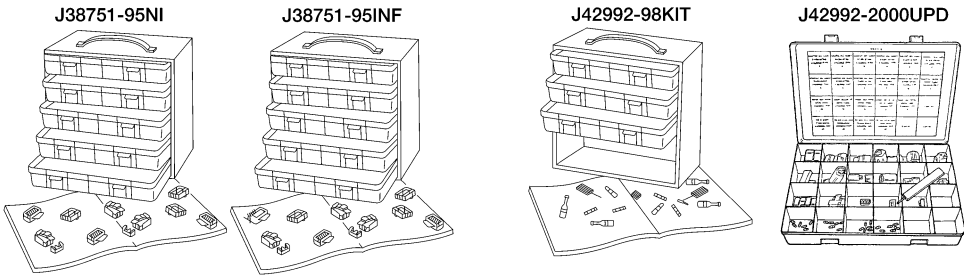
| Tool number<br>(Kent-Moore No.)<br>Tool name                        | Description                                                                                                  |
|---------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| -<br>(J38751-95NI)<br>Connector and terminal<br>pin kit (NISSAN)    | <br>WAIA0004E<br>WAIA0005E |
| -<br>(J38751-95INF)<br>Connector and terminal<br>pin kit (INFINITI) |                                                                                                              |
| -<br>(J42992-98KIT)<br>OBD and terminal repair<br>kit               |                                                                                                              |
| -<br>(J42992-2000UPD)<br>OBD-II Connector Kit Up-<br>date           |                                                                                                              |

#### HOW TO PROBE CONNECTORS


Connector damage and an intermittent connection can result from improperly probing of the connector during circuit checks.

The probe of a digital multimeter (DMM) may not correctly fit the connector cavity. To correctly probe the connector, follow the procedures below using a "T" pin. For the best contact grasp the "T" pin using an alligator clip.

##### Probing from Harness Side

Standard type (not waterproof type) connector should be probed from harness side with "T" pin.


- If the connector has a rear cover such as a ECM connector, remove the rear cover before probing the terminal.
- Do not probe waterproof connector from harness side. Damage to the seal between wire and connector may result.

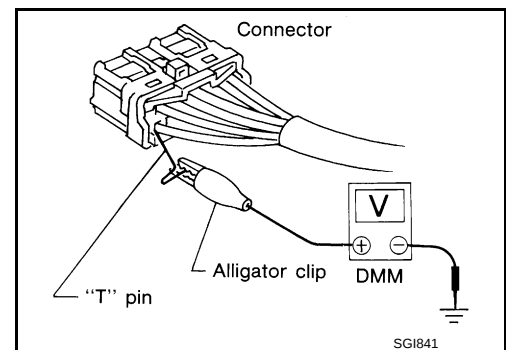

##### Probing from Terminal Side

##### FEMALE TERMINAL


- There is a small notch above each female terminal. Probe each terminal with the "T" pin through the notch. Do not insert any object other than the same type male terminal into female terminal.

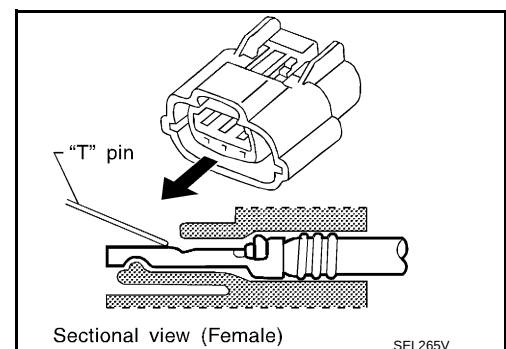

## SERVICE INFORMATION FOR ELECTRICAL INCIDENT


### < SERVICE INFORMATION >

- Some connectors do not have a notch above each terminal. To probe each terminal, remove the connector retainer to make contact space for probing.

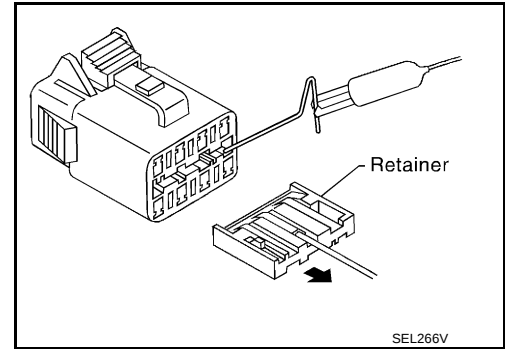

#### MALE TERMINAL

Carefully probe the contact surface of each terminal using a "T" pin.  
**Do not bend terminal.**

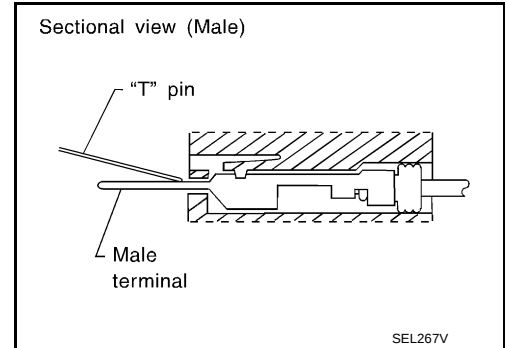


#### How to Check Enlarged Contact Spring of Terminal


An enlarged contact spring of a terminal may create intermittent signals in the circuit.

If the intermittent open circuit occurs, follow the procedure below to inspect for open wires and enlarged contact spring of female terminal.

- Assemble a male terminal and approx. 10 cm (3.9 in) of wire.  
**Use a male terminal which matches the female terminal.**
- Disconnect the suspected faulty connector and hold it terminal side up.

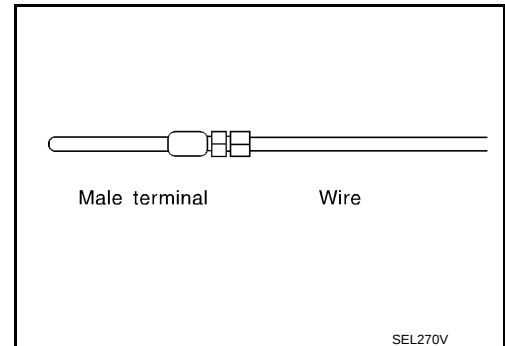


- While holding the wire of the male terminal, try to insert the male terminal into the female terminal.  
**Do not force the male terminal into the female terminal with your hands.**

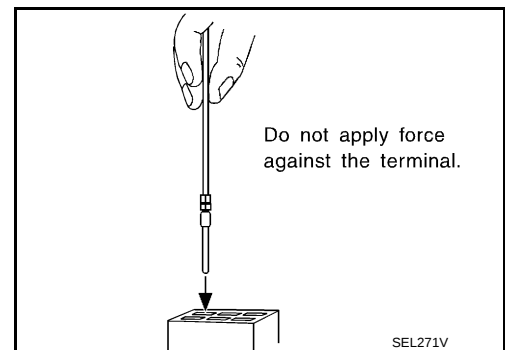


# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < SERVICE INFORMATION >

4. While moving the connector, check whether the male terminal can be easily inserted or not.

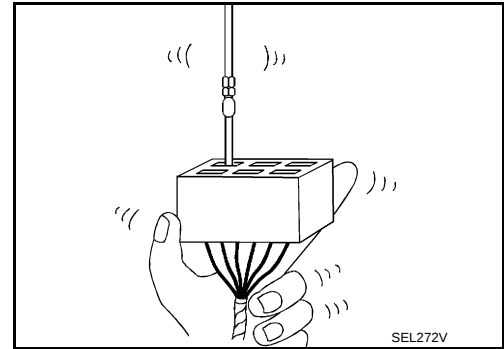

- If the male terminal can be easily inserted into the female terminal, replace the female terminal.

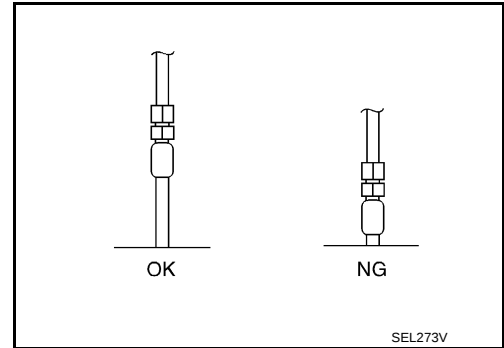


### Waterproof Connector Inspection

If water enters the connector, it can short interior circuits. This may lead to intermittent problems. Check the following items to maintain the original waterproof characteristics.

### RUBBER SEAL INSPECTION

- Most waterproof connectors are provided with a rubber seal between the male and female connectors. If the seal is missing, the waterproof performance may not meet specifications.
- The rubber seal may come off when connectors are disconnected. Whenever connectors are reconnected, make sure the rubber seal is properly installed on either side of male or female connector.

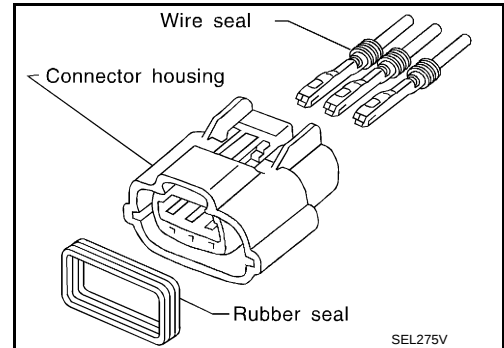


### WIRE SEAL INSPECTION

The wire seal must be installed on the wire insertion area of a waterproof connector. Be sure that the seal is installed properly.

### Terminal Lock Inspection

Check for unlocked terminals by pulling wire at the end of connector. An unlocked terminal may create intermittent signals in the circuit.

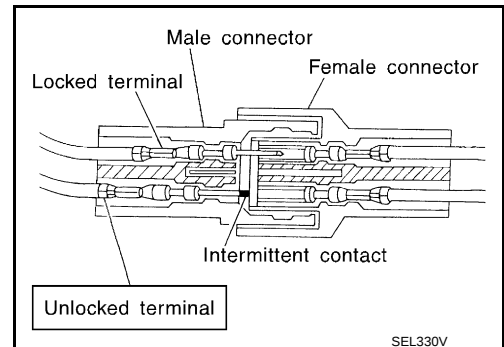


# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < SERVICE INFORMATION >

### How to Perform Efficient Diagnosis for an Electrical Incident

INFOID:000000001645382

#### WORK FLOW

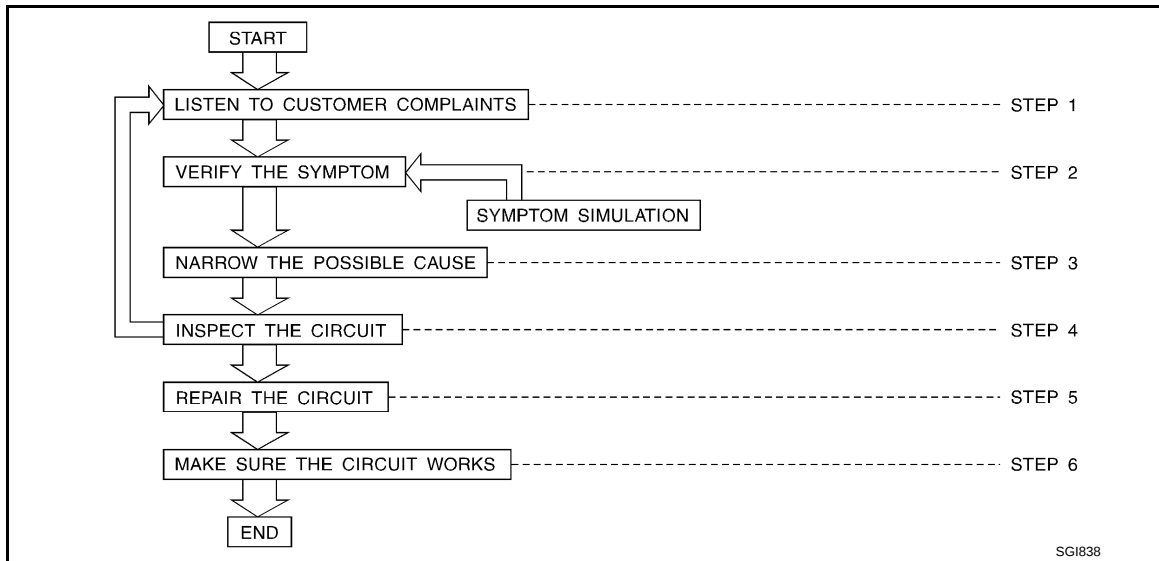

| STEP   | DESCRIPTION                                                                                                                                                                                                                                                                                                                                                                 |                                                                                                                                                |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| STEP 1 | Get detailed information about the conditions and the environment when the incident occurred. The following are key pieces of information required to make a good analysis:                                                                                                                                                                                                 |                                                                                                                                                |
|        | <b>WHAT</b>                                                                                                                                                                                                                                                                                                                                                                 | Vehicle Model, Engine, Transmission/Transaxle and the System (i.e. Radio).                                                                     |
|        | <b>WHEN</b>                                                                                                                                                                                                                                                                                                                                                                 | Date, Time of Day, Weather Conditions, Frequency.                                                                                              |
|        | <b>WHERE</b>                                                                                                                                                                                                                                                                                                                                                                | Road Conditions, Altitude and Traffic Situation.                                                                                               |
|        | <b>HOW</b>                                                                                                                                                                                                                                                                                                                                                                  | System Symptoms, Operating Conditions (Other Components Interaction). Service History and if any After Market Accessories have been installed. |
| STEP 2 | Operate the system, road test if necessary. Verify the parameter of the incident. If the problem cannot be duplicated, refer to "Incident Simulation Tests".                                                                                                                                                                                                                |                                                                                                                                                |
| STEP 3 | Get the proper diagnosis materials together including: <ul style="list-style-type: none"><li>• Power Supply Routing</li><li>• System Operation Descriptions</li><li>• Applicable Service Manual Sections</li><li>• Check for any Service Bulletins</li></ul> Identify where to begin diagnosis based upon your knowledge of the system operation and the customer comments. |                                                                                                                                                |
| STEP 4 | Inspect the system for mechanical binding, loose connectors or wiring damage. Determine which circuits and components are involved and diagnose using the Power Supply Routing and Harness Lay-outs.                                                                                                                                                                        |                                                                                                                                                |
| STEP 5 | Repair or replace the incident circuit or component.                                                                                                                                                                                                                                                                                                                        |                                                                                                                                                |
| STEP 6 | Operate the system in all modes. Verify the system works properly under all conditions. Make sure you have not inadvertently created a new incident during your diagnosis or repair steps.                                                                                                                                                                                  |                                                                                                                                                |

#### INCIDENT SIMULATION TESTS

##### Introduction

Sometimes the symptom is not present when the vehicle is brought in for service. If possible, re-create the conditions present at the time of the incident. Doing so may help avoid a No Trouble Found Diagnosis. The following section illustrates ways to simulate the conditions/environment under which the owner experiences an electrical incident.

The section is broken into the six following topics:

- Vehicle vibration
- Heat sensitive
- Freezing
- Water intrusion
- Electrical load

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < SERVICE INFORMATION >

### • Cold or hot start up

Get a thorough description of the incident from the customer. It is important for simulating the conditions of the problem.

### Vehicle Vibration

The problem may occur or become worse while driving on a rough road or when engine is vibrating (idle with A/C on). In such a case, you will want to check for a vibration related condition. Refer to the following illustration.

## CONNECTORS & HARNESS

Determine which connectors and wiring harness would affect the electrical system you are inspecting. Gently shake each connector and harness while monitoring the system for the incident you are trying to duplicate. This test may indicate a loose or poor electrical connection.


## HINT

Connectors can be exposed to moisture. It is possible to get a thin film of corrosion on the connector terminals. A visual inspection may not reveal this without disconnecting the connector. If the problem occurs intermittently, perhaps the problem is caused by corrosion. It is a good idea to disconnect, inspect and clean the terminals on related connectors in the system.

## SENSORS & RELAYS

**Gently** apply a slight vibration to sensors and relays in the system you are inspecting.

This test may indicate a loose or poorly mounted sensor or relay.

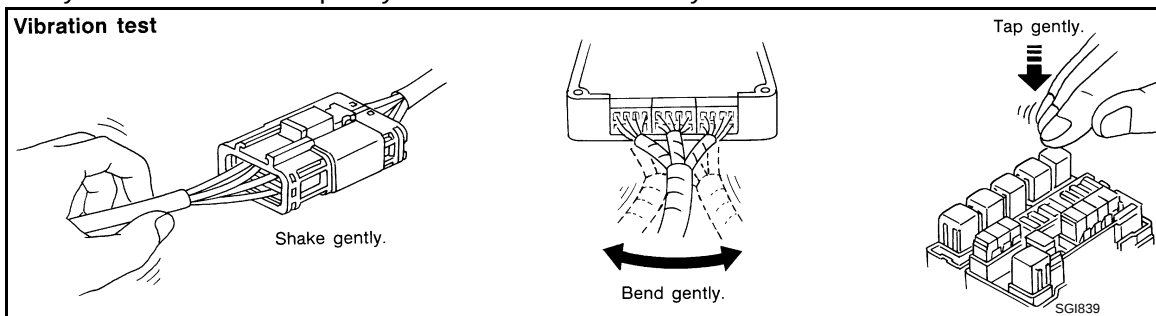

## ENGINE COMPARTMENT

There are several reasons a vehicle or engine vibration could cause an electrical complaint. Some of the things to check for are:

- Connectors not fully seated.
- Wiring harness not long enough and is being stressed due to engine vibrations or rocking.
- Wires laying across brackets or moving components.
- Loose, dirty or corroded ground wires.
- Wires routed too close to hot components.

To inspect components under the hood, start by verifying the integrity of ground connections. (Refer to Ground Inspection described later.) First check that the system is properly grounded. Then check for loose connection by gently shaking the wiring or components as previously explained. Using the wiring diagrams inspect the wiring for continuity.

## BEHIND THE INSTRUMENT PANEL

An improperly routed or improperly clamped harness can become pinched during accessory installation. Vehicle vibration can aggravate a harness which is routed along a bracket or near a screw.

## UNDER SEATING AREAS

An unclamped or loose harness can cause wiring to be pinched by seat components (such as slide guides) during vehicle vibration. If the wiring runs under seating areas, inspect wire routing for possible damage or pinching.

## Heat Sensitive

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT


## < SERVICE INFORMATION >

The customer's concern may occur during hot weather or after car has sat for a short time. In such cases you will want to check for a heat sensitive condition.

To determine if an electrical component is heat sensitive, heat the component with a heat gun or equivalent.

**Do not heat components above 60°C (140°F).** If incident occurs while heating the unit, either replace or properly insulate the component.

### Heating test

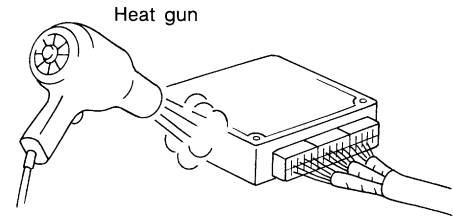

Do not heat above 60°C (140°F).

SGI842


### Freezing

The customer may indicate the incident goes away after the car warms up (winter time). The cause could be related to water freezing somewhere in the wiring/electrical system.

There are two methods to check for this. The first is to arrange for the owner to leave his car overnight. Make sure it will get cold enough to demonstrate his complaint. Leave the car parked outside overnight. In the morning, do a quick and thorough diagnosis of those electrical components which could be affected.

The second method is to put the suspect component into a freezer long enough for any water to freeze. Reinstall the part into the car and check for the reoccurrence of the incident. If it occurs, repair or replace the component.

### Freezing test

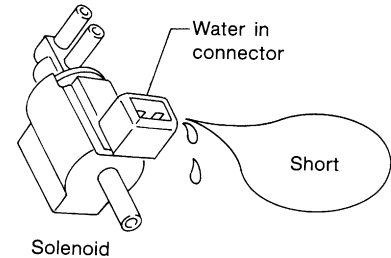

SGI843

### Water Intrusion

The incident may occur only during high humidity or in rainy/snowy weather. In such cases the incident could be caused by water intrusion on an electrical part. This can be simulated by soaking the car or running it through a car wash.

**Do not spray water directly on any electrical components.**

### Water intrusion test




SGI844

### Electrical Load

The incident may be electrical load sensitive. Perform diagnosis with all accessories (including A/C, rear window defogger, radio, fog lamps) turned on.

### Electrical load test

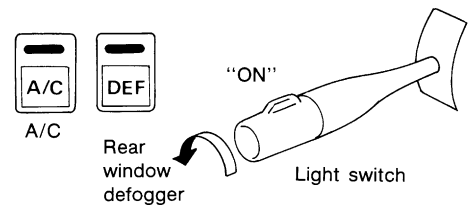

SGI845

### Cold or Hot Start Up

On some occasions an electrical incident may occur only when the car is started cold, or it may occur when the car is restarted hot shortly after being turned off. In these cases you may have to keep the car overnight to make a proper diagnosis.

## CIRCUIT INSPECTION

### Introduction

In general, testing electrical circuits is an easy task if it is approached in a logical and organized method. Before beginning it is important to have all available information on the system to be tested. Also, get a thor-

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < SERVICE INFORMATION >

ough understanding of system operation. Then you will be able to use the appropriate equipment and follow the correct test procedure.

You may have to simulate vehicle vibrations while testing electrical components. Gently shake the wiring harness or electrical component to do this.


|       |                                                                                 |                                                                                     |
|-------|---------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| OPEN  | A circuit is open when there is no continuity through a section of the circuit. |                                                                                     |
| SHORT | There are two types of shorts.                                                  |                                                                                     |
|       | • SHORT CIRCUIT                                                                 | When a circuit contacts another circuit and causes the normal resistance to change. |
|       | • SHORT TO GROUND                                                               | When a circuit contacts a ground source and grounds the circuit.                    |

### NOTE:

Refer to “How to Check Terminal” to probe or check terminal.

Testing for “Opens” in the Circuit

Before you begin to diagnose and test the system, you should rough sketch a schematic of the system. This will help you to logically walk through the diagnosis process. Drawing the sketch will also reinforce your working knowledge of the system.

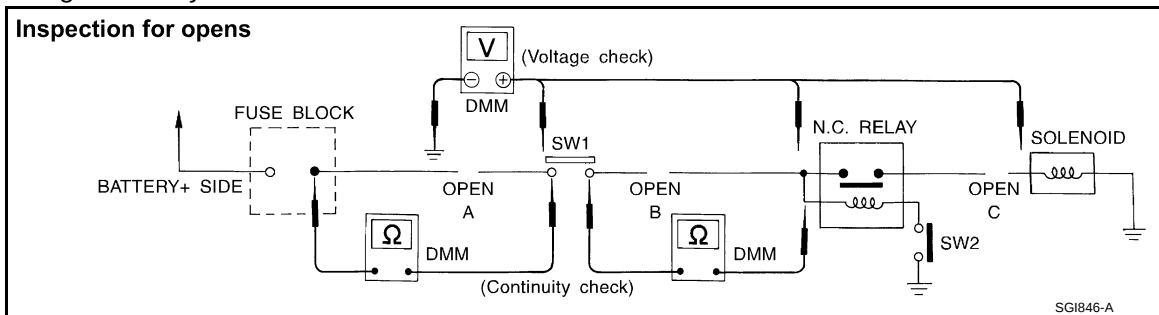

### CONTINUITY CHECK METHOD

The continuity check is used to find an open in the circuit. The digital multimeter (DMM) set on the resistance function will indicate an open circuit as over limit (no beep tone or no ohms symbol). Make sure to always start with the DMM at the highest resistance level.

To help in understanding the diagnosis of open circuits, please refer to the previous schematic.

- Disconnect the battery negative cable.
- Start at one end of the circuit and work your way to the other end. (At the fuse block in this example)
- Connect one probe of the DMM to the fuse block terminal on the load side.
- Connect the other probe to the fuse block (power) side of SW1. Little or no resistance will indicate that portion of the circuit has good continuity. If there were an open in the circuit, the DMM would indicate an over limit or infinite resistance condition. (point A)
- Connect the probes between SW1 and the relay. Little or no resistance will indicate that portion of the circuit has good continuity. If there were an open in the circuit, the DMM would indicate an over limit or infinite resistance condition. (point B)
- Connect the probes between the relay and the solenoid. Little or no resistance will indicate that portion of the circuit has good continuity. If there were an open in the circuit, the DMM would indicate an over limit or infinite resistance condition. (point C)

Any circuit can be diagnosed using the approach in the previous example.

### VOLTAGE CHECK METHOD

To help in understanding the diagnosis of open circuits please refer to the previous schematic.

In any powered circuit, an open can be found by methodically checking the system for the presence of voltage. This is done by switching the DMM to the voltage function.

- Connect one probe of the DMM to a known good ground.
- Begin probing at one end of the circuit and work your way to the other end.
- With SW1 open, probe at SW1 to check for voltage.
  - voltage; open is further down the circuit than SW1.
  - no voltage; open is between fuse block and SW1 (point A).
- Close SW1 and probe at relay.
  - voltage; open is further down the circuit than the relay.
  - no voltage; open is between SW1 and relay (point B).


# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < SERVICE INFORMATION >

- Close the relay and probe at the solenoid.  
voltage; open is further down the circuit than the solenoid.  
no voltage; open is between relay and solenoid (point C).
- Any powered circuit can be diagnosed using the approach in the previous example.

### Testing for "Shorts" in the Circuit

To simplify the discussion of shorts in the system, please refer to the following schematic.

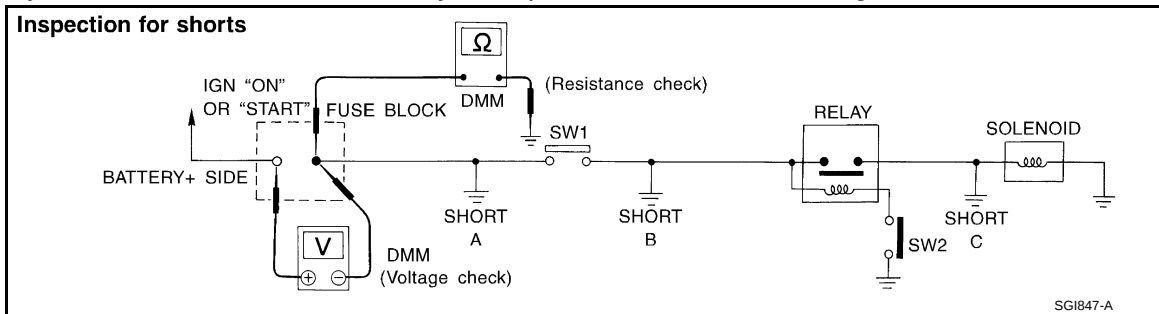

### RESISTANCE CHECK METHOD

- Disconnect the battery negative cable and remove the blown fuse.
- Disconnect all loads (SW1 open, relay disconnected and solenoid disconnected) powered through the fuse.
- Connect one probe of the DMM to the load side of the fuse terminal. Connect the other probe to a known good ground.
- With SW1 open, check for continuity.  
continuity; short is between fuse terminal and SW1 (point A).  
no continuity; short is further down the circuit than SW1.
- Close SW1 and disconnect the relay. Put probes at the load side of fuse terminal and a known good ground. Then, check for continuity.  
continuity; short is between SW1 and the relay (point B).  
no continuity; short is further down the circuit than the relay.
- Close SW1 and jump the relay contacts with jumper wire. Put probes at the load side of fuse terminal and a known good ground. Then, check for continuity.  
continuity; short is between relay and solenoid (point C).  
no continuity; check solenoid, retrace steps.

### VOLTAGE CHECK METHOD

- Remove the blown fuse and disconnect all loads (i.e. SW1 open, relay disconnected and solenoid disconnected) powered through the fuse.
- Turn the ignition key to the ON or START position. Verify battery voltage at the battery + side of the fuse terminal (one lead on the battery + terminal side of the fuse block and one lead on a known good ground).
- With SW1 open and the DMM leads across both fuse terminals, check for voltage.  
voltage; short is between fuse block and SW1 (point A).  
no voltage; short is further down the circuit than SW1.
- With SW1 closed, relay and solenoid disconnected and the DMM leads across both fuse terminals, check for voltage.  
voltage; short is between SW1 and the relay (point B).  
no voltage; short is further down the circuit than the relay.
- With SW1 closed, relay contacts jumped with fused jumper wire check for voltage.  
voltage; short is down the circuit of the relay or between the relay and the disconnected solenoid (point C).  
no voltage; retrace steps and check power to fuse block.

### Ground Inspection

Ground connections are very important to the proper operation of electrical and electronic circuits. Ground connections are often exposed to moisture, dirt and other corrosive elements. The corrosion (rust) can become an unwanted resistance. This unwanted resistance can change the way a circuit works.

Electronically controlled circuits are very sensitive to proper grounding. A loose or corroded ground can drastically affect an electronically controlled circuit. A poor or corroded ground can easily affect the circuit. Even when the ground connection looks clean, there can be a thin film of rust on the surface.

When inspecting a ground connection follow these rules:


- Remove the ground bolt or screw.
- Inspect all mating surfaces for tarnish, dirt, rust, etc.

## SERVICE INFORMATION FOR ELECTRICAL INCIDENT

### < SERVICE INFORMATION >

- Clean as required to assure good contact.
- Reinstall bolt or screw securely.
- Inspect for “add-on” accessories which may be interfering with the ground circuit.
- If several wires are crimped into one ground eyelet terminal, check for proper crimps. Make sure all of the wires are clean, securely fastened and providing a good ground path. If multiple wires are cased in one eyelet make sure no ground wires have excess wire insulation.

For detailed ground distribution information, refer to “Ground Distribution” in PG section.

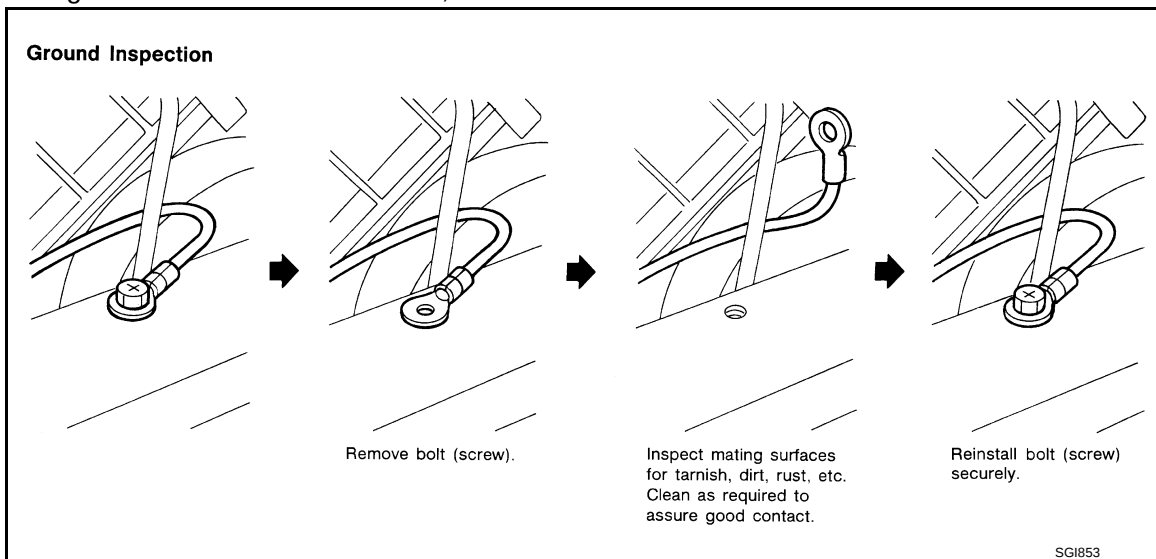

### Voltage Drop Tests

Voltage drop tests are often used to find components or circuits which have excessive resistance. A voltage drop in a circuit is caused by a resistance when the circuit is in operation.

Check the wire in the illustration. When measuring resistance with DMM, contact by a single strand of wire will give reading of 0 ohms. This would indicate a good circuit. When the circuit operates, this single strand of wire is not able to carry the current. The single strand will have a high resistance to the current. This will be picked up as a slight voltage drop.

Unwanted resistance can be caused by many situations as follows:

- Undersized wiring (single strand example)
- Corrosion on switch contacts
- Loose wire connections or splices.

If repairs are needed always use wire that is of the same or larger gauge.


### MEASURING VOLTAGE DROP — ACCUMULATED METHOD

- Connect the DMM across the connector or part of the circuit you want to check. The positive lead of the DMM should be closer to power and the negative lead closer to ground.
- Operate the circuit.
- The DMM will indicate how many volts are being used to “push” current through that part of the circuit.

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < SERVICE INFORMATION >

Note in the illustration that there is an excessive 4.1 volt drop between the battery and the bulb.

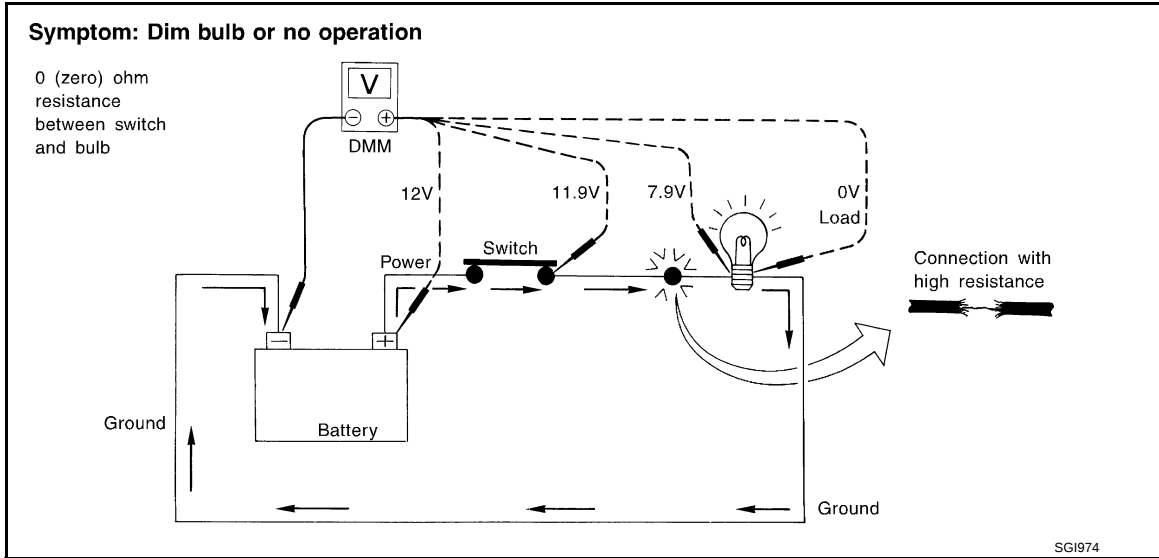


### MEASURING VOLTAGE DROP — STEP-BY-STEP

The step-by-step method is most useful for isolating excessive drops in low voltage systems (such as those in "Computer Controlled Systems").

Circuits in the "Computer Controlled System" operate on very low amperage.


The (Computer Controlled) system operations can be adversely affected by any variation in resistance in the system. Such resistance variation may be caused by poor connection, improper installation, improper wire gauge or corrosion.

The step by step voltage drop test can identify a component or wire with too much resistance.

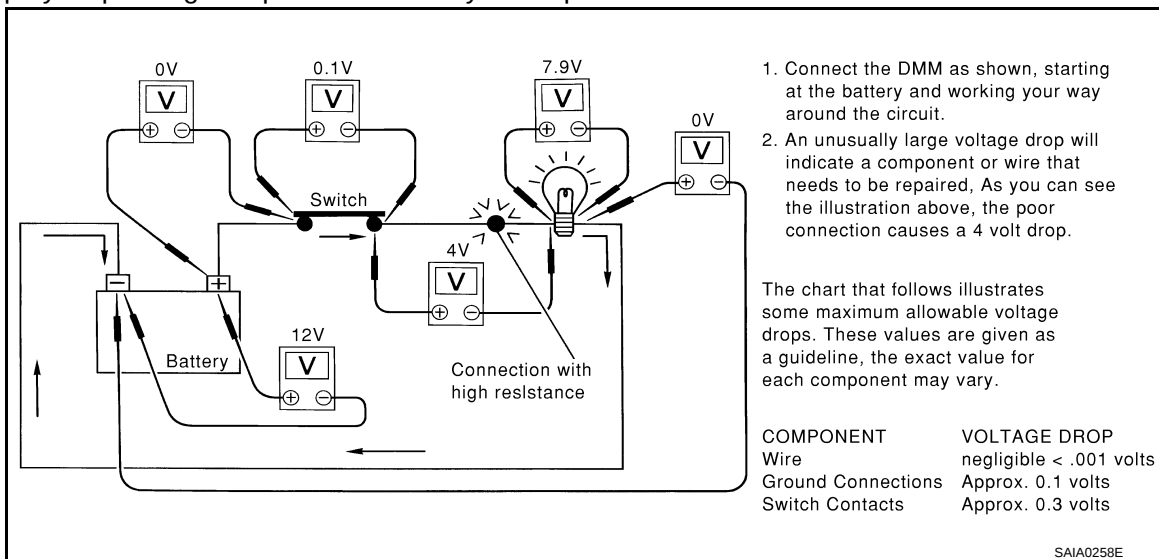

### Control Unit Circuit Test

System Description: When the switch is ON, the control unit lights up the lamp.

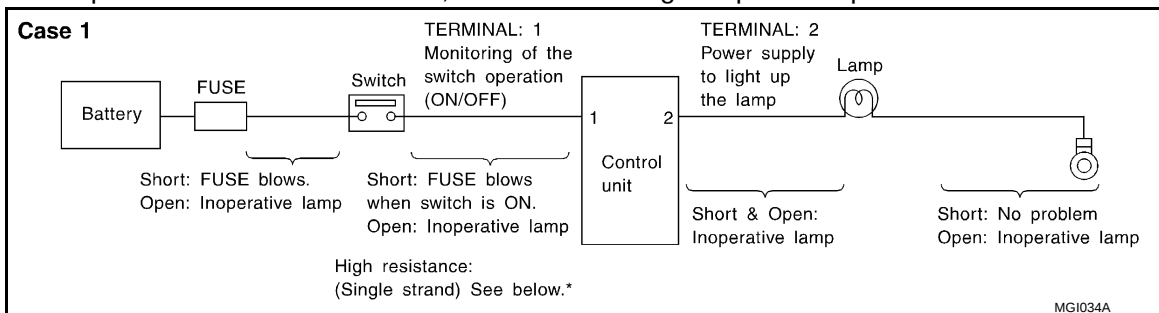

### INPUT-OUTPUT VOLTAGE CHART


# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < SERVICE INFORMATION >

| Pin No. | Item   | Condition  | Voltage value [V] | In case of high resistance such as single strand [V] * |
|---------|--------|------------|-------------------|--------------------------------------------------------|
| 1       | Switch | Switch ON  | Battery voltage   | Lower than battery voltage Approx. 8 (Example)         |
|         |        | Switch OFF | Approx. 0         | Approx. 0                                              |
| 2       | Lamp   | Switch ON  | Battery voltage   | Approx. 0 (Inoperative lamp)                           |
|         |        | Switch OFF | Approx. 0         | Approx. 0                                              |

The voltage value is based on the body ground.

\*:If high resistance exists in the switch side circuit (caused by a single strand), terminal 1 does not detect battery voltage. Control unit does not detect the switch is ON even if the switch does not turn ON. Therefore, the control unit does not supply power to light up the lamp.

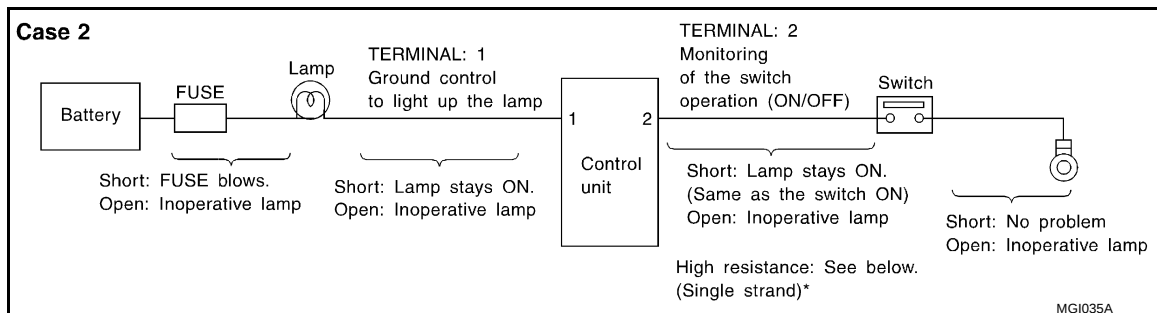

## INPUT-OUTPUT VOLTAGE CHART

| Pin No. | Item   | Condition  | Voltage value [V] | In case of high resistance such as single strand [V] * |
|---------|--------|------------|-------------------|--------------------------------------------------------|
| 1       | Lamp   | Switch ON  | Approx. 0         | Battery voltage (Inoperative lamp)                     |
|         |        | Switch OFF | Battery voltage   | Battery voltage                                        |
| 2       | Switch | Switch ON  | Approx. 0         | Higher than 0 Approx. 4 (Example)                      |
|         |        | Switch OFF | Approx. 5         | Approx. 5                                              |

The voltage value is based on the body ground.


\*:If high resistance exists in the switch side circuit (caused by a single strand), terminal 2 does not detect approx. 0V. Control unit does not detect the switch is ON even if the switch does not turn ON. Therefore, the control unit does not control ground to light up the lamp.

## Control Units and Electrical Parts

INFOID:000000001645383

### PRECAUTIONS


- Never reverse polarity of battery terminals.
- Install only parts specified for a vehicle.
- Before replacing the control unit, check the input and output and functions of the component parts.
- Do not apply excessive force when disconnecting a connector.
- Do not apply excessive shock to the control unit by dropping or hitting it.
- Be careful to prevent condensation in the control unit due to rapid temperature changes and do not let water or rain get on it. If water is found in the control unit, dry it fully and then install it in the vehicle.
- Be careful not to let oil to get on the control unit connector.
- Avoid cleaning the control unit with volatile oil.
- Do not disassemble the control unit, and do not remove the upper and lower covers.

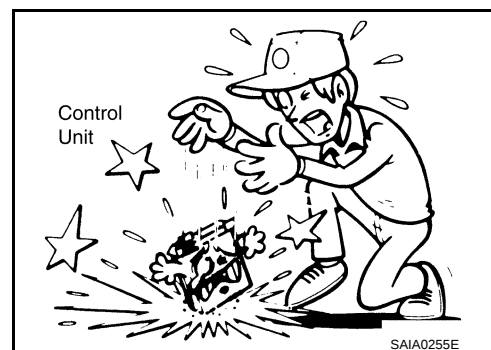

## SERVICE INFORMATION FOR ELECTRICAL INCIDENT

### < SERVICE INFORMATION >

- When using a DMM, be careful not to let test probes get close to each other to prevent the power transistor in the control unit from damaging battery voltage because of short circuiting.
- When checking input and output signals of the control unit, use the specified check adapter.

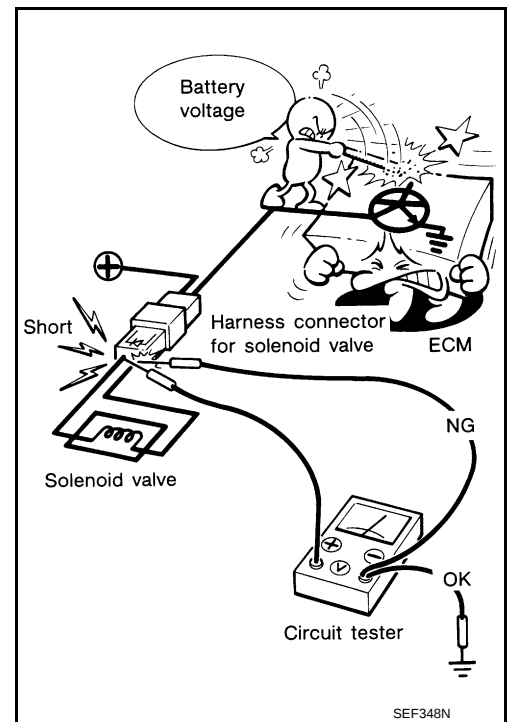

# CONSULT-III/GST CHECKING SYSTEM

< SERVICE INFORMATION >

## CONSULT-III/GST CHECKING SYSTEM


### Description

INFOID:000000001645384

- When CONSULT-III/GST is connected with a data link connector (A) equipped on the vehicle side, it will communicate with the control unit equipped in the vehicle and then enable various kinds of diagnostic tests.

#### 1 : Instrument driver lower panel

- Refer to "CONSULT-III Software Operation Manual" for more information.

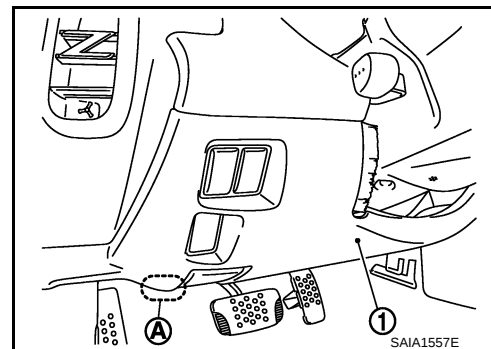

### CONSULT-III Function and System Application\*1

INFOID:000000001645385

| Diagnostic test mode          | Function                                                                                                                                                                   | ENGINE | TRANSMISSION | ABS | ABS (Including TCS) | ABS (Including VDC) | AIR BAG | BCM | METER A/C AMP | AIR PRESSURE MONITOR | IPDM E/R |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|--------------|-----|---------------------|---------------------|---------|-----|---------------|----------------------|----------|
| Work support                  | This mode enables a technician to adjust some devices faster and more accurately by following the indications on CONSULT-III.                                              | x      | -            | -   | -                   | x                   | -       | x   | -             | x                    | -        |
| Self-diagnostic results       | Self-diagnostic results can be read and erased quickly.                                                                                                                    | x      | x            | x   | x                   | x                   | x       | x   | x             | x                    | x        |
| Trouble diagnostic record     | Current self-diagnostic results and all trouble diagnostic records previously stored can be read.                                                                          | -      | -            | -   | -                   | -                   | x       | -   | -             | -                    | -        |
| Data monitor                  | Input/Output data in the ECU can be read.                                                                                                                                  | x      | x            | x   | x                   | x                   | -       | x   | x             | x                    | x        |
| CAN diagnosis support monitor | The condition of CAN communication line can be read.                                                                                                                       | x      | x            | x   | x                   | x                   | -       | x   | x             | -                    | x        |
| Active test                   | Diagnostic Test Mode in which CONSULT-III drives some actuators apart from the ECUs and also shifts some parameters in a specified range.                                  | x      | -            | x   | x                   | x                   | -       | x   | -             | x                    | x        |
| DTC & SRT confirmation        | The results of SRT (System Readiness Test) and the self-diagnosis status/result can be confirmed.                                                                          | x      | -            | -   | -                   | -                   | -       | -   | -             | -                    | -        |
| DTC work support              | This mode enables a technician to monitor the status/results of self-diagnosis performed by the ECU.                                                                       | -      | x            | -   | -                   | -                   | -       | -   | -             | -                    | -        |
| ECU (ECM/TCM) part number     | ECU (ECM/TCM) part number can be read.                                                                                                                                     | x      | x            | x   | x                   | x                   | -       | -   | -             | -                    | -        |
| ECU discriminated No.         | Classification number of a replacement ECU can be read to prevent an incorrect ECU from being installed.                                                                   | -      | -            | -   | -                   | -                   | x       | -   | -             | -                    | -        |
| Function test                 | This mode can show results of self-diagnosis of ECU with either 'OK' or 'NG'. For engines, more practical tests regarding sensors/switches and/or actuators are available. | x      | -            | x   | x                   | x                   | x       | -   | -             | -                    | -        |

x: Applicable

\*1: If GST application is equipped, functions in accordance with SAE J1979 and ISO 15031-5 can be used.

## CONSULT-III/GST CHECKING SYSTEM

< SERVICE INFORMATION >

### CONSULT-III Data Link Connector (DLC) Circuit

INFOID:000000001645386

#### INSPECTION PROCEDURE

If the CONSULT-III/GST cannot diagnose the system properly, check the following items.

| Symptom                                                                       | Check item                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CONSULT-III cannot access any system.                                         | <ul style="list-style-type: none"><li>CONSULT-III/GST DLC power supply circuit (Terminal 8 and 16) and ground circuit (Terminal 4 and 5)</li></ul>                                                                                                                                                                                                                                                                                               |
| CONSULT-III cannot access individual system. (Other systems can be accessed.) | <ul style="list-style-type: none"><li>Power supply and ground circuit for the control unit of the system (For detailed circuit, refer to wiring diagram for each system.)</li><li>Open or short circuit between the system and CONSULT-III DLC (For detailed circuit, refer to wiring diagram for each system.)</li><li>Open or short circuit CAN communication line. Refer to <a href="#">LAN-13, "Trouble Diagnosis Flow Chart"</a>.</li></ul> |

#### NOTE:


The DDL1 and DDL2 circuits from DLC pins 12, 13, 14 and 15 may be connected to more than one system. A short in a DDL circuit connected to a control unit in one system may affect CONSULT-III access to other systems.

If the GST cannot operate properly, check the circuit based on the information of SAE J1962 and ISO 15031-3.

# CONSULT-III/GST CHECKING SYSTEM

< SERVICE INFORMATION >

## CIRCUIT DIAGRAM

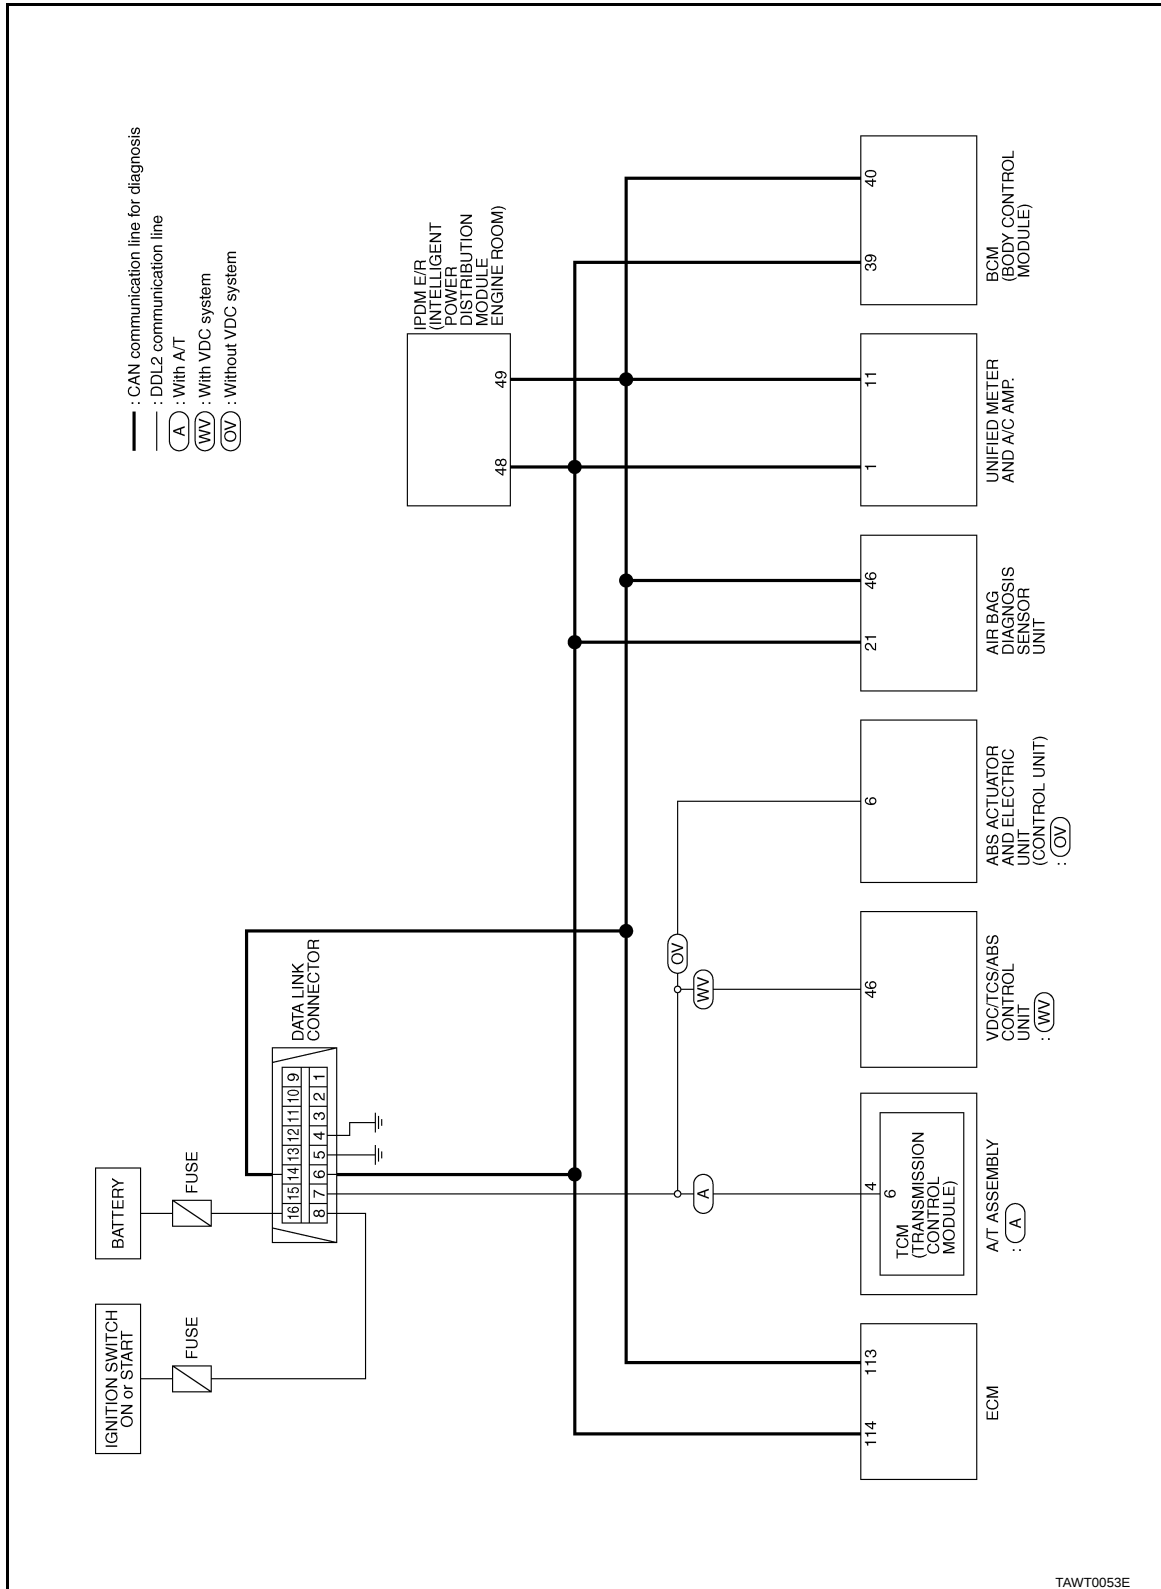

GI

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P



## LIFTING POINT

< SERVICE INFORMATION >

### LIFTING POINT

#### Commercial Service Tool

INFOID:000000001645387
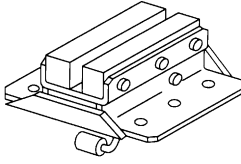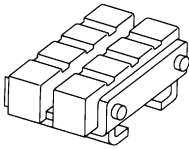
| Tool name               | Description                                                                                   |
|-------------------------|-----------------------------------------------------------------------------------------------|
| Board on attachment     | <br>S-NT001 |
| Safety stand attachment | <br>S-NT002 |

#### CAUTION:

- Every time the vehicle is lifted up, maintain the complete vehicle curb condition.
- Since the vehicle's center of gravity changes when removing main parts on the front side (engine, transmission, suspension etc.), support a jack up point on the rear side garage jack with a mission jack or equivalent.
- Since the vehicle's center of gravity changes when removing main parts on the rear side (rear axle, suspension, etc.), support a jack up point on the front side garage jack with a mission jack or equivalent.
- Be careful not to smash or do not do anything that would affect piping parts.

#### Garage Jack and Safety Stand


INFOID:000000001645388

#### WARNING:

- Park the vehicle on a level surface when using the jack. Make sure to avoid damaging pipes, tubes, etc. under the vehicle.
- Never get under the vehicle while it is supported only by the jack. Always use safety stands when you have to get under the vehicle.
- Place wheel chocks at both front and back of the wheels on the ground.

# LIFTING POINT

< SERVICE INFORMATION >

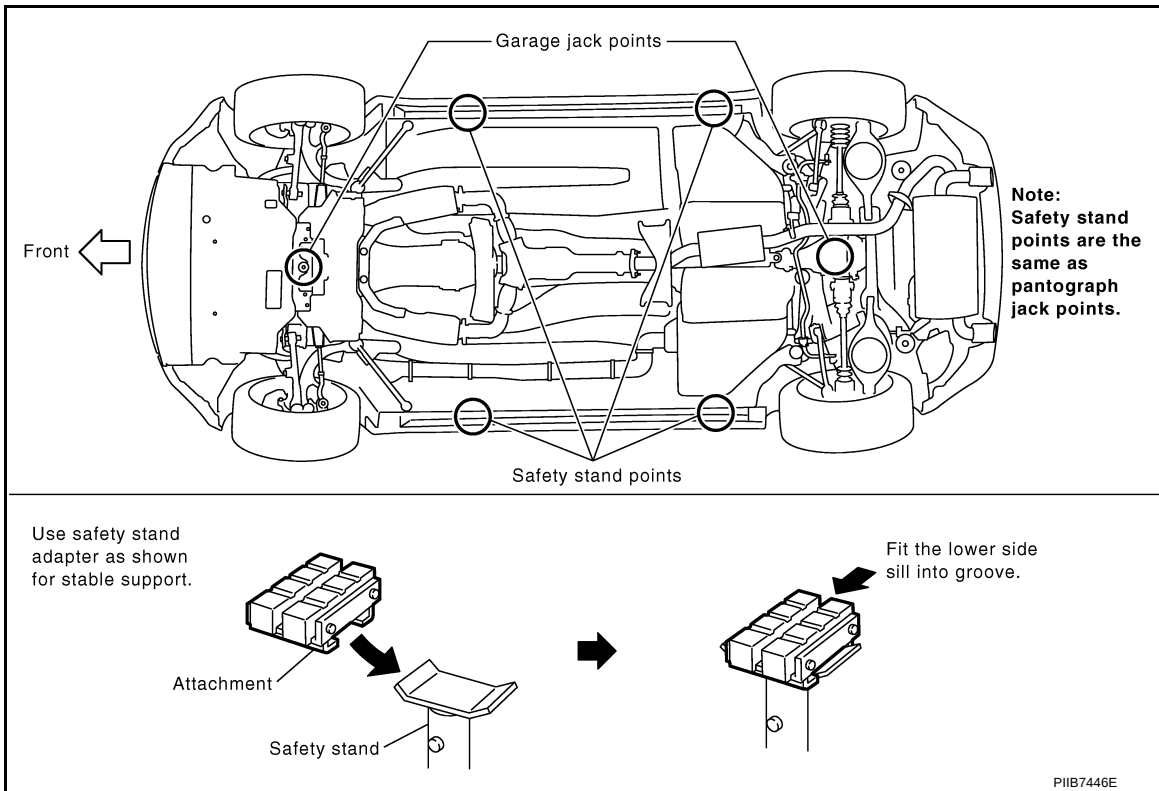


## 2-Pole Lift

INFOID:000000001645389

### **WARNING:**

When lifting the vehicle, open the lift arms as wide as possible and ensure that the front and rear of the vehicle are well balanced.

When setting the lift arm, do not allow the arm to contact the brake tubes, brake cable, fuel lines and sill spoiler.

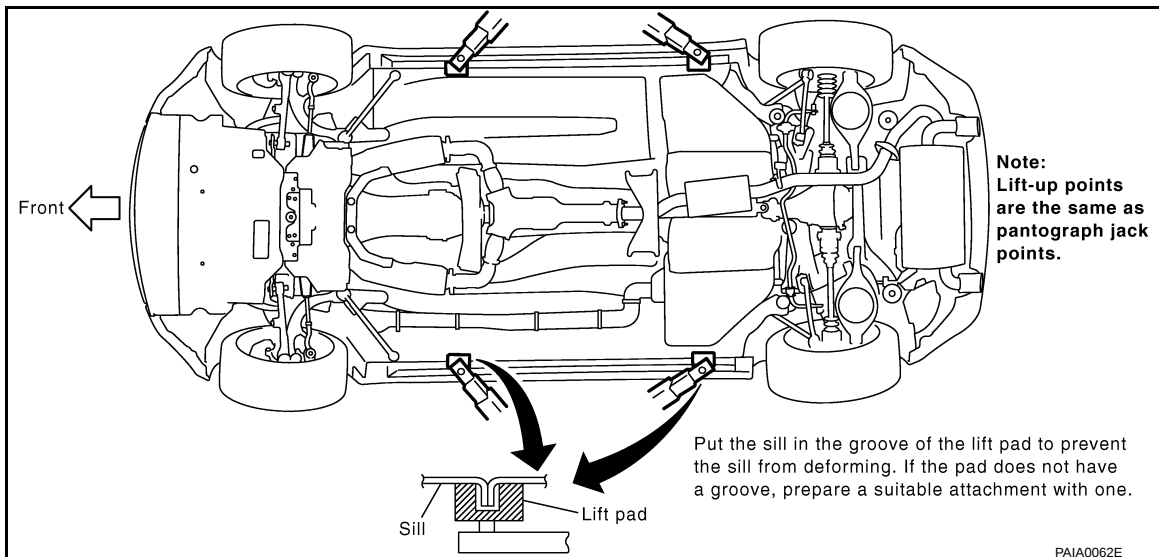

## Board-on Lift

INFOID:000000001645390


### **CAUTION:**

Make sure vehicle is empty when lifting.

## LIFTING POINT

### < SERVICE INFORMATION >

- The board-on lift attachment set at front end of vehicle should be set on the front of the sill under the front door opening.
- Position attachments at front and rear ends of board-on lift.

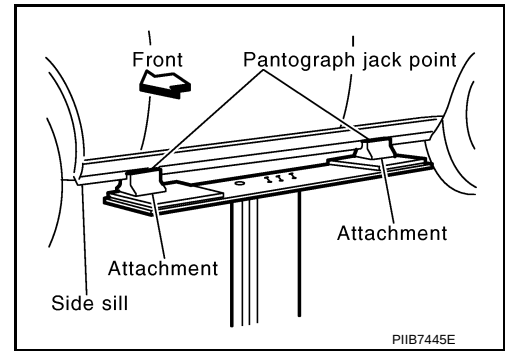

# TOW TRUCK TOWING

< SERVICE INFORMATION >

## TOW TRUCK TOWING


### Tow Truck Towing

INFOID:000000001645391

#### CAUTION:


- All applicable state or Provincial (in Canada) laws and local laws regarding the towing operation must be obeyed.
- It is necessary to use proper towing equipment to avoid possible damage to the vehicle during towing operation. Towing is in accordance with Towing Procedure Manual at dealer.
- Always attach safety chains before towing.
- When towing, make sure that the transmission, steering system and power train are in good order. If any unit is damaged, dollies must be used.

NISSAN recommends that the vehicle be towed with the driving (rear) wheels off the ground as illustrated.

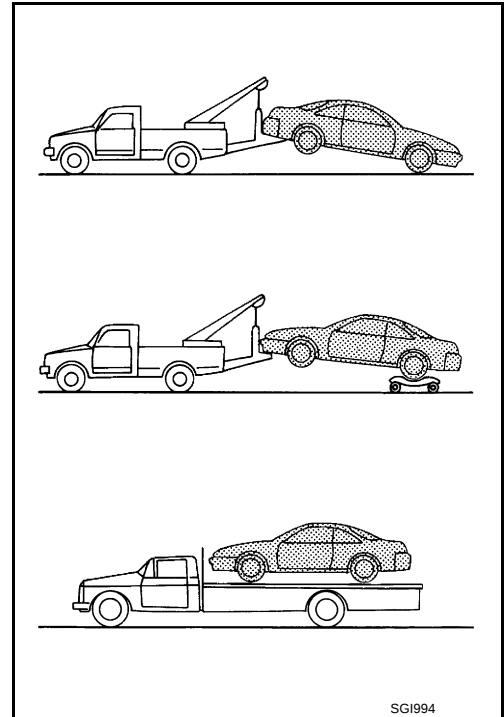

#### CAUTION:

- Never tow an automatic transmission model with the rear wheels or four wheels on the ground (forward or backward). This may cause serious and expensive damage to the transmission.
- When towing with the front wheels on the ground (if you do not use towing dollies), turn the ignition key to the OFF position, and secure the steering wheel in the straight-ahead position with a rope or similar device. Never place the ignition key in the LOCK position. This will result in damage to the steering lock mechanism.
- When towing a manual transmission model with the rear wheels on the ground (if you do not use towing dollies), release the parking brake and move the shift lever to the N (Neutral) position.

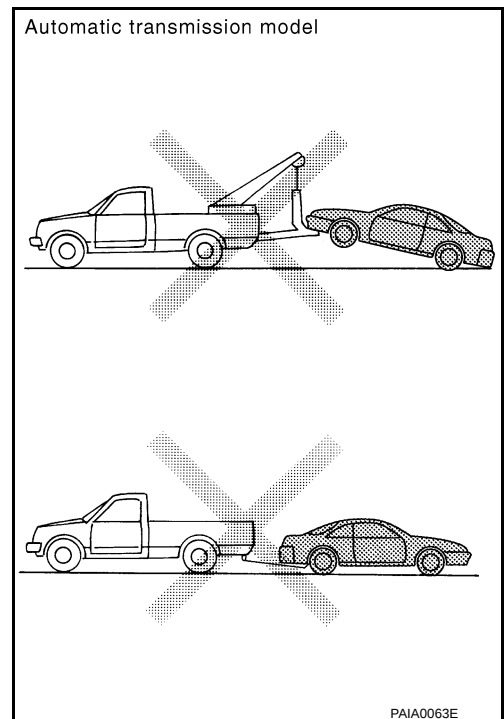

### Vehicle Recovery (Freeing a Stuck Vehicle)

INFOID:000000001645392

#### FRONT

## TOW TRUCK TOWING


### < SERVICE INFORMATION >

After removing the front licence plate (if so equipped),

- 1 Remove the recovery hook cover from the bumper.
- 2 Securely install the recovery hook stored with jacking tools. Make sure that the hook is properly secured in the stored place after use.

#### **WARNING:**

- **Stand clear of a stuck vehicle.**
- **Do not spin your tires at high speed. This could cause them to explode and result in serious injury. Parts of your vehicle could also overheat and be damaged.**

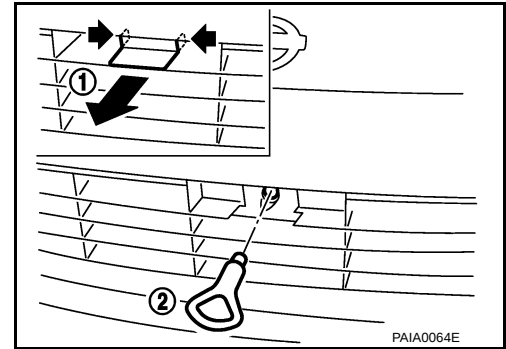

#### **CAUTION:**

- **Tow chains or cables must be attached only to the vehicle recovery hooks or main structural members of the vehicle. Otherwise, the vehicle body will be damaged.**
- **Do not use the vehicle tie downs to free a vehicle stuck in sand, snow, mud, etc. Never tow a vehicle using the vehicle tie downs or recovery hooks.**
- **Always pull the cable straight out from the front of the vehicle. Never pull on the vehicle at an angle.**
- **Pulling devices should be routed so they do not touch any part of the suspension, steering, brake or cooling systems.**
- **Pull devices such as ropes or canvas straps are not recommended for use in vehicle towing or recovery.**

If your vehicle is stuck in sand, snow, mud, etc., use the following procedure:

1. Turn off the Vehicle Dynamic Control System (if so equipped).
2. Make sure the area in front and behind the vehicle is clear of obstructions.
3. Turn the steering wheel right and left to clear an area around front tires.
4. Slowly rock the vehicle forward and backward.
  - Shift back and forth between R (reverse) and D (drive) (automatic transmission models) or 1st (low) and R (reverse) (manual transmission models).
  - Apply the accelerator as little as possible to maintain the rocking motion.
  - Release the accelerator pedal before shifting between R and D (automatic transmission models) or 1st and R (manual transmission models).
  - Do not spin the tires above 35 MPH (55 km/h).
5. If the vehicle cannot be freed after a few tires, contact a professional towing service to remove the vehicle.

#### **REAR**

- Towing hook is not available.

# TIGHTENING TORQUE OF STANDARD BOLTS

< SERVICE INFORMATION >

## TIGHTENING TORQUE OF STANDARD BOLTS

### Tightening Torque Table

INFOID:000000001645393

| Grade | Bolt size | Bolt diameter *<br>mm | Pitch<br>mm | Tightening torque (Without lubricant) |      |       |       |                     |      |       |       |
|-------|-----------|-----------------------|-------------|---------------------------------------|------|-------|-------|---------------------|------|-------|-------|
|       |           |                       |             | Hexagon head bolt                     |      |       |       | Hexagon flange bolt |      |       |       |
|       |           |                       |             | N·m                                   | kg·m | ft·lb | in·lb | N·m                 | kg·m | ft·lb | in·lb |
| 4T    | M6        | 6.0                   | 1.0         | 5.5                                   | 0.56 | 4     | 49    | 7                   | 0.71 | 5     | 62    |
|       | M8        | 8.0                   | 1.25        | 13.5                                  | 1.4  | 10    | —     | 17                  | 1.7  | 13    | —     |
|       |           |                       | 1.0         | 13.5                                  | 1.4  | 10    | —     | 17                  | 1.7  | 13    | —     |
|       | M10       | 10.0                  | 1.5         | 28                                    | 2.9  | 21    | —     | 35                  | 3.6  | 26    | —     |
|       |           |                       | 1.25        | 28                                    | 2.9  | 21    | —     | 35                  | 3.6  | 26    | —     |
|       | M12       | 12.0                  | 1.75        | 45                                    | 4.6  | 33    | —     | 55                  | 5.6  | 41    | —     |
|       |           |                       | 1.25        | 45                                    | 4.6  | 33    | —     | 65                  | 6.6  | 48    | —     |
| M14   | 14.0      | 1.5                   | 80          | 8.2                                   | 59   | —     | 100   | 10                  | 74   | —     |       |
| 7T    | M6        | 6.0                   | 1.0         | 9                                     | 0.92 | 7     | 80    | 11                  | 1.1  | 8     | 97    |
|       | M8        | 8.0                   | 1.25        | 22                                    | 2.2  | 16    | —     | 28                  | 2.9  | 21    | —     |
|       |           |                       | 1.0         | 22                                    | 2.2  | 16    | —     | 28                  | 2.9  | 21    | —     |
|       | M10       | 10.0                  | 1.5         | 45                                    | 4.6  | 33    | —     | 55                  | 5.6  | 41    | —     |
|       |           |                       | 1.25        | 45                                    | 4.6  | 33    | —     | 55                  | 5.6  | 41    | —     |
|       | M12       | 12.0                  | 1.75        | 80                                    | 8.2  | 59    | —     | 100                 | 10   | 74    | —     |
|       |           |                       | 1.25        | 80                                    | 8.2  | 59    | —     | 100                 | 10   | 74    | —     |
| M14   | 14.0      | 1.5                   | 130         | 13                                    | 96   | —     | 170   | 17                  | 125  | —     |       |
| 9T    | M6        | 6.0                   | 1.0         | 11                                    | 1.1  | 8     | —     | 13.5                | 1.4  | 10    | —     |
|       | M8        | 8.0                   | 1.25        | 28                                    | 2.9  | 21    | —     | 35                  | 3.6  | 26    | —     |
|       |           |                       | 1.0         | 28                                    | 2.9  | 21    | —     | 35                  | 3.6  | 26    | —     |
|       | M10       | 10.0                  | 1.5         | 55                                    | 5.6  | 41    | —     | 80                  | 8.2  | 59    | —     |
|       |           |                       | 1.25        | 55                                    | 5.6  | 41    | —     | 80                  | 8.2  | 59    | —     |
|       | M12       | 12.0                  | 1.75        | 100                                   | 10   | 74    | —     | 130                 | 13   | 96    | —     |
|       |           |                       | 1.25        | 100                                   | 10   | 74    | —     | 130                 | 13   | 96    | —     |
| M14   | 14.0      | 1.5                   | 170         | 17                                    | 125  | —     | 210   | 21                  | 155  | —     |       |

\*: Nominal diameter

1. **Special parts are excluded.**
2. **This standard is applicable to bolts having the following marks embossed on the bolt head.**

| Grade | Mark    |                                             |   |
|-------|---------|---------------------------------------------|---|
| 4T    | ..... 4 | M                                           | 6 |
| 7T    | ..... 7 |                                             |   |
| 9T    | ..... 9 |                                             |   |
|       |         | Nominal diameter of bolt threads (Unit: mm) |   |
|       |         | Metric screw threads                        |   |

MG1044A

# RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS

< SERVICE INFORMATION >

## RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS

### Recommended Chemical Product and Sealant

INFOID:000000001645394

Refer to the following chart for help in selecting the appropriate chemical product or sealant.

|   | Product Description                                          | Purpose                                                                                                                                                | Nissan North America<br>Part No. (USA) | Nissan Canada Part<br>No. (Canada) | Aftermarket Cross-<br>reference Part Nos.                                                                                 |
|---|--------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------|------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| 1 | Rear View Mirror Adhesive                                    | Used to permanently re-mount rear view mirrors to windows.                                                                                             | 999MP-AM000P                           | 99998-50505                        | Permatex 81844                                                                                                            |
| 2 | Anaerobic Liquid Gasket                                      | For metal-to-metal flange sealing.<br>Can fill a 0.38 mm (0.015 inch) gap and provide instant sealing for most powertrain applications.                | 999MP-AM001P                           | 99998-50503                        | Permatex 51813 and 51817                                                                                                  |
| 3 | High Performance Thread Sealant                              | Provides instant sealing on any threaded straight or parallel threaded fitting. (Thread sealant only, no locking ability.)<br>• Do not use on plastic. | 999MP-AM002P                           | 999MP-AM002P                       | Permatex 56521                                                                                                            |
| 4 | Silicone RTV                                                 | Gasket Maker                                                                                                                                           | 999MP-AM003P<br>(Ultra Grey)           | 99998-50506<br>(Ultra Grey)        | Permatex Ultra Grey 82194;<br>Three Bond 1207, 1215, 1216, 1217F, 1217G and 1217H<br>Nissan RTV Part No. 999MP-A7007      |
|   |                                                              | Gasket Maker for Maxima/Quest 5-speed automatic transmission (RE5F22A)                                                                                 | —                                      | —                                  | Three Bond 1281B or exact equivalent in its quality                                                                       |
| 5 | High Temperature, High Strength Thread Locking Sealant (Red) | Threadlocker                                                                                                                                           | 999MP-AM004P                           | 999MP-AM004P                       | Permatex 27200;<br>Three Bond 1360, 1360N, 1305 N&P, 1307N, 1335, 1335B, 1363B, 1377C, 1386B, D&E and 1388<br>Loctite 648 |
| 6 | Medium Strength Thread Locking Sealant (Blue)                | Threadlocker (service tool removable)                                                                                                                  | 999MP-AM005P                           | 999MP-AM005P                       | Permatex 24200, 24206, 24240, 24283 and 09178;<br>Three Bond 1322, 1322N, 1324 D&N, 1333D, 1361C, 1364D, 1370C and 1374   |

# IDENTIFICATION INFORMATION

< SERVICE INFORMATION >


## IDENTIFICATION INFORMATION

### Model Variation

INFOID:000000001645395

| Destination | Body    | Engine      | Axle | Transmission | Grade      | Model       |             |
|-------------|---------|-------------|------|--------------|------------|-------------|-------------|
| USA         | Coupe   | VQ35HR      | 2WD  | 6MT          | Base       | GLTALRY-EUA |             |
|             |         |             |      |              | Enthusiast | GLTALSY-EUA |             |
|             |         |             |      | 5AT          |            | Enthusiast  | GLTALSN-EUA |
|             |         |             |      |              | 6MT        |             | Touring     |
|             |         |             |      | 5AT          |            | Touring     |             |
|             |         |             |      |              | 6MT        |             | GT          |
|             |         |             |      | 5AT          |            | GT          |             |
|             |         |             |      |              | Roadster   |             | 6MT         |
|             | 5AT     |             |      | Enthusiast   |            | 2LTALSN-EUA |             |
|             |         |             |      |              |            | 6MT         | Touring     |
|             | 5AT     |             |      | Touring      |            |             |             |
|             |         |             |      |              |            | 6MT         | GT          |
|             | 5AT     |             |      | GT           |            |             |             |
|             |         |             |      |              | Canada     | Coupe       | 6MT         |
|             | 5AT     |             |      | Touring      |            |             |             |
|             |         |             |      |              |            |             | 6MT         |
| 5AT         | GT      | GLTALVN-ENA |      |              |            |             |             |
|             |         | Roadster    | 6MT  | Touring      |            | 2LTALTY-ENA |             |
| 5AT         | Touring |             |      |              |            | 2LTALTN-ENA |             |
|             |         |             | 6MT  | GT           |            | 2LTALVY-ENA |             |
| 5AT         | GT      |             |      |              |            | 2LTALVN-ENA |             |


Model variation code (Prefix and suffix designations):

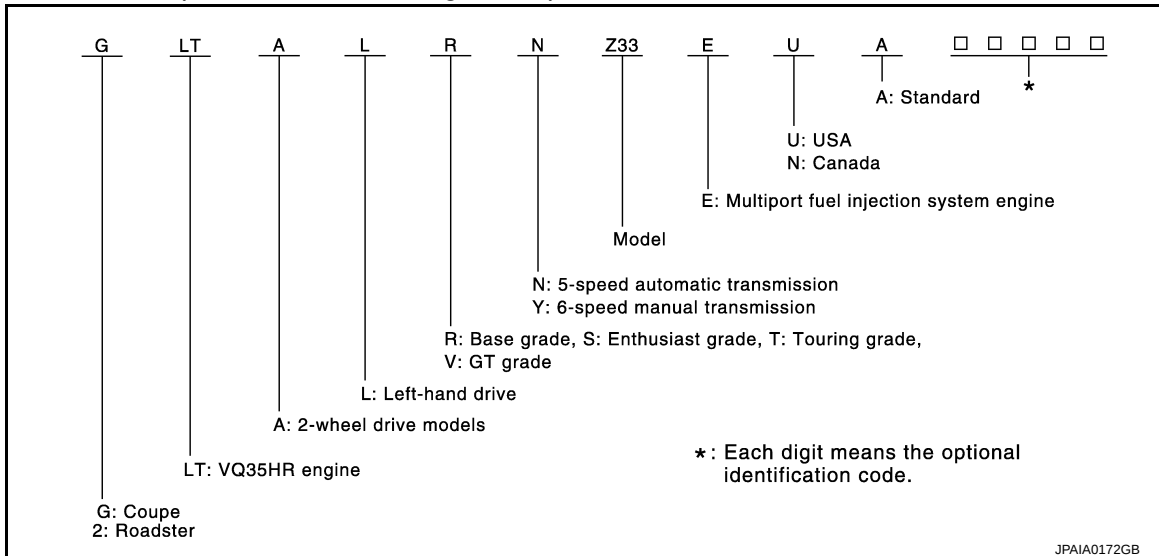

# IDENTIFICATION INFORMATION

## < SERVICE INFORMATION >

### IDENTIFICATION NUMBER

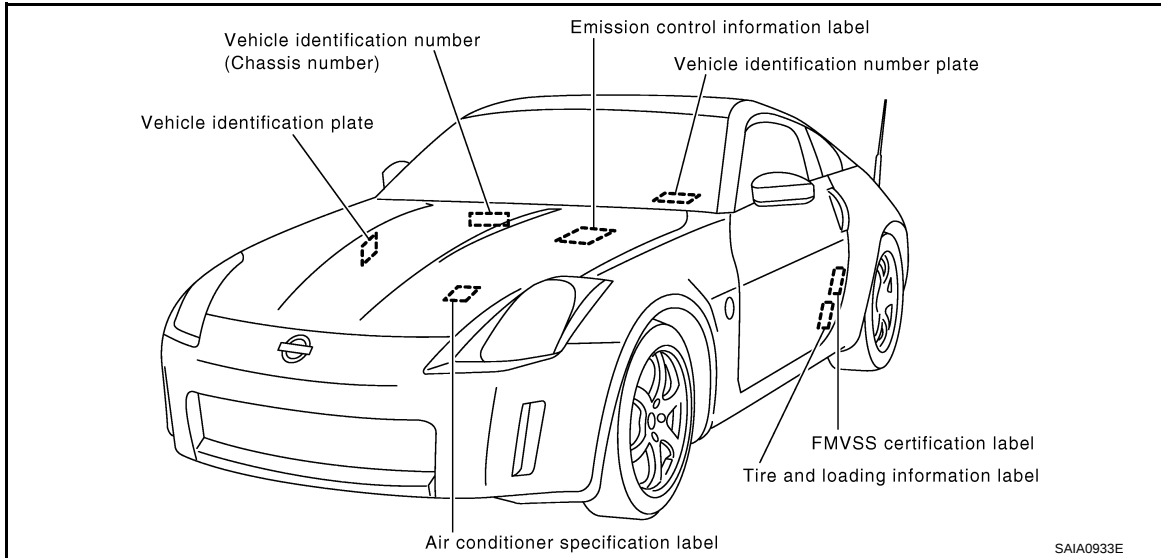


### VEHICLE IDENTIFICATION NUMBER ARRANGEMENT

|                                |             |                |                       |                         |                                                                                                                     |                                                                         |                    |                     |                       |
|--------------------------------|-------------|----------------|-----------------------|-------------------------|---------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------|--------------------|---------------------|-----------------------|
| JN1                            | B           | Z              | 3                     | 4                       | D                                                                                                                   | *                                                                       | 8                  | M                   | XXXXXX                |
| Manufacturer                   | Engine type | Vehicle line   | Model change (0 to 9) | Body type               | Restraint system                                                                                                    | Check digit (0 to 9 or X)                                               | Model year         | Manufacturing plant | Vehicle serial number |
| JN1: Nissan, Passenger vehicle | B: VQ35HR   | Z: Nissan 350Z |                       | 4: Coupe<br>6: Roadster | D: Driver and passenger SRS air bags<br>E: D + SRS side air bags + SRS curtain air bags<br>A: D + SRS side air bags | The code for the check digit is determined by mathematical computation. | 8: 2008 model year | M: Tochigi          |                       |

JPAIA0173GB

### IDENTIFICATION PLATE

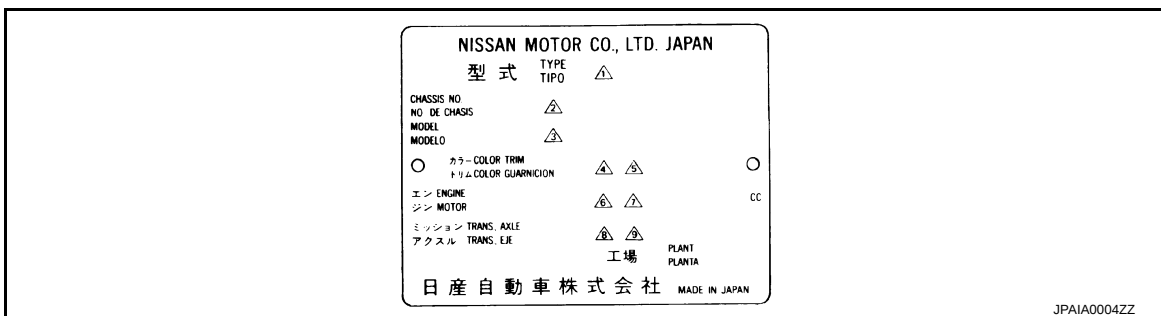


1. Type
2. Vehicle identification (Chassis number)
3. Model variation code
4. Body color code
5. Trim color code
6. Engine model
7. Engine displacement
8. Transmission model
9. Axle model


## IDENTIFICATION INFORMATION

< SERVICE INFORMATION >


ENGINE SERIAL NUMBER

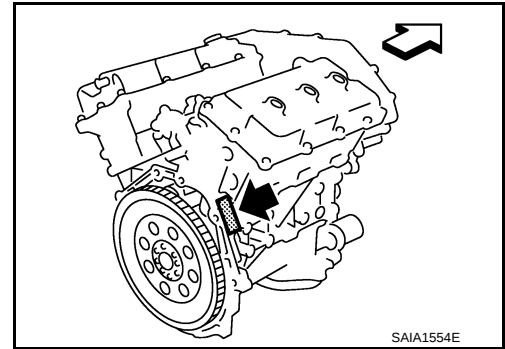

AUTOMATIC TRANSMISSION NUMBER

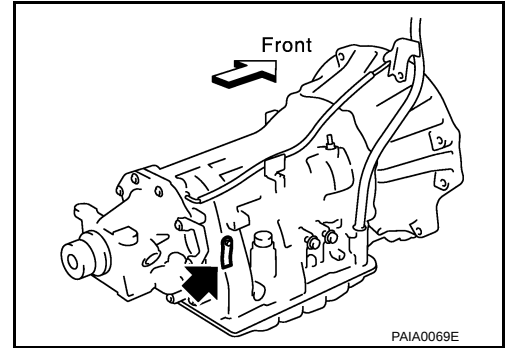

MANUAL TRANSMISSION NUMBER

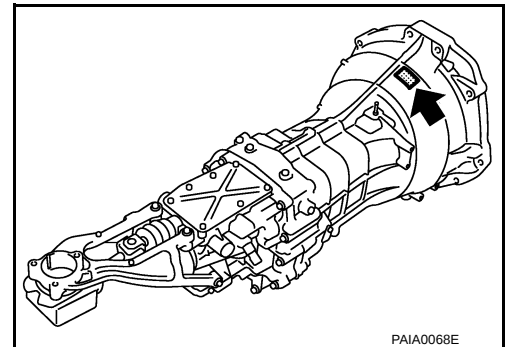

## Dimensions

INFOID:000000001645396

Unit: mm (in)

| Model          | Coupe                          | Roadster      |
|----------------|--------------------------------|---------------|
| Overall length | 4,314 (169.8)                  | 4,314 (169.8) |
| Overall width  | 1,815 (71.5)                   | 1,815 (71.5)  |
| Overall height | 1,323 (52.1)                   | 1,333 (52.5)  |
| Front tread    | 1,536 (60.5)                   | 1,536 (60.5)  |
| Rear tread     | 1,540 (60.6)*1, 1,546 (60.9)*2 | 1,540 (60.6)  |
| Wheelbase      | 2,650 (104.3)                  | 2,650 (104.3) |

\*1: For model with 245/45R18 tires

\*2: For model with 265/35R19 tires

## Wheels & Tires

INFOID:000000001645397

## IDENTIFICATION INFORMATION

### < SERVICE INFORMATION >

| Application       |         | Conventional |                                 | Spare                   |
|-------------------|---------|--------------|---------------------------------|-------------------------|
| Road wheel/offset | mm (in) | Front        | 18 x 8JJ Aluminum/30 (1.18)     | 17 x 4T Steel/30 (1.18) |
|                   |         |              | 18 x 9JJ Aluminum/30 (1.18)     |                         |
|                   |         | Rear         | 18 x 8-1/2JJ Aluminum/33 (1.30) |                         |
|                   |         |              | 19 x 10JJ Aluminum/30 (1.18)    |                         |
| Tire size         |         | Front        | 225/45R18 91W                   | T145/80D17 107M         |
|                   |         |              | 245/40R18 93W                   |                         |
|                   |         | Rear         | 245/45R18 96W                   |                         |
|                   |         |              | 265/35R19 94W                   |                         |

# TERMINOLOGY

< SERVICE INFORMATION >

## TERMINOLOGY

### SAE J1930 Terminology List

INFOID:000000001645398

All emission related terms used in this publication in accordance with SAE J1930 are listed. Accordingly, new terms, new acronyms/abbreviations and old terms are listed in the following chart.

| NEW TERM                                            | NEW ACRONYM /<br>ABBREVIATION | OLD TERM                             |
|-----------------------------------------------------|-------------------------------|--------------------------------------|
| Air cleaner                                         | ACL                           | Air cleaner                          |
| Barometric pressure                                 | BARO                          | ***                                  |
| Barometric pressure sensor-BCDD                     | BAROS-BCDD                    | BCDD                                 |
| Camshaft position                                   | CMP                           | ***                                  |
| Camshaft position sensor                            | CMPS                          | Crank angle sensor                   |
| Canister                                            | ***                           | Canister                             |
| Carburetor                                          | CARB                          | Carburetor                           |
| Charge air cooler                                   | CAC                           | Intercooler                          |
| Closed loop                                         | CL                            | Closed loop                          |
| Closed throttle position switch                     | CTP switch                    | Idle switch                          |
| Clutch pedal position switch                        | CPP switch                    | Clutch switch                        |
| Continuous fuel injection system                    | CFI system                    | ***                                  |
| Continuous trap oxidizer system                     | CTOX system                   | ***                                  |
| Crankshaft position                                 | CKP                           | ***                                  |
| Crankshaft position sensor                          | CKPS                          | ***                                  |
| Data link connector                                 | DLC                           | ***                                  |
| Data link connector for CONSULT-III                 | DLC for CONSULT-III           | Diagnostic connector for CONSULT-III |
| Diagnostic test mode                                | DTM                           | Diagnostic mode                      |
| Diagnostic test mode selector                       | DTM selector                  | Diagnostic mode selector             |
| Diagnostic test mode I                              | DTM I                         | Mode I                               |
| Diagnostic test mode II                             | DTM II                        | Mode II                              |
| Diagnostic trouble code                             | DTC                           | Malfunction code                     |
| Direct fuel injection system                        | DFI system                    | ***                                  |
| Distributor ignition system                         | DI system                     | Ignition timing control              |
| Early fuel evaporation-mixture heater               | EFE-mixture heater            | Mixture heater                       |
| Early fuel evaporation system                       | EFE system                    | Mixture heater control               |
| Electrically erasable programmable read only memory | EEPROM                        | ***                                  |
| Electronic ignition system                          | EI system                     | Ignition timing control              |
| Engine control                                      | EC                            | ***                                  |
| Engine control module                               | ECM                           | ECCS control unit                    |
| Engine coolant temperature                          | ECT                           | Engine temperature                   |
| Engine coolant temperature sensor                   | ECTS                          | Engine temperature sensor            |
| Engine modification                                 | EM                            | ***                                  |
| Engine speed                                        | RPM                           | Engine speed                         |
| Erasable programmable read only memory              | EPROM                         | ***                                  |
| Evaporative emission canister                       | EVAP canister                 | Canister                             |
| Evaporative emission system                         | EVAP system                   | Canister control solenoid valve      |
| Exhaust gas recirculation valve                     | EGR valve                     | EGR valve                            |

# TERMINOLOGY

## < SERVICE INFORMATION >

| NEW TERM                                                  | NEW ACRONYM /<br>ABBREVIATION       | OLD TERM                              |
|-----------------------------------------------------------|-------------------------------------|---------------------------------------|
| Exhaust gas recirculation control-BPT valve               | EGRC-BPT valve                      | BPT valve                             |
| Exhaust gas recirculation control-solenoid valve          | EGRC-solenoid valve                 | EGR control solenoid valve            |
| Exhaust gas recirculation temperature sensor              | EGRT sensor                         | Exhaust gas temperature sensor        |
| EGR temperature sensor                                    |                                     |                                       |
| Flash electrically erasable programmable read only memory | FEEPROM                             | ***                                   |
| Flash erasable programmable read only memory              | FEPRM                               | ***                                   |
| Flexible fuel sensor                                      | FFS                                 | ***                                   |
| Flexible fuel system                                      | FF system                           | ***                                   |
| Fuel pressure regulator                                   | ***                                 | Pressure regulator                    |
| Fuel pressure regulator control solenoid valve            | ***                                 | PRVR control solenoid valve           |
| Fuel trim                                                 | FT                                  | ***                                   |
| Heated Oxygen sensor                                      | HO2S                                | Exhaust gas sensor                    |
| Idle air control system                                   | IAC system                          | Idle speed control                    |
| Idle air control valve-air regulator                      | IACV-air regulator                  | Air regulator                         |
| Idle air control valve-auxiliary air control valve        | IACV-AAC valve                      | Auxiliary air control (AAC) valve     |
| Idle air control valve-FICD solenoid valve                | IACV-FICD solenoid valve            | FICD solenoid valve                   |
| Idle air control valve-idle up control solenoid valve     | IACV-idle up control solenoid valve | Idle up control solenoid valve        |
| Idle speed control-FI pot                                 | ISC-FI pot                          | FI pot                                |
| Idle speed control system                                 | ISC system                          | ***                                   |
| Ignition control                                          | IC                                  | ***                                   |
| Ignition control module                                   | ICM                                 | ***                                   |
| Indirect fuel injection system                            | IFI system                          | ***                                   |
| Intake air                                                | IA                                  | Air                                   |
| Intake air temperature sensor                             | IAT sensor                          | Air temperature sensor                |
| Knock                                                     | ***                                 | Detonation                            |
| Knock sensor                                              | KS                                  | Detonation sensor                     |
| Malfunction indicator lamp                                | MIL                                 | Check engine light                    |
| Manifold absolute pressure                                | MAP                                 | ***                                   |
| Manifold absolute pressure sensor                         | MAPS                                | ***                                   |
| Manifold differential pressure                            | MDP                                 | ***                                   |
| Manifold differential pressure sensor                     | MDPS                                | ***                                   |
| Manifold surface temperature                              | MST                                 | ***                                   |
| Manifold surface temperature sensor                       | MSTS                                | ***                                   |
| Manifold vacuum zone                                      | MVZ                                 | ***                                   |
| Manifold vacuum zone sensor                               | MVZS                                | ***                                   |
| Mass air flow sensor                                      | MAFS                                | Air flow meter                        |
| Mixture control solenoid valve                            | MC solenoid valve                   | Air-fuel ratio control solenoid valve |
| Multiport fuel injection System                           | MFI system                          | Fuel injection control                |

# TERMINOLOGY

## < SERVICE INFORMATION >

| NEW TERM                                              | NEW ACRONYM /<br>ABBREVIATION | OLD TERM                                       |
|-------------------------------------------------------|-------------------------------|------------------------------------------------|
| Nonvolatile random access memory                      | NVRAM                         | ***                                            |
| On board diagnostic system                            | OBD system                    | Self-diagnosis                                 |
| Open loop                                             | OL                            | Open loop                                      |
| Oxidation catalyst                                    | OC                            | Catalyst                                       |
| Oxidation catalytic converter system                  | OC system                     | ***                                            |
| Oxygen sensor                                         | O2S                           | Exhaust gas sensor                             |
| Park position switch                                  | ***                           | Park switch                                    |
| Park/neutral position switch                          | PNP switch                    | Park/neutral switch<br>Neutral position switch |
| Periodic trap oxidizer system                         | PTOX system                   | ***                                            |
| Positive crankcase ventilation                        | PCV                           | Positive crankcase ventilation                 |
| Positive crankcase ventilation valve                  | PCV valve                     | PCV valve                                      |
| Powertrain control module                             | PCM                           | ***                                            |
| Programmable read only memory                         | PROM                          | ***                                            |
| Pulsed secondary air injection control solenoid valve | PAIRC solenoid valve          | AIV control solenoid valve                     |
| Pulsed secondary air injection system                 | PAIR system                   | Air induction valve (AIV) control              |
| Pulsed secondary air injection valve                  | PAIR valve                    | Air induction valve                            |
| Random access memory                                  | RAM                           | ***                                            |
| Read only memory                                      | ROM                           | ***                                            |
| Scan tool                                             | ST                            | ***                                            |
| Secondary air injection pump                          | AIR pump                      | ***                                            |
| Secondary air injection system                        | AIR system                    | ***                                            |
| Sequential multiport fuel injection system            | SFI system                    | Sequential fuel injection                      |
| Service reminder indicator                            | SRI                           | ***                                            |
| Simultaneous multiport fuel injection system          | ***                           | Simultaneous fuel injection                    |
| Smoke puff limiter system                             | SPL system                    | ***                                            |
| Supercharger                                          | SC                            | ***                                            |
| Supercharger bypass                                   | SCB                           | ***                                            |
| System readiness test                                 | SRT                           | ***                                            |
| Thermal vacuum valve                                  | TVV                           | Thermal vacuum valve                           |
| Three way catalyst                                    | TWC                           | Catalyst                                       |
| Three way catalytic converter system                  | TWC system                    | ***                                            |
| Three way + oxidation catalyst                        | TWC + OC                      | Catalyst                                       |
| Three way + oxidation catalytic converter system      | TWC + OC system               | ***                                            |
| Throttle body                                         | TB                            | Throttle chamber<br>SPI body                   |
| Throttle body fuel injection system                   | TBI system                    | Fuel injection control                         |
| Throttle position                                     | TP                            | Throttle position                              |
| Throttle position sensor                              | TPS                           | Throttle sensor                                |
| Throttle position switch                              | TP switch                     | Throttle switch                                |
| Torque converter clutch solenoid valve                | TCC solenoid valve            | Lock-up cancel solenoid<br>Lock-up solenoid    |
| Transmission control module                           | TCM                           | A/T control unit                               |

GI

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

## TERMINOLOGY

### < SERVICE INFORMATION >

| NEW TERM                                     | NEW ACRONYM /<br>ABBREVIATION | OLD TERM             |
|----------------------------------------------|-------------------------------|----------------------|
| Turbocharger                                 | TC                            | Turbocharger         |
| Vehicle speed sensor                         | VSS                           | Vehicle speed sensor |
| Volume air flow sensor                       | VAFS                          | Air flow meter       |
| Warm up oxidation catalyst                   | WU-OC                         | Catalyst             |
| Warm up oxidation catalytic converter system | WU-OC system                  | ***                  |
| Warm up three way catalyst                   | WU-TWC                        | Catalyst             |
| Warm up three way catalytic converter system | WU-TWC system                 | ***                  |
| Wide open throttle position switch           | WOTP switch                   | Full switch          |

\*\*\*: Not applicable

## INSPECTION AND ADJUSTMENT

< SERVICE INFORMATION >

### INSPECTION AND ADJUSTMENT

#### ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Required Procedure After Battery Disconnection

INFOID:000000003113946

| SYSTEM                        | ITEM                                                             | REFERENCE                                         |
|-------------------------------|------------------------------------------------------------------|---------------------------------------------------|
| Automatic temperature control | Temperature setting trimmer                                      | <a href="#">ATC-39, "Self-Diagnosis Function"</a> |
|                               | Foot position setting trimmer                                    | <a href="#">ATC-39, "Self-Diagnosis Function"</a> |
|                               | Inlet port memory function                                       | <a href="#">ATC-39, "Self-Diagnosis Function"</a> |
| Automatic drive positioner    | Automatic drive positioner system                                | —                                                 |
| Power window control          | Power window control system                                      | <a href="#">GW-19, "System Description"</a>       |
| Sunroof system                | Sunroof system                                                   | <a href="#">RF-13, "System Description"</a>       |
| Sunshade system               | Sunshade system                                                  | <a href="#">RF-13, "System Description"</a>       |
| Rear view monitor             | Rear view monitor possible route line center position adjustment | —                                                 |