

SECTION **SE**  
SEAT

A  
B  
C

D

E

F

G

H

**SE**

J

K

L

M

N

O

P

CONTENTS

<b>SERVICE INFORMATION</b> .....	2	Trouble Diagnosis Symptom Chart .....	35
<b>PRECAUTIONS</b> .....	2	Check BCM Power Supply and Ground .....	36
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	2	Check Driver Side Seat Power Supply and Ground .....	38
Service Notice .....	2	Check Driver Side Seat Sliding Motor Circuit .....	39
Precaution for Battery Service .....	2	Check Driver Side Seat Reclining Motor Circuit .....	40
Precaution for Work .....	2	Check Passenger Seat Control Unit Power Supply and Ground .....	41
<b>PREPARATION</b> .....	4	Check Passenger Seat Control Unit Ignition Signal Circuit .....	42
Special Service Tool .....	4	Check Passenger Side Seat Sliding Motor Circuit .....	42
Commercial Service Tool .....	4	Check Passenger Side Seat Reclining Motor Circuit .....	43
<b>SQUEAK AND RATTLE TROUBLE DIAGNOSIS</b> .....	5	Check Passenger Side Seat Reclining Sensor Circuit .....	44
Work Flow .....	5	Check Passenger Side Seat Sliding Switch Circuit .....	45
Generic Squeak and Rattle Troubleshooting .....	7	Check Passenger Side Seat Reclining Switch Circuit .....	46
Diagnostic Worksheet .....	9	Check Passenger Side Power Seat Switch Ground Circuit .....	47
<b>CLIP LIST</b> .....	11	Check Seatback Tilt Switch Circuit .....	47
Clip List .....	11	Check Seatback Tilt Cancel Switch Circuit .....	49
<b>POWER SEAT/FOR COUPE</b> .....	12	Check Soft Top Switch Circuit .....	50
Wiring Diagram - SEAT - /For Driver Seat .....	12	Check Power Window Down Request Signal Circuit .....	51
Wiring Diagram - SEAT - /For Passenger Seat .....	14	Check Storage Lid Close Signal Circuit .....	51
<b>POWER SEAT/FOR ROADSTER</b> .....	15	Check Soft Top Lock Switch Circuit .....	52
Component Parts and Harness Connector Location .....	15	Check Seat Belt Buckle Switch Circuit .....	52
System Description .....	16	Check Vehicle Speed Signal .....	53
Wiring Diagram - SEAT - / for Driver Seat .....	25	<b>HEATED SEAT</b> .....	55
Schematic / for Passenger Seat .....	27	Description .....	55
Wiring Diagram - SEAT - / for Passenger Seat .....	28	Schematic .....	56
Terminal and Reference Value for Passenger Seat Control Unit .....	33	Wiring Diagram - HSEAT -/For Coupe .....	57
Terminal and Reference Value for BCM .....	34	Wiring Diagram - HSEAT -/For Roadster- .....	60
Terminal and Reference Value for Soft Top Control Unit .....	35	<b>SEAT</b> .....	63
Terminal and Reference Value for Unified Meter and A/C Amp .....	35	Removal and Installation .....	63
Work Flow .....	35	Disassembly and Assembly .....	67

# PRECAUTIONS

< SERVICE INFORMATION >

## SERVICE INFORMATION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005874468

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SUPPLEMENTAL RESTRAINT SYSTEM" and "SEAT BELTS" of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SUPPLEMENTAL RESTRAINT SYSTEM".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Service Notice

INFOID:000000004657265

- When removing or installing various parts, place a cloth or padding onto the vehicle body to prevent scratches.
- Handle trim, molding, instruments, grille, etc. carefully during removing or installing. Be careful not to oil or damage them.
- Apply sealing compound where necessary when installing parts.
- When applying sealing compound, be careful that the sealing compound does not protrude from parts.
- When replacing any metal parts (for example body outer panel, members, etc.), be sure to take rust prevention measures.

#### Precaution for Battery Service

INFOID:000000004657266

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

#### Precaution for Work

INFOID:000000004657267

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and keep them.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with new one.

# PRECAUTIONS

## < SERVICE INFORMATION >

---

- Be sure to tighten bolts and nuts securely to the specified torque.
- After re-installation is completed, be sure to check that each part works normally.
- Follow the steps below to clean components.
- Water soluble foul: Dip a soft cloth into lukewarm water, and wring the water out of the cloth to wipe the fouled area.  
Then rub with a soft and dry cloth.
- Oily foul: Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%), and wipe the fouled area.  
Then dip a cloth into fresh water, and wring the water out of the cloth to wipe the detergent off. Then rub with a soft and dry cloth.
- Do not use organic solvent such as thinner, benzene, alcohol, and gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

A  
B  
C  
D  
E  
F  
G  
H  
J  
K  
L  
M  
N  
O  
P

**SE**

# PREPARATION


< SERVICE INFORMATION >

## PREPARATION

### Special Service Tool

INFOID:000000004657268

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

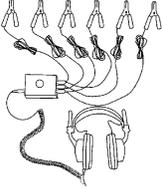Tool number (Kent-Moore No.) Tool name	Description
(J39570) Chassis ear   <p style="text-align: right; font-size: small;">SIIA0993E</p>	Locating the noise
(J43980) NISSAN Squeak and Rattle Kit   <p style="text-align: right; font-size: small;">SIIA0994E</p>	Repairing the cause of noise

### Commercial Service Tool

INFOID:000000004657269

Tool name	Description
Engine ear   <p style="text-align: right; font-size: small;">SIIA0995E</p>	Locating the noise


# SQUEAK AND RATTLE TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

## SQUEAK AND RATTLE TROUBLE DIAGNOSIS

### Work Flow

INFOID:000000004657270

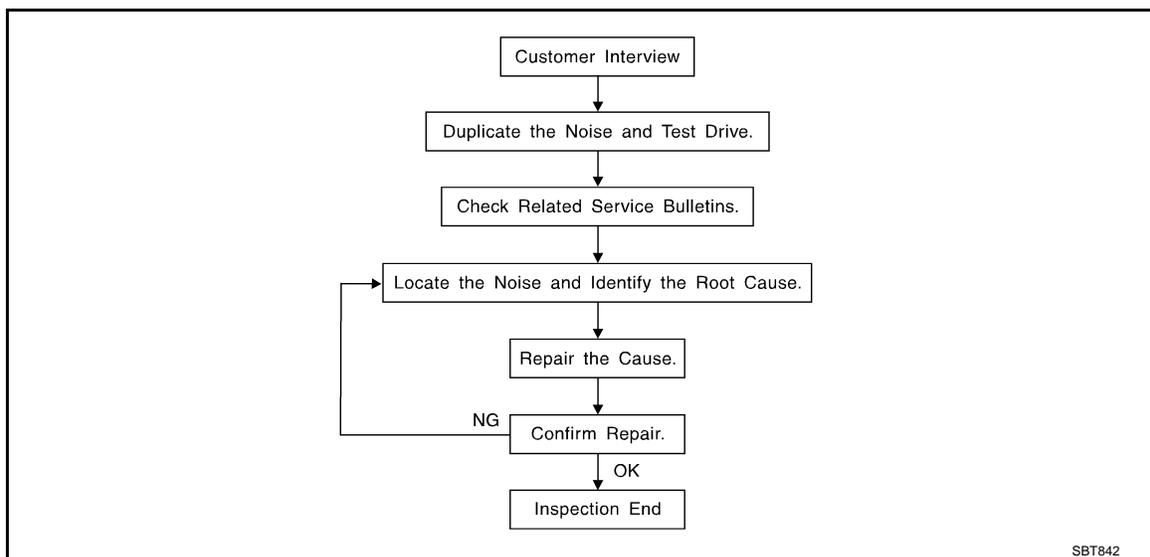

### CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any customer's comments; refer to [RF-10, "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, be sure to diagnose and repair the noise that the customer is concerned about. This can be accomplished by test driving the vehicle with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so the customer, service adviser and technician are all speaking the same language when defining the noise.
- Squeak —(Like tennis shoes on a clean floor)  
Squeak characteristics include the light contact/fast movement/brought on by road conditions/hard surfaces=higher pitch noise/softer surfaces=lower pitch noises/edge to surface=chirping
- Creak—(Like walking on an old wooden floor)  
Creak characteristics include firm contact/slow movement/twisting with a rotational movement/pitch dependent on materials/often brought on by activity.
- Rattle—(Like shaking a baby rattle)  
Rattle characteristics include the fast repeated contact/vibration or similar movement/loose parts/missing clip or fastener/incorrect clearance.
- Knock —(Like a knock on a door)  
Knock characteristics include hollow sounding/sometimes repeating/often brought on by driver action.
- Tick—(Like a clock second hand)  
Tick characteristics include gentle contacting of light materials/loose components/can be caused by driver action or road conditions.
- Thump—(Heavy, muffled knock noise)  
Thump characteristics include softer knock/dead sound often brought on by activity.
- Buzz—(Like a bumble bee)  
Buzz characteristics include high frequency rattle/firm contact.
- Often the degree of acceptable noise level will vary depending upon the person. A noise that you may judge as acceptable may be very irritating to the customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

### DUPLICATE THE NOISE AND TEST DRIVE

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when you confirm the repair.

# SQUEAK AND RATTLE TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

If the noise can be duplicated easily during the test drive, to help identify the source of the noise, try to duplicate the noise with the vehicle stopped by doing one or all of the following:

- 1) Close a door.
  - 2) Tap or push/pull around the area where the noise appears to be coming from.
  - 3) Rev the engine.
  - 4) Use a floor jack to recreate vehicle "twist".
  - 5) At idle, apply engine load (electrical load, half-clutch on M/T models, drive position on A/T models).
  - 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.
- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
  - If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

## CHECK RELATED SERVICE BULLETINS

After verifying the customer concern or symptom, check ASIST for Technical Service Bulletins (TSBs) related to that concern or symptom.

If a TSB relates to the symptom, follow the procedure to repair the noise.

## LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Chassis Ear: J-39570, Engine Ear and mechanics stethoscope).
2. Narrow down the noise to a more specific area and identify the cause of the noise by:
  - removing the components in the area that you suspect the noise is coming from.  
Do not use too much force when removing clips and fasteners, otherwise clips and fastener can be broken or lost during the repair, resulting in the creation of new noise.
  - tapping or pushing/pulling the component that you suspect is causing the noise.  
Do not tap or push/pull the component with excessive force, otherwise the noise will be eliminated only temporarily.
  - feeling for a vibration with your hand by touching the component(s) that you suspect is (are) causing the noise.
  - placing a piece of paper between components that you suspect are causing the noise.
  - looking for loose components and contact marks.Refer to [RF-8. "Generic Squeak and Rattle Troubleshooting"](#).

## REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
  - separate components by repositioning or loosening and retightening the component, if possible.
  - insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape or urethane tape. A Nissan Squeak and Rattle Kit (J-43980) is available through your authorized Nissan Parts Department.

### **CAUTION:**

**Do not use excessive force as many components are constructed of plastic and may be damaged.**

### **NOTE:**

Always check with the Parts Department for the latest parts information.

The following materials are contained in the Nissan Squeak and Rattle Kit (J-43980). Each item can be ordered separately as needed.

URETHANE PADS [1.5 mm (0.059 in) thick]

Insulates connectors, harness, etc.

76268-9E005: 100 × 135 mm (3.94 × 5.31 in)/76884-71L01: 60 × 85 mm (2.36 × 3.35 in)/76884-

71L02: 15 × 25 mm (0.59 × 0.98 in)

INSULATOR (Foam blocks)

Insulates components from contact. Can be used to fill space behind a panel.

73982-9E000: 45 mm (1.77 in) thick, 50 × 50 mm (1.97 × 1.97 in)/73982-

50Y00: 10 mm (0.39 in) thick, 50 × 50 mm (1.97 × 1.97 in)

INSULATOR (Light foam block)

80845-71L00: 30 mm (1.18 in) thick, 30 × 50 mm (1.18 × 1.97 in)

FELT CLOTH TAPE

Used to insulate where movement does not occur. Ideal for instrument panel applications.

68370-4B000: 15 × 25 mm (0.59 × 0.98 in) pad/68239-13E00: 5 mm (0.20 in) wide tape roll

The following materials, not found in the kit, can also be used to repair squeaks and rattles.

UHMW (TEFLON) TAPE

# SQUEAK AND RATTLE TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

Insulates where slight movement is present. Ideal for instrument panel applications.

### SILICONE GREASE

Used in place of UHMW tape that will be visible or not fit. Will only last a few months.

### SILICONE SPRAY

Use when grease cannot be applied.

### DUCT TAPE

Use to eliminate movement.

## CONFIRM THE REPAIR

Confirm that the cause of a noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

## Generic Squeak and Rattle Troubleshooting

INFOID:000000004657271

Refer to Table of Contents for specific component removal and installation information.

## INSTRUMENT PANEL

Most incidents are caused by contact and movement between:

1. The cluster lid A and instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar garnish
4. Instrument panel to windshield
5. Instrument panel mounting pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicon spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

### CAUTION:

**Do not use silicone spray to isolate a squeak or rattle. If you saturate the area with silicone, you will not be able to recheck the repair.**

## CENTER CONSOLE

Components to pay attention to include:

1. Shifter assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

## DOORS

Pay attention to the:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping or moving the components or pressing on them while driving to duplicate the conditions can isolate many of these incidents. You can usually insulate the areas with felt cloth tape or insulator foam blocks from the Nissan Squeak and Rattle Kit (J-43980) to repair the noise.

## TRUNK

Trunk noises are often caused by a loose jack or loose items put into the trunk by the owner.

In addition look for:

1. Trunk lid dumpers out of adjustment
2. Trunk lid striker out of adjustment
3. The trunk lid torsion bars knocking together
4. A loose license plate or bracket

# SQUEAK AND RATTLE TROUBLE DIAGNOSIS

## < SERVICE INFORMATION >

---

Most of these incidents can be repaired by adjusting, securing or insulating the item(s) or component(s) causing the noise.

### SUNROOF/HEADLINING

Noises in the sunroof/headlining area can often be traced to one of the following:

1. Sunroof lid, rail, linkage or seals making a rattle or light knocking noise
2. Sunvisor shaft shaking in the holder
3. Front or rear windshield touching headlining and squeaking

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

### SEATS

When isolating seat noise it's important to note the position the seat is in and the load placed on the seat when the noise is present. These conditions should be duplicated when verifying and isolating the cause of the noise.

Cause of seat noise include:

1. Headrest rods and holder
2. A squeak between the seat pad cushion and frame
3. The rear seatback lock and bracket

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

### UNDERHOOD

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

Causes of transmitted underhood noise include:

1. Any component mounted to the engine wall
2. Components that pass through the engine wall
3. Engine wall mounts and connectors
4. Loose radiator mounting pins
5. Hood bumpers out of adjustment
6. Hood striker out of adjustment

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move or insulate one component at a time and test drive the vehicle. Also, engine RPM or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

# SQUEAK AND RATTLE TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

## Diagnostic Worksheet

INFOID:000000004657272







### SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

Dear Nissan Customer:

We are concerned about your satisfaction with your Nissan vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your Nissan right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service advisor or technician to ensure we confirm the noise you are hearing.

#### I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.

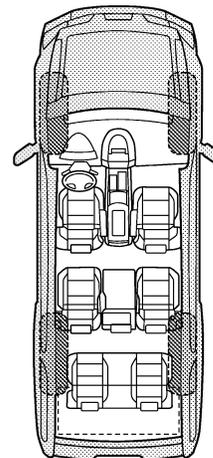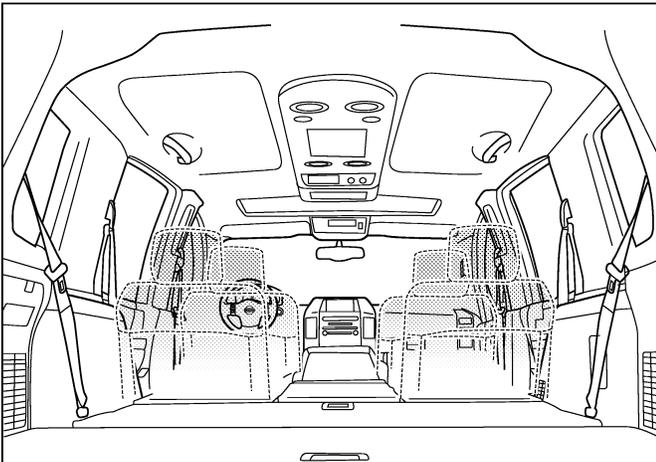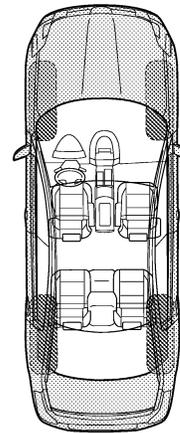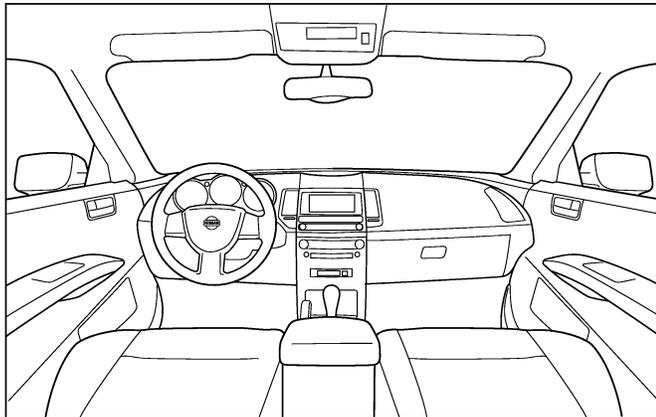

Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

PIIB8740E

A  
B  
C  
D  
E  
F  
G  
H  
SE  
J  
K  
L  
M  
N  
O  
P

# SQUEAK AND RATTLE TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

## SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

---

---

### II. WHEN DOES IT OCCUR? (please check the boxes that apply)

- |   |  |
|---|--|
| <input type="checkbox"/> anytime                      | <input type="checkbox"/> after sitting out in the rain |
| <input type="checkbox"/> 1st time in the morning      | <input type="checkbox"/> when it is raining or wet     |
| <input type="checkbox"/> only when it is cold outside | <input type="checkbox"/> dry or dusty conditions       |
| <input type="checkbox"/> only when it is hot outside  | <input type="checkbox"/> other:                        |

### III. WHEN DRIVING:

- through driveways
- over rough roads
- over speed bumps
- only about \_\_\_\_ mph
- on acceleration
- coming to a stop
- on turns: left, right or either (circle)
- with passengers or cargo
- other: \_\_\_\_\_
- after driving \_\_\_\_ miles or \_\_\_\_ minutes

### IV. WHAT TYPE OF NOISE

- squeak (like tennis shoes on a clean floor)
- creak (like walking on an old wooden floor)
- rattle (like shaking a baby rattle)
- knock (like a knock at the door)
- tick (like a clock second hand)
- thump (heavy, muffled knock noise)
- buzz (like a bumble bee)

## TO BE COMPLETED BY DEALERSHIP PERSONNEL

### Test Drive Notes:

---

---

---

	YES	NO	Initials of person performing
Vehicle test driven with customer	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise verified on test drive	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise source located and repaired	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Follow up test drive performed to confirm repair	<input type="checkbox"/>	<input type="checkbox"/>	_____

VIN: \_\_\_\_\_ Customer Name: \_\_\_\_\_  
W.O.# \_\_\_\_\_ Date: \_\_\_\_\_

This form must be attached to Work Order

PIIB8742E

# CLIP LIST

< SERVICE INFORMATION >

## CLIP LIST

### Clip List

INFOID:000000005874451

Shapes	Removal & Installation	Shapes	Removal & Installation
	<p><b>Removal:</b> Remove by bending up with flat-bladed screwdrivers or clip remover.</p>	 <p>Clip A Clip B</p>	<p><b>Removal:</b></p> <p>Finisher Clip A Flat-bladed screwdriver Clip B</p>
	<p><b>Removal:</b> Remove with a clip remover.</p>	 <p>Clip A Clip B (Grommet)</p>	<p><b>Removal:</b></p> <p>Flat-bladed screwdriver Finisher Body panel Clip A Clip B (Grommet)</p>
	<p><b>Removal:</b> Push center pin to catching position. (Do not remove center pin by hitting it.)</p> <p>Push</p> <p><b>Installation:</b></p> <p>Push</p>		<p><b>Removal:</b> Holder portion of clip must be spread out to remove rod.</p>
	<p><b>Removal:</b> Remove by bending up with flat-bladed screwdrivers or clip remover.</p> <p>Clip Finisher</p>		<p><b>Removal:</b></p> <ol style="list-style-type: none"> <li>Screw out with a Phillips screwdriver.</li> <li>Remove female portion with flat-bladed screwdriver.</li> </ol>
	<p><b>Removal:</b></p>		<p><b>Removal:</b></p> <p>Rotate 45° to remove.</p> <p><b>Installation:</b></p>
	<p><b>Removal:</b></p>		<p><b>Removal:</b></p>

JMJIA3734GB

A  
B  
C  
D  
E  
F  
G  
H  
SE  
J  
K  
L  
M  
N  
O  
P

# POWER SEAT/FOR COUPE


< SERVICE INFORMATION >

## POWER SEAT/FOR COUPE

### Wiring Diagram - SEAT - /For Driver Seat

INFOID:000000004657273

#### SE-SEAT-01

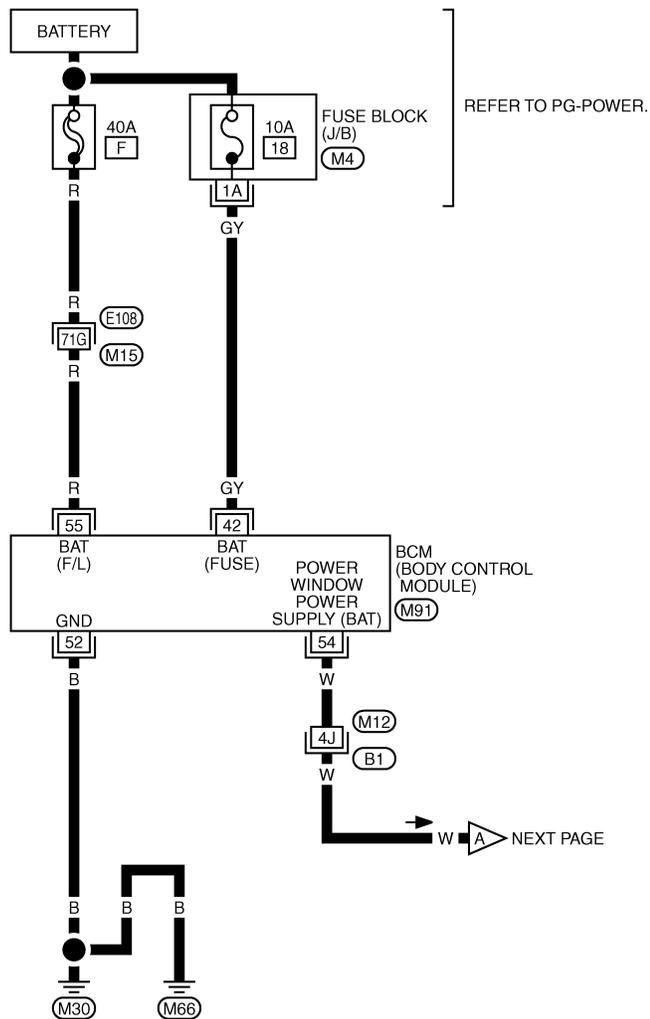



REFER TO THE FOLLOWING.  
 (E108), (B1) -SUPER MULTIPLE JUNCTION (SMJ)  
 (M4) -FUSE BLOCK-JUNCTION BOX (J/B)  
 (M91) -ELECTRICAL UNITS

TIWT1611E

# POWER SEAT/FOR COUPE

< SERVICE INFORMATION >

SE-SEAT-02

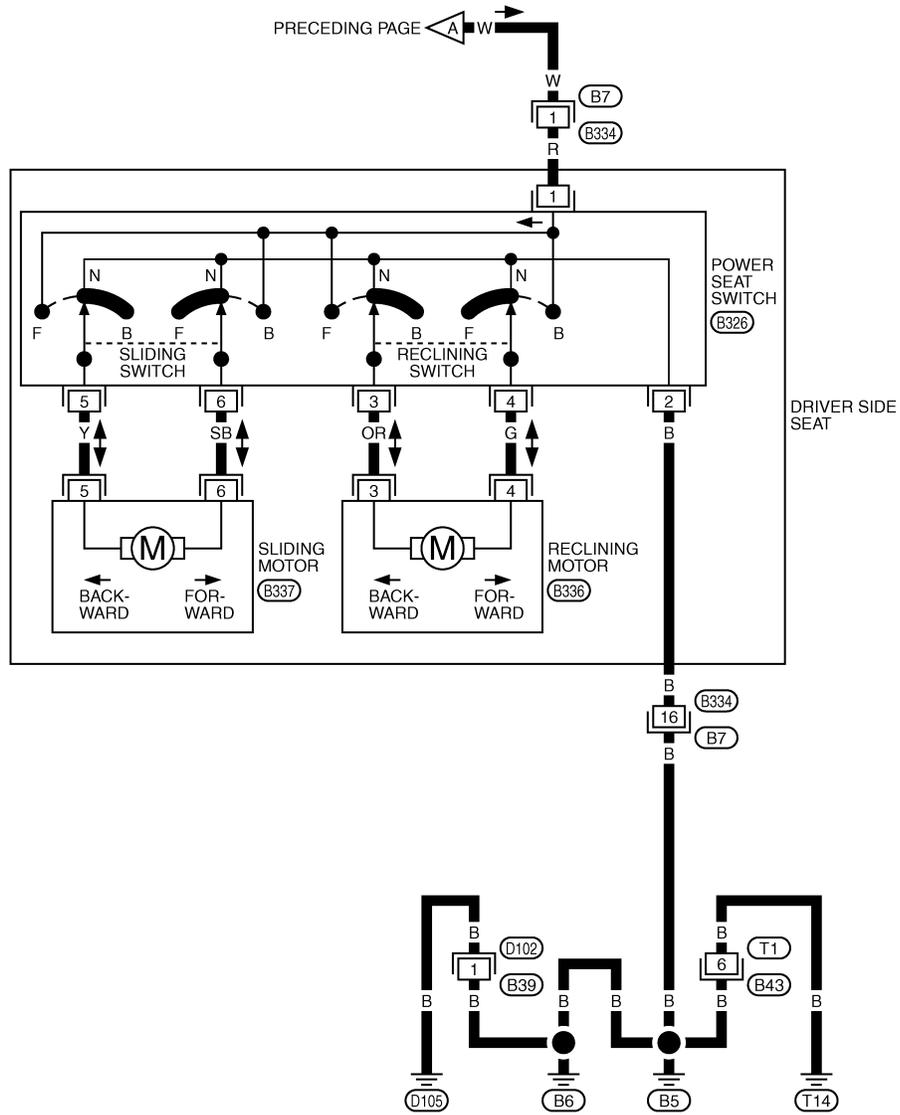

\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

TIWT0723E

A  
B  
C  
D  
E  
F  
G  
H  
SE  
J  
K  
L  
M  
N  
O  
P



# POWER SEAT/FOR COUPE

< SERVICE INFORMATION >

## Wiring Diagram - SEAT - /For Passenger Seat

INFOID:000000004657274

SE-SEAT-03

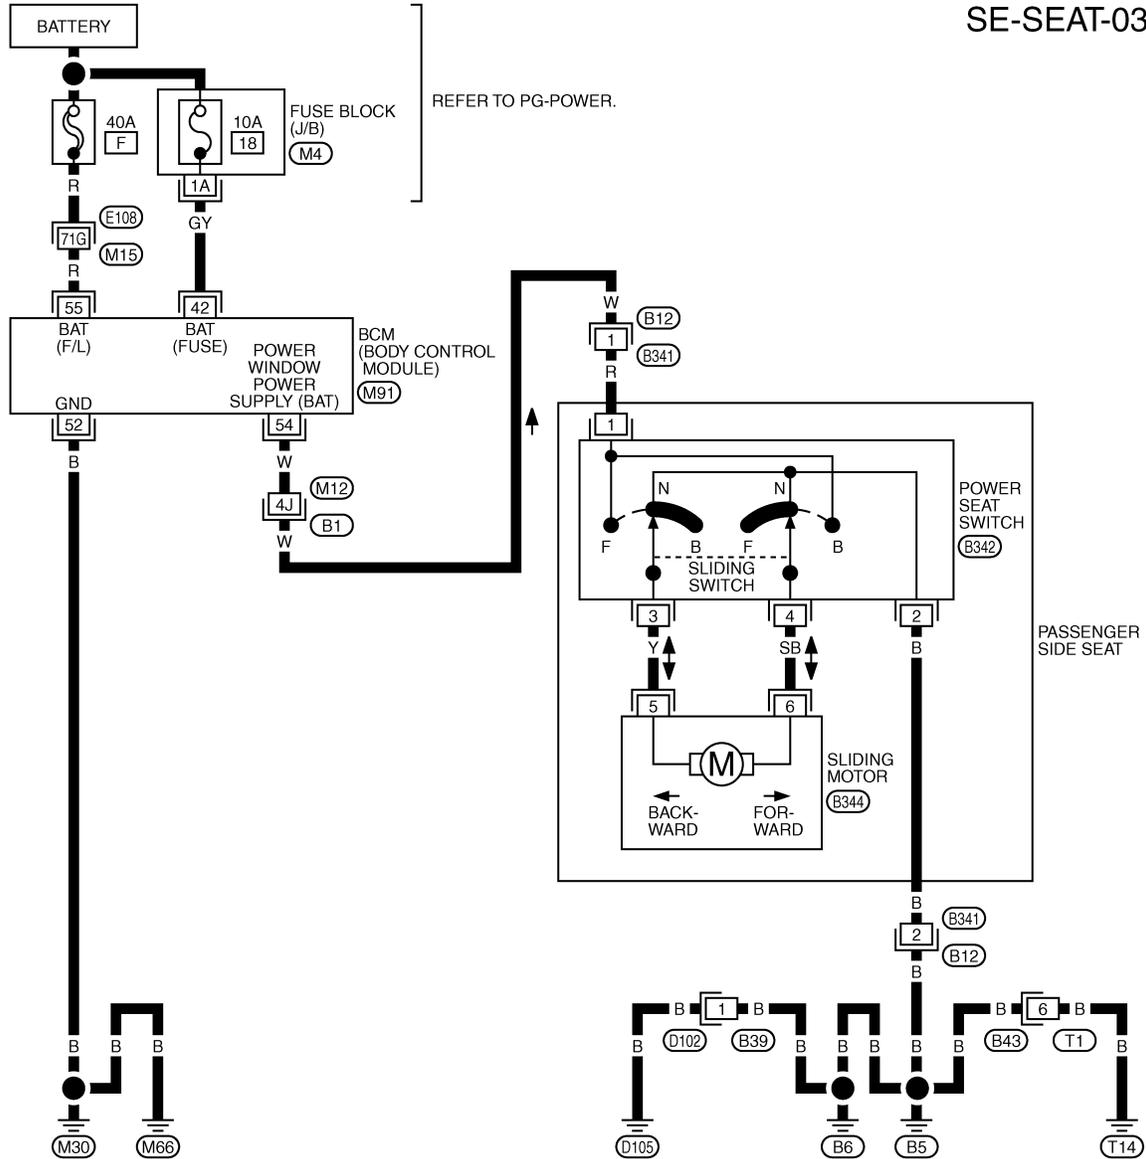

\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

REFER TO THE FOLLOWING.  
 (E108), (B1) -SUPER MULTIPLE JUNCTION (SMJ)  
 (M4) -FUSE BLOCK-JUNCTION BOX (J/B)  
 (M91) -ELECTRICAL UNITS

TIWT1612E



# POWER SEAT/FOR ROADSTER

< SERVICE INFORMATION >



## POWER SEAT/FOR ROADSTER

### Component Parts and Harness Connector Location


INFOID:000000004657275

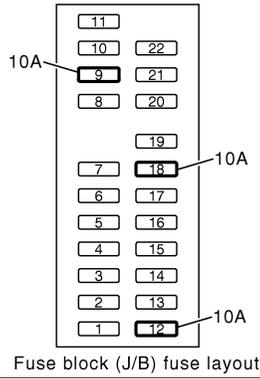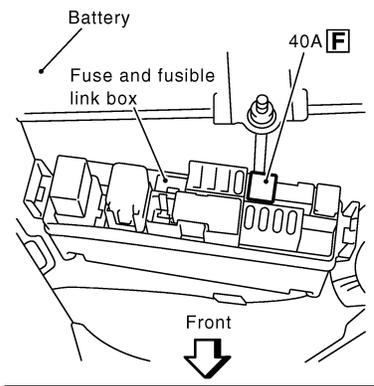


View without the LH side finisher from in board

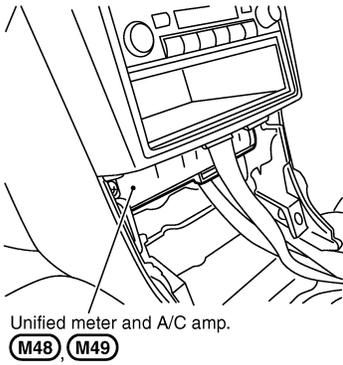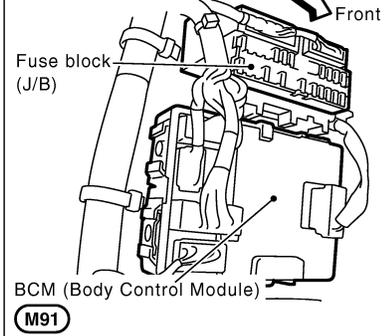



Soft top control unit B66, B67

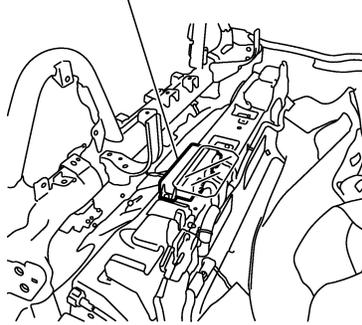


Bottom view of passenger seat

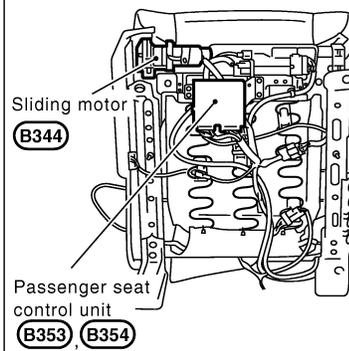


Front view of passenger side seatback without pad and trim removed

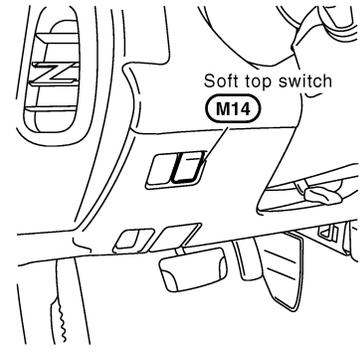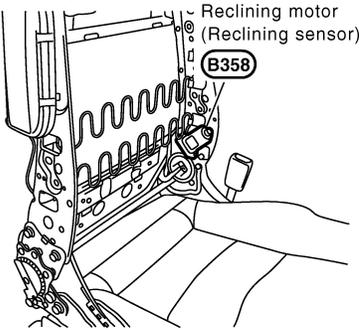



Power seat switch (Passenger side)

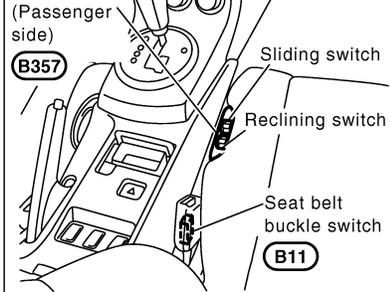

Rear view of passenger side seatback without net

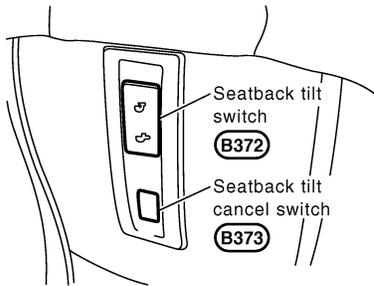

Rear view of passenger side seatback with net

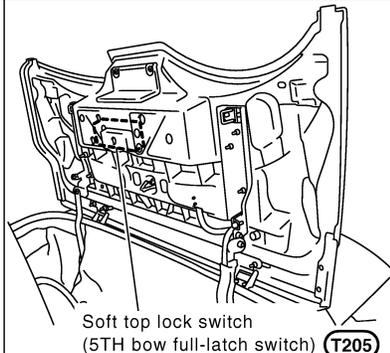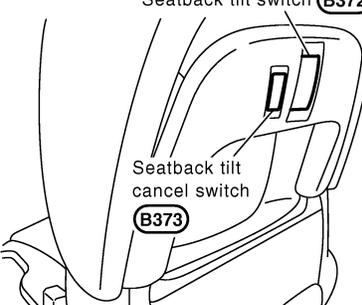


PIIB7413E

A  
B  
C  
D  
E  
F  
G  
H  
SE  
J  
K  
L  
M  
N  
O  
P

# POWER SEAT/FOR ROADSTER

< SERVICE INFORMATION >

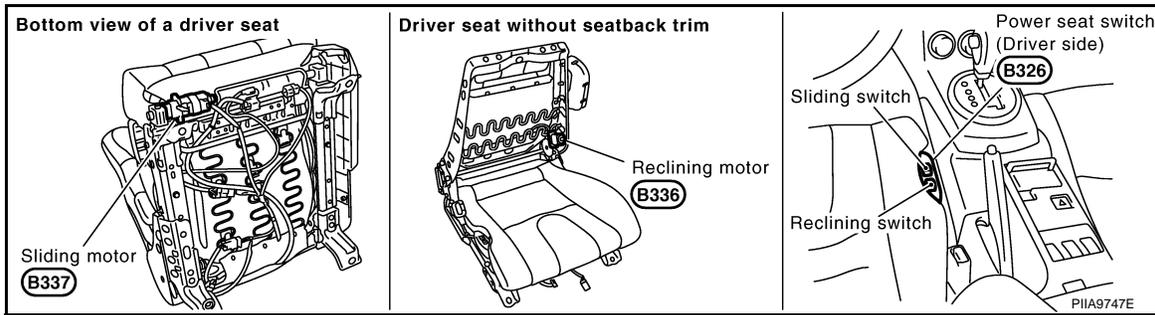

## System Description

INFOID:000000004657276

Power is supplied at all times,

- through 40A fusible link (letter **F**, located in the fusible link)
- to BCM terminal 55,
- through 10A fuse [No.18, located in the fuse block (J/B)]
- to BCM terminal 42,
- through BCM terminal 41,
- to passenger seat control unit terminal 34,
- through BCM terminal 54
- to driver side power seat switch terminal 1 and passenger seat control unit terminal 39.

When ignition switch in ON or START position, power is supplied

- through 10A fuse [No. 12, located in the fuse block (J/B)]
- to passenger seat control unit terminal 2.

When ignition switch in START position, power is supplied

- through 10A fuse [No. 9, located in the fuse block (J/B)]
- to passenger seat control unit terminal 1.

ground supplied

- to BCM terminal 52
- through body grounds M30 and M66,
- to passenger side seat control unit terminals 40, 48
- through body grounds B5, B6 and T14.

## DRIVER SIDE SEAT OPERATION

When a driver side seat sliding switch is operated forward, power is supplied

- through power seat switch terminal 5
- to sliding motor terminal 5.

Then ground is supplied

- to sliding motor terminal 6
- through power seat switch terminal 6
- through power seat switch terminal 2

The driver side seat moves forward.

When a driver side seat sliding switch is operated backward, power is supplied

- through power seat switch terminal 6
- to sliding motor terminal 6.

Then ground is supplied

- to sliding motor terminal 5
- through power seat switch terminal 5
- through power seat switch terminal 2

The driver side seat moves backward.

When a driver side seat reclining switch is operated forward, power is supplied

- through power seat switch terminal 3
- to reclining motor terminal 3.

Then ground is supplied

- to reclining motor terminal 4

# POWER SEAT/FOR ROADSTER

## < SERVICE INFORMATION >

---

- through power seat switch terminal 4
- through power seat switch terminal 2

The driver side seat folds forward.

When a driver side seat reclining switch is operated backward, power is supplied

- through power seat switch terminal 4
- to reclining motor terminal 4.

Then ground is supplied

- to reclining motor terminal 3
- through power seat switch terminal 3
- through power seat switch terminal 2

The driver side seat reclines backward.

## PASSENGER SIDE SEAT MANUAL OPERATION

When a passenger side seat sliding switch is operated forward, ground is supplied

- to passenger seat control unit terminal 14
- through power seat switch terminal 14
- through power seat switch terminal 40B
- through body ground B5, B6 and T14.

Then passenger seat control unit recognizes the forward signal, power is supplied simultaneously

- through passenger seat control unit terminal 45
- to sliding motor terminal 45

Then ground is supplied

- to sliding motor terminal 37
- through passenger seat control unit terminal 37

The passenger side seat moves forward.

When a passenger side seat sliding switch is operated backward, ground is supplied

- to passenger seat control unit terminal 15
- through power seat switch terminal 15
- through power seat switch terminal 40B
- through body ground B5, B6 and T14.

Then passenger seat control unit recognizes the backward signal, power is supplied simultaneously

- through passenger seat control unit terminal 37
- to sliding motor terminal 37

Then ground is supplied.

- to sliding motor terminal 45
- through passenger seat control unit terminal 45

The passenger side seat moves backward.

When a passenger side seat reclining switch is operated forward, ground is supplied

- to passenger seat control unit terminal 12
- through power seat switch terminal 12
- through power seat switch terminal 40B
- through body ground B5, B6 and T14.

Then passenger seat control unit recognizes the forward signal, power is supplied simultaneously

- through passenger seat control unit terminal 42
- to reclining motor terminal 42

Then ground is supplied

- to reclining motor terminal 35
- through passenger seat control unit terminal 35

The passenger side seat folds forward.

When a passenger side seat reclining switch is operated backward, ground is supplied

- to passenger seat control unit terminal 13
- through power seat switch terminal 13
- through power seat switch terminal 40B
- through body ground B5, B6 and T14.

A

B

C

D

E

F

G

H

SE

J

K

L

M

N

O

P

## POWER SEAT/FOR ROADSTER

### < SERVICE INFORMATION >

---

Then passenger seat control unit recognizes the backward signal, power is supplied simultaneously

- through passenger seat control unit terminal 35
- to reclining motor terminal 35

Then ground is supplied

- to reclining motor terminal 42
- through passenger seat control unit terminal 42

The passenger side seat reclines backward.

### PASSENGER SEATBACK TILT FORWARD/BACKWARD OPERATION

When a passenger side seatback tilt switch is operated forward, ground is supplied

- to passenger seat control unit terminal 8
- through seatback tilt switch terminal 8
- through seatback tilt switch terminal 40
- through body ground B5, B6 and T14.

Then passenger seat control unit recognizes the forward signal, power is supplied simultaneously

- through passenger seat control unit terminal 42
- to reclining motor terminal 42

Then ground is supplied

- to reclining motor terminal 35
- through passenger seat control unit terminal 35

Then, a seat folds front most forward.

When a passenger side seatback tilt switch is operated backward, ground is supplied

- to passenger seat control unit terminal 9
- through seatback tilt switch terminal 9
- through seatback tilt switch terminal 40
- through body ground B5, B6 and T14.

Then passenger seat control unit recognizes the backward signal, power is supplied simultaneously

- through passenger seat control unit terminal 35
- to reclining motor terminal 35

Then ground is supplied

- to reclining motor terminal 42
- through passenger seat control unit terminal 42.

The passenger side seat returns to former position.

### INTERLOCKING OPERATION OF THE PASSENGER SEAT WITH THE SOFT TOP

#### NOTE:

Refer to [RF-13, "System Description"](#) for detailed operation.

#### CLOSE → OPEN

When a soft top switch is operated to OPEN, ground is supplied

- to passenger seat control unit terminal 5
- through soft top switch terminal 3
- through soft top switch terminal 1
- through body ground M30 and M66.

Then passenger seat control unit recognizes the soft top OPEN signal,

Soft top control unit transmits power window down signal to passenger seat control unit,

- through soft top control unit terminal 36
- to passenger seat control unit terminal 16.

When passenger seat control unit receives power window down signal and soft top OPEN signal, power is supplied simultaneously

- through passenger seat control unit terminal 42
- to reclining motor terminal 42

Then ground is supplied

- to reclining motor terminal 35
- through passenger seat control unit terminal 35

Then, a seat folds 6° forward.

When storage lid closed, soft top control unit transmits a storage lid close signal to passenger seat control unit,

# POWER SEAT/FOR ROADSTER

## < SERVICE INFORMATION >

<ul style="list-style-type: none"><li>• through soft top control unit terminal 13</li><li>• to passenger seat control unit terminal 33.</li></ul> <p>When passenger seat control unit receives storage lid close signal, power is supplied simultaneously</p>	A
<ul style="list-style-type: none"><li>• through passenger seat control unit terminal 35</li><li>• to reclining motor terminal 35</li></ul> <p>Then ground is supplied</p>	B
<ul style="list-style-type: none"><li>• to reclining motor terminal 42</li><li>• through passenger seat control unit terminal 42.</li></ul> <p>The passenger side seat returns to former position.</p>	C
<p>OPEN → CLOSE</p> <p>When a soft top switch is operated to CLOSE, ground is supplied</p>	D
<ul style="list-style-type: none"><li>• to passenger seat control unit terminal 6</li><li>• through soft top switch terminal 4</li><li>• through soft top switch terminal 1</li><li>• through body ground M30 and M66.</li></ul> <p>Then passenger seat control unit recognizes the soft top CLOSE signal, soft top control unit transmits power window down signal to passenger seat control unit,</p>	E
<ul style="list-style-type: none"><li>• through soft top control unit terminal 36</li><li>• to passenger seat control unit terminal 16.</li></ul> <p>When passenger seat control unit receives power window down signal and soft top CLOSE signal, power is supplied simultaneously</p>	F
<ul style="list-style-type: none"><li>• through passenger seat control unit terminal 42</li><li>• to reclining motor terminal 42</li></ul> <p>Then ground is supplied</p>	G
<ul style="list-style-type: none"><li>• to reclining motor terminal 35</li><li>• through passenger seat control unit terminal 35</li></ul> <p>Then, a seat folds 6° forward.</p>	H
<p>When soft top lock switch (5th bow full latch switch) is turned ON, soft top control unit transmits a soft top lock signal to passenger seat control unit, ground is supplied</p>	SE
<ul style="list-style-type: none"><li>• to passenger seat control unit terminal 11</li><li>• through soft top lock switch (5th bow full latch switch) terminal 3</li><li>• through soft top lock switch (5th bow full latch switch) terminal 4</li><li>• through body ground B5, B6 and T14.</li></ul> <p>When passenger seat control unit receives soft top lock switch ON signal, power is supplied simultaneously</p>	J
<ul style="list-style-type: none"><li>• through passenger seat control unit terminal 35</li><li>• to reclining motor terminal 35</li></ul> <p>Then ground is supplied</p>	K
<ul style="list-style-type: none"><li>• to reclining motor terminal 42</li><li>• through passenger seat control unit terminal 42.</li></ul> <p>The passenger side seat returns to former position.</p>	L
<p><b>PASSENGER SIDE RECLINING MOTOR OPERATION</b></p> <p>When a passenger side seat reclining motor is operated, signal is transmitted</p>	M
<ul style="list-style-type: none"><li>• to passenger seat control unit terminal 3</li><li>• through reclining motor terminal 3</li><li>• through reclining motor terminal 41</li><li>• through passenger seat control unit terminal 41.</li></ul> <p>Then passenger seat control unit judges seatback angle by receiving reclining sensor signal.</p>	N
<p><b>SEATBACK TILT CANCEL SWITCH OPERATION</b></p> <p>When a passenger side seatback tilt cancel switch is operated to CANCEL, ground is supplied</p>	O
<ul style="list-style-type: none"><li>• to passenger seat control unit terminal 7</li><li>• through seatback tilt cancel switch terminal 7</li><li>• through seatback tilt cancel switch terminal 40C</li><li>• through body ground B5, B6 and T14.</li></ul> <p>Then passenger seat control unit recognizes the CANCEL signal.</p>	P

# POWER SEAT/FOR ROADSTER

## < SERVICE INFORMATION >

When a “seatback tilt cancel switch” is operated to CANCEL, the automatic operation of a passenger seat is not performed.

### MANUAL OPERATION

The seat positions can be adjusted by operating the sliding switch and reclining switch located on the side of both driver and passenger seat cushions.

### AUTOMATIC OPERATION

#### Passenger Seatback Tilting Function

- When the seatback tilt switch on the rear side of the passenger seatback is operated to tilt forward, the seatback tilts forward to the front most position.
- To tilt the seatback backward or restore its position, push the seatback tilt switch on the tilt-backward direction. The seatback will be tilting backwards while the switch is operated. It can be moved backwards until it reaches to its start position.

#### Conditions For the Operation

When the following conditions are satisfied, the seatback tilts forward or backward by operating the seatback tilt switch.

Conditions	<ul style="list-style-type: none"><li>• Power seat switches (sliding and reclining) are OFF.</li><li>• The seat belt is not fastened.</li><li>• The vehicle speed is approximately 6 km/h or less.</li><li>• The soft top is not currently in operation.*1</li><li>• The ignition switch is not in the START position.</li><li>• The seatback tilt cancel switch is in AUTO.</li></ul>
------------	--

\*1: The operation will be stopped only while the reclining motor is operating.

#### Conditions for Stopping the Operation

- Seatback tilting operation stops when any one of the conditions below is satisfied.

Conditions	<ul style="list-style-type: none"><li>• A power seat switch (sliding or reclining) is operated.</li><li>• The seat belt is fastened.</li><li>• The vehicle speed is approximately 7 km/h or more.</li><li>• The soft top is in operation. (Stops only tilt-forward operation.)*2</li><li>• The seatback tilting switch is operated while the seatback is in operation.</li><li>• The ignition switch is turned to the START position.</li><li>• Reclining motor lock is detected.</li></ul>
------------	---

\*2: Operation will be stopped only while the reclining motor is operating.

#### NOTE:

If operation stops as a result of the conditions below, use the reclining switch to tilt the seat backward.

- A power seat switch (sliding or reclining) is operated.
- The seat belt is fastened.
- The seatback tilt cancel switch is turned to “CANCEL”.

#### Soft Top Interlocking Operation Function

- The seatback tilts forward by approximately 6° (tilt forward operation) when the soft top opens or closes.
- When open/close operation is completed, the seatback returns to the tilt start position (return operation).

#### Conditions for the Operation

When the soft top switch is pushed to OPEN or CLOSE, and all of the conditions below are satisfied, then the seatback operates, linked with the operation of the soft top.

Conditions	<ul style="list-style-type: none"><li>• The power seat switches (sliding and reclining) are OFF.</li><li>• The seatback tilt switch is OFF.</li><li>• The vehicle speed is 6 km/h or less.</li><li>• The ignition switch is ON.</li><li>• The seatback tilt cancel switch is turned to AUTO.</li></ul>
------------	--

#### Conditions for the Pausing/Stopping Operation

Operation is paused or stopped if any of the conditions below are satisfied during soft top operation.

# POWER SEAT/FOR ROADSTER

## < SERVICE INFORMATION >

Stop conditions	<ul style="list-style-type: none"> <li>• A power seat switch (sliding or reclining) is operated.</li> <li>• Reclining motor lock is detected (return operation only).</li> <li>• The seatback tilt switch is operated while the seatback is operating.</li> <li>• The seatback tilt cancel switch is turned to CANCEL.</li> </ul>
Pause condition	<ul style="list-style-type: none"> <li>• The ignition switch is turned to the START position.</li> </ul>

### Seat Status Output Signal

- Depending on the seat status, the “passenger seat control unit” sends the seat status output signal to the “soft top control unit”.
- The “soft top control unit” controls the soft top open/close operation based on whether the seat status signal is ON or OFF. For details about soft top control, refer to [RF-19. "Operation Chart"](#).

Seat status signal OFF→ ON condition	<ul style="list-style-type: none"> <li>• When a seatback tilt forward motion has been completed. (as a process during a soft top interlocking operation)</li> <li>• When a seatback tilt forward motion has been completed. (during a automatic operation by using a seatback tilt switch)</li> <li>• When a seatback tilt forward permission condition is satisfied for a soft top interlocking operation, and a tilt forward / backward operation is under going, and if the seatback is tilted more than 6 degree from the start position of the tilt forward / backward operation. (during a automatic operation by using a seatback tilt switch)</li> <li>• When a seatback tilt forward permission condition is satisfied for a soft top interlocking operation, and a tilt forward operation was under going, but the operation was stopped under some conditions, (See below *4.) and if the seatback is tilted more than 6 degree from the start position of the tilt forward operation. (after an automatic operation by using a seatback tilt switch)</li> <li>• When a seatback tilt forward permission condition is satisfied for a soft top interlocking operation, and also the seatback tilt cancel switch is in “Cancel” position.</li> <li>• When the ignition switch has been turned from “START” to “ON” position. (during a soft top interlocking operation. After an engine start operation, the soft top interlocking operation is accepted.)</li> </ul>
Seat status signal ON→ OFF condition	<ul style="list-style-type: none"> <li>• When a seatback tilt backward motion has been started. (as a process during a soft top interlocking operation)</li> <li>• When a seatback tilt backward permission condition is satisfied for a soft top interlocking operation, after a tilt forward operation has been finished. (during a automatic operation by using a seatback tilt switch)</li> <li>• When a seatback tilt backward permission condition is satisfied for a soft top interlocking operation, and a tilt forward / backward operation is under going, and if the seatback is tilted more than 6 degree from the start position of the tilt forward / backward operation. (during a automatic operation by using a seatback tilt switch)</li> <li>• When a seatback tilt backward permission condition is satisfied for a soft top interlocking operation, and a tilt forward operation was under going, but the operation was stopped under some conditions, (See below *4.) and if the seatback is still tilted more than 6 degree from the start position of the tilt forward operation. (after an automatic operation by using a seatback tilt switch.)</li> <li>• When the ignition switch has been turned from “ON” to “START” position. (during a soft top interlocking operation. During an engine start operation, the soft top interlocking operation is paused.)</li> <li>• When a seatback tilt forward motion has been started by the seatback tilt switch, just after the seatback tilt forward motion has been finished for a soft top interlocking operation. (for the seatback tilt switch operation during a soft top interlocking operation)</li> <li>• When a seatback tilt forward motion has been started by the passenger seat reclining switch, just after the seatback tilt forward motion has been finished for a soft top interlocking operation. (for the seat reclining switch operation during a soft top interlocking operation)</li> </ul>

\*3: After that, seat condition signal stays ON if cancel switch turns to AUTO.

The seat status signal turns ON only when power window DOWN signal input is ON.

\*4: If tilt forward/backward operation stops as a result of the conditions below, the tilt start position does not change.


- The vehicle speed is approximately 7 km/h or more.
- The seatback tilt switch is operated while the seatback is operating.
- The ignition switch is turned to the START position.

# POWER SEAT/FOR ROADSTER


## < SERVICE INFORMATION >

### Operation of the Passenger Seat Linked with the Soft Top


Passenger seat operation during soft top CLOSE operation

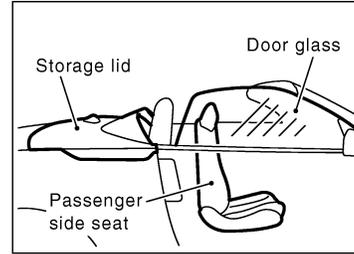


1. Passenger seatback tilts forward by approximately 6° as soon as windows go down, when soft top switch has been pushed on CLOSE.

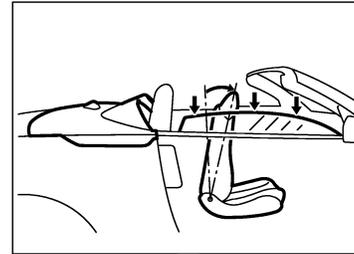


2. Soft top CLOSE operation starts as soon as the passenger seatback tilt forward operation completes.

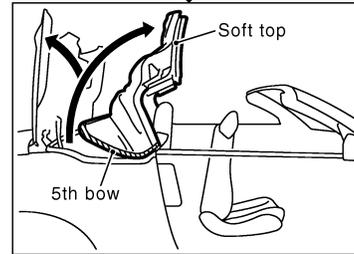

3. Soft top continues the operation.

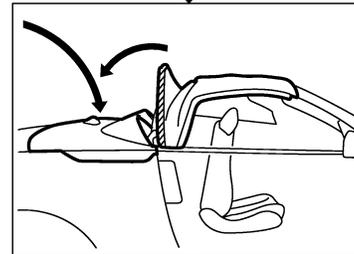

4. Passenger seatback goes back to the original position when 5th bow is closed.

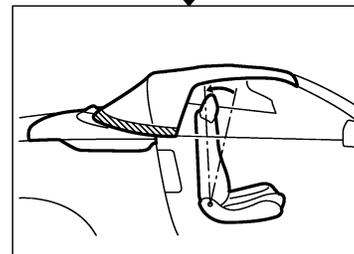


PIIA7847E


# POWER SEAT/FOR ROADSTER

## < SERVICE INFORMATION >


Passenger seat operation during soft top OPEN operation

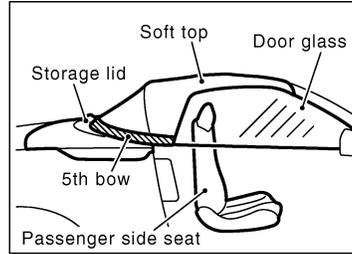

1. Passenger seatback tilts forward by approximately 6° as soon as windows go down, when soft top switch has been pushed on OPEN.

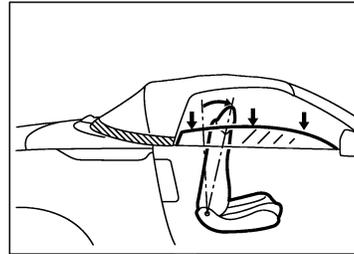


2. Soft top OPEN operation starts as soon as the passenger seatback tilt forward operation completes.

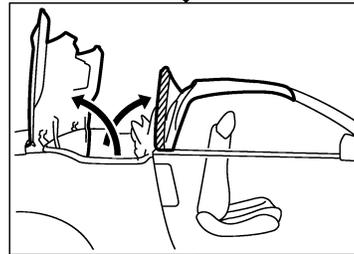

3. Soft top continues the operation.



4. Passenger seatback goes back to the original position when storage lid is closed.

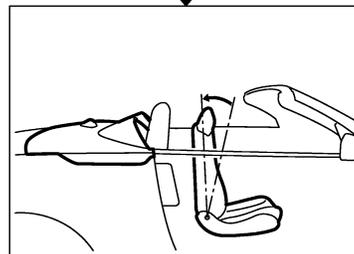

PIIA9713E

### CANCEL FUNCTION

The seatback tilt cancel switch can be used to set following functions ON or OFF.

- The seatback tilt forward/backward function
- The soft top interlocking operation function

#### **CAUTION:**

- If a child seat is installed, turn the seat tilt cancel switch OFF to disable the seatback tilt forward/backward function and the soft top interlock operation function.

## POWER SEAT/FOR ROADSTER

### < SERVICE INFORMATION >

---

#### FAIL-SAFE MODE

If the power seat switch is not operated, nor the seat back tilt switch is not operated, nor the soft top interlocking operation is not under operation, and if the passenger seat control unit detects a motor operation power from the soft top control unit, the passenger seat control unit stops the motor by switching the motor power line to ground.

---

Operation location	<ul style="list-style-type: none"><li>• Sliding motor</li><li>• Reclining motor</li></ul>
--------------------	---

---

#### Canceling Fail-Safe Mode

- Disconnect and reconnect the battery terminal.
- Disconnect and reconnect the passenger seat control unit connector.


# POWER SEAT/FOR ROADSTER

< SERVICE INFORMATION >

## Wiring Diagram - SEAT - / for Driver Seat

INFOID:000000004657277

SE-SEAT-04

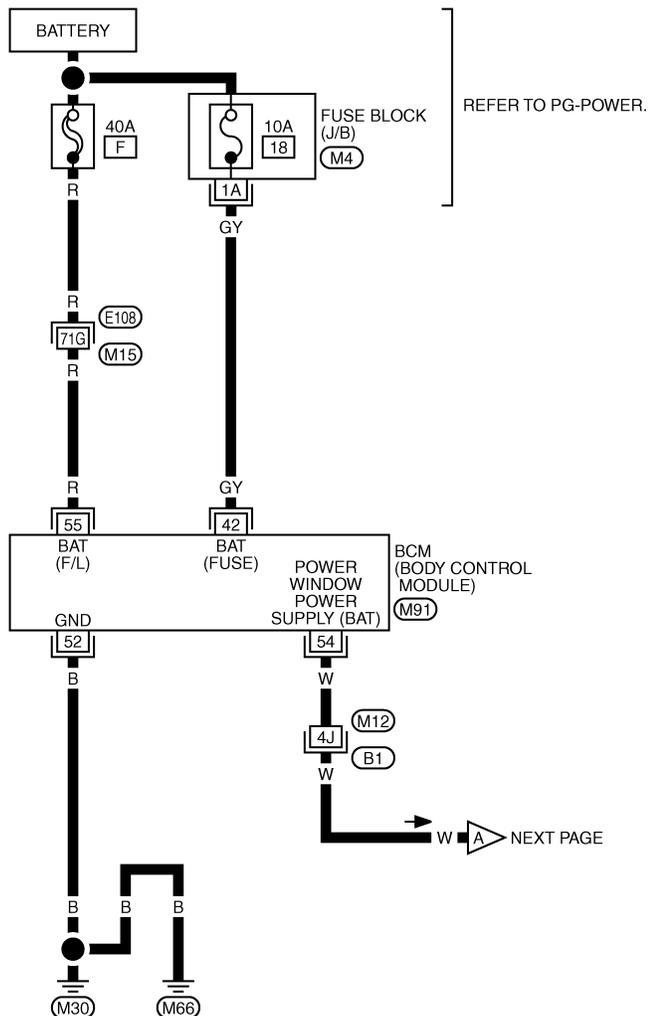

REFER TO THE FOLLOWING.  
 (E108) , (B1) -SUPER MULTIPLE JUNCTION (SMJ)  
 (M4) -FUSE BLOCK-JUNCTION BOX (J/B)  
 (M91) -ELECTRICAL UNITS


TIWT1613E

A  
B  
C  
D  
E  
F  
G  
H  
SE  
J  
K  
L  
M  
N  
O  
P

# POWER SEAT/FOR ROADSTER

< SERVICE INFORMATION >

SE-SEAT-05

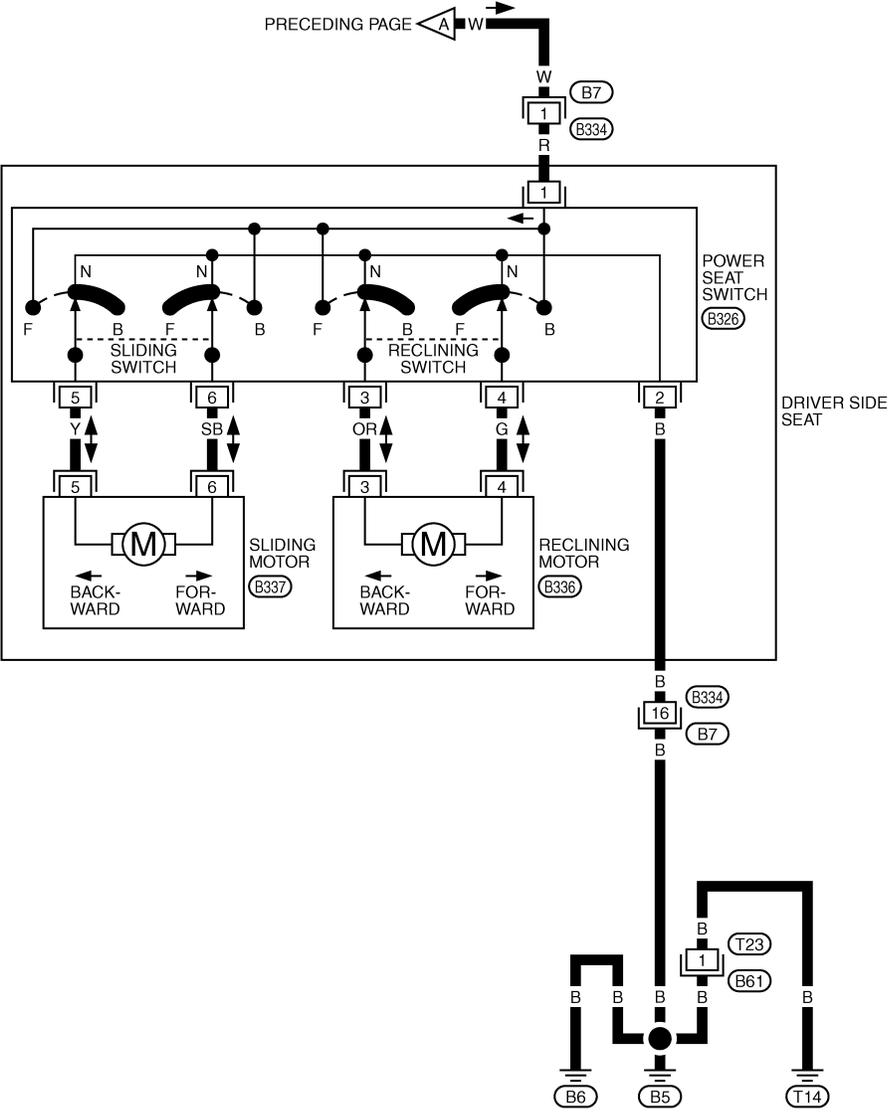

\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.


TIWT0774E

# POWER SEAT/FOR ROADSTER

< SERVICE INFORMATION >

## Schematic / for Passenger Seat

INFOID:000000004657278

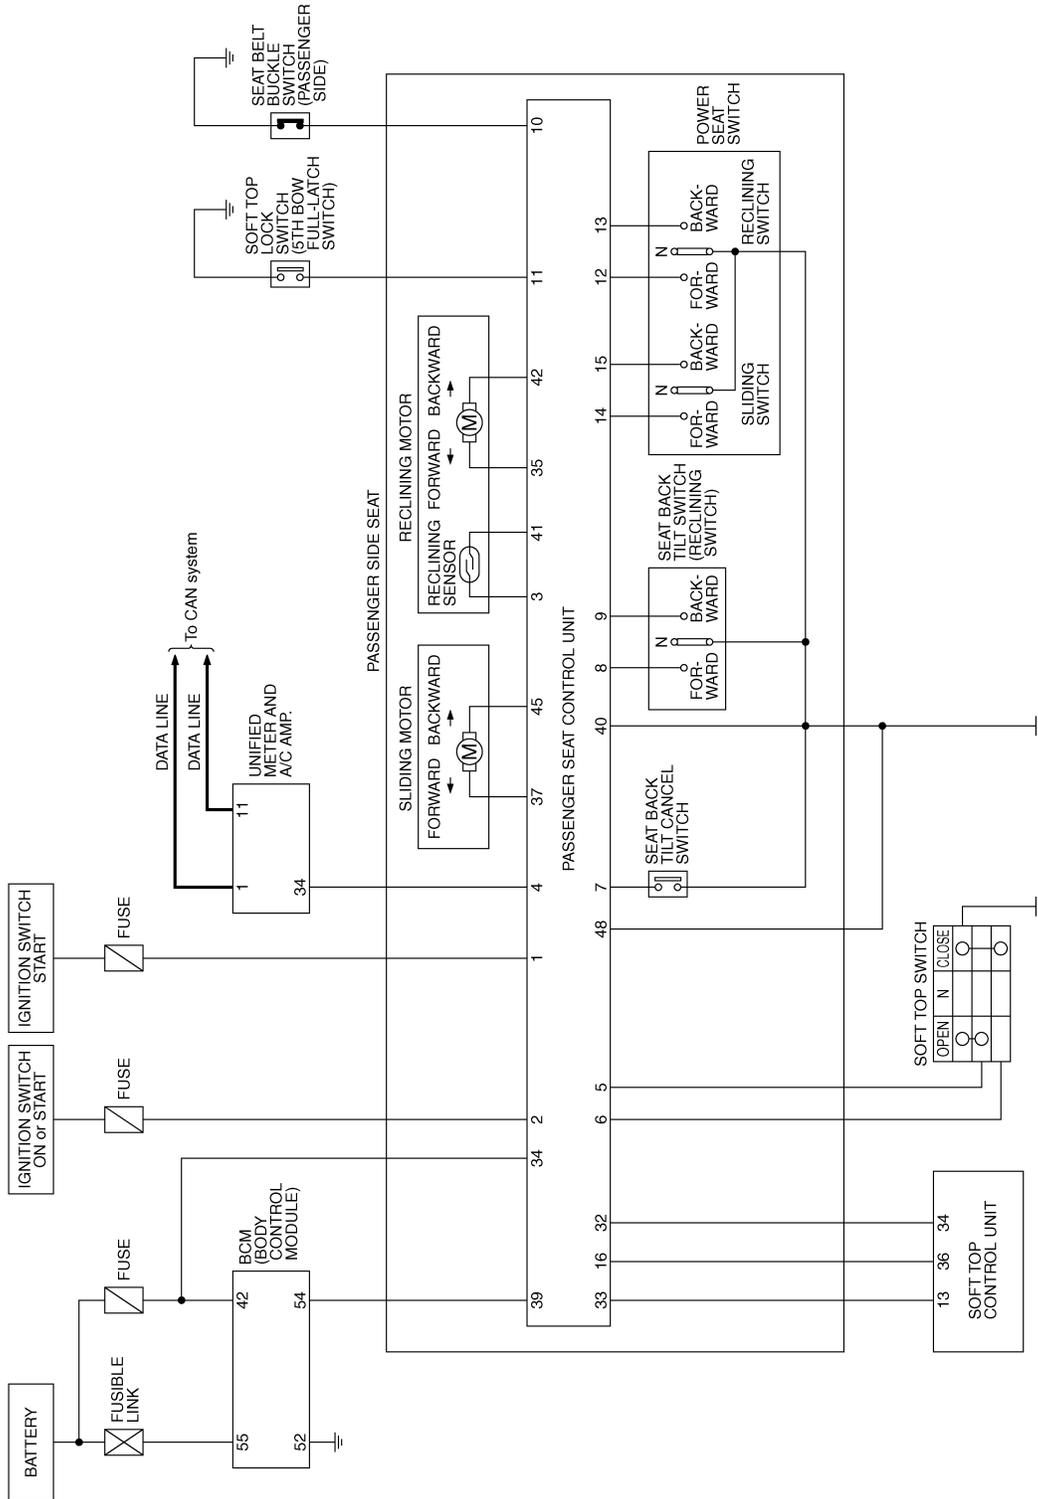

TIWT2287E

A  
B  
C  
D  
E  
F  
G  
H  
SE  
J  
K  
L  
M  
N  
O  
P



# POWER SEAT/FOR ROADSTER

< SERVICE INFORMATION >

## Wiring Diagram - SEAT - / for Passenger Seat

INFOID:000000004657279

### SE-SEAT-06

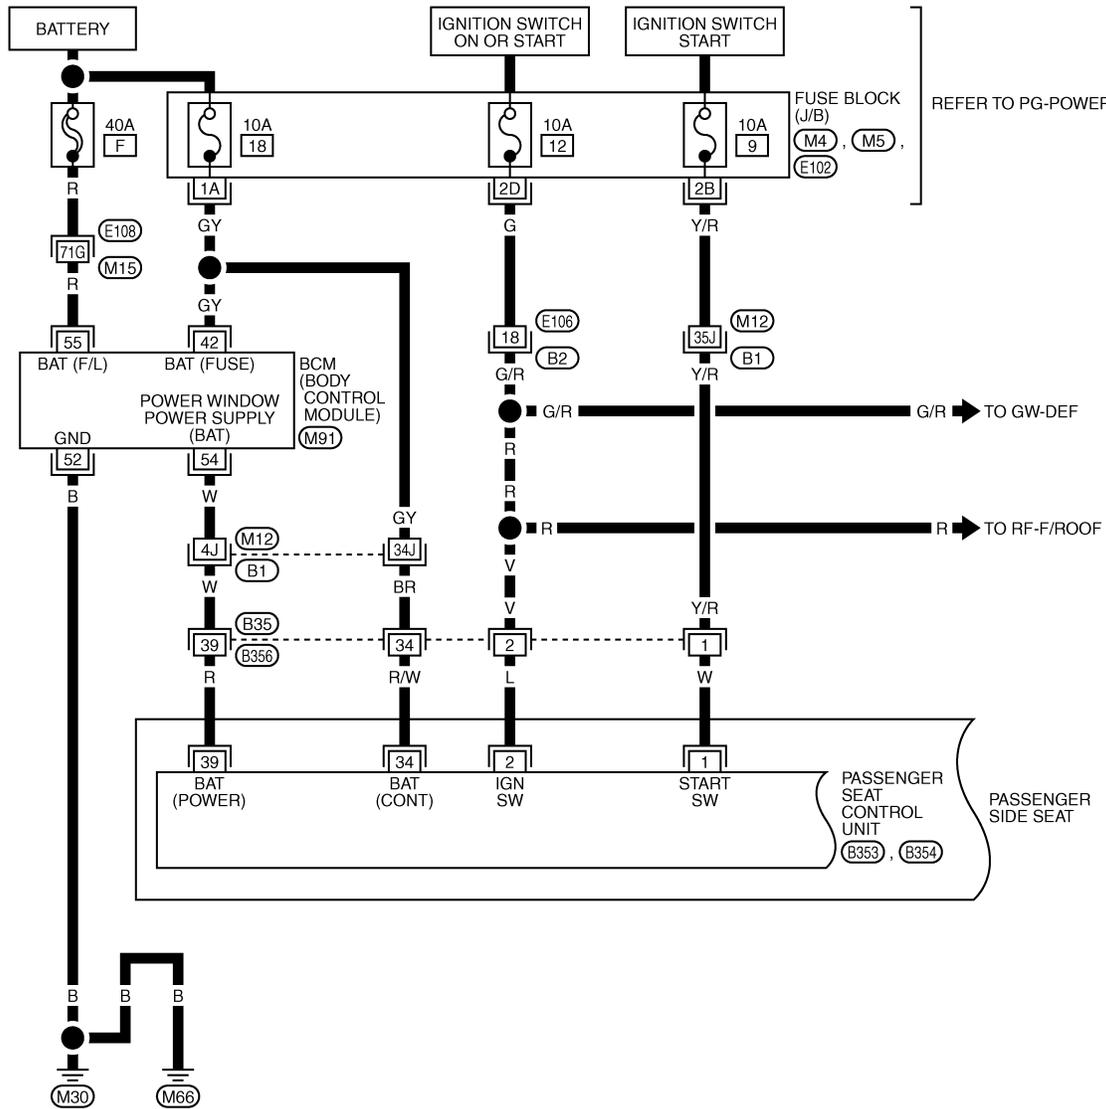

\* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.



REFER TO THE FOLLOWING.  
 (E108), (B1) -SUPER MULTIPLE JUNCTION (SMJ)  
 (M4), (M5), (E102) -FUSE BLOCK-JUNCTION BOX (J/B)  
 (M91) -ELECTRICAL UNITS

TIWT2288E

# POWER SEAT/FOR ROADSTER

< SERVICE INFORMATION >

SE-SEAT-07

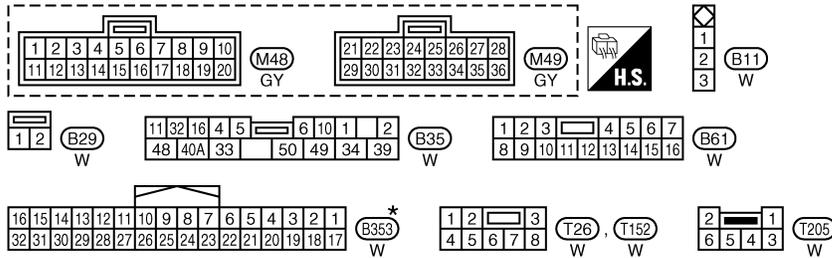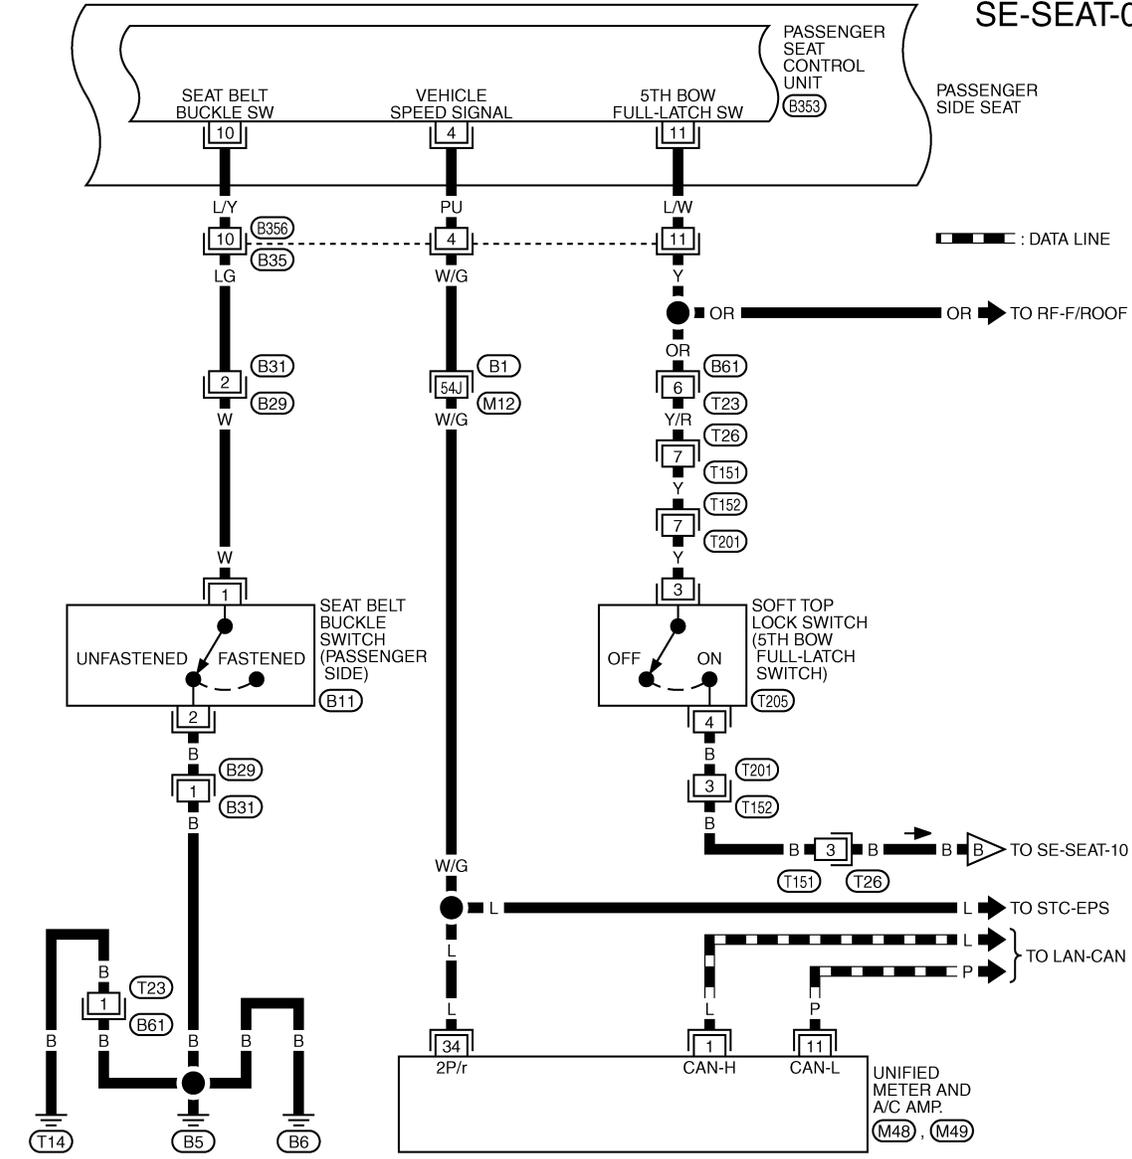

\* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

REFER TO THE FOLLOWING.  
(B1) -SUPER MULTIPLE JUNCTION (SMJ)



TIWT2213E



# POWER SEAT/FOR ROADSTER

< SERVICE INFORMATION >

SE-SEAT-09

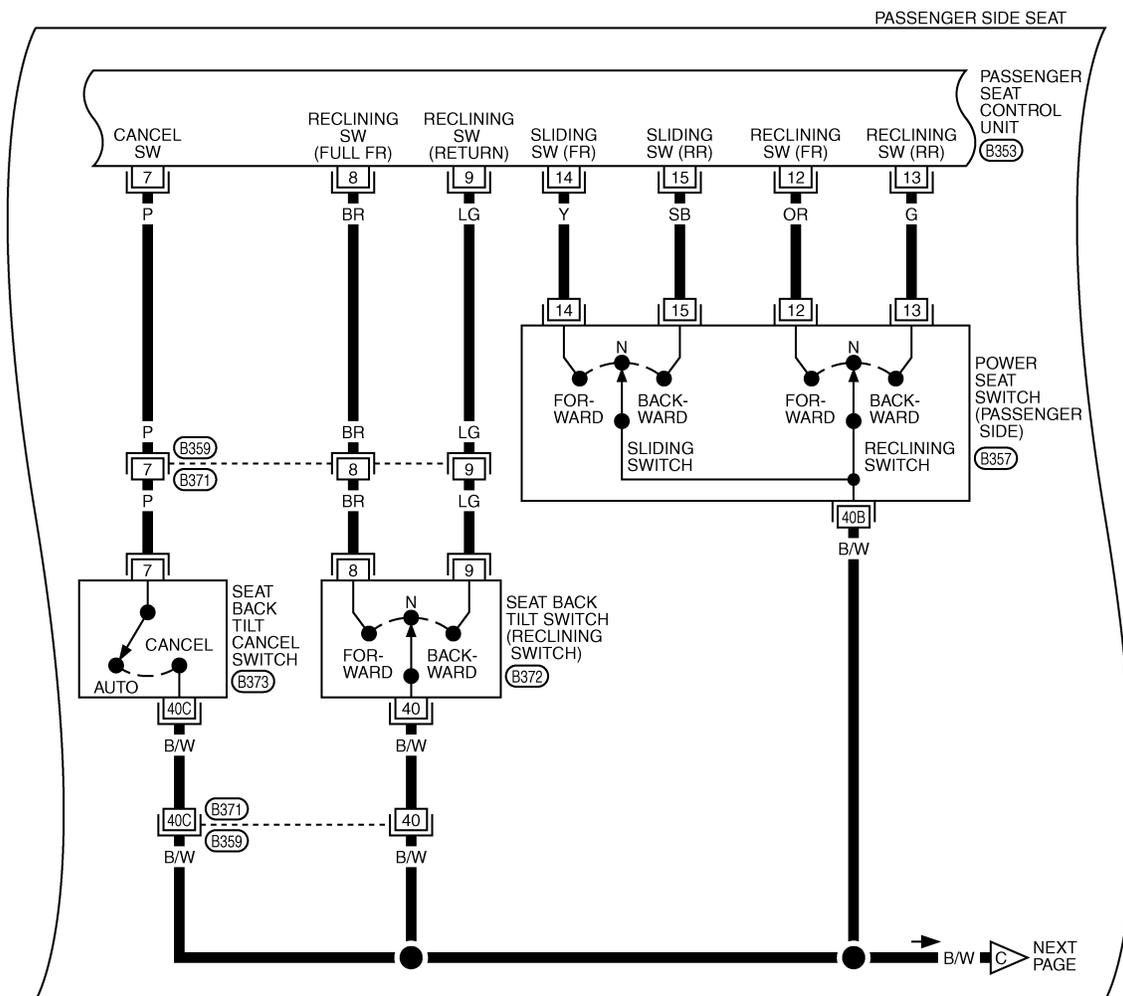






\* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

TIWT0729E

# POWER SEAT/FOR ROADSTER

< SERVICE INFORMATION >

SE-SEAT-10

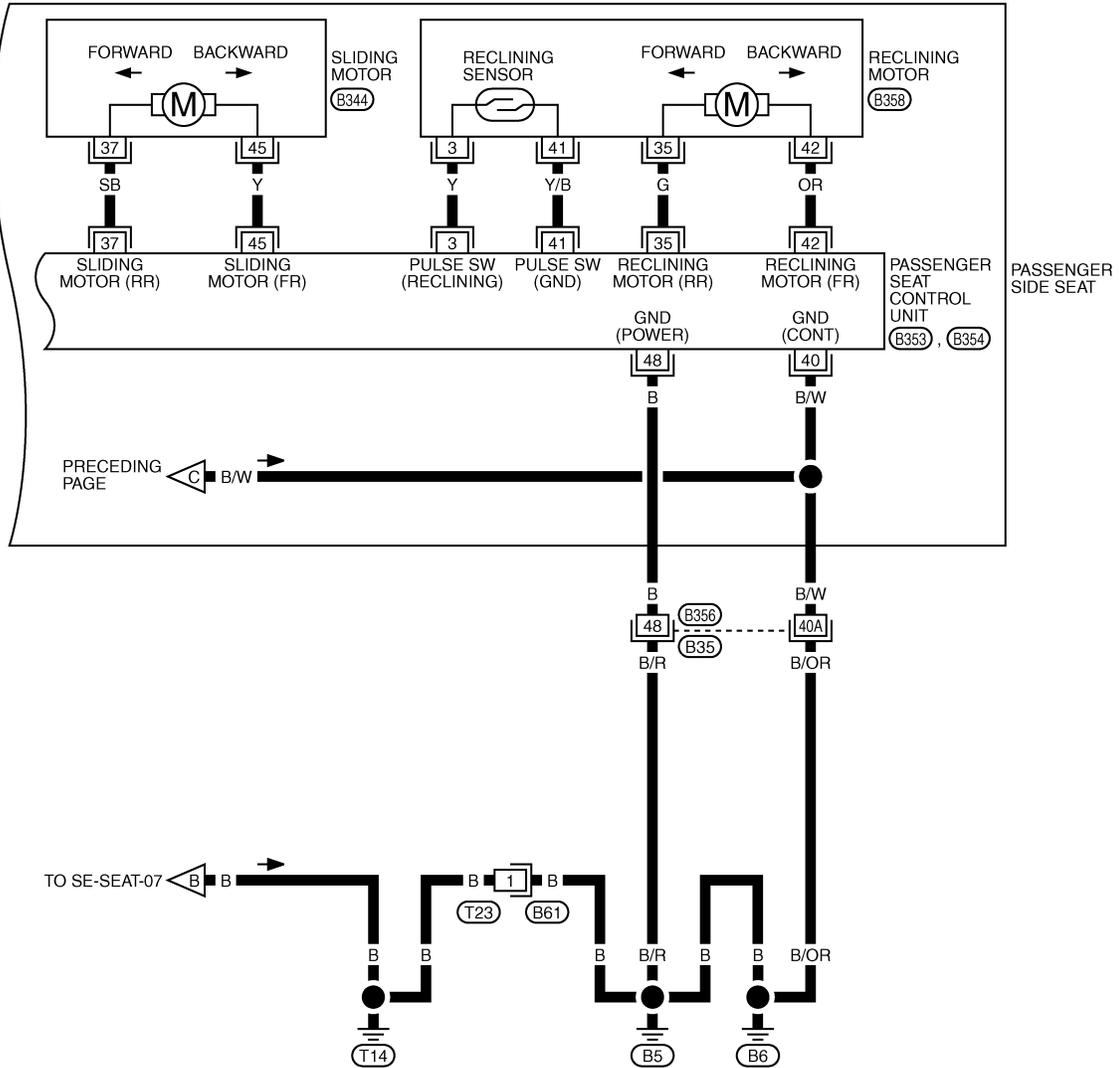

\* : THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT", PG SECTION.



TIWT2290E

# POWER SEAT/FOR ROADSTER

< SERVICE INFORMATION >

## Terminal and Reference Value for Passenger Seat Control Unit

INFOID:000000004657280

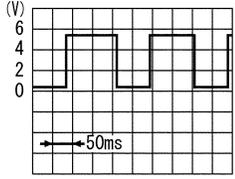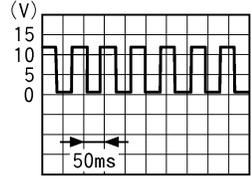Terminal	Wire Color	Item	Signal Input/ Output	Condition	Voltage (V) (Approx)
1	W	Ignition switch START power supply	Input	Ignition switch (START position)	Battery voltage
2	L	Ignition switch ON power supply	Input	Ignition switch (ON or START position)	Battery voltage
3	Y	Reclining sensor input signal	Input	When reclining motor is operated	 <p style="text-align: right; font-size: small;">S1IA0692J</p>
				Other than above	0 or 5
4	PU	Vehicle speed signal (2puls)	Input	Speedometer operated [When vehicle speed is approx. 40 km/h (25 MPH)]	 <p style="text-align: right; font-size: small;">PIIB0078J</p>
5	R	Soft top switch OPEN signal	Input	When soft top switch is turned to OPEN	0
				Other than above	Battery voltage
6	GY	Soft top switch CLOSE signal	Input	When soft top switch is turned to CLOSE	0
				Other than above	Battery voltage
7	P	Seatback tilt cancel switch signal	Input	When seatback tilt cancel switch is turned to AUTO	5
				When seatback tilt cancel switch is turned to CANCEL	0
8	BR	Seatback tilt switch FORWARD signal	Input	When seatback tilt switch is turned to FORWARD	0
				Other than above	Battery voltage
9	LG	Seatback tilt switch BACKWARD signal	Input	When seatback tilt switch is turned to BACKWARD	0
				Other than above	Battery voltage
10	L/Y	Seat belt buckle switch signal	Input	When seat belt is fastened (OFF)	5
				When seat belt is unfastened (ON)	0
11	L/W	Soft top lock switch (5th bow full latch switch) signal	Input	5th bow full latch switch: ON	0
				5th bow full latch switch: OFF	5
12	OR	Reclining switch FORWARD signal	Input	When power seat reclining switch is turned to FORWARD	0
				Other than above	Battery voltage

A  
B  
C  
D  
E  
F  
G  
H  
J  
K  
L  
M  
N  
O  
P

SE

## POWER SEAT/FOR ROADSTER

### < SERVICE INFORMATION >

Terminal	Wire Color	Item	Signal Input/ Output	Condition	Voltage (V) (Approx)
13	G	Reclining switch BACKWARD signal	Input	When power seat reclining switch is turned to BACKWARD	0
				Other than above	Battery voltage
14	Y	Sliding switch FORWARD signal	Input	When power seat sliding switch is turned to FORWARD	0
				Other than above	Battery voltage
15	SB	Sliding switch BACKWARD signal	Input	When power seat sliding switch is turned to BACKWARD	0
				Other than above	Battery voltage
16	PU/W	Power window down signal	Input	When soft top switch is turned to ON	0
				Other than above	5
32	G/W	Seatback position signal	Input	When the seatback is tilted by the interlocking operation with soft top	0
				Other than above	5
33	G/B	Storage lid actuator RH CLOSE signal	Input	When storage lid actuator is in a closed operation	Battery voltage
				Other than above	0
34	R/W	Battery power supply (control unit)	Input	—	Battery voltage
35	G	Reclining motor BACKWARD output	Output	Reclining switch backward operation (Motor operated)	Battery voltage
				Other than above	0
37	SB	Sliding motor BACKWARD output	Output	Sliding switch backward operation (Motor operated)	Battery voltage
				Other than above	0
39	R	Battery power supply (power)	Output	—	Battery voltage
40	B/W	Ground (control unit)	—	—	0
41	Y/B	Ground (sensor)	—	—	0
42	OR	Reclining motor FORWARD output	Output	Reclining switch forward operation (Motor operated)	Battery voltage
				Other than above	0
45	Y	Sliding motor FORWARD output	Output	Sliding switch forward operation (Motor operated)	Battery voltage
				Other than above	0
48	B	Ground (power)	—	—	0

### Terminal and Reference Value for BCM

INFOID:000000004657281

Terminal	Wire Color	Item	Signal Input/ Output	Condition	Voltage (V) (Approx)
42	GY	Battery power supply (Fuse)	Input	—	Battery voltage
52	B	Ground	—	—	0

# POWER SEAT/FOR ROADSTER

## < SERVICE INFORMATION >

Terminal	Wire Color	Item	Signal Input/ Output	Condition	Voltage (V) (Approx)
54	W	Power window power supply output (driver side power seat switch and passenger seat control unit power supply)	Output	—	Battery voltage
55	R	Battery power supply (Fusible link)	Input	—	Battery voltage


## Terminal and Reference Value for Soft Top Control Unit

INFOID:000000004657282

Terminal	Wire Color	Item	Signal Input/ Output	Condition	Voltage (V) (Approx)
13	L/R	Storage lid actuator RH CLOSE signal	Input	When storage lid actuator is in a closing operation	Battery voltage
				Other than above	0
34	L/W	Seatback position signal	Input	When the seatback is tilted by the interlocking operation with soft top	0
				Other than above	5
36	PU	Power window down signal	Input	When soft top switch is turned to ON	0
				Other than above	5

## Terminal and Reference Value for Unified Meter and A/C Amp

INFOID:000000004657283

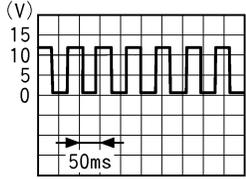Terminal	Wire Color	Item	Signal Input/ Output	Condition	Voltage (V) (Approx)
1	L	CAN-H	Input/ Output	—	—
11	P	CAN-L	Input/ Output	—	—
34	L	Speed signal (2puls)	Input	Speedometer is in operation [When vehicle speed is approx. 40 km/h (25 MPH)]	

## Work Flow

INFOID:000000004657284

1. Check the symptom and customer's requests.
2. Understand the outline of system. Refer to [SE-16, "System Description"](#).
3. According to the trouble diagnosis chart, repair or replace the cause of the malfunction. Refer to [SE-35, "Trouble Diagnosis Symptom Chart"](#).
4. Does power seat system operate normally? If Yes, GO TO 5, If No, GO TO 3.
5. INSPECTION END.

## Trouble Diagnosis Symptom Chart

INFOID:000000004657285

Always check the "WORK FLOW" before troubleshooting. Refer to [SE-35, "Work Flow"](#).

# POWER SEAT/FOR ROADSTER

## < SERVICE INFORMATION >

Symptom	Diagnosis / service procedure	Refer to page
Power seat systems do not operate (Neither driver side seat nor passenger side seat operation can be performed).	Check BCM power supply and ground	<a href="#">SE-36</a>
Functions of a driver side power seat do not operate.	Check driver side power seat power supply and ground	<a href="#">SE-38</a>
A part of driver side power seat system does not operate.	1. Check driver side seat sliding motor circuit	<a href="#">SE-39</a>
	2. Check driver side seat reclining motor circuit	<a href="#">SE-40</a>
All the passenger side power seat systems do not operate.	Check passenger seat control unit power supply and ground	<a href="#">SE-41</a>
A passenger seat does not a sliding operation.	Check passenger side seat sliding motor circuit	<a href="#">SE-42</a>
A passenger seat does not carry out a reclining operation (Neither manual operation nor an automatic operation can be performed).	Check passenger side seat reclining motor circuit	<a href="#">SE-43</a>
The automatic operation of a passenger seat can not be performed (a manual operation can be performed).	1. Check passenger side seat reclining sensor circuit	<a href="#">SE-44</a>
	2. Check seatback tilt cancel switch circuit	<a href="#">SE-49</a>
	3. If the above systems are normal, replace passenger seat control unit.	<a href="#">SE-15</a>
A passenger seat operates automatically when the vehicle is running.	Check vehicle speed signal	<a href="#">SE-53</a>
Passenger seatback does not return during a soft top CLOSE operation.	Check soft top lock switch circuit	<a href="#">SE-52</a>
Passenger seatback does not tilt forward and return during a soft top OPEN operation.	Check storage lid close signal circuit	<a href="#">SE-51</a>
Passenger seatback does not tilt forward during a soft top CLOSE operation or OPEN operation.	1. Check power window down request signal circuit	<a href="#">SE-51</a>
	2. Check soft top switch circuit	<a href="#">SE-50</a>
	3. If the above systems are normal, replace passenger seat control unit.	<a href="#">SE-15</a>
Seat does not tilt when passenger seatback tilt switch is pushed (other functions operate normally).	1. Check seatback tilt switch circuit	<a href="#">SE-47</a>
	2. Check seat belt buckle switch circuit	<a href="#">SE-52</a>
	3. If the above systems are normal, replace passenger seat control unit	<a href="#">SE-15</a>
A part of passenger seat system does not operate (only manual).	1. Check passenger side seat sliding switch circuit	<a href="#">SE-45</a>
	2. Check passenger side seat reclining switch circuit	<a href="#">SE-46</a>
Passenger seatback dose not go back to the original position during a soft top CLOSE or OPEN operation.	Check passenger seat control unit ignition signal circuit	<a href="#">SE-42</a>
The manual operation of a passenger seat cannot be performed (a automatic operation can be performed).	Check passenger side power seat switch ground circuit	<a href="#">SE-47</a>

## Check BCM Power Supply and Ground

INFOID:000000004657286

### 1.CHECK FUSE

- Check 40A fusible link (letter **F** located in the fuse and fusible link box).
- Check 10A fuse [No.18, located in the fuse block (J/B)]

#### NOTE:

Refer to [SE-15, "Component Parts and Harness Connector Location"](#).

#### OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4](#).

# POWER SEAT/FOR ROADSTER

< SERVICE INFORMATION >

## 2. CHECK BCM POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM connector M91 terminal 42, 55 and ground.


**42 (GY) - Ground : Battery voltage**

**55 (R) - Ground : Battery voltage**

OK or NG

OK >> GO TO 3.

NG >> Repair or replace the harness between BCM and fusible link.

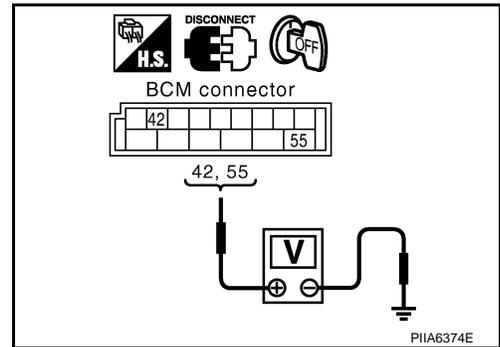

## 3. CHECK BCM GROUND CIRCUIT


Check continuity between BCM connector M91 terminal 52 and ground.

**52 (B) - Ground : Continuity should exist.**

OK or NG

OK >> GO TO 4.

NG >> Repair or replace the harness between BCM and ground.

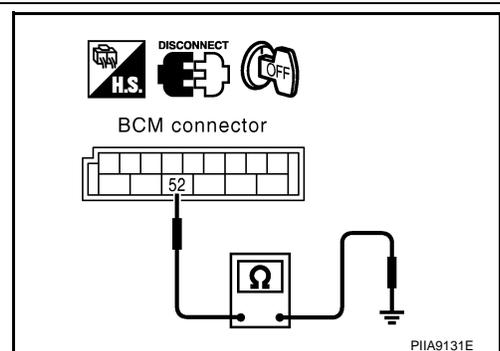

## 4. CHECK BCM OUTPUT POWER SUPPLY CIRCUIT

1. Disconnect power seat switch and passenger seat control unit connector.
2. Check continuity between BCM connector M91 terminal 54 and power seat switch connector B326 terminal 1.

**54 (W) - 1 (R) : Continuity should exist.**

3. Check continuity between BCM connector M91 terminal 54 and passenger seat control unit connector B354 terminal 39.

**54 (W) - 39 (R) : Continuity should exist.**

4. Check continuity between BCM connector M91 terminal 54 and ground.

**54 (W) - Ground : Continuity should not exist.**


OK or NG

OK >> GO TO 5.

NG >> Replace harness between BCM and power seat switch or passenger seat control unit.

## 5. CHECK BCM OUTPUT POWER SUPPLY

1. Connect BCM connector.

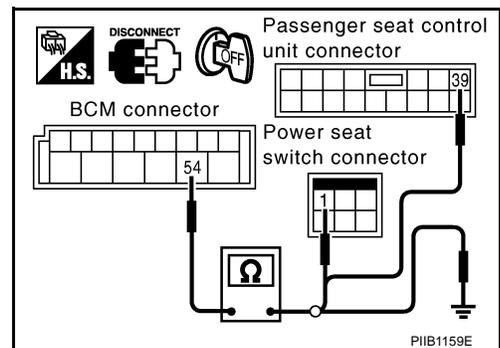

# POWER SEAT/FOR ROADSTER


## < SERVICE INFORMATION >

2. Check voltage between BCM connector M91 terminal 54 and ground.

**54 (W) - Ground : Battery voltage**

### OK or NG

- OK >> Check the condition of the harness and connector.  
NG >> Replace BCM.

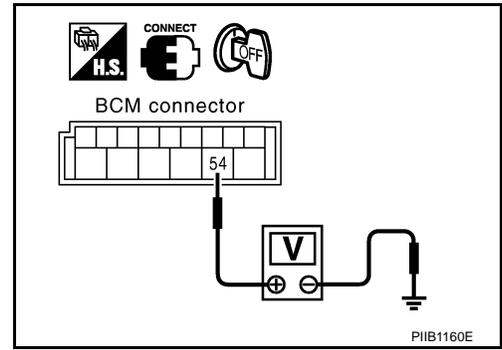

INFOID:000000004657287

## Check Driver Side Seat Power Supply and Ground


### 1. CHECK POWER SEAT SWITCH POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect power seat switch connector.
3. Check voltage between power seat switch connector B326 terminal 1 and ground.

**1 (R) - Ground : Battery voltage**

### OK or NG

- OK >> GO TO 3.  
NG >> GO TO 2.

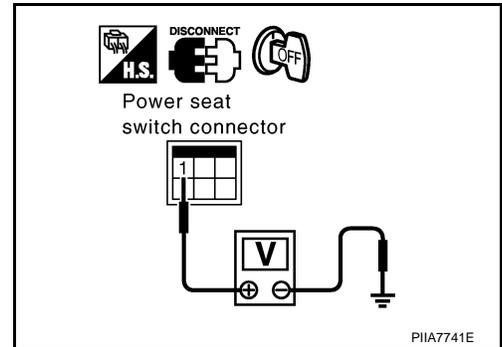

### 2. CHECK BCM OUTPUT POWER SUPPLY CIRCUIT

1. Disconnect passenger seat control unit connector.
2. Check continuity between BCM connector M91 terminal 54 and power seat switch connector B326 terminal 1.

**54 (W) - 1 (R) : Continuity should exist.**

3. Check continuity between BCM connector M91 terminal 54 and ground.

**54 (W) - Ground : Continuity should not exist.**

### OK or NG

- OK >> Check the condition of the harness and connector.  
NG >> Replace harness between BCM and power seat switch.



### 3. CHECK POWER SEAT SWITCH GROUND CIRCUIT

Check continuity between power seat switch connector B326 terminal 2 and ground.

**2 (B) - Ground : Continuity should exist.**

### OK or NG

- OK >> Check the condition of the harness and connector.  
NG >> Repair or replace the harness between power seat switch and ground.

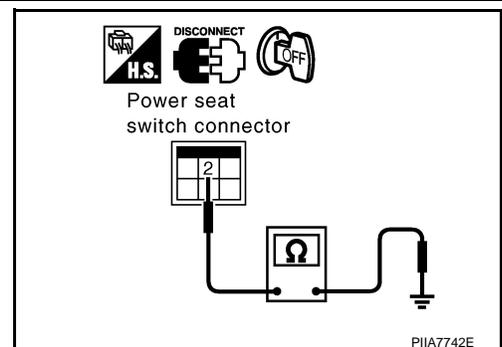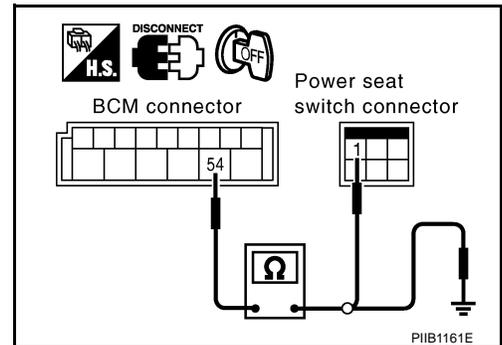

# POWER SEAT/FOR ROADSTER

< SERVICE INFORMATION >


## Check Driver Side Seat Sliding Motor Circuit

INFOID:000000004657288

### 1. CHECK SLIDING MOTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect sliding motor connector.
3. Sliding switch operate, check voltage between sliding motor connector and ground.

Connector	Terminal (Wire color)		Sliding switch condition	Voltage (V) (Approx.)
	(+)	(-)		
B337	5 (Y)	Ground	FORWARD	Battery voltage
			Other than above	0
	6 (SB)		BACKWARD	Battery voltage
			Other than above	0

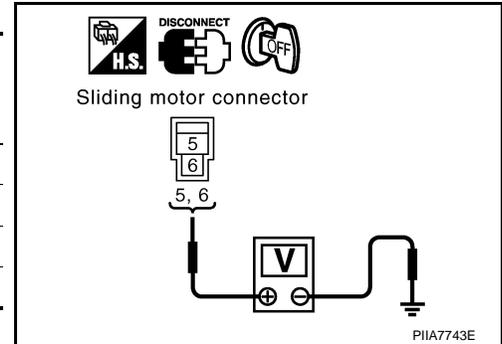


**OK or NG**

- OK >> GO TO 2.  
NG >> GO TO 3.

### 2. CHECK POWER SEAT SWITCH 1

1. Disconnect power seat switch connector.
2. Sliding switch operate, check continuity between power seat switch terminal 5, 6 and 2.

Terminals	Sliding switch condition	Continuity
5	BACKWARD	Yes
	Other than above	No
6	FORWARD	Yes
	Other than above	No

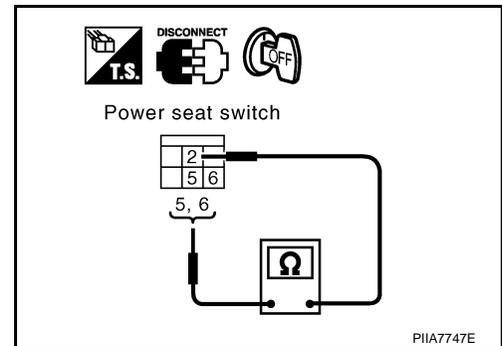

**OK or NG**

- OK >> Replace sliding motor.  
NG >> Replace power seat switch.


### 3. CHECK SLIDING MOTOR CIRCUIT HARNESS

1. Disconnect power seat switch connector.
2. Check continuity between power seat switch connector B326 terminal 5, 6 and sliding motor connector B337 terminal 5, 6.

**5 (Y) - 5 (Y) : Continuity should exist.**  
**6 (SB) - 6 (SB) : Continuity should exist.**

3. Check continuity between power seat switch connector B326 terminal 5, 6 and ground.

**5 (Y) - Ground : Continuity should not exist.**  
**6 (SB) - Ground : Continuity should not exist.**

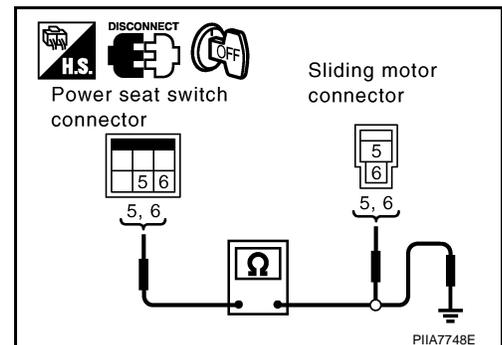

**OK or NG**

- OK >> GO TO 4.  
NG >> Repair or replace harness between power seat switch and sliding motor.

### 4. CHECK POWER SEAT SWITCH 2

Check continuity between power seat switch as follows.


# POWER SEAT/FOR ROADSTER

## < SERVICE INFORMATION >

Terminals	Sliding switch condition	Continuity
5	FORWARD	Yes
	Other than above	No
6	BACKWARD	Yes
	Other than above	No

### OK or NG

- OK >> Check the condition of the harness and connector.  
 NG >> Replace power seat switch.

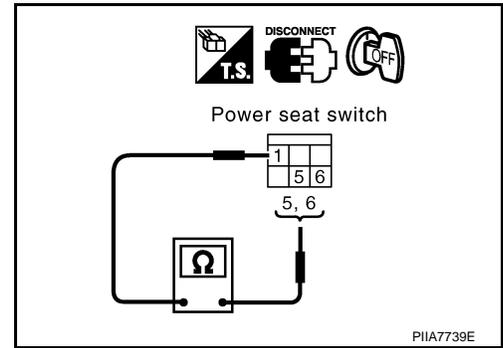

INFOID:000000004657289

## Check Driver Side Seat Reclining Motor Circuit

### 1. CHECK RECLINING MOTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect reclining motor connector.
3. Reclining switch operate, check voltage between reclining motor connector and ground.

Connector	Terminal (Wire color)		Reclining switch condition	Voltage (V) (Approx.)
	(+)	(-)		
B336	3 (OR)	Ground	FORWARD	Battery voltage
			Other than above	0
	4 (G)		BACKWARD	Battery voltage
			Other than above	0

### OK or NG

- OK >> GO TO 2.  
 NG >> GO TO 3.

### 2. CHECK POWER SEAT SWITCH 1

1. Disconnect power seat switch connector.
2. Reclining switch operate, check continuity between power seat switch terminal 3, 4 and 2.



Terminals	Reclining switch condition	Continuity
3	FORWARD	Yes
	Other than above	No
4	BACKWARD	Yes
	Other than above	No

### OK or NG

- OK >> Replace reclining motor.  
 NG >> Replace power seat switch.

### 3. CHECK RECLINING MOTOR CIRCUIT HARNESS

1. Disconnect power seat switch connector.

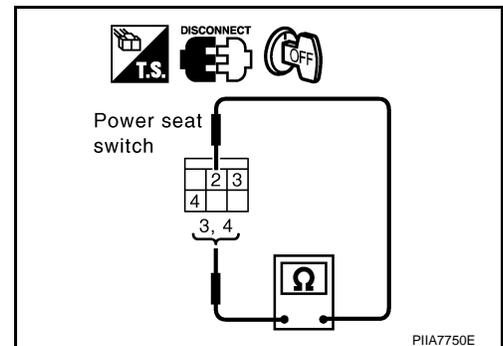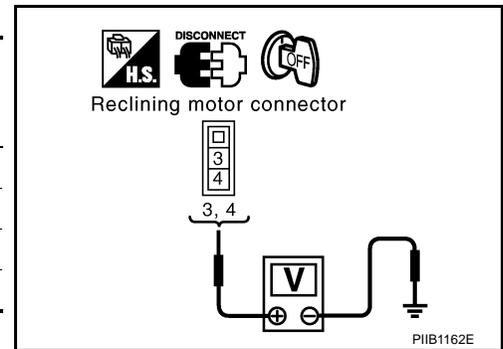

# POWER SEAT/FOR ROADSTER


## < SERVICE INFORMATION >

- Check continuity between power seat switch connector B326 terminal 3, 4 and reclining motor connector B336 terminal 3, 4.

**3 (OR) - 3 (OR) : Continuity should exist.**  
**4 (G) - 4 (G) : Continuity should exist.**

- Check continuity between power seat switch connector B326 terminal 3, 4 and ground.

**3 (OR) - Ground : Continuity should not exist.**  
**4 (G) - Ground : Continuity should not exist.**

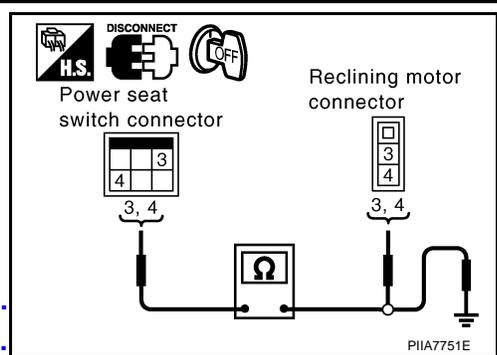

### OK or NG

OK >> GO TO 4.

NG >> Repair or replace harness between power seat switch and reclining motor.

## 4. CHECK POWER SEAT SWITCH 2


Reclining switch operate, check continuity between power seat switch as follows.

Terminals	Reclining switch condition	Continuity
3	FORWARD	Yes
	Other than above	No
4	BACKWARD	Yes
	Other than above	No

### OK or NG

OK >> Check the condition of the harness and connector.

NG >> Replace power seat switch.

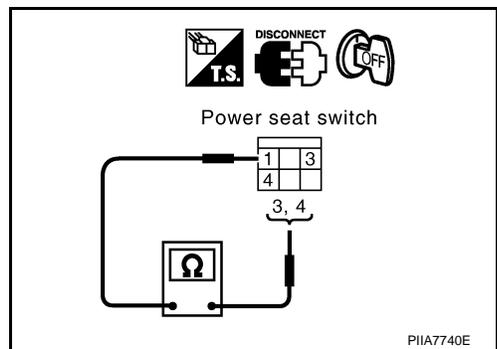

## Check Passenger Seat Control Unit Power Supply and Ground

INFOID:000000004657290

### 1. CHECK PASSENGER SEAT CONTROL UNIT POWER SUPPLY


- Check voltage between passenger seat control unit connector B354 terminal 34, 39 and ground.

**34 (R/W) - Ground : Battery voltage.**  
**39 (R) - Ground : Battery voltage.**

### OK or NG

OK >> Check the condition of the harness and the connector.

NG >> GO TO 2.

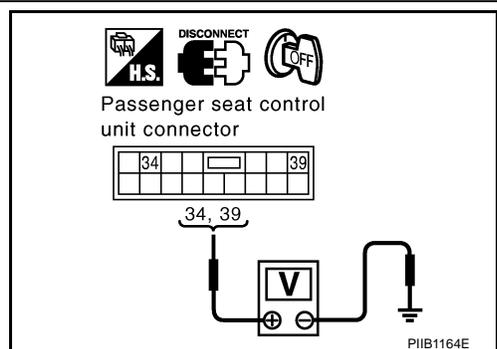

### 2. CHECK BCM OUTPUT POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect BCM and passenger seat control unit connector.
- Check continuity between BCM connector M91 terminal 54 and passenger seat control unit connector B354 terminal 39.


**54 (W) - 39 (R) : Continuity should exist.**

- Check continuity between BCM connector M91 terminal 54 and ground.

**54 (W) - Ground : Continuity should not exist.**

### OK or NG

OK >> GO TO 3.

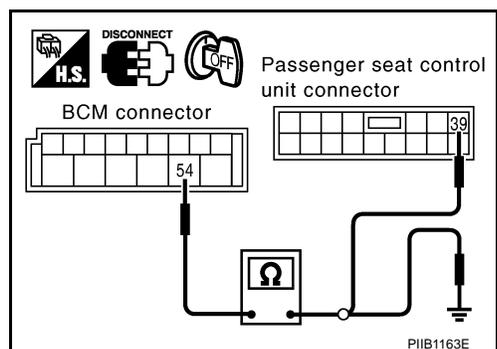

# POWER SEAT/FOR ROADSTER

## < SERVICE INFORMATION >

NG >> Repair or replace the harness between BCM and passenger seat control unit.


### 3.CHECK PASSENGER SEAT CONTROL UNIT GROUND CIRCUIT

Check continuity between passenger seat control unit connector B354 terminal 40, 48 and ground.

- 40 (B/W) - Ground : Continuity should exist.
- 48 (B) - Ground : Continuity should exist.

#### OK or NG

- OK >> Check the harness between power seat control unit and fuse block and the 10A fuse (#18).
- NG >> Repair or replace the harness between passenger seat control unit and ground.

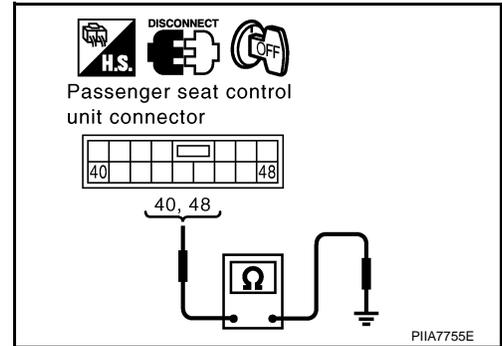

### Check Passenger Seat Control Unit Ignition Signal Circuit

INFOID:000000004657291

#### 1.CHECK FUSE

- Check 10A fuse [No.9, located in the fuse block (J/B)].
- Check 10A fuse [No.12, located in the fuse block (J/B)].

#### NOTE:

Refer to [SE-15, "Component Parts and Harness Connector Location"](#).

#### OK or NG

- OK >> GO TO 2.
- NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4](#).


### 2.CHECK PASSENGER SEAT CONTROL UNIT POWER SUPPLY

Check voltage between passenger seat control unit and ground.

Connector	Terminal (Wire color)		Condition	Voltage (V) (Approx.)
	(+)	(-)		
B353	1 (W)	Ground	Ignition switch	: START
	2 (L)			: ON

#### OK or NG

- OK >> Replace passenger seat control unit.
- NG >> Repair or replace the harness between passenger seat control unit and fuse block (J/B).

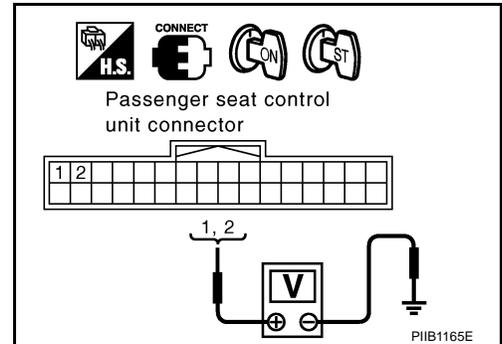

### Check Passenger Side Seat Sliding Motor Circuit


INFOID:000000004657292

#### 1.CHECK SLIDING MOTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect sliding motor connector.
3. Sliding switch operated, check voltage between sliding motor connector and ground.

Connector	Terminal (Wire color)		Sliding switch condition	Voltage (V) (Approx.)
	(+)	(-)		
B344	37 (SB)	Ground	BACKWARD	Battery voltage
			Other than above	0
	45 (Y)		FORWARD	Battery voltage
			Other than above	0

#### OK or NG

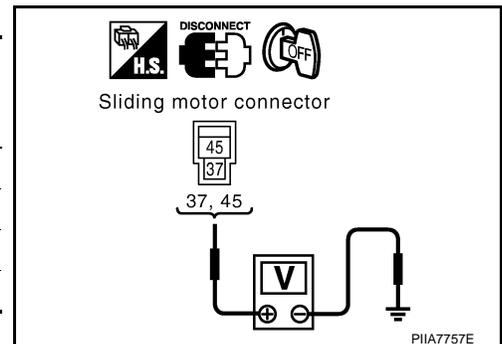

# POWER SEAT/FOR ROADSTER

## < SERVICE INFORMATION >

- OK >> Replace sliding motor.
- NG >> GO TO 2.


### 2.CHECK SLIDING MOTOR CIRCUIT HARNESS

1. Disconnect passenger seat control unit connector.
2. Check continuity between passenger seat control unit connector B354 terminal 37, 45 and sliding motor connector B344 terminal 37, 45.

**37 (SB) - 37 (SB) : Continuity should exist.**  
**45 (Y) - 45 (Y) : Continuity should exist.**

3. Check continuity between passenger seat control unit connector B354 terminal 37, 45 and ground.

**37 (SB) - Ground : Continuity should not exist.**  
**45 (Y) - Ground : Continuity should not exist.**

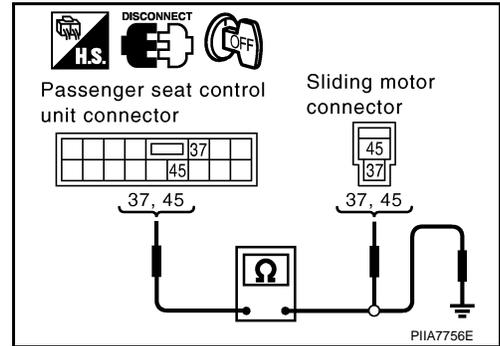

#### OK or NG

- OK >> Check the condition of the harness and connector.
- NG >> Repair or replace harness between passenger seat control unit and sliding motor.


### Check Passenger Side Seat Reclining Motor Circuit

INFOID:000000004657293

### 1.CHECK RECLINING MOTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect reclining motor connector.
3. Reclining switch operated, check voltage between reclining motor and ground.

Connector	Terminal (Wire color)		Reclining switch condition	Voltage (V) (Approx.)
	(+)	(-)		
B358	35 (G)	Ground	BACKWARD	Battery voltage
			Other than above	0
	42 (OR)		FORWARD	Battery voltage
			Other than above	0

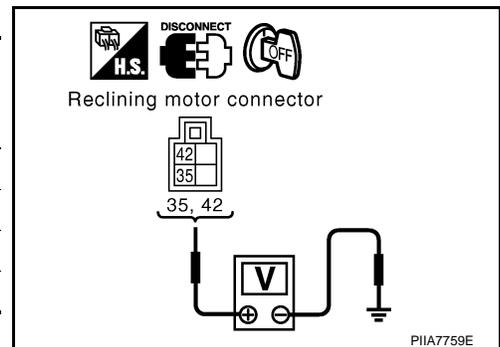

#### OK or NG

- OK >> Replace reclining motor.
- NG >> GO TO 2.


### 2.CHECK RECLINING MOTOR CIRCUIT HARNESS

1. Disconnect passenger seat control unit connector.
2. Check continuity between passenger seat control unit connector B354 terminal 35, 42 and reclining motor connector B358 terminal 35, 42.

**35 (G) - 35 (G) : Continuity should exist.**  
**42 (OR) - 42 (OR) : Continuity should exist.**

3. Check continuity between passenger seat control unit connector B354 terminal 35, 42 and ground.

**35 (G) - Ground : Continuity should not exist.**  
**42 (OR) - Ground : Continuity should not exist.**

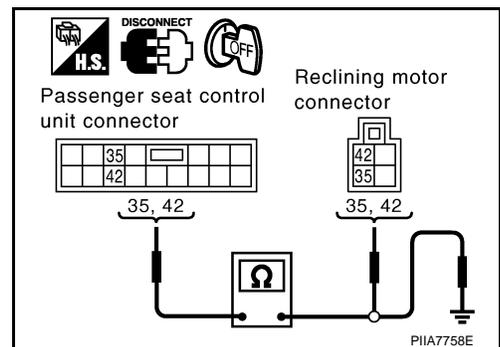

#### OK or NG

- OK >> Check the condition of the harness and connector.
- NG >> Repair or replace harness between passenger seat control unit and reclining motor.

# POWER SEAT/FOR ROADSTER


< SERVICE INFORMATION >


## Check Passenger Side Seat Reclining Sensor Circuit

INFOID:000000004657294

### 1. CHECK RECLINING SENSOR OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Check signal between passenger seat control unit connector and ground, with oscilloscope.

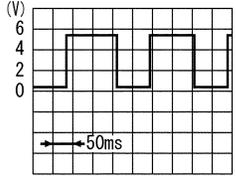Con- nector	Terminal (Wire color)		Condition	Signal (Reference value)
	(+)	(-)		
B353	3 (Y)	Ground	When reclining motor is operated.	 <p style="text-align: right;">SIIA0692J</p>

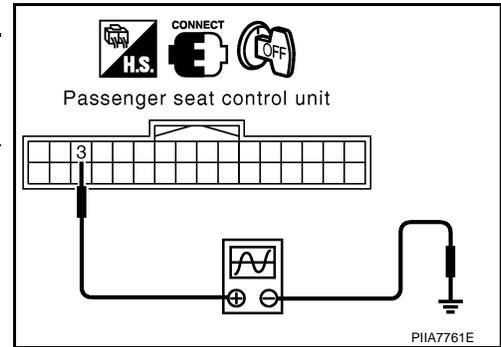

#### OK or NG

- OK >> Passenger side seat reclining motor circuit is OK.  
 NG1 >> When voltage waveform dose not appear with a constant voltage (approx. 5V), GO TO 3.  
 NG2 >> When voltage waveform dose not appear with a constant voltage (approx. 0V), GO TO 2.

### 2. CHECK RECLINING SENSOR CIRCUIT HARNESS


1. Disconnect passenger seat control unit connector.
2. Check continuity between passenger seat control unit connector B354 terminal 3, 41 and ground.

**3 (Y) - Ground : Continuity should not exist.**

**41 (Y/B) - Ground : Continuity should not exist.**

#### OK or NG

- OK >> Replace passenger seat control unit.  
 NG >> Repair or replace harness between passenger seat control unit and reclining motor.

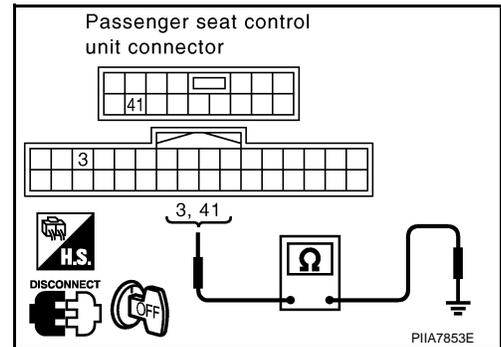

### 3. CHECK RECLINING SENSOR CIRCUIT HARNESS


1. Disconnect passenger seat control unit connector.
2. Check continuity between passenger seat control unit connector B354 terminal 3, 41 and reclining motor connector B358 terminal 3, 41.

**3 (Y) - 3 (Y) : Continuity should exist.**

**41 (Y/B) - 41 (Y/B) : Continuity should exist.**

#### OK or NG

- OK >> GO TO 4.  
 NG >> Repair or replace harness between passenger seat control unit and reclining motor.

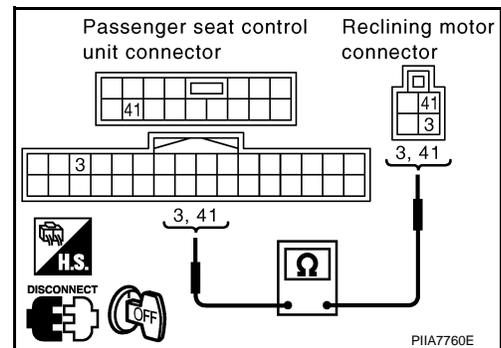

### 4. CHECK RECLINING SENSOR GROUND CIRCUIT

1. Connect passenger seat control unit connector.

# POWER SEAT/FOR ROADSTER


## < SERVICE INFORMATION >

- Check continuity between passenger seat control unit connector B354 terminal 41 and ground.

**41 (Y/B) - Ground : Continuity should exist.**

### OK or NG

- OK >> Replace reclining motor.  
 NG >> Replace passenger seat control unit.

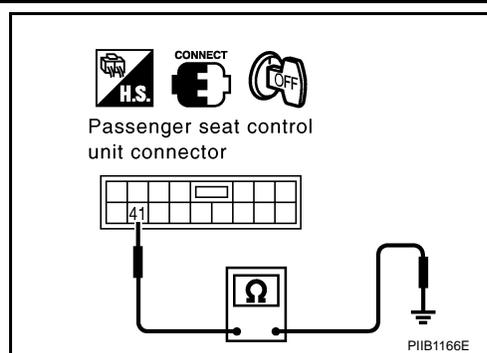


INFOID:000000004657295

## Check Passenger Side Seat Sliding Switch Circuit

### 1. CHECK SLIDING SWITCH OUTPUT SIGNAL

- Turn ignition switch OFF.
- Sliding switch operated, check voltage between passenger seat control unit connector and ground.

Connector	Terminal (Wire color)		Sliding switch condition	Voltage (V) (Approx.)
	(+)	(-)		
B353	14 (Y)	Ground	FORWARD	0
			Other than above	Battery voltage
	15 (SB)		BACKWARD	0
			Other than above	Battery voltage

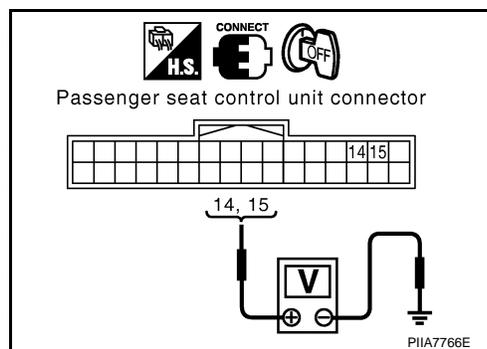

### OK or NG

- OK >> Replace passenger seat control unit.  
 NG >> GO TO 2.

### 2. CHECK SLIDING SWITCH CIRCUIT HARNESS

- Disconnect passenger seat control unit connector and power seat switch connector.
- Check continuity between passenger seat control unit connector B353 terminal 14, 15 and power seat switch connector B357 terminal 14, 15.


**14 (Y) - 14 (Y) : Continuity should exist.**

**15 (SB) - 15 (SB) : Continuity should exist.**

- Check continuity between passenger seat control unit connector B353 terminal 14, 15 and ground.

**14 (Y) - Ground : Continuity should not exist.**

**15 (SB) - Ground : Continuity should not exist.**

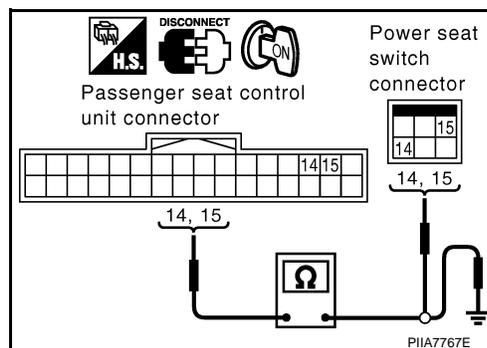

### OK or NG

- OK >> GO TO 3.  
 NG >> Repair or replace harness between passenger seat control unit and power seat switch.

### 3. CHECK POWER SEAT SWITCH

Sliding switch operated, check continuity between power seat switch terminal 14, 15 and 40B.


# POWER SEAT/FOR ROADSTER

## < SERVICE INFORMATION >

Terminals		Sliding switch condition	Continuity
14	40B	FORWARD	Yes
		Other than above	No
15	40B	BACKWARD	Yes
		Other than above	No

### OK or NG

- OK >> Check the condition of the harness and connector.  
 NG >> Replace power seat switch.

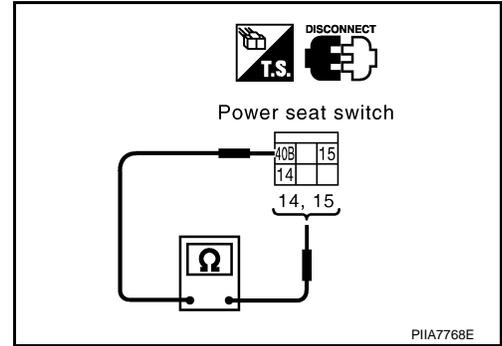


## Check Passenger Side Seat Reclining Switch Circuit

INFOID:000000004657296

### 1. CHECK RECLINING SWITCH OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Reclining switch operated, check voltage between passenger seat control unit connector and ground.

Connector	Terminal (Wire color)		Reclining switch condition	Voltage (V) (Approx.)
	(+)	(-)		
B353	12 (OR)	Ground	FORWARD	0
			Other than above	Battery voltage
	13 (G)		BACKWARD	0
			Other than above	Battery voltage

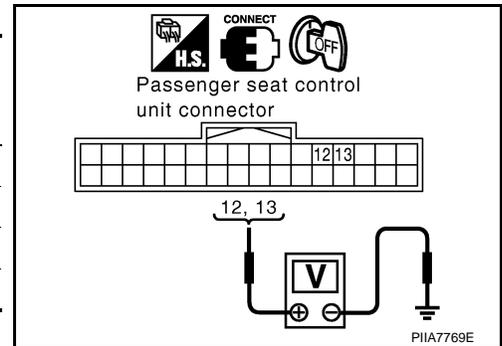

### OK or NG

- OK >> Passenger side seat reclining switch circuit is OK.  
 NG >> GO TO 2.


### 2. CHECK RECLINING SWITCH CIRCUIT HARNESS

1. Disconnect passenger seat control unit connector and power seat switch connector.
2. Check continuity between passenger seat control unit connector B353 terminal 12, 13 and power seat switch connector B357 terminal 12, 13.

**12 (OR) - 12 (OR) : Continuity should exist.**  
**13 (G) - 13 (G) : Continuity should exist.**

3. Check continuity between passenger seat control unit connector B353 terminal 12, 13 and ground.

**12 (OR) - Ground : Continuity should not exist.**  
**13 (G) - Ground : Continuity should not exist.**

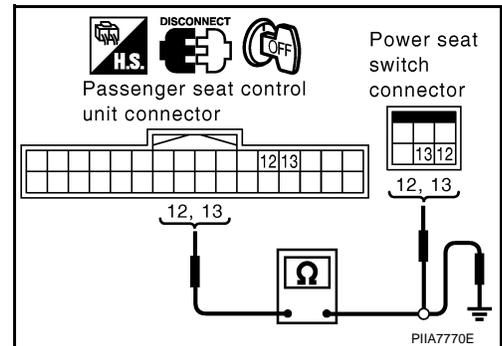

### OK or NG

- OK >> GO TO 3.  
 NG >> Repair or replace harness between passenger seat control unit and power seat switch.

### 3. CHECK POWER SEAT SWITCH

Reclining switch operated, check continuity between power seat switch terminal 12, 13 and 40B.


# POWER SEAT/FOR ROADSTER

## < SERVICE INFORMATION >

Terminals	Reclining switch condition	Continuity
12	FORWARD	Yes
	Other than above	No
13	BACKWARD	Yes
	Other than above	No

### OK or NG

- OK >> Check the condition of the harness and connector.  
 NG >> Replace power seat switch.

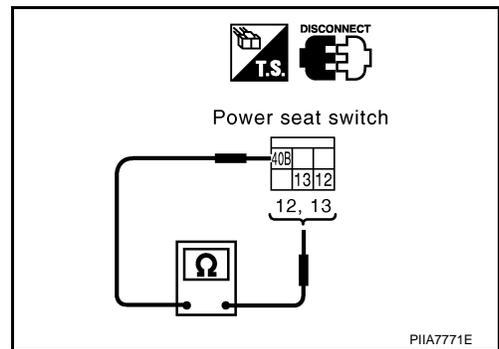

## Check Passenger Side Power Seat Switch Ground Circuit

INFOID:000000004657297

### 1. CHECK POWER SEAT SWITCH

1. Turn ignition switch OFF.
2. Disconnect power seat switch connector.
3. Check continuity between power seat switch terminal 12, 13, 14, 15 and 40B.

Terminals	Condition	Continuity
12	When reclining switch is turned to forward	Yes
	Other than above	No
13	When reclining switch is turned to backward	Yes
	Other than above	No
14	When sliding switch is turned to forward	Yes
	Other than above	No
15	When sliding switch is turned to backward	Yes
	Other than above	No

### OK or NG

- OK >> GO TO 2.  
 NG >> Replace power seat switch.


### 2. CHECK POWER SEAT SWITCH GROUND CIRCUIT

Check continuity between power seat switch connector B357 terminal 40B and ground.

**40B (B/W) - Ground : Continuity should exist.**

### OK or NG

- OK >> Check the condition of the harness and connector.  
 NG >> Repair or replace the harness between power seat switch and ground.

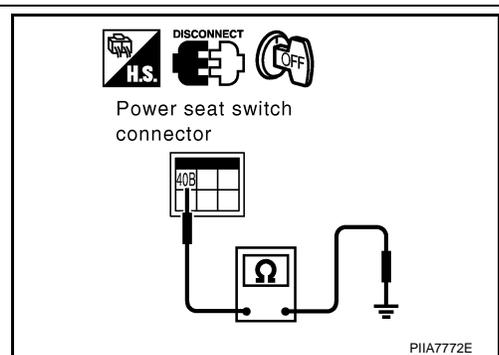

## Check Seatback Tilt Switch Circuit

INFOID:000000004657298

### 1. CHECK SEATBACK TILT SWITCH OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Seatback tilt switch operated, check voltage between passenger seat control unit connector and ground.

# POWER SEAT/FOR ROADSTER

## < SERVICE INFORMATION >

Connector	Terminal (Wire color)		Seatback tilt switch condition	Voltage (V) (Approx.)
	(+)	(-)		
B353	8 (BR)	Ground	FORWARD	0
			Other than above.	Battery voltage
	9 (LG)		BACKWARD	0
			Other than above.	Battery voltage

### OK or NG

- OK >> Seatback tilt switch circuit is OK.  
 NG >> GO TO 2.

## 2. CHECK SEATBACK TILT SWITCH CIRCUIT HARNESS

1. Disconnect passenger seat control unit connector and seatback tilt switch.
2. Check continuity between passenger seat control unit connector B353 terminal 8, 9 and seatback tilt switch connector B372 terminal 8, 9.

**8 (BR) - 8 (BR) : Continuity should exist.**

**9 (LG) - 9 (LG) : Continuity should exist.**

3. Check continuity between passenger seat control unit connector B353 terminal 8, 9 and ground.

**8 (BR) - Ground : Continuity should not exist.**

**9 (LG) - Ground : Continuity should not exist.**

### OK or NG

- OK >> GO TO 3.  
 NG >> Repair or replace harness between passenger seat control unit and seatback tilt switch.

## 3. CHECK SEATBACK TILT SWITCH

Seatback switch operated, check continuity between seatback tilt switch terminal 8, 9 and 40.

Terminals	Seatback switch condition	Continuity
8	FORWARD	Yes
	Other than above	No
9	BACKWARD	Yes
	Other than above	No

### OK or NG

- OK >> GO TO 4.  
 NG >> Replace seatback tilt switch.





## 4. CHECK SEATBACK TILT SWITCH GROUND CIRCUIT

Check continuity between seatback tilt switch connector B372 terminal 40 and ground.

**40 (B/W) - Ground : Continuity should exist.**

### OK or NG

- OK >> Check the condition of the harness and connector.  
 NG >> Repair or replace the harness between seatback tilt switch and ground.

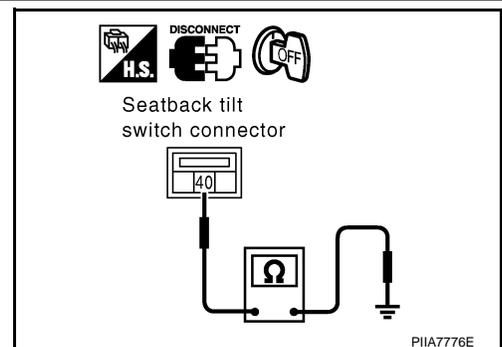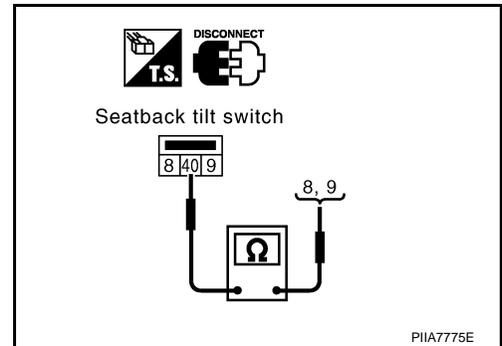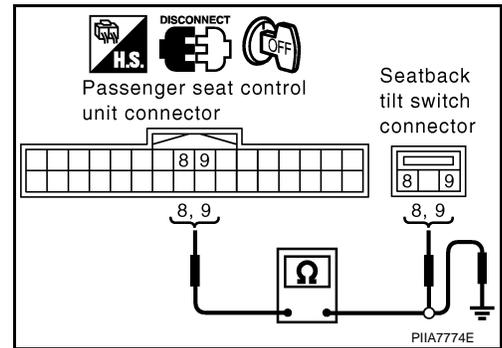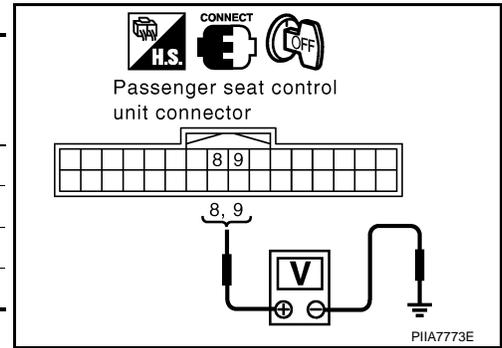

# POWER SEAT/FOR ROADSTER

< SERVICE INFORMATION >


## Check Seatback Tilt Cancel Switch Circuit

INFOID:000000004657299

### 1. CHECK SEATBACK TILT CANCEL SWITCH OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Seatback tilt cancel switch operated, check voltage between passenger seat control unit connector and ground.

Connector	Terminal (Wire color)		Seatback tilt cancel switch condition	Voltage (V) (Approx.)
	(+)	(-)		
B353	7 (P)	Ground	CANCEL	0
			AUTO	5

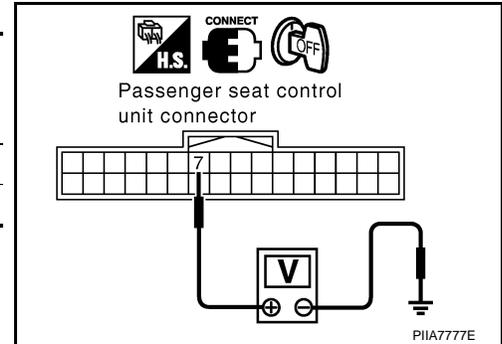

#### OK or NG

- OK >> Passenger seatback tilt cancel switch circuit is OK.  
 NG >> GO TO 2.


### 2. CHECK SEATBACK TILT CANCEL SWITCH CIRCUIT HARNESS

1. Disconnect passenger seat control unit connector and seatback tilt cancel switch.
2. Check continuity between passenger seat control unit connector B353 terminal 7 and seatback tilt cancel switch connector B373 terminal 7.

**7 (P) - 7 (P) : Continuity should exist.**

3. Check continuity between passenger seat control unit connector B353 terminal 7 and ground.

**7 (P) - Ground : Continuity should not exist.**

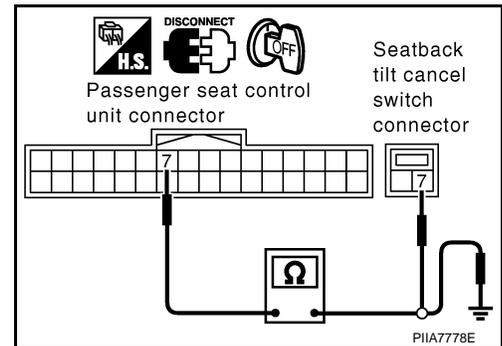

#### OK or NG

- OK >> GO TO 3.  
 NG >> Repair or replace harness between passenger seat control unit and seatback tilt cancel switch.


### 3. CHECK SEATBACK TILT CANCEL SWITCH

Seatback tilt cancel switch operated, check continuity between seatback tilt cancel switch terminal 7 and 40C.

Terminals		Seatback tilt cancel switch condition	Continuity
7	40C	CANCEL	Yes
		AUTO	No

#### OK or NG

- OK >> GO TO 4.  
 NG >> Replace seatback tilt cancel switch.

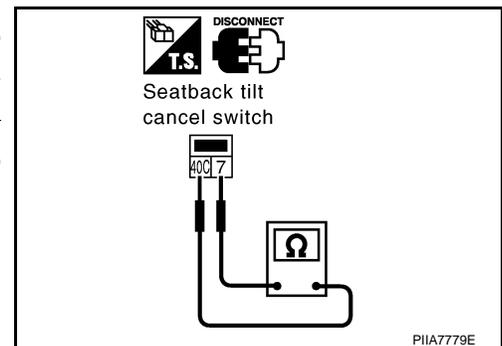

### 4. CHECK SEATBACK TILT CANCEL SWITCH GROUND CIRCUIT

# POWER SEAT/FOR ROADSTER


## < SERVICE INFORMATION >

Check continuity between seatback tilt cancel switch connector B373 terminal 40C and ground.

**40C (B/W) - Ground : Continuity should exist.**

### OK or NG

- OK >> Check the condition of the harness and connector.
- NG >> Repair or replace the harness between seatback tilt cancel switch and ground.

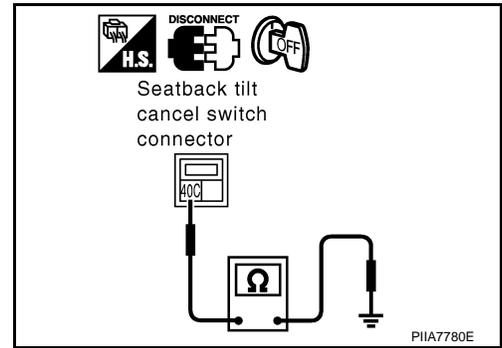

INFOID:000000004657300

## Check Soft Top Switch Circuit

### 1. CHECK SOFT TOP SYSTEM

Soft top is operated.

#### Operate normally?


- Yes >> GO TO 2.
- No >> Further inspection necessary. Refer to

### 2. CHECK SOFT TOP SWITCH OUTPUT SIGNAL

1. Turn ignition switch ON.
2. Soft top switch operated, check voltage between passenger seat control unit connector and ground.

Connector	Terminal (Wire color)		Soft top switch condition	Voltage (V) (Approx.)
	(+)	(-)		
B353	5 (R)	Ground	OPEN*	0
			Other than above	Battery voltage
	6 (GY)		CLOSE*	0
			Other than above	Battery voltage

\*: Turn ignition switch ON and depress brake pedal when soft top switch operates.

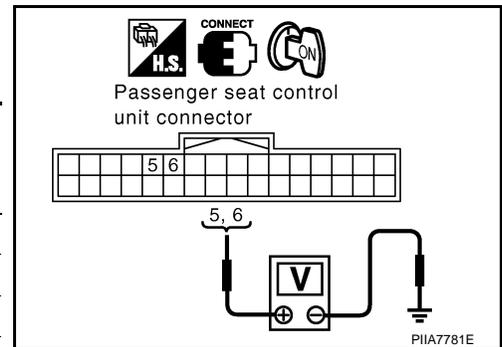

### OK or NG

- OK >> Soft top switch circuit is OK.
- NG >> GO TO 3.


### 3. CHECK SOFT TOP SWITCH CIRCUIT HARNESS

1. Disconnect passenger seat control unit connector and soft top switch.
2. Check continuity between passenger seat control unit connector B353 terminal 5, 6 and soft top switch connector M14 terminal 3, 4.

**5 (R) - 3 (L/B) : Continuity should exist.**  
**6 (GY) - 4 (R/G) : Continuity should exist.**

3. Check continuity between passenger seat control unit connector B353 terminal 5, 6 and ground.

**5 (R) - Ground : Continuity should not exist.**  
**6 (GY) - Ground : Continuity should not exist.**

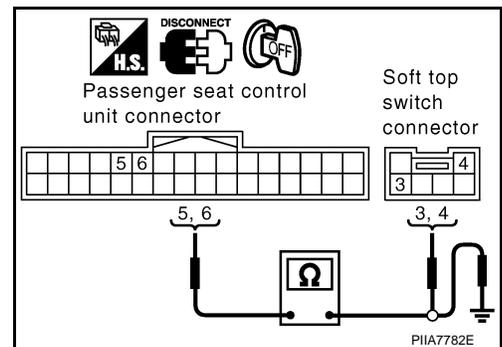

### OK or NG

- OK >> Check the condition of the harness and the connector.
- NG >> Repair or replace harness between passenger seat control unit and soft top switch.

# POWER SEAT/FOR ROADSTER

< SERVICE INFORMATION >

## Check Power Window Down Request Signal Circuit


INFOID:000000004657301

### 1. CHECK POWER WINDOW DOWN REQUEST SIGNAL INPUT

1. Turn ignition switch ON.
2. Check voltage between passenger seat control unit connector and ground.

Con- nector	Terminal (Wire color)		Condition	Voltage (V) (Approx.)
	(+)	(-)		
B353	16 (PU/W)	Ground	When soft top switch is turned to OPEN or CLOSE.*	0
			Other than above.	5

\*: Turn ignition switch ON and depress brake pedal when soft top switch operates.

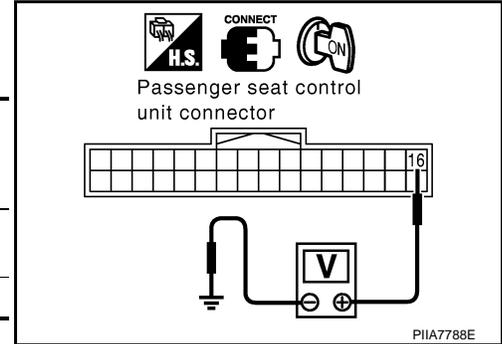

#### OK or NG

- OK >> Power window down request signal circuit is OK.  
 NG >> GO TO 2.


### 2. CHECK POWER WINDOW DOWN REQUEST SIGNAL CIRCUIT HARNESS

1. Turn ignition switch OFF.
2. Disconnect soft top control unit and passenger seat control unit connector.
3. Check continuity between passenger seat control unit connector B353 terminal 16 and soft top control unit connector B67 terminal 36.

**16 (PU/W) - 36 (PU) : Continuity should exist.**

4. Check continuity between passenger seat control unit connector B353 terminal 16 and ground.

**16 (PU/W) - Ground : Continuity should not exist.**

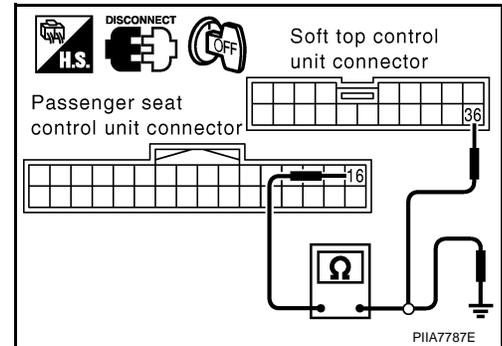

#### OK or NG

- OK >> Power window down request signal circuit is OK. Further inspection is necessary. Refer to [RF-76, "Check Power Window Down Request Signal"](#).  
 NG >> Repair or replace harness between passenger seat control unit and soft top control unit.

## Check Storage Lid Close Signal Circuit

INFOID:000000004657302

### 1. CHECK STORAGE LID CLOSE SIGNAL

1. Turn ignition switch ON.
2. Soft top operates in OPEN, check voltage between passenger seat control unit connector and ground.


Connector	Terminal (Wire color)		Condition	Voltage (V) (Approx.)
	(+)	(-)		
B353	33 (G/B)	Ground	When storage lid is in a closing operation	Battery voltage
			Other than above.	0

#### OK or NG

- OK >> Replace passenger seat control unit.  
 NG >> GO TO 2.

### 2. CHECK STORAGE LID CLOSE SIGNAL CIRCUIT HARNESS

1. Turn ignition switch OFF.

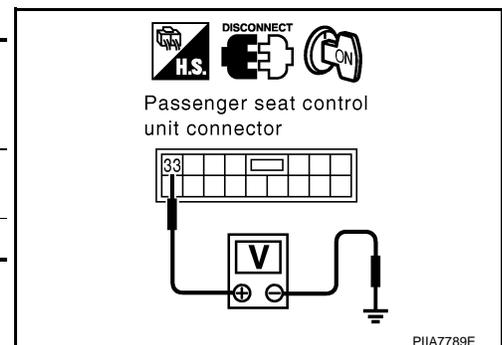

# POWER SEAT/FOR ROADSTER

## < SERVICE INFORMATION >

- Disconnect soft top control unit and storage lid actuator and passenger seat control unit connector.
- Check continuity between passenger seat control unit connector B353 terminal 33 and soft top control unit connector B66 terminal 13.


**33 (G/B) - 13 (L/R) : Continuity should exist.**

- Check continuity between passenger seat control unit connector B353 terminal 33 and ground.

**33 (G/B) - Ground : Continuity should not exist.**

### OK or NG

- OK >> Storage lid close signal circuit is OK. Further inspection is necessary. Refer to [RF-59, "Check Storage Lid Actuator \(Close Operate\)"](#).
- NG >> Repair or replace harness between passenger seat control unit and soft top control unit.

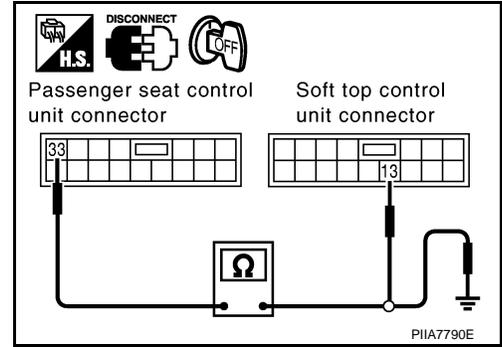

## Check Soft Top Lock Switch Circuit

INFOID:000000004657303


### 1. CHECK SOFT TOP LOCK SWITCH OUTPUT SIGNAL

- Turn ignition switch ON.
- Soft top operates in CLOSE, check voltage between passenger seat control unit connector and ground.

Connector	Terminal (Wire color)		Condition	Voltage (V) (Approx.)
	(+)	(-)		
B353	11 (L/W)	Ground	5th bow full latch switch is turned to ON	0
			Other than above	5

### OK or NG

- OK >> Replace passenger seat control unit.
- NG >> GO TO 2.

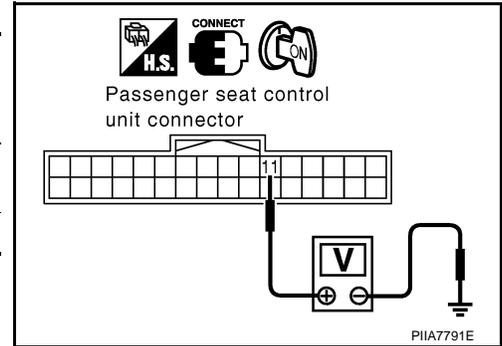

### 2. CHECK SOFT TOP LOCK SWITCH CIRCUIT HARNESS

- Turn ignition switch OFF.
- Disconnect passenger seat control unit and soft top lock switch connector.
- Check continuity between passenger seat control unit connector B353 terminal 11 and soft top lock switch connector T205 terminal 3.


**11 (L/W) - 3 (Y) : Continuity should exist.**

- Check continuity between passenger seat control unit connector B353 terminal 11 and ground.

**11 (L/W) - Ground : Continuity should not exist.**

### OK or NG

- OK >> Check the condition of the harness and connector.
- NG >> Repair or replace harness between passenger seat control unit and soft top control unit.

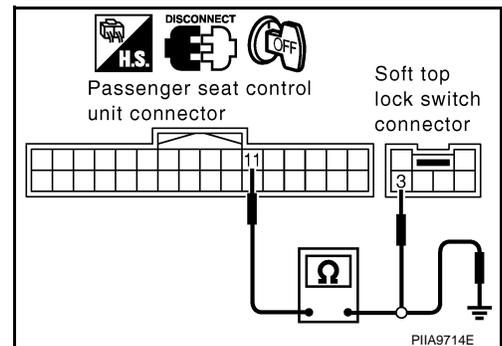

## Check Seat Belt Buckle Switch Circuit

INFOID:000000004657304

### 1. CHECK SEAT BELT BUCKLE SWITCH OUTPUT SIGNAL

- Turn ignition switch ON.
- Check voltage between passenger seat control unit connector and ground.

# POWER SEAT/FOR ROADSTER

## < SERVICE INFORMATION >

Connector	Terminal (Wire color)		Condition	Voltage (V) (Approx.)
	(+)	(-)		
B353	10 (L/Y)	Ground	: Fastened	5
			: Unfastened	0

### OK or NG

- OK >> Seat belt buckle switch circuit is OK.
- NG >> GO TO 2.

## 2. CHECK SEAT BELT BUCKLE SWITCH CIRCUIT HARNESS

1. Turn ignition switch OFF.
2. Disconnect passenger seat control unit connector and seat belt buckle switch connector.
3. Check continuity between passenger seat control unit connector B353 terminal 10 and seat belt buckle switch connector B11 terminal 1.

**10 (L/Y) - 1 (W) : Continuity should exist.**

4. Check continuity between passenger seat control unit connector B353 terminal 10 and ground.

**10 (L/Y) - Ground : Continuity should not exist.**

### OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace harness between passenger seat control unit and seat belt buckle switch.

## 3. CHECK SEAT BELT BUCKLE SWITCH

Check continuity between seat belt buckle switch terminal 1 and 2.

Terminals		Condition	Continuity
1	2		
1	2	: Fastened	No
		: Unfastened	Yes

### OK or NG

- OK >> GO TO 4.
- NG >> Replace seat belt buckle switch.





## 4. CHECK SEAT BELT BUCKLE SWITCH GROUND CIRCUIT

Check continuity between seat belt buckle switch connector B11 terminal 2 and ground.

**2 (B) - Ground : Continuity should exist.**

### OK or NG

- OK >> Check the condition of the harness and connector.
- NG >> Repair or replace the harness between seat belt buckle switch and ground.

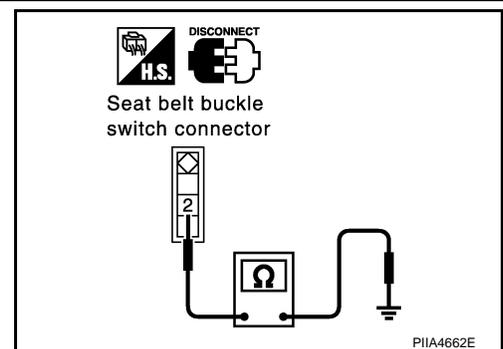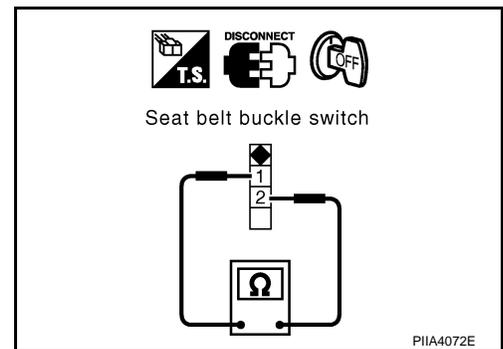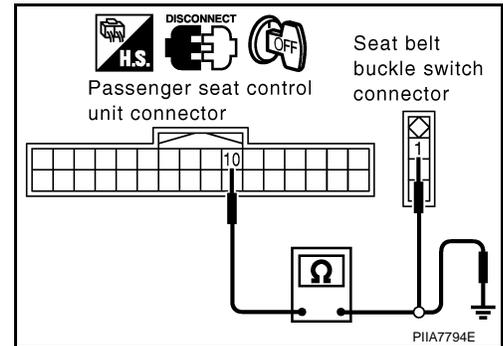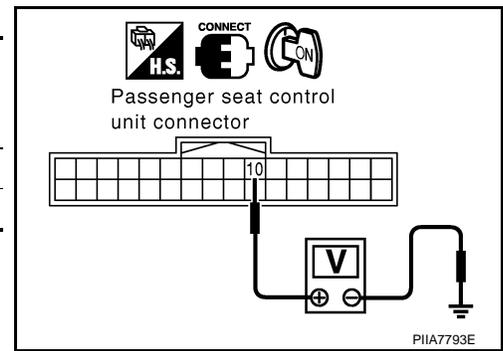

## Check Vehicle Speed Signal


### 1. CHECK VEHICLE SPEED SIGNAL


INFOID:000000004657305

# POWER SEAT/FOR ROADSTER

## < SERVICE INFORMATION >

1. Turn ignition switch ON.
2. Check signal between passenger seat control unit connector and body ground with oscilloscope.

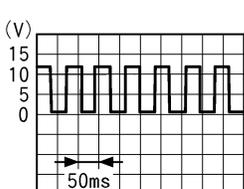Connector	Terminal (Wire color)		Condition	Signal (Reference value)
	(+)	(-)		
B353	4 (PU)	Ground	When vehicle speed is approx. 40 km/h (25 MPH)	 PIIB0078J

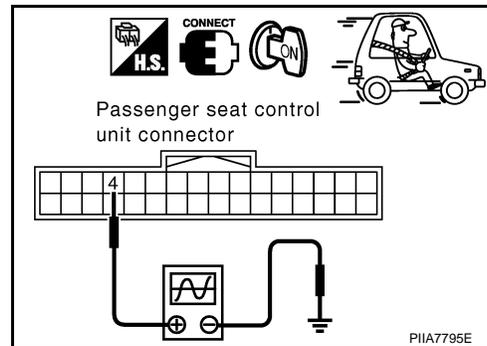

### OK or NG

- OK >> Replace passenger seat control unit.  
 NG >> GO TO 2.


## 2. CHECK VEHICLE SPEED SIGNAL CIRCUIT HARNESS

1. Turn ignition switch OFF.
2. Disconnect passenger seat control unit connector and unified meter and A/C amp.
3. Check continuity between passenger seat control unit connector B353 terminal 4 and unified meter and A/C amp. connector M49 terminal 34.

**4 (PU) - 34 (L) : Continuity should exist.**

4. Check continuity between passenger seat control unit connector B353 terminal 4 and ground.

**4 (PU) - Ground : Continuity should not exist.**

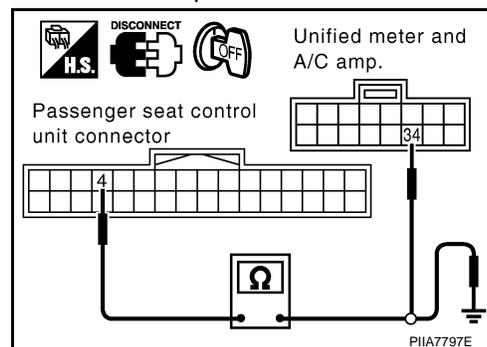

### OK or NG

- OK >> Vehicle speed signal circuit is OK. Further inspection is necessary. Refer to [DI-17. "Vehicle Speed Signal Inspection"](#).  
 NG >> Repair or replace harness between passenger seat control unit and unified meter and A/C amp.

# HEATED SEAT


< SERVICE INFORMATION >

## HEATED SEAT

### Description

INFOID:000000004657306

- When handling seat, be extremely careful not to scratch heating unit.
- To replace heating unit, seat trim and pad should be separated.
- Do not use any organic solvent, such as thinner, benzene, alcohol, etc. to clean trims.

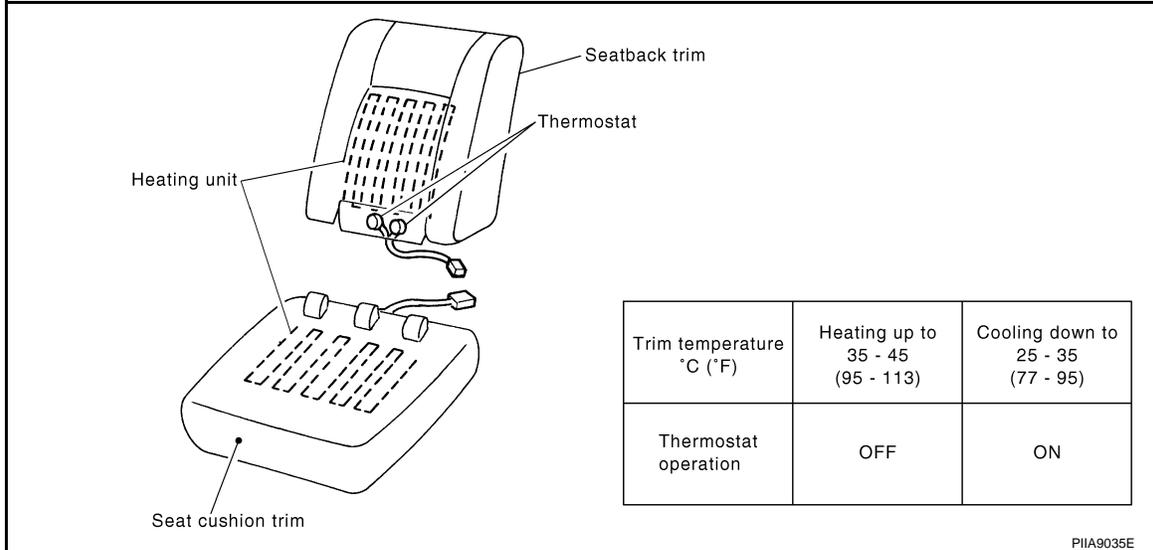

A

B

C

D

E

F

G

H

SE

J

K

L

M

N

O


P

# HEATED SEAT

< SERVICE INFORMATION >

## Schematic

INFOID:00000004657307

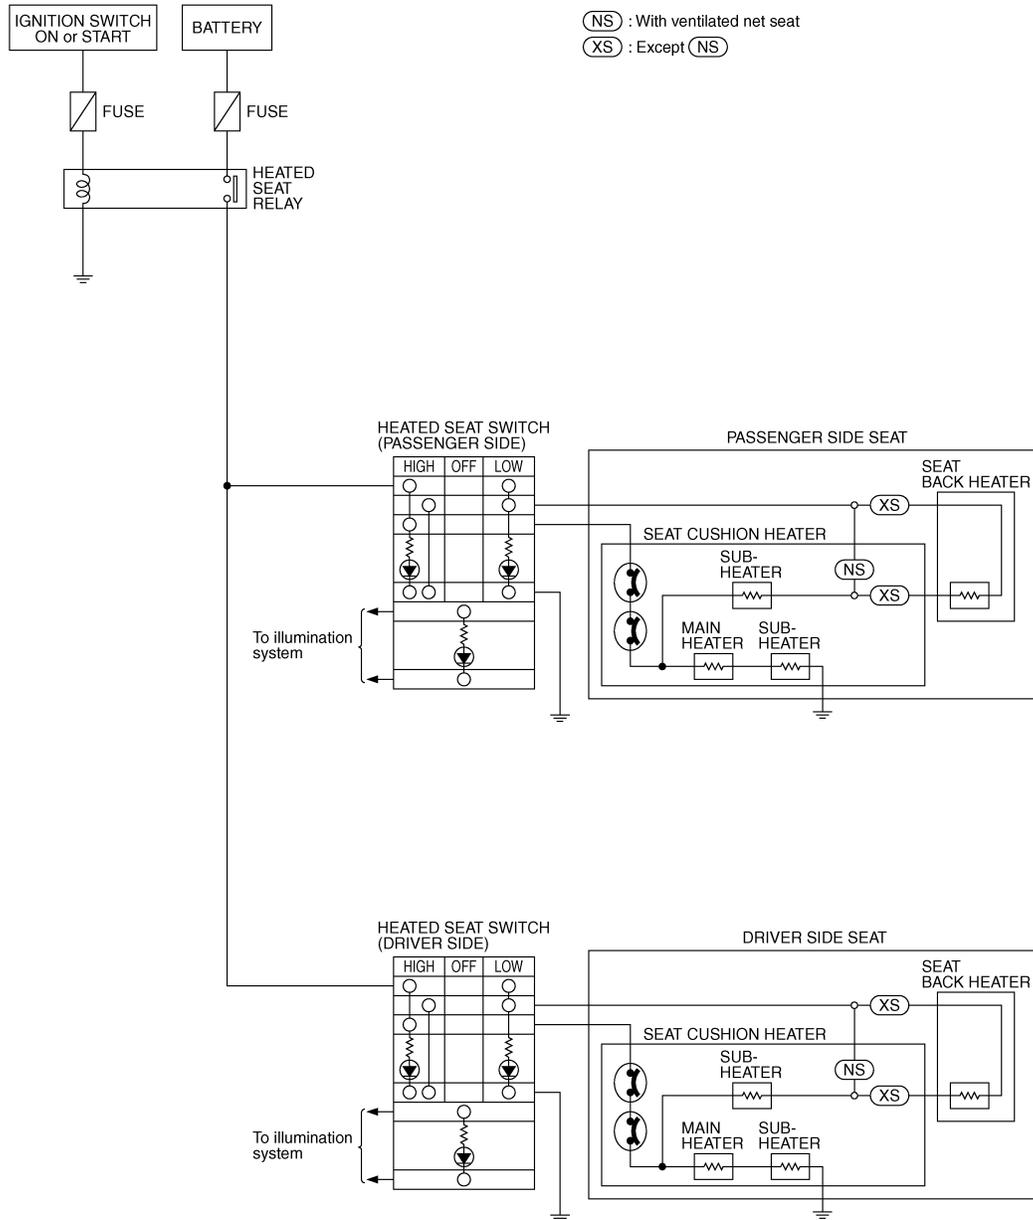

TIWT0517E





# HEATED SEAT

< SERVICE INFORMATION >

## Wiring Diagram - HSEAT -/For Coupe

INFOID:000000004657308

SE-HSEAT-01

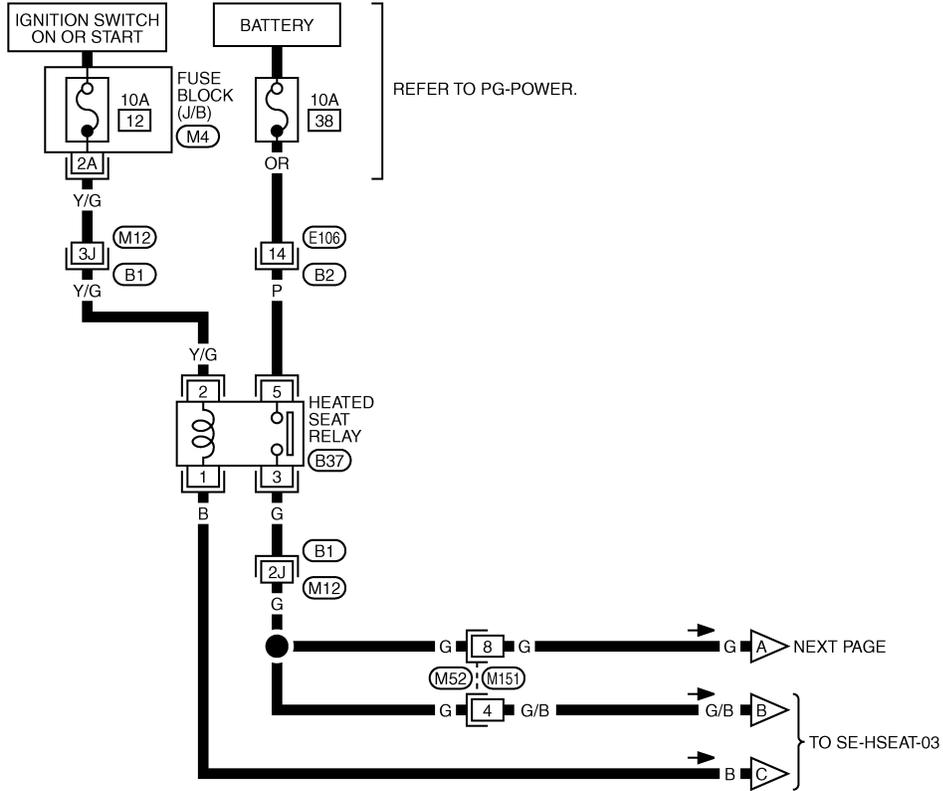






REFER TO THE FOLLOWING.  
 (B1) -SUPER MULTIPLE JUNCTION (SMJ)  
 (M4) -FUSE BLOCK-JUNCTION BOX (J/B)

TIWT2291E

# HEATED SEAT

< SERVICE INFORMATION >

SE-HSEAT-02

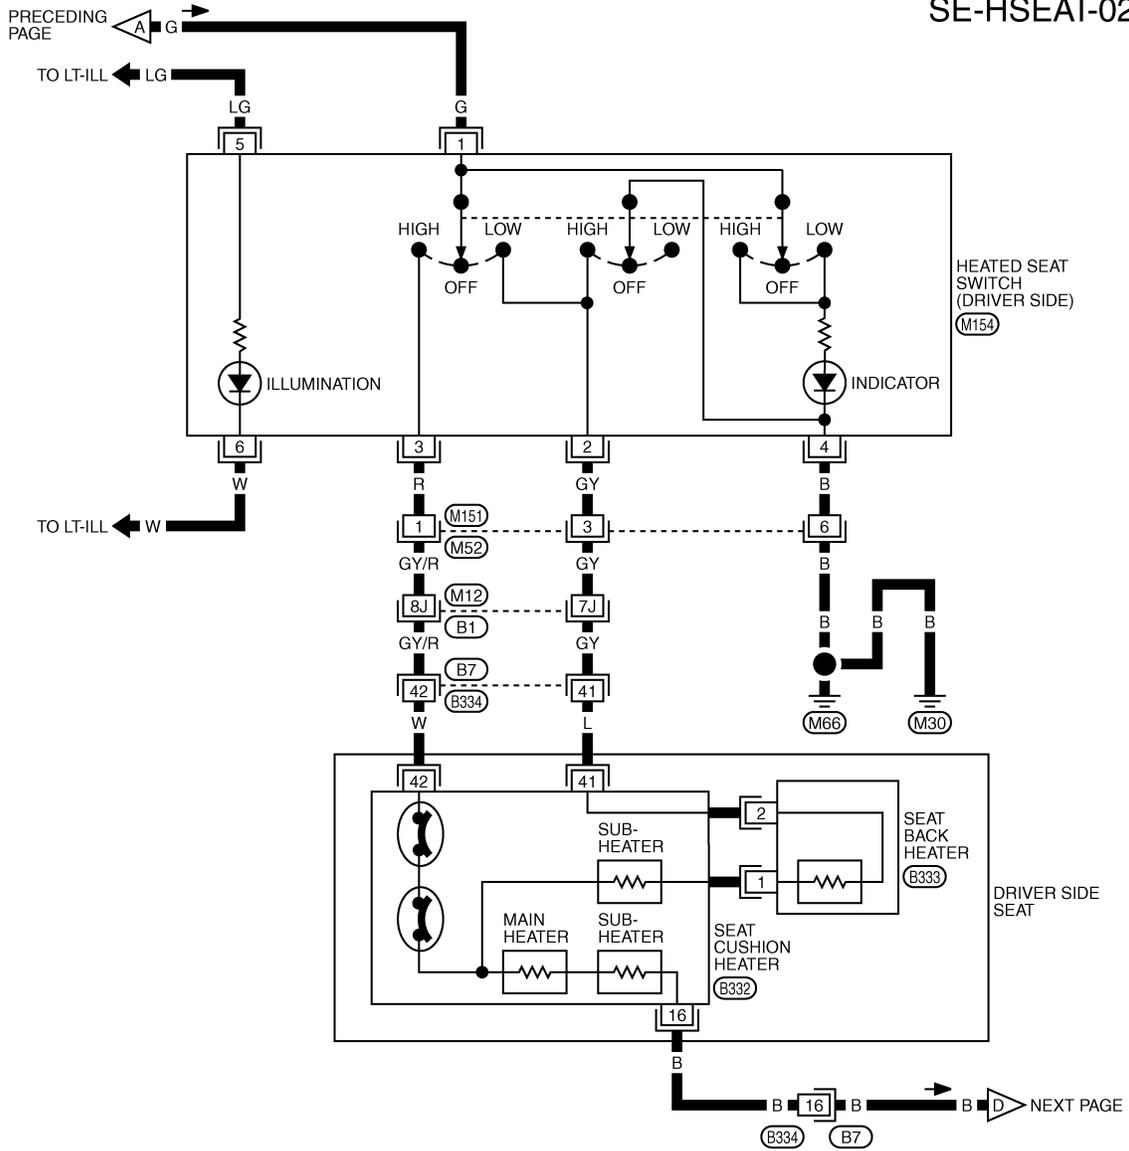

REFER TO THE FOLLOWING.

(B1) -SUPER MULTIPLE JUNCTION (SMJ)



\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

TIWT1619E

# HEATED SEAT

< SERVICE INFORMATION >

SE-HSEAT-03

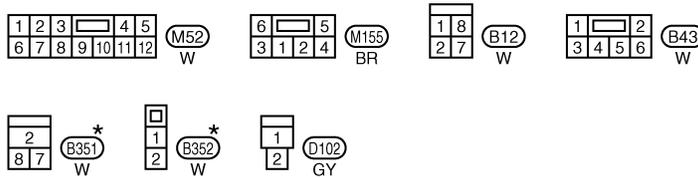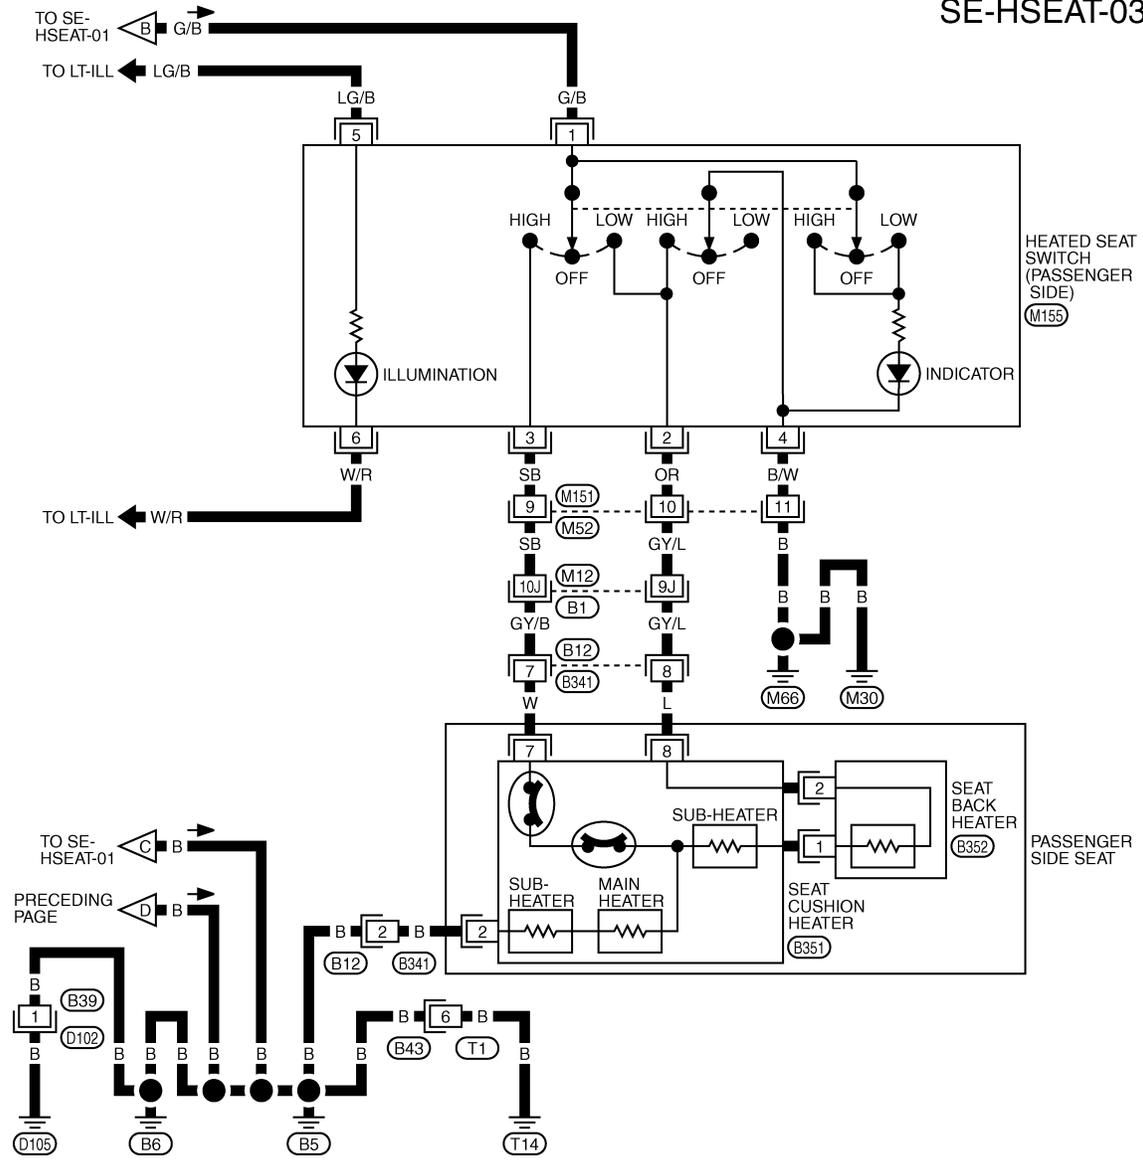

\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

REFER TO THE FOLLOWING.  
 (B1) -SUPER MULTIPLE JUNCTION (SMJ)

TIWT1620E

A  
B  
C  
D  
E  
F  
G  
H  
SE  
J  
K  
L  
M  
N  
O  
P





# HEATED SEAT

< SERVICE INFORMATION >

## Wiring Diagram - HSEAT -/For Roadster-

INFOID:000000004657309

### SE-HSEAT-04

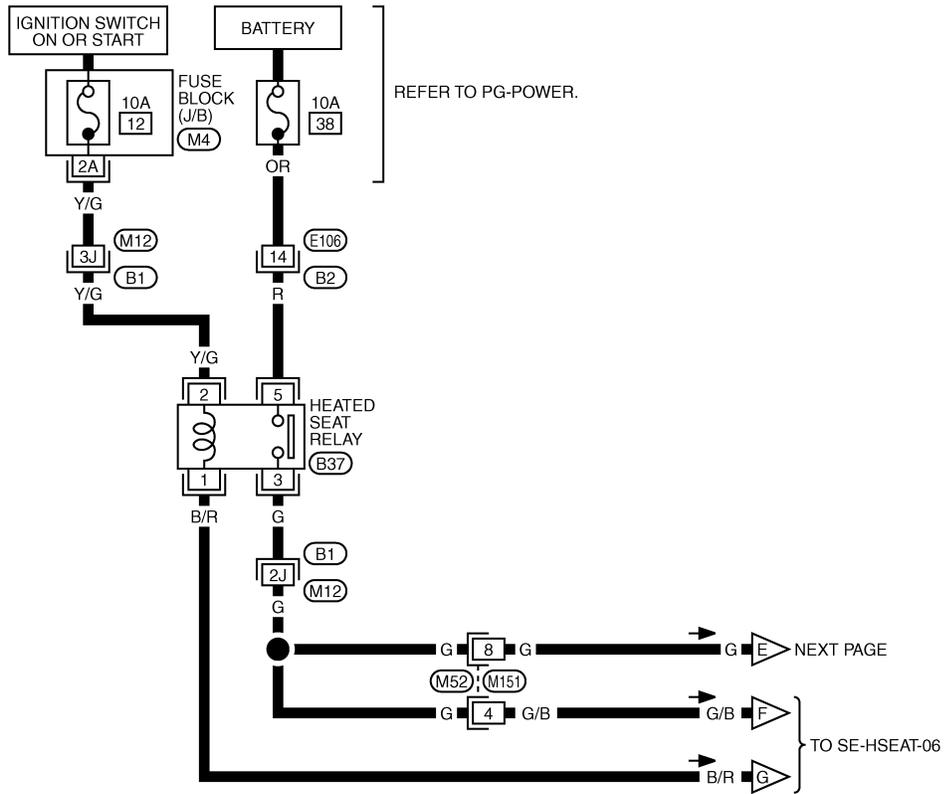

REFER TO THE FOLLOWING.

(B1) -SUPER MULTIPLE JUNCTION (SMJ)


(M4) -FUSE BLOCK-JUNCTION BOX (J/B)

TIWT2292E

# HEATED SEAT

< SERVICE INFORMATION >

SE-HSEAT-05

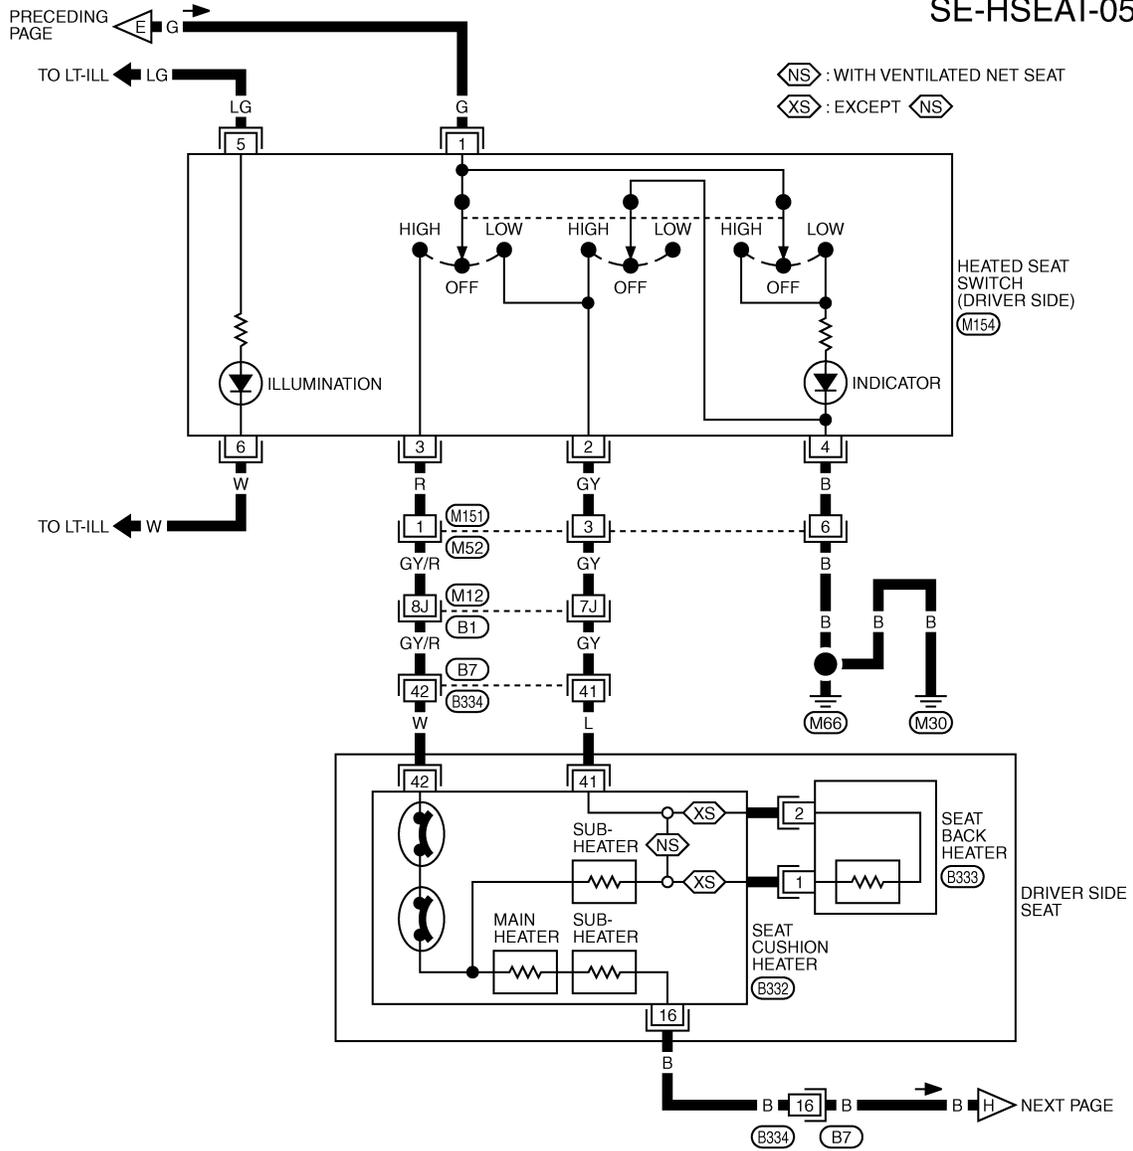

\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.


TIWT1622E

A  
B  
C  
D  
E  
F  
G  
H  
SE  
J  
K  
L  
M  
N  
O  
P

# HEATED SEAT

< SERVICE INFORMATION >

SE-HSEAT-06

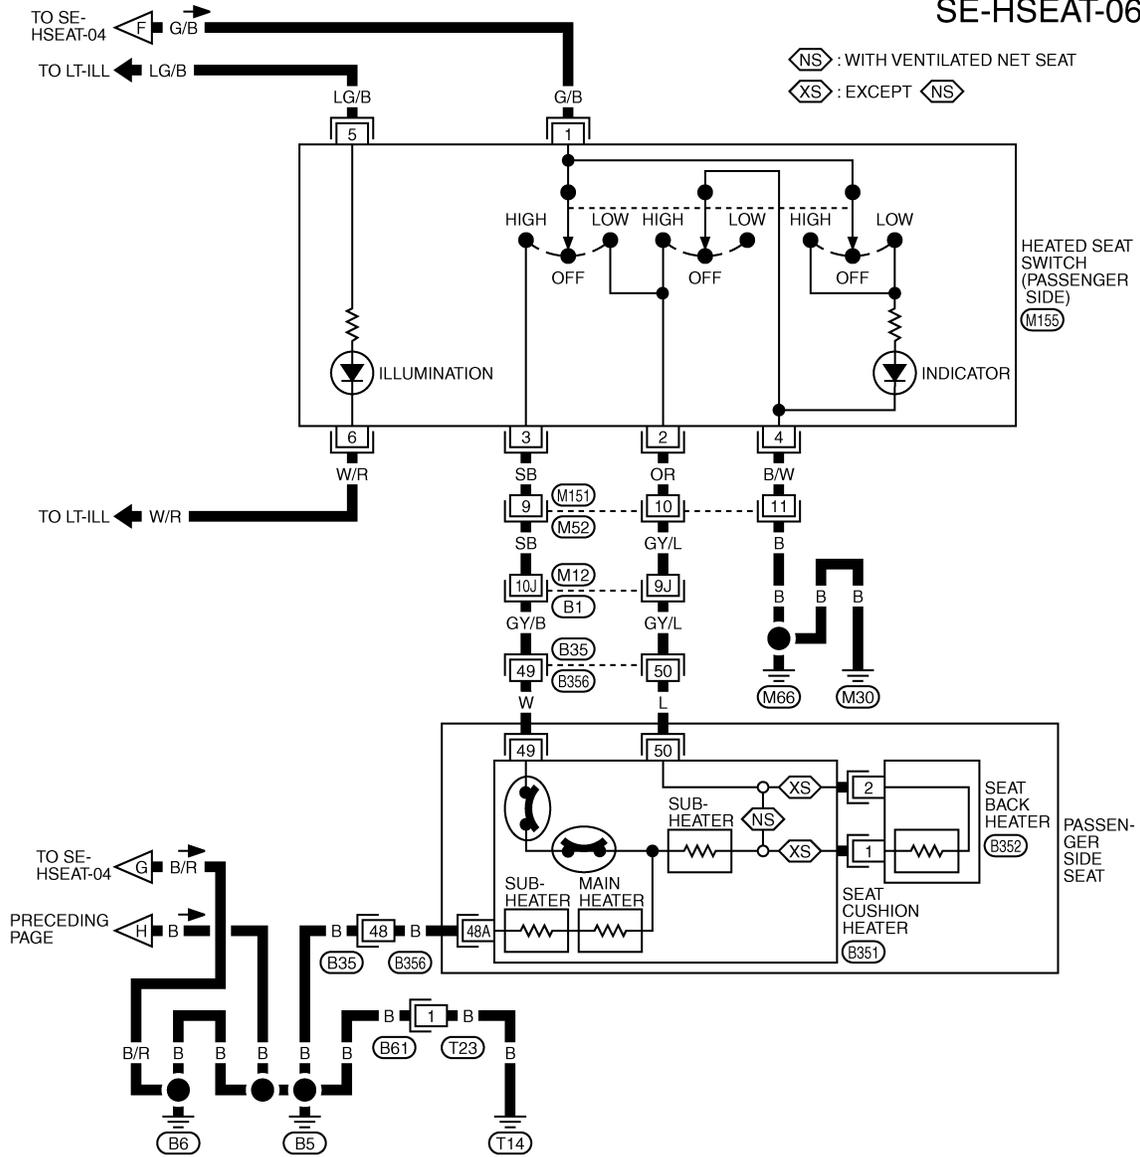

\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

REFER TO THE FOLLOWING.  
 (B1) -SUPER MULTIPLE JUNCTION (SMJ)

TIWT2293E



# SEAT

## < SERVICE INFORMATION >

---


- |                                 |  |  |
|---------------------------------|--|--|
| 1. Headrest                     | 2. Headrest holder (locked)            | 3. Headrest holder (free)              |
| 4. Seatback pad                 | 5. Seat cushion pad                    | 6. Seatback trim                       |
| 7. Seat cushion trim            | 8. Side air bag module                 | 9. Side air bag module bracket         |
| 10. Inner cloth stay            | 11. Side air bag module harness        | 12. Seatback frame                     |
| 13. Seat cushion frame          | 14. Connector rod                      | 15. Rear gusset                        |
| 16. Inner cover outer device    | 17. Seat cushion outer finisher        | 18. Reclining lever knob               |
| 19. Lifter dial                 | 20. Sliding and reclining device outer | 21. Front gusset                       |
| 22. Seat thigh support adjuster | 23. Wire pull                          | 24. Sliding and reclining device inner |
| 25. Seat belt buckle            | 26. Inner cover inner device           | 27. Seat cushion inner finisher        |

# SEAT

< SERVICE INFORMATION >

## POWER SEAT

SEC. 870

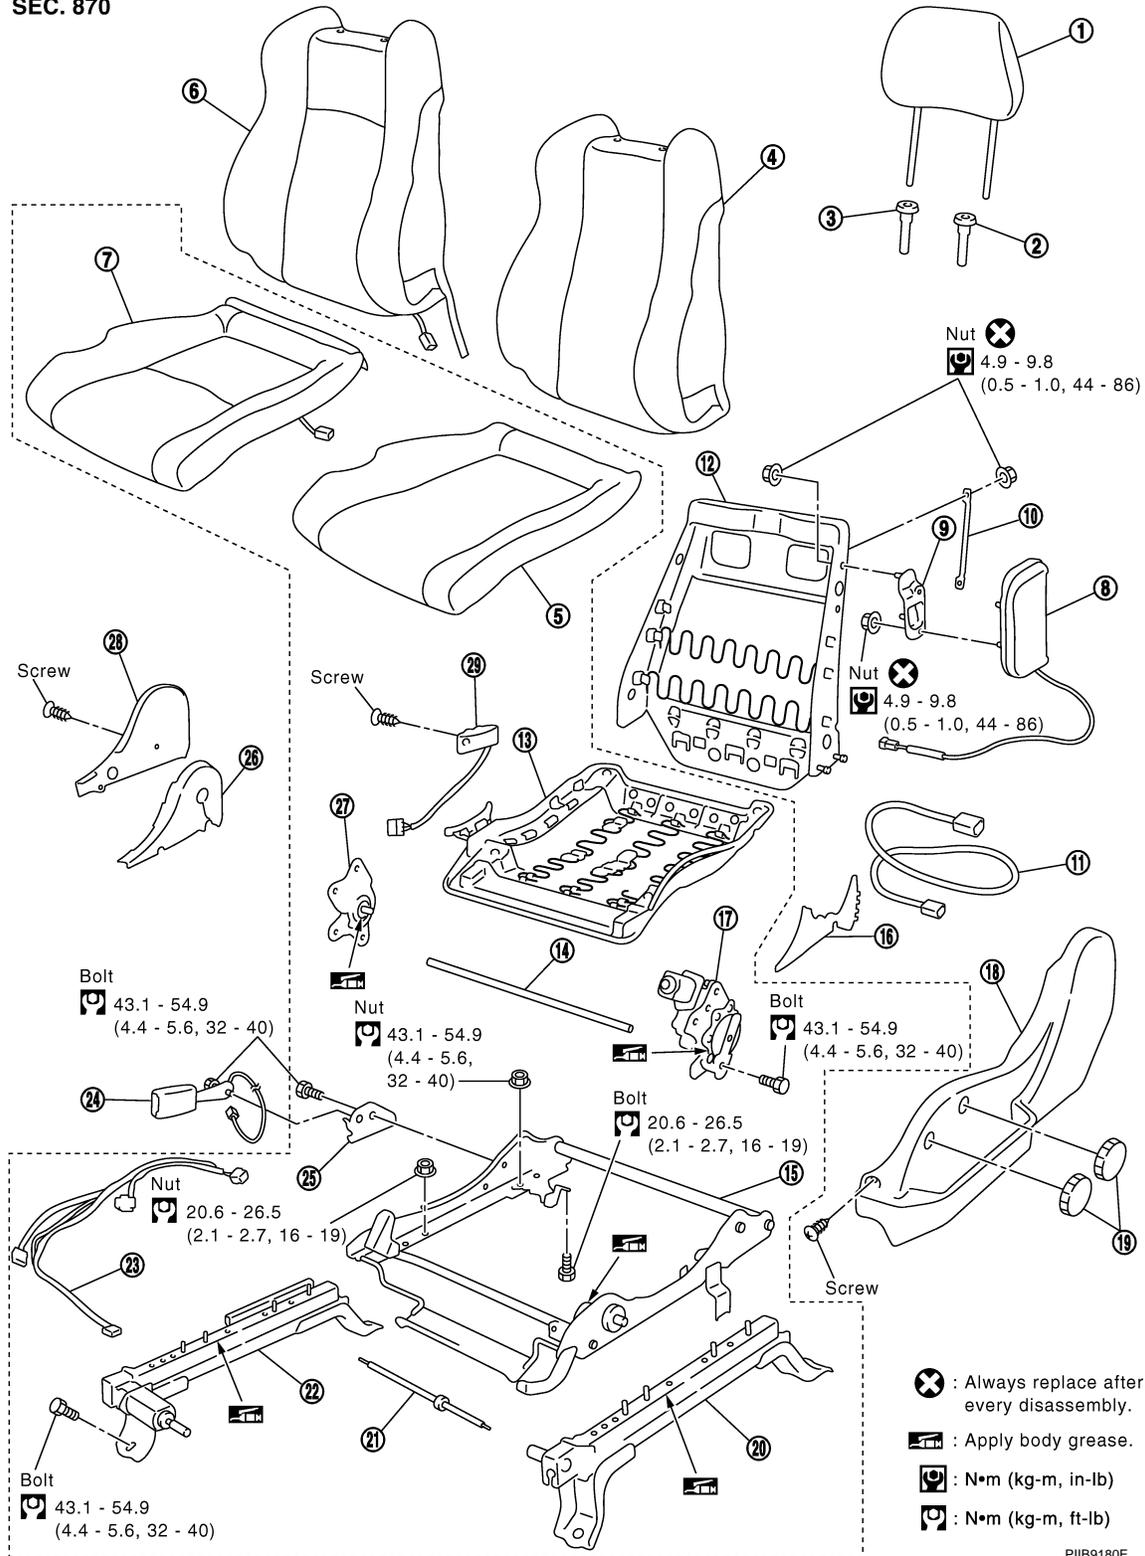

PIIB9180E

- |                              |                                 |  |
|------------------------------|---------------------------------|--|
| 1. Headrest                  | 2. Headrest holder (locked)     | 3. Headrest holder (free)                |
| 4. Seatback pad              | 5. Seat cushion pad             | 6. Seatback trim                         |
| 7. Seat cushion trim         | 8. Side air bag module          | 9. Side air bag module bracket           |
| 10. Inner cloth stay         | 11. Side air bag module harness | 12. Seatback frame                       |
| 13. Seat cushion frame       | 14. Reclining device rod        | 15. Seat thigh support adjuster assembly |
| 16. Inner cover outer device | 17. Reclining device outer      | 18. Seat cushion outer finisher          |

A  
B  
C  
D  
E  
F  
G  
H  
SE  
J  
K  
L  
M  
N  
O  
P


# SEAT

## < SERVICE INFORMATION >

- |                                 |                              |                            |
|---------------------------------|------------------------------|----------------------------|
| 19. Lifter dial                 | 20. Sliding outer assembly   | 21. Flexible wire          |
| 22. Sliding inner assembly      | 23. Power seat harness       | 24. Seat belt buckle       |
| 25. Seat belt buckle bracket    | 26. Inner cover inner device | 27. Reclining device inner |
| 28. Seat cushion inner finisher | 29. Power seat switch        |                            |

## NET SEAT (ROADSTER)

### SEC. 870

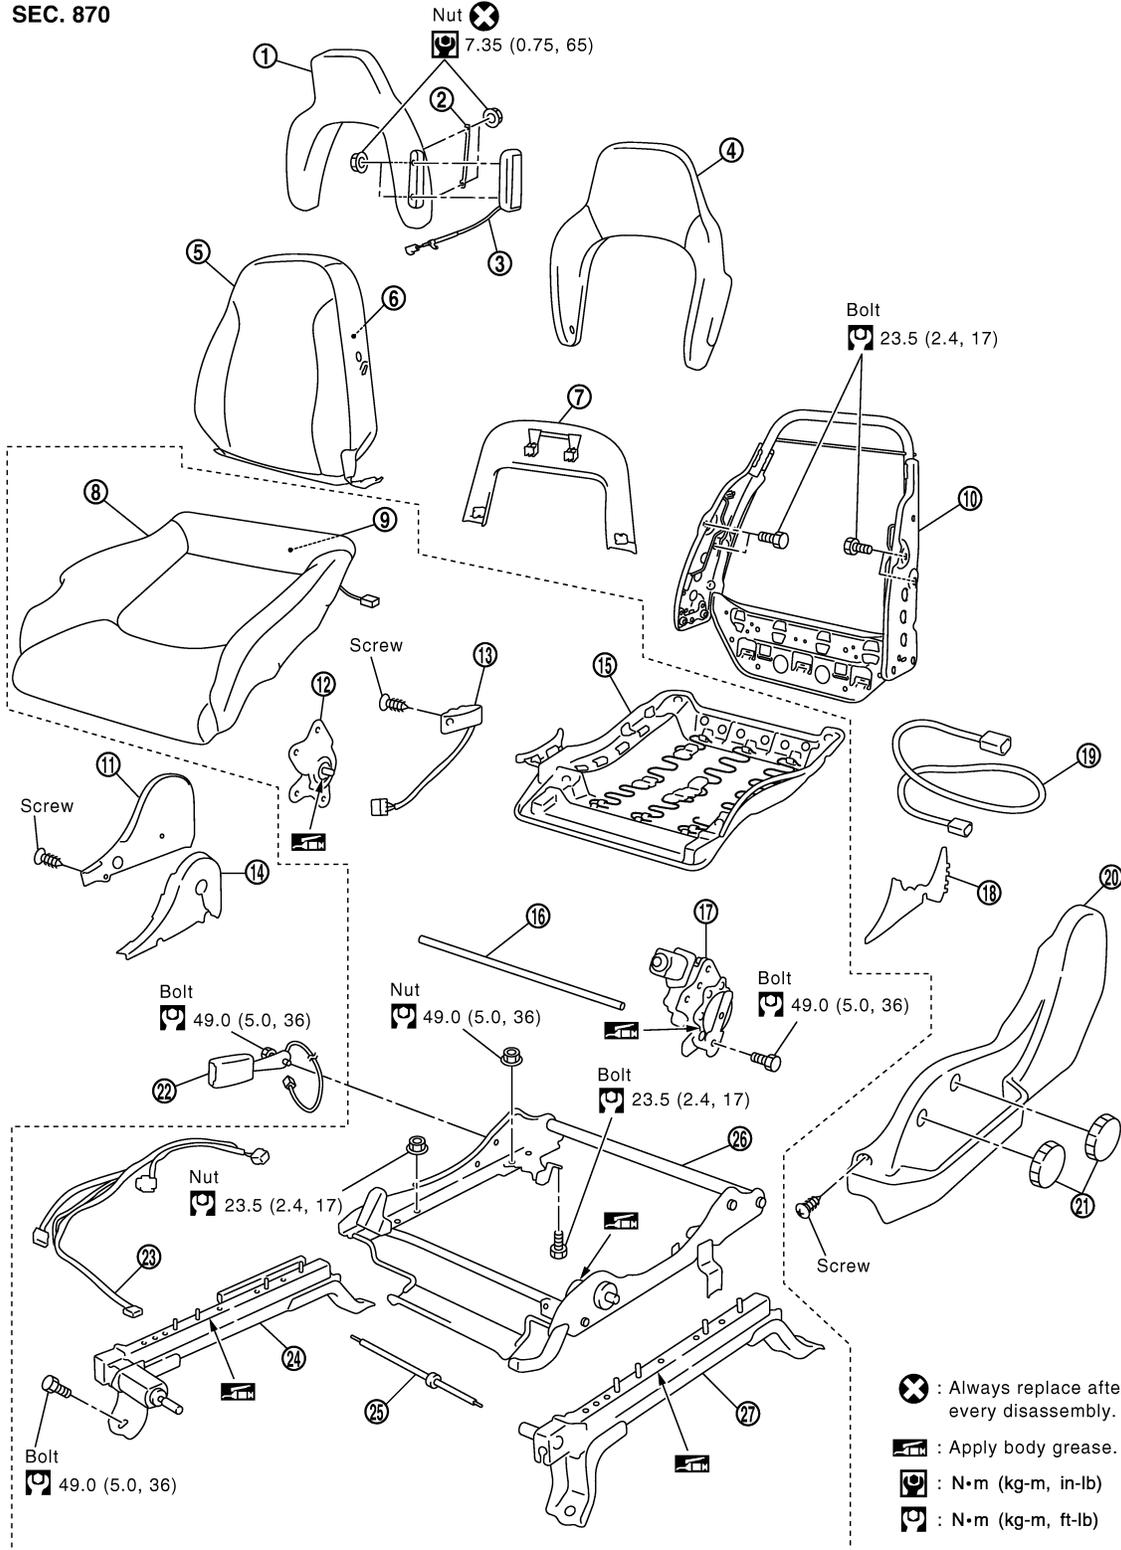

PIIB9181E

# SEAT

## < SERVICE INFORMATION >

- |                                 |  |                              |
|---------------------------------|--|------------------------------|
| 1. Seatback frame and pad upper | 2. Inner cloth stay                      | 3. Side air bag module       |
| 4. Seatback trim upper          | 5. Seatback trim lower                   | 6. Seatback pad lower        |
| 7. Seatback garnish             | 8. Seat cushion trim                     | 9. Seat cushion pad          |
| 10. Seatback frame              | 11. Seat cushion inner finisher          | 12. Reclining inner device   |
| 13. Power seat switch           | 14. Inner cover inner device             | 15. Seat cushion frame       |
| 16. Reclining device rod        | 17. Reclining outer device               | 18. Inner cover outer device |
| 19. Side air bag module harness | 20. Seat cushion outer finisher          | 21. Lifter dial              |
| 22. Seat belt buckle            | 23. Power seat harness                   | 24. Sliding inner assembly   |
| 25. Flexible wire               | 26. Seat thigh support adjuster assembly | 27. Sliding outer assembly   |


### REMOVAL

When removing or installing the seat trim, carefully handle it to keep dirt out and avoid damage.

#### CAUTION:

- Before removing the seat, turn the ignition switch off, disconnect both battery cables and wait at least 3 minutes.
- When checking the power seat circuit for continuity using a circuit tester, do not confuse its connector with the side air bag module connector. Such an error may cause the air bag to deploy.
- Do not drop, tilt, or bump the side air bag module installing in the seat. Always handle it with care.

1. Remove the front leg cover and rear leg cover (LH/RH).
2. Slide the seat until the body mounting bolts are visible and a tool can be inserted.
3. Remove mounting bolts from vehicle.
4. Disconnect both battery cables.
5. Disconnect harness connector from under seat cushion.
6. Remove fastening clips under seat cushion, and remove seats from vehicle.

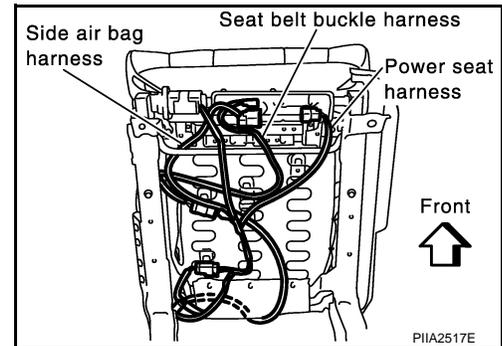

### INSTALLATION

Install in the reverse order of removal.


### Disassembly and Assembly

INFOID:000000004657311

### SEATBACK TRIM AND PAD (MANUAL SEAT AND POWER SEAT)

#### Disassembly


1. Open fastener on back of seatback, and remove retainer from seatback trim.

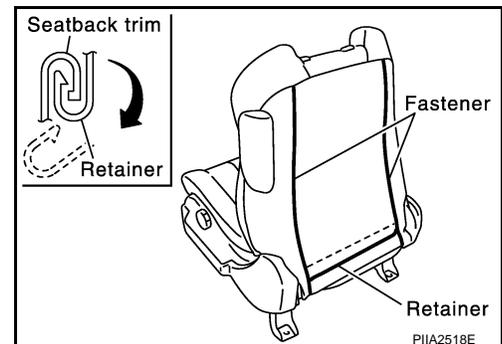

# SEAT

## < SERVICE INFORMATION >


2. Remove the stay securing the inner cloth.

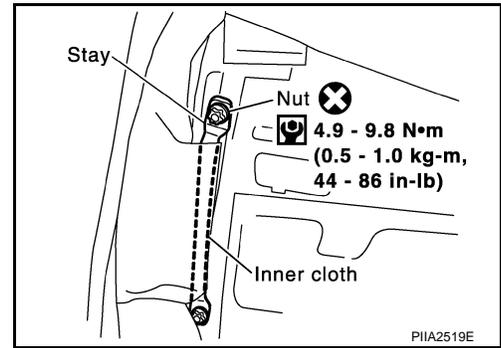

3. Squeeze and pull up headrest holder tabs to remove from seatback frame.

**NOTE:**

Before installing the headrest holder, check its orientation (front/rear and right/left).

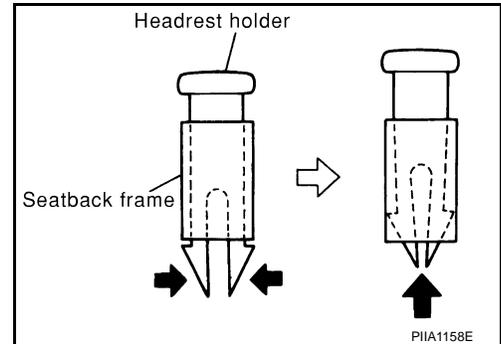

4. Remove the seat heater harness connector. After removing the seatback trim and pad, remove the hog ring to separate the trim and pad.

**NOTE:**

Seatback heater unit is stitched into seatback trim. It cannot be separated (for heated seat models only).

### Assembly

Assemble in the reverse order of disassembly.

### REMOVAL OF SEATBACK ASSEMBLY

1. After completing the steps 1 of "SEATBACK TRIM AND PAD", remove the harness connectors for the reclining motor (driver seat only).
2. Pull out the harness connector for the side air bag from the seat cushion.
3. Remove the reclining device mounting bolts on the seatback frame, and remove the seatback assembly.

**NOTE:**

When assembling the seatback frame, make sure that the reclining device are locked on both sides, and be sure to temporarily tighten the bolts, then tighten them finally.


### INSTALLATION OF SEATBACK ASSEMBLY

Install in the reverse order of removal.

### SEATBACK TRIM AND PAD (NET SEAT FOR ROADSTER)

#### Disassembly


1. Remove the seatback garnish.

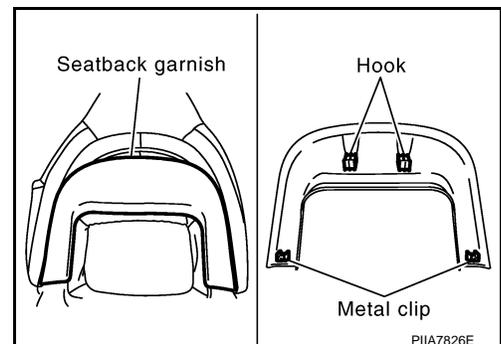


# SEAT

## < SERVICE INFORMATION >

2. Open fastener on seatback lower.

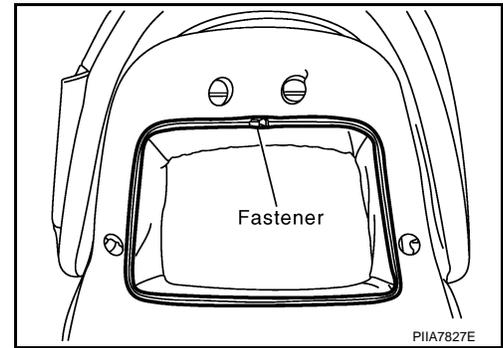


3. Remove the retainer.

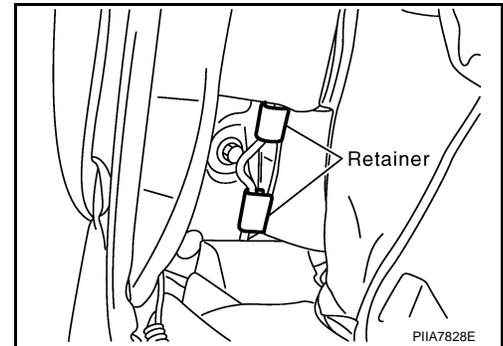


4. Disconnect side air bag connector.

5. Remove the seatback upper mounting bolts.

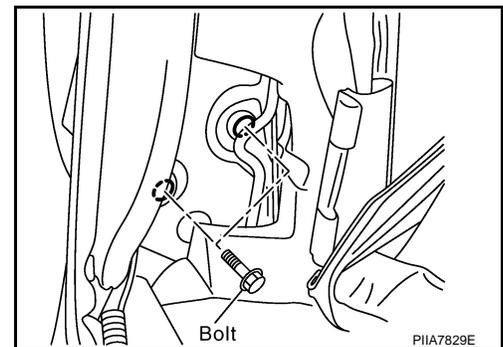

6. Open fastener on seatback upper.

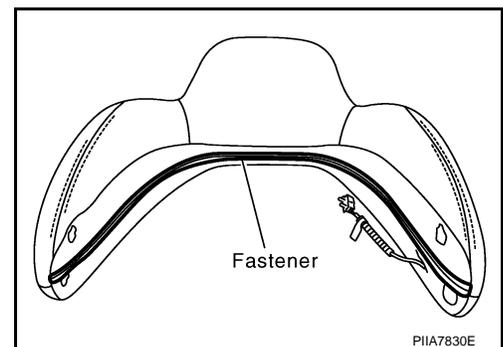


A  
B  
C  
D  
E  
F  
G  
H  
SE  
J  
K  
L  
M  
N  
O  
P


# SEAT

## < SERVICE INFORMATION >

7. Remove the stay securing the inner cloth.

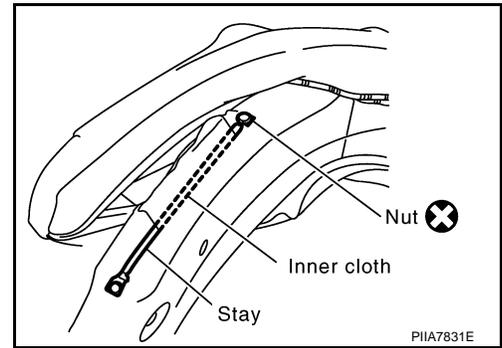

8. Separate the seatback frame and pad upper and seatback trim upper.
9. Remove the retainer.

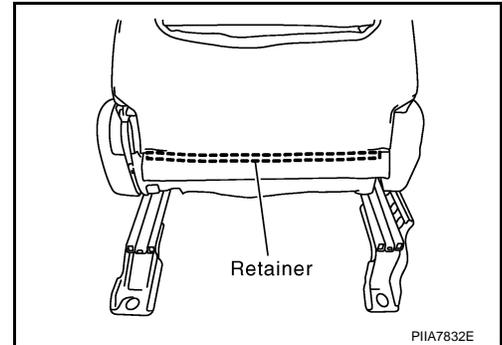

10. After removing the seatback trim and pad, remove the hog rings to separate the trim and pad.

### Assembly

Assemble in the reverse order of disassembly.

### SEAT CUSHION TRIM AND PAD (POWER SEAT AND NET SEAT)

#### **CAUTION:**


**Do not disassemble front passenger seat cushion assembly.**

**Always replace as an assembly.**


**For front passenger seat service parts, refer to the service part catalogue.**

### Disassembly

1. Hang snap ring on wire, and pull it up to remove. Remove Lifter dial.

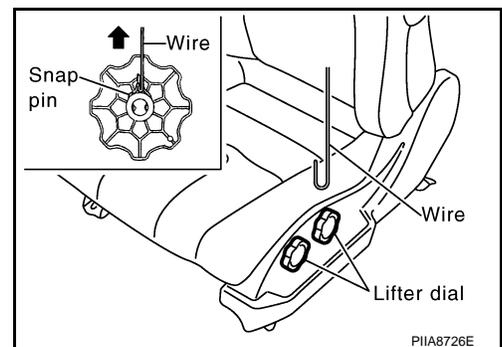


2. Unfasten the screw and metal clip and remove the seat cushion outer finisher.

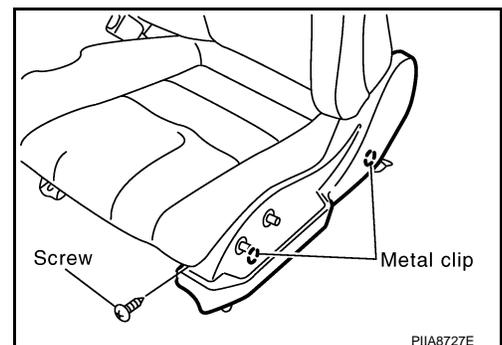


# SEAT

## < SERVICE INFORMATION >


3. Unfasten screws and remove the power seat switch assembly.

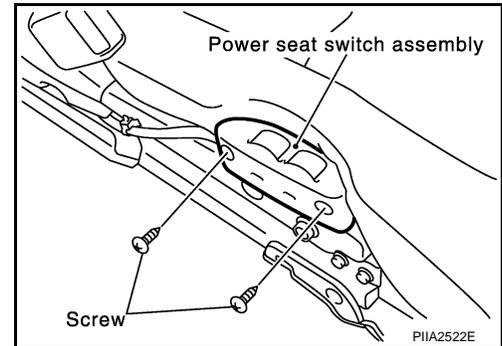


Insert a screwdriver in lower side of power seat switch and remove it (passenger seat for coupe).

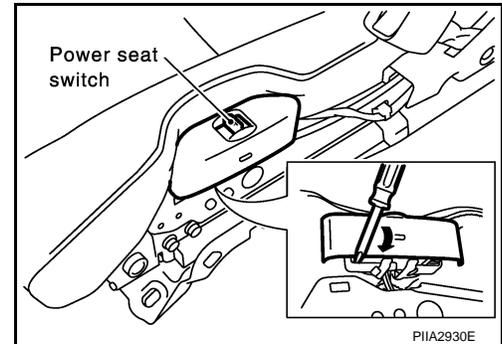

4. Remove bolts on the under side of seat cushion.

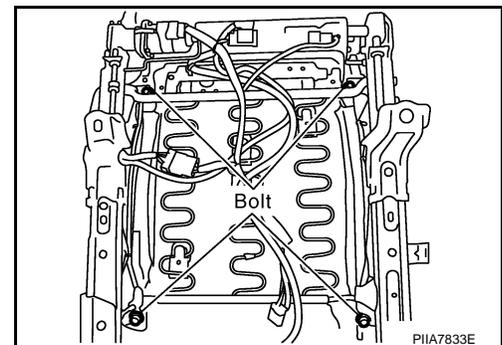

5. Remove hog rings from under seat cushion frame.

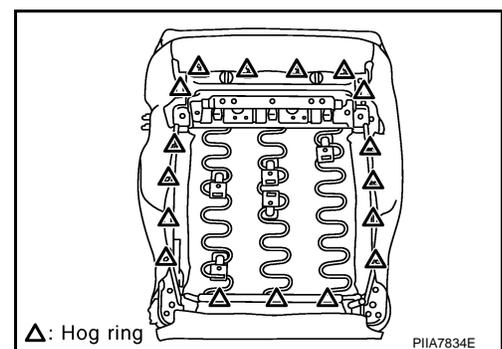

6. Disconnect harness connector from seat cushion heater unit.
7. After removing the seat cushion trim and pad, remove the hog rings to separate the trim and pad.

### NOTE:

Seat cushion heater unit is stitched into seat cushion trim. It cannot be separated.

### Assembly

Assemble in the reverse order of disassembly.

### SEAT CUSHION TRIM AND PAD (MANUAL SEAT FOR COUPE)

### CAUTION:

Do not disassemble front passenger seat cushion assembly.

# SEAT


## < SERVICE INFORMATION >

**Always replace as an assembly.**


**For front passenger seat service parts, refer to the service part catalogue.**

### Disassembly


1. Pull up tabs of reclining lever from inside. Slide knob forward to remove.

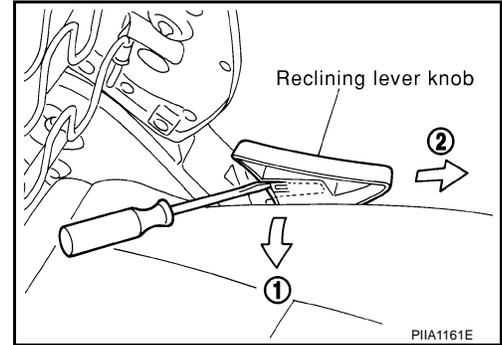

2. Hang snap ring on wire, and pull it up to remove. Remove thigh support adjuster dial.

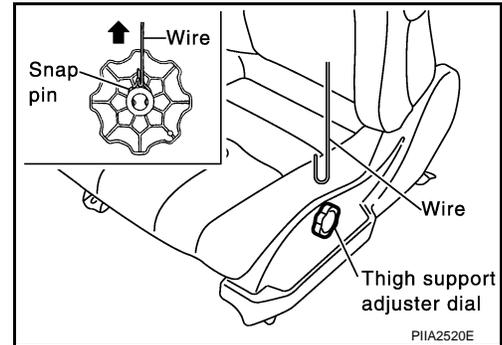

3. Unfasten the screw and metal clip and remove the seat cushion outer finisher.

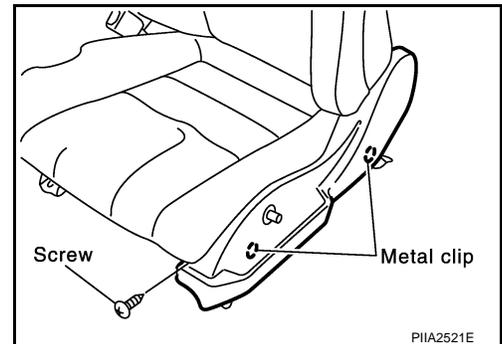

4. Remove bolts on the under side of seat cushion.
5. Remove hog rings from under seat cushion frame.
6. After removing the seat cushion trim and pad, remove the hog rings to separate the trim and pad.

### Assembly

Assemble in the reverse order of disassembly.


### PASSENGER SIDE SEATBACK FORWARD RECLINING (COUPE)

1. Remove passenger side seatback trim and pad. Refer to "SEATBACK TRIM AND PAD (MANUAL SEAT AND POWER SEAT)".

# SEAT


## < SERVICE INFORMATION >

2. Remove screw and fixing clip, then disconnect cable wire.

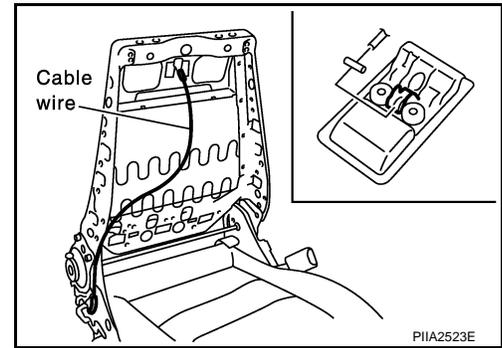

## PASSENGER SIDE SEATBACK FORWARD RECLINING (ROADSTER)

1. Remove the seatback tilt switch.

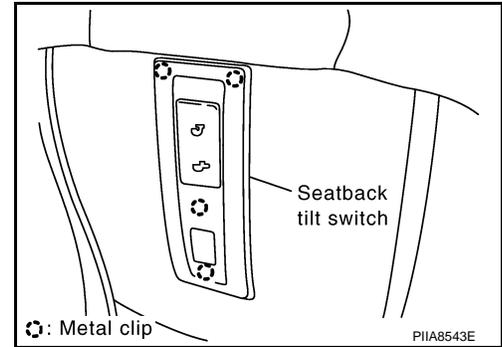

2. Disconnect seatback tilt switch harness connector.
3. Remove passenger side seatback trim and pad. Refer to "SEATBACK TRIM AND PAD (MANUAL SEAT AND POWER SEAT)".

A  
B  
C  
D  
E  
F  
G  
H  
SE  
J  
K  
L  
M  
N  
O  
P