

SECTION **LT**
LIGHTING SYSTEM

A
B
C
D
E
F
G
H
I
J
LT
L
M

CONTENTS

PRECAUTIONS	4	Sides)	22
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	4	Headlamp Low Beam Does Not Illuminate (One Side)	24
Precautions for Battery Service	4	Headlamps Does Not Turn OFF	26
General Precautions for Service Operations	4	General Information for Xenon Headlamp Trouble Diagnosis	26
HEADLAMP (FOR USA)	5	Caution:	26
Component Parts and Harness Connector Location	5	Xenon Headlamp Trouble Diagnosis	27
System Description	5	Aiming Adjustment	27
OUTLINE	5	PREPARATION BEFORE ADJUSTING	27
HEADLAMP OPERATION	6	LOW BEAM AND HIGH BEAM	28
COMBINATION SWITCH READING FUNCTION	7	ADJUSTMENT USING AN ADJUSTMENT SCREEN (LIGHT/DARK BORDERLINE)	28
EXTERIOR LAMP BATTERY SAVER CONTROL	7	Bulb Replacement	28
REMOTE KEYLESS ENTRY SYSTEM OPERATION	7	HEADLAMP HIGH/LOW BEAM	28
VEHICLE SECURITY SYSTEM	7	PARKING LAMP	29
XENON HEADLAMP	7	FRONT TURN SIGNAL LAMP	29
CAN Communication System Description	7	FRONT SIDE MARKER LAMP	29
CAN Communication Unit	7	Removal and Installation	29
Schematic	8	REMOVAL	29
Wiring Diagram — H/LAMP —	9	INSTALLATION	29
Terminals and Reference Values for BCM	13	Disassembly and Assembly	30
Terminals and Reference Values for IPDM E/R	15	DISASSEMBLY	30
How to Proceed With Trouble Diagnosis	15	ASSEMBLY	31
Preliminary Check	15	Servicing to Replace Headlamps When Damaged	31
CHECK POWER SUPPLY AND GROUND CIRCUIT	15	INSTALLATION OF HEADLAMP BRACKET	31
CONSULT-III Function (BCM)	17	HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM	32
WORK SUPPORT	17	Component Parts and Harness Connector Location	32
DATA MONITOR	17	System Description	32
ACTIVE TEST	18	OUTLINE	32
CONSULT-III Function (IPDM E/R)	18	HEADLAMP OPERATION	33
DATA MONITOR	18	DAYTIME LIGHT OPERATION	34
ACTIVE TEST	18	OPERATION	35
Headlamp Does Not Change To High Beam (Both Sides)	19	COMBINATION SWITCH READING FUNCTION	35
Headlamp Does Not Change To High Beam (One Side)	21	EXTERIOR LAMP BATTERY SAVER CONTROL	35
High Beam Indicator Lamp Does Not Illuminate	22	INTERLOCKED OPERATION WITH REMOTE KEYLESS ENTRY SYSTEM	35
Headlamp Low Beam Does Not Illuminate (Both		INTERLOCKED OPERATION WITH VEHICLE SECURITY SYSTEM	35

XENON HEADLAMP	35	CAN Communication System Description	67
CAN Communication System Description	36	CAN Communication Unit	67
CAN Communication Unit	36	Schematic	68
Schematic	37	Wiring Diagram — TURN —	69
Wiring Diagram — DTRL —	38	COUPE MODELS	69
Terminals and Reference Values for BCM	45	ROADSTER MODELS	73
Terminals and Reference Values for IPDM E/R	47	Terminals and Reference Values for BCM	77
How to Proceed With Trouble Diagnosis	47	How to Proceed With Trouble Diagnosis	78
Preliminary Check	47	Preliminary Check	79
CHECK POWER SUPPLY AND GROUND CIR- CUIT	47	CHECK POWER SUPPLY AND GROUND CIR- CUIT	79
CONSULT-III Function (BCM)	49	CONSULT-III Function (BCM)	80
WORK SUPPORT	49	DATA MONITOR	80
DATA MONITOR	49	ACTIVE TEST	80
ACTIVE TEST	50	Turn Signal Lamp Does Not Operate	81
CONSULT-III Function (IPDM E/R)	50	Hazard Warning Lamp Does Not Operate But Turn Signal Lamp Operate	82
DATA MONITOR	50	Turn Signal Indicator Lamp Does Not Operate	83
ACTIVE TEST	50	Bulb Replacement (Front Turn Signal Lamp)	83
Daytime Light Control Does Not Operate	51	Bulb Replacement (Rear Turn Signal Lamp)	83
Headlamp Does Not Change To High Beam (Both Sides)	51	Removal and Installation of Front Turn Signal Lamp	83
Headlamp Does Not Change To High Beam (One Side)	54	Removal and Installation of Rear Turn Signal Lamp	83
High Beam Indicator Lamp Does Not Illuminate	55	LIGHTING AND TURN SIGNAL SWITCH	84
Headlamp Low Beam Does Not Illuminate (Both Sides)	55	Removal and Installation	84
Headlamp Low Beam Does Not Illuminate (One Side)	57	REMOVAL	84
Headlamps Does Not Turn OFF	59	INSTALLATION	84
General Information for Xenon Headlamp Trouble Diagnosis	59	HAZARD SWITCH	85
Caution:	59	Removal and Installation	85
Xenon Headlamp Trouble Diagnosis	60	HAZARD SWITCH (A/T MODELS)	85
Aiming Adjustment	60	HAZARD SWITCH (M/T MODELS)	85
PREPARATION BEFORE ADJUSTING	60	COMBINATION SWITCH	86
LOW BEAM AND HIGH BEAM	61	Wiring Diagram — COMBSW —	86
ADJUSTMENT USING AN ADJUSTMENT SCREEN (LIGHT/DARK BORDERLINE)	61	Combination Switch Reading Function	87
Bulb Replacement	61	Terminals and Reference Values for BCM	87
HEADLAMP HIGH/LOW BEAM	61	CONSULT-III Function (BCM)	91
PARKING LAMP	62	DATA MONITOR	91
FRONT TURN SIGNAL LAMP	62	Combination Switch Inspection	92
FRONT SIDE MARKER LAMP	62	Removal and Installation	94
Removal and Installation	62	STOP LAMP	95
REMOVAL	62	Wiring Diagram — STOP/L —	95
INSTALLATION	62	High-Mounted Stop Lamp (Coupe Models)	97
Disassembly and Assembly	63	BULB REPLACEMENT, REMOVAL AND INSTALLATION	97
DISASSEMBLY	63	High-Mounted Stop Lamp (Roadster Models)	97
ASSEMBLY	64	BULB REPLACEMENT, REMOVAL AND INSTALLATION	97
Serving to Replace Headlamps When Damaged	64	Stop Lamp	97
INSTALLATION OF HEADLAMP BRACKET	64	BULB REPLACEMENT	97
TURN SIGNAL AND HAZARD WARNING LAMPS..	65	REMOVAL AND INSTALLATION	97
Component Parts and Harness Connector Location	65	BACK-UP LAMP	98
System Description	65	Wiring Diagram — BACK/L —	98
TURN SIGNAL OPERATION	65	COUPE MODELS (A/T)	98
HAZARD WARNING LAMP OPERATION	66	COUPE MODELS (M/T)	99
REMOTE KEYLESS ENTRY SYSTEM OPERA- TION	67	ROADSTER MODELS (A/T)	100
COMBINATION SWITCH READING FUNCTION	67	ROADSTER MODELS (M/T)	101
		Bulb Replacement	102
		Removal and Installation	102
		PARKING, LICENSE PLATE AND TAIL LAMPS ...	103
		Component Parts and Harness Connector Location	103

System Description	103	Wiring Diagram — ROOM/L —	133
OUTLINE	103	COUPE MODELS	133
OPERATION BY LIGHTING SWITCH	104	ROADSTER MODELS	137
COMBINATION SWITCH READING FUNCTION	104	Terminals and Reference Values for BCM	141
EXTERIOR LAMP BATTERY SAVER CONTROL	104	How to Proceed with Trouble Diagnosis	141
CAN Communication System Description	105	Preliminary Check	142
CAN Communication Unit	105	CHECK POWER SUPPLY AND GROUND CIR-	
Schematic	106	CUIT	142
Wiring Diagram — TAIL/L —	107	CONSULT-III Function (BCM)	143
Terminals and Reference Values for BCM	112	WORK SUPPORT	143
Terminals and Reference Values for IPDM E/R	114	DATA MONITOR	143
How to Proceed With Trouble Diagnosis	114	ACTIVE TEST	144
Preliminary Check	114	Map Lamp Control Does Not Operate (Coupe mod-	
CHECK POWER SUPPLY AND GROUND CIR-		els)	144
CUIT	114	Map Lamp Control Does Not Operate (Roadster	
CONSULT-III Function (BCM)	115	models)	146
CONSULT-III Function (IPDM E/R)	115	Ignition Key Hole Illumination Does Not Illuminate	
Parking, License Plate, Side Marker and Tail Lamps		Luggage Room Lamp Does Not Illuminate (Coupe	
Do Not Illuminate (for USA)	116	Models)	149
Parking, License Plate, Side Marker, and Tail Lamps		Trunk Room Lamp Does Not Illuminate (Roadster	
Do Not Illuminate (for Canada)	119	Models)	151
Parking, Side Marker, License Plate and Tail Lamps		Bulb Replacement	153
Do Not Turn OFF (After Approx. 10 Minutes)	124	MAP LAMP	153
License Plate Lamp	125	VANITY MIRROR LAMP	154
BULB REPLACEMENT, REMOVAL AND		LUGGAGE ROOM LAMP & TRUNK ROOM	
INSTALLATION	125	LAMP	154
Front Parking Lamp	125	IGNITION KEY HOLE ILLUMINATION	154
BULB REPLACEMENT	125	Removal and Installation	155
REMOVAL AND INSTALLATION	125	MAP LAMP	155
Tail Lamp	125	LUGGAGE ROOM LAMP	155
BULB REPLACEMENT	125	ILLUMINATION	156
REMOVAL AND INSTALLATION	125	System Description	156
REAR COMBINATION LAMP	126	OUT LINE	156
Bulb Replacement	126	ILLUMINATION OPERATION BY LIGHTING	
REAR FENDER SIDE (STOP & TAIL LAMP,		SWITCH	157
REAR SIDE MARKER LAMP)	126	EXTERIOR LAMP BATTERY SAVER CONTROL	158
REAR BUMPER SIDE (BACK-UP LAMP BULB,		CAN Communication System Description	158
REAR TURN SIGNAL LAMP BULB)	126	CAN Communication Unit	158
Removal and Installation	127	Schematic	159
REMOVAL	127	Wiring Diagram — ILL —	161
INSTALLATION	127	Bulb Replacement	171
INTERIOR ROOM LAMP	128	LUGGAGE FLOOR BOX LAMP	171
Component Parts and Harness Connector Location	128	CUP HOLDER ILLUMINATION	171
System Description	128	Removal and Installation	171
POWER SUPPLY AND GROUND	129	LUGGAGE FLOOR BOX LAMP	171
SWITCH OPERATION	130	BULB SPECIFICATIONS	172
MAP LAMP TIMER OPERATION	130	Headlamp	172
INTERIOR LAMP BATTERY SAVER CONTROL	131	Exterior Lamp	172
Schematic	132	Interior Lamp/Illumination	172

A
B
C
D
E
F
G
H
I
J
LT
L
M

PRECAUTIONS

PRECAUTIONS

PFP:00011

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

NKS00541

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions for Battery Service



NKS00542

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

General Precautions for Service Operations

NKS00543

- Never work with wet hands.
- Xenon headlamp includes high voltage generating part. Be sure to disconnect battery negative cable (negative terminal) or power fuse before removing, installing, or touching the xenon headlamp (including lamp bulb).
- Turn the lighting switch OFF before disconnecting and connecting the connector.
- When turning the xenon headlamp on and while it is illuminated, never touch the harness, bulb, and socket of the headlamp.
- When checking the headlamp on/off operation, check it on vehicle and with the power connected to the vehicle-side connector.
- Do not touch the headlamp bulb glass surface with bare hands or allow oil or grease to get on it. Do not touch the headlamp bulb just after the headlamp is turned off, because it is very hot.
- Install the xenon headlamp bulb socket correctly. If it is installed improperly, high-voltage leak or corona discharge may occur that can melt the bulb, connector, and housing. Do not illuminate the xenon headlamp bulb out of the headlamp housing. Doing so can cause fire and harm your eyes.
- When the bulb has burned out, wrap it in a thick vinyl bag and discard. Do not break the bulb.
- Leaving the bulb removed from the headlamp housing for a long period of time can deteriorate the performance of the lens and reflector (dirt, clouding). Always prepare a new bulb and have it on hand when replacing the bulb.
- When adjusting the headlamp aiming, turn the aiming adjustment screw only in the tightening direction. (If it is necessary to loosen the screw, first fully loosen the screw, and then turn it in the tightening direction.)
- Do not use organic solvent (paint thinner or gasoline) to clean lamps and to remove old sealant.

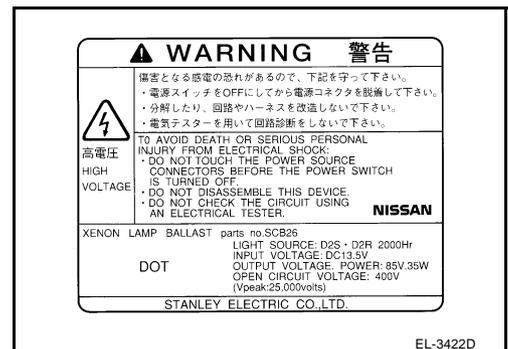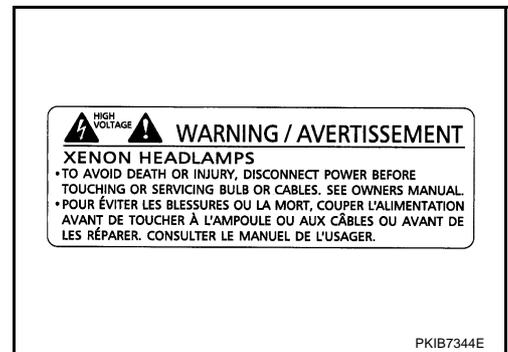


HEADLAMP (FOR USA)

PPF:26010

HEADLAMP (FOR USA)

Component Parts and Harness Connector Location

NKS004WM

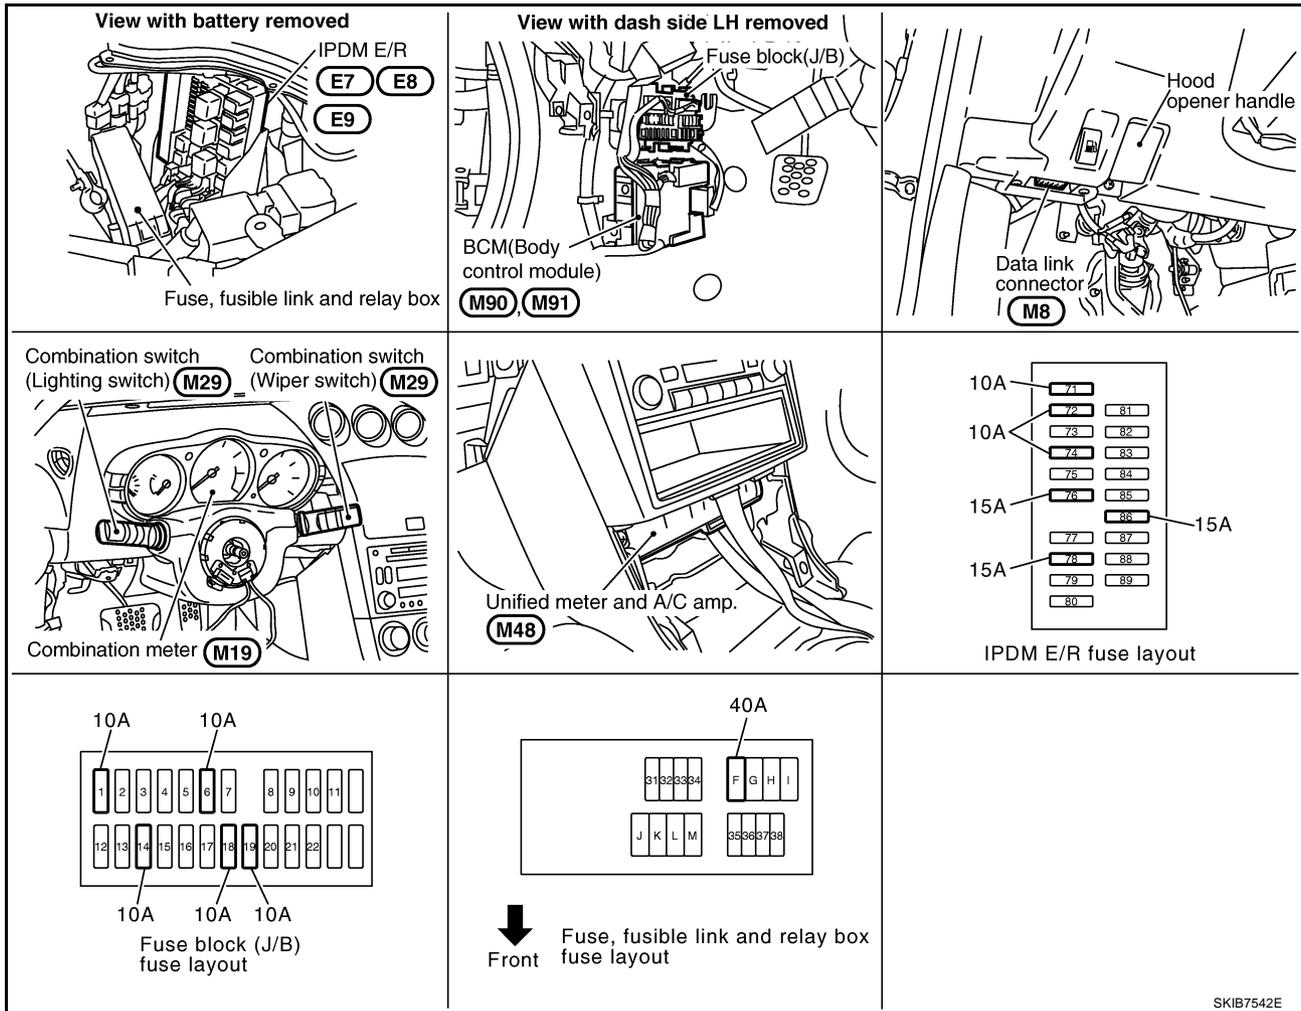

SKIB7542E

System Description

NKS004WN

Control of the headlamp system operation is dependent upon the position of the combination switch (lighting switch). When the lighting switch is placed in the 2ND position, the BCM (body control module) receives input signal requesting the headlamps (and tail lamps) illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) through the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the headlamp high and headlamp low relay coils. These relays, when energized, direct power to the respective headlamps, which then illuminate.

OUTLINE

Power is supplied at all times

- to headlamp high relay, located in IPDM E/R and
- to headlamp low relay, located in IPDM E/R, from battery directly,
- through 40A fusible link [letter F, located in fuse, fusible link and relay box]
- to BCM terminal 55,
- through 10A fuse [No.18, located in fuse block (J/B)]
- to BCM terminal 42,
- through 15A fuse [No.78 located in IPDM E/R]
- to CPU located in IPDM E/R,
- through 10A fuse [No.71, located in IPDM E/R]
- to CPU located in IPDM E/R,
- through 10A fuse [No.19, located in fuse block (J/B)]

A

B

C

D

E

F

G

H

I

J

LT

L

M

HEADLAMP (FOR USA)

- to combination meter terminal 24.

With ignition switch in ON or START position, power is supplied

- to CPU located in IPDM E/R,
- through 10A fuse [No. 1, located in fuse block (J/B)]
- to BCM terminal 38,
- through 10A fuse [No.14, located in fuse block (J/B)]
- to combination meter terminal 23.

With ignition switch in ACC or ON position, power is supplied

- through 10A fuse [No. 6, located in fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 52
- through grounds M30 and M66,
- to IPDM E/R terminals 38 and 60
- through grounds E17, E43 and B102 (with VDC system, navigation system or telephone)
- through grounds E17, E43 and F152 (without VDC system, navigation system and telephone),
- to combination meter terminals 10, 11 and 12
- through grounds M30 and M66.

HEADLAMP OPERATION

Low Beam Operation

With the lighting switch in 2ND position, the BCM receives input signal from combination switch reading function (Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#)) the headlamp to illuminate. This input signal is communicated to the IPDM E/R through the CAN communication lines. The CPU located in the IPDM E/R controls the headlamp low relay coil, which when energized, supplies power,

- through 15A fuse [No. 76, located in IPDM E/R]
- through IPDM E/R terminal 20
- to front combination lamp RH terminal 7,
- through 15A fuse [No. 86, located in IPDM E/R]
- through IPDM E/R terminal 30
- to front combination lamp LH terminal 7.

Ground is supplied

- to front combination lamp RH terminal 4, and
- to front combination lamp LH terminal 4
- through grounds E17, E43 and B102 (with VDC system, navigation system or telephone)
- through grounds E17, E43 and F152 (without VDC system, navigation system and telephone).

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input signal requesting headlamp high beams to illuminate. High beam request signal and low beam request signal is communicated to the IPDM E/R through CAN communication. The CPU located in the IPDM E/R controls headlamp high relay and headlamp low relay turned ON, which when energized, supplies power,

- through 15A fuse [No. 76, located in IPDM E/R]
- through IPDM E/R terminal 20
- to front combination lamp RH terminal 7,
- through 15A fuse [No. 86, located in IPDM E/R]
- through IPDM E/R terminal 30
- to front combination lamp LH terminal 7,
- through 10A fuse [No. 72, located in IPDM E/R]
- through IPDM E/R terminal 27

HEADLAMP (FOR USA)

- to front combination lamp RH terminal 3,
- through 10A fuse [No. 74, located in IPDM E/R]
- through IPDM E/R terminal 28
- to front combination lamp LH terminal 3.

Ground is supplied

- to front combination lamp RH terminals 4, and
- to front combination lamp LH terminals 4,
- through grounds E17, E43 and B102 (with VDC system, navigation system or telephone)
- through grounds E17, E43 and F152 (without VDC system, navigation system and telephone).

With the power and ground supplied, headlamp bulbs illuminate. High beam solenoids move the bulb shades in the front combination lamps, and the bulb shades change to high beam position.

Unified meter and A/C amp. receives signal from BCM through CAN communication lines, and then combination meter indicator illuminates high beam.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, then the headlamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-III.

REMOTE KEYLESS ENTRY SYSTEM OPERATION

Refer to [BL-59, "REMOTE KEYLESS ENTRY SYSTEM"](#) .

VEHICLE SECURITY SYSTEM

The vehicle security system will flash the high beams if the system is triggered. Refer to [BL-125, "VEHICLE SECURITY \(THEFT WARNING\) SYSTEM"](#) .

XENON HEADLAMP

Xenon type lamps are used for headlamps. Xenon bulbs do not use a filament. Instead, they produce light when a high voltage current is passed between two tungsten electrodes through a mixture of xenon (an inert gas) and certain other metal halides. In addition to strong lighting power, electronic control of the power supply gives the headlamps stable quality and tone color.

Followings are some advantages of the xenon type headlamp.

- The light produced by the headlamps is white color similar to sunlight that is easy to the eyes.
- Light output is nearly double that of halogen headlamps, affording increased area of illumination.
- Counter-reflected luminance increases and the contrast enhances on the wet road in the rain. That makes visibility go up more than the increase of the light volume.
- Power consumption is approximately 25 percent less than halogen headlamps, reducing battery load.

CAN Communication System Description

NKS004WO

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit


NKS004WP

Refer to [LAN-48, "CAN System Specification Chart"](#) .

HEADLAMP (FOR USA)

Schematic

NKS004WQ

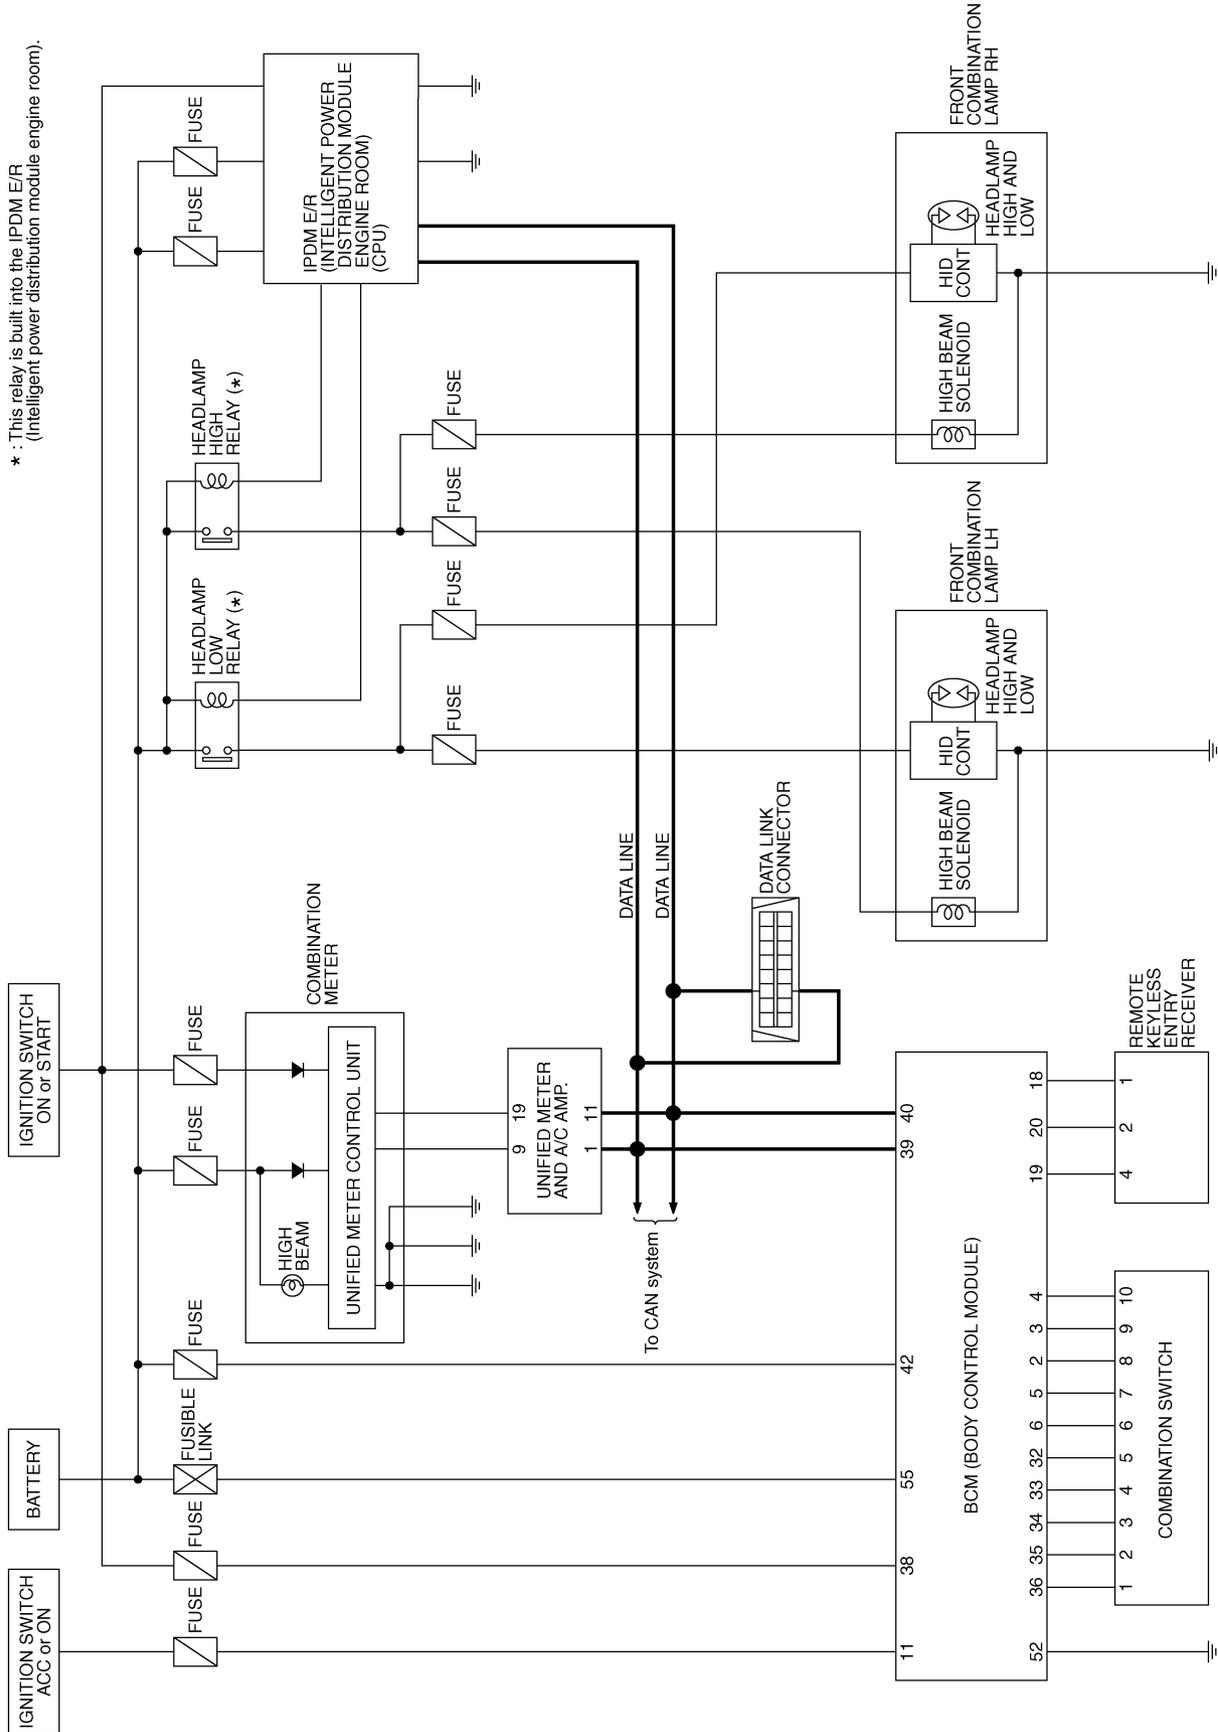



TKWT4058E

HEADLAMP (FOR USA)

Wiring Diagram — H/LAMP —

NKS004WR

LT-H/LAMP-01

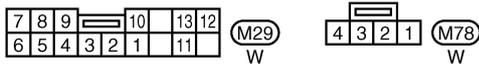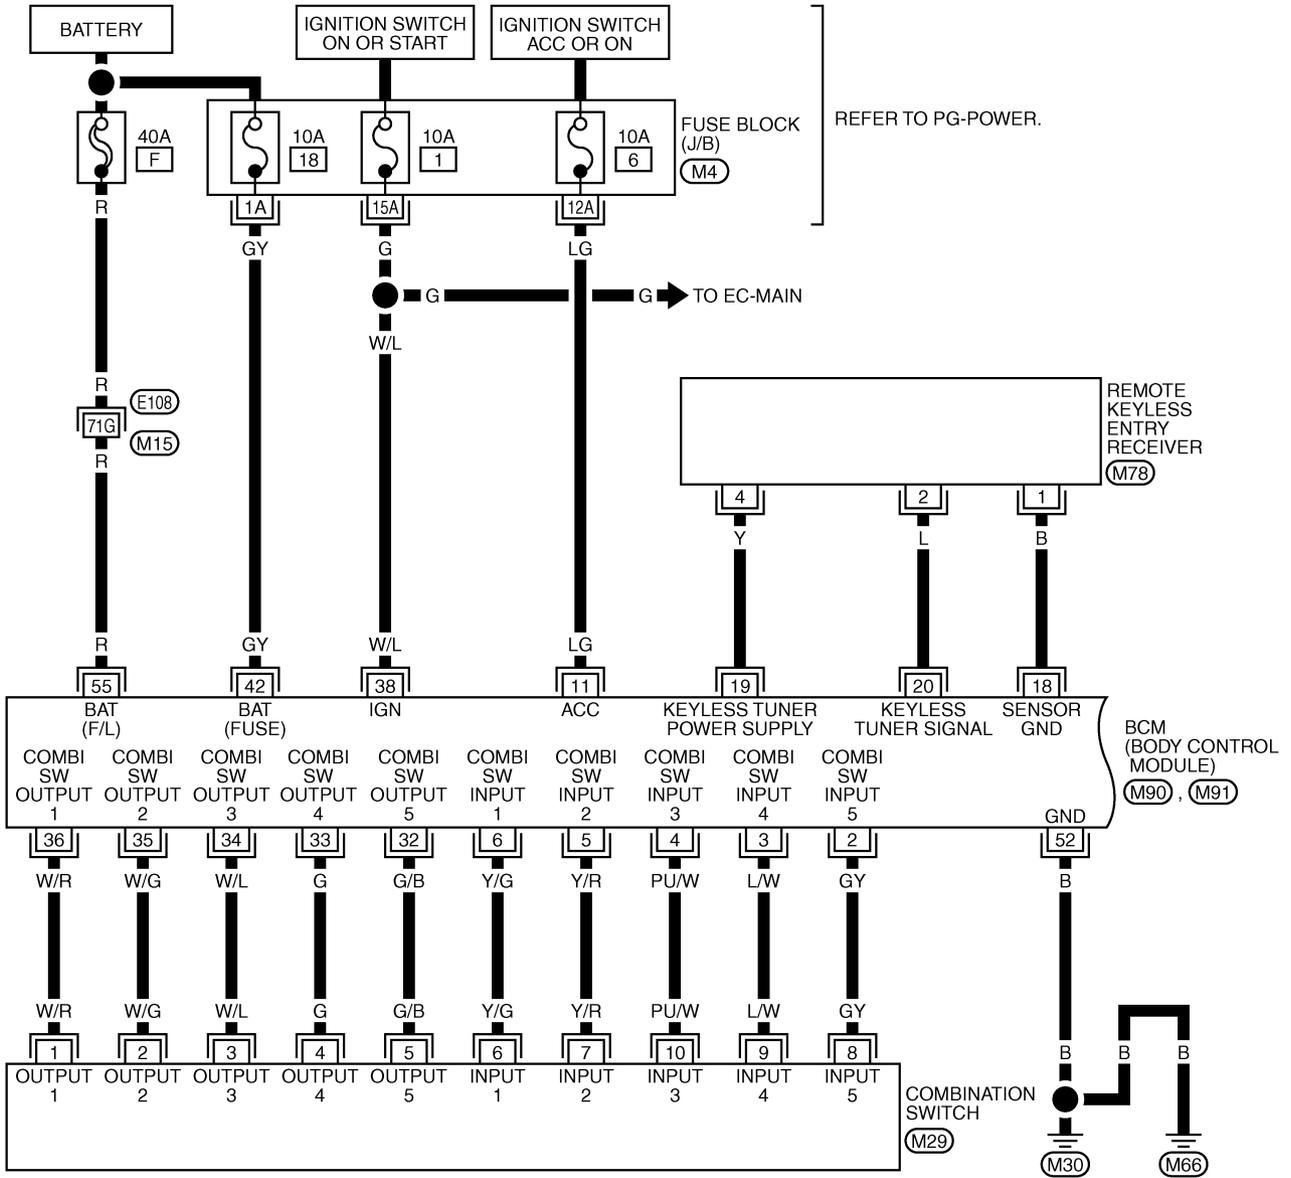

REFER TO THE FOLLOWING.


- (E108) -SUPER MULTIPLE JUNCTION (SMJ)
- (M4) -FUSE BLOCK-JUNCTION BOX (J/B)
- (M90), (M91) -ELECTRICAL UNITS

TKWT5744E

HEADLAMP (FOR USA)

LT-H/LAMP-02


▬ : DATA LINE

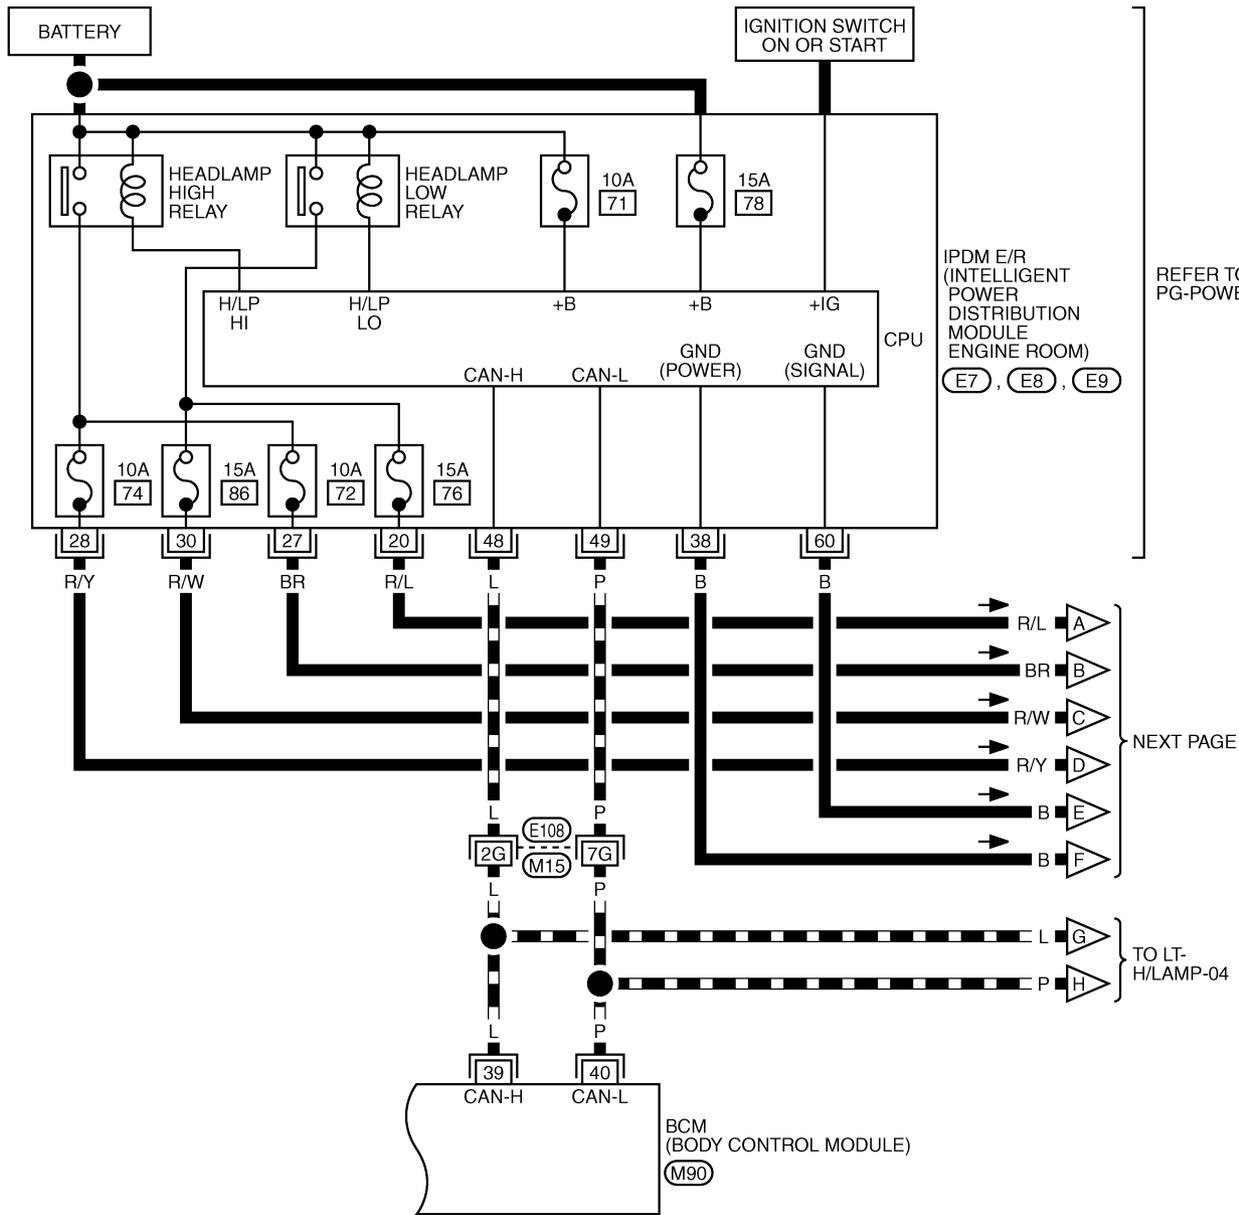

REFER TO PG-POWER.

NEXT PAGE

TO LT-H/LAMP-04

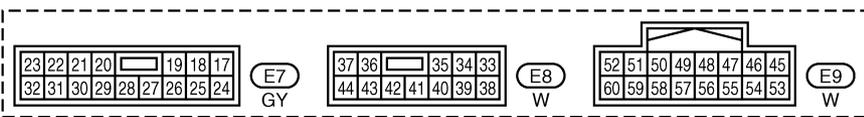

REFER TO THE FOLLOWING.

(E108) -SUPER MULTIPLE JUNCTION (SMJ)

(M90) -ELECTRICAL UNITS





TKWT5745E

HEADLAMP (FOR USA)

LT-H/LAMP-03

-  : WITH VDC SYSTEM, NAVIGATION SYSTEM OR TELEPHONE
-  : WITHOUT VDC SYSTEM, NAVIGATION SYSTEM AND TELEPHONE

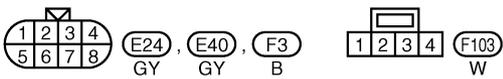
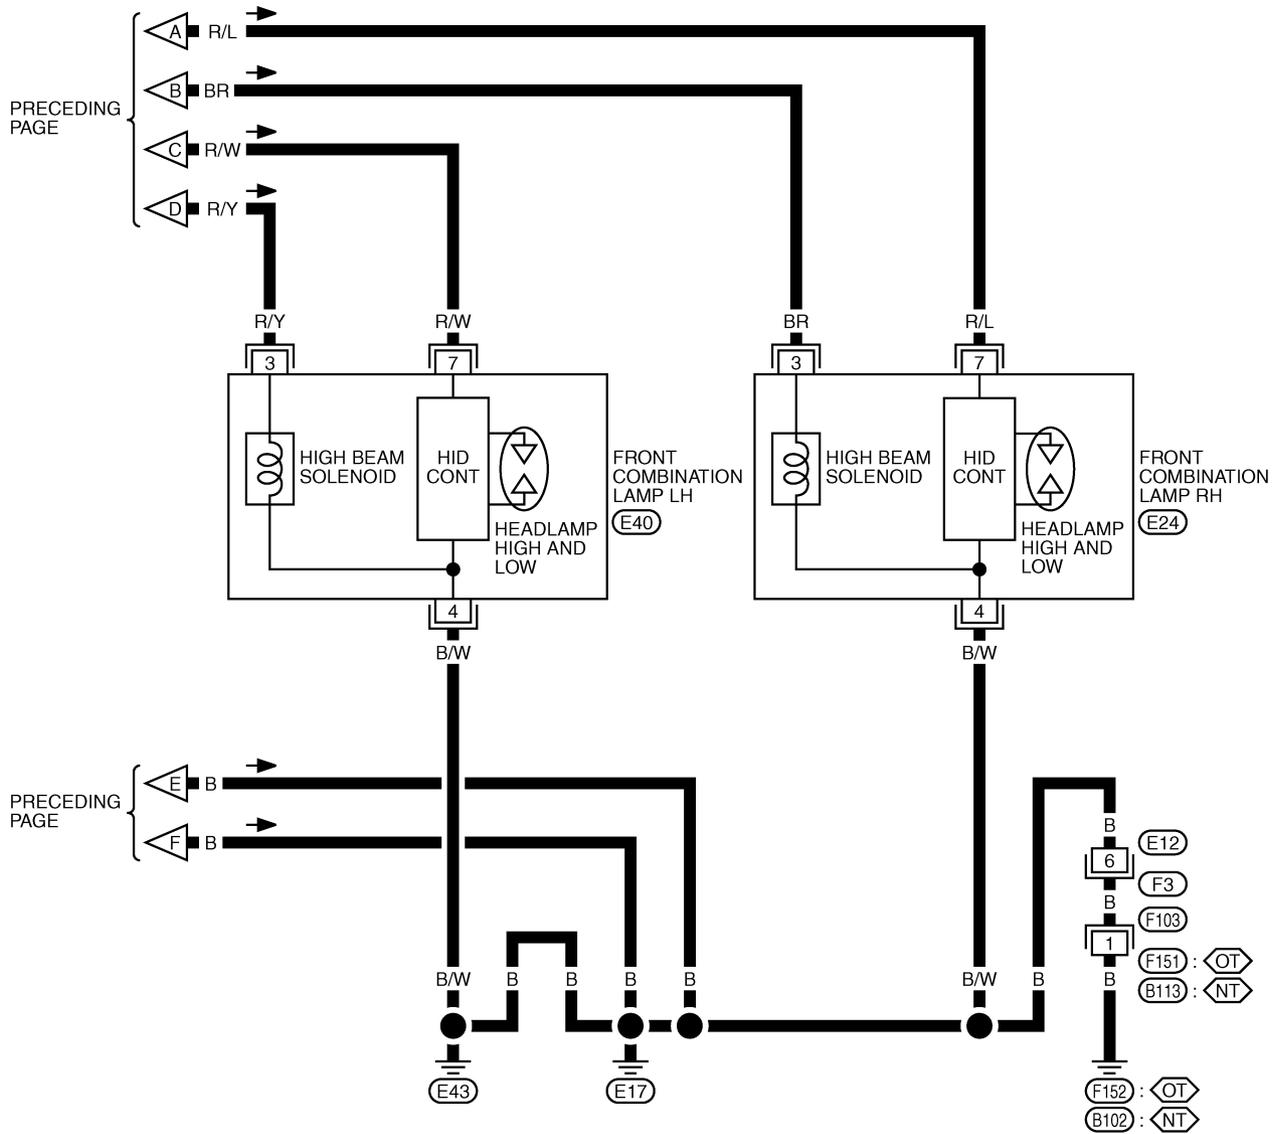


TKWT5746E


HEADLAMP (FOR USA)

LT-H/LAMP-04


▬ : DATA LINE

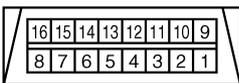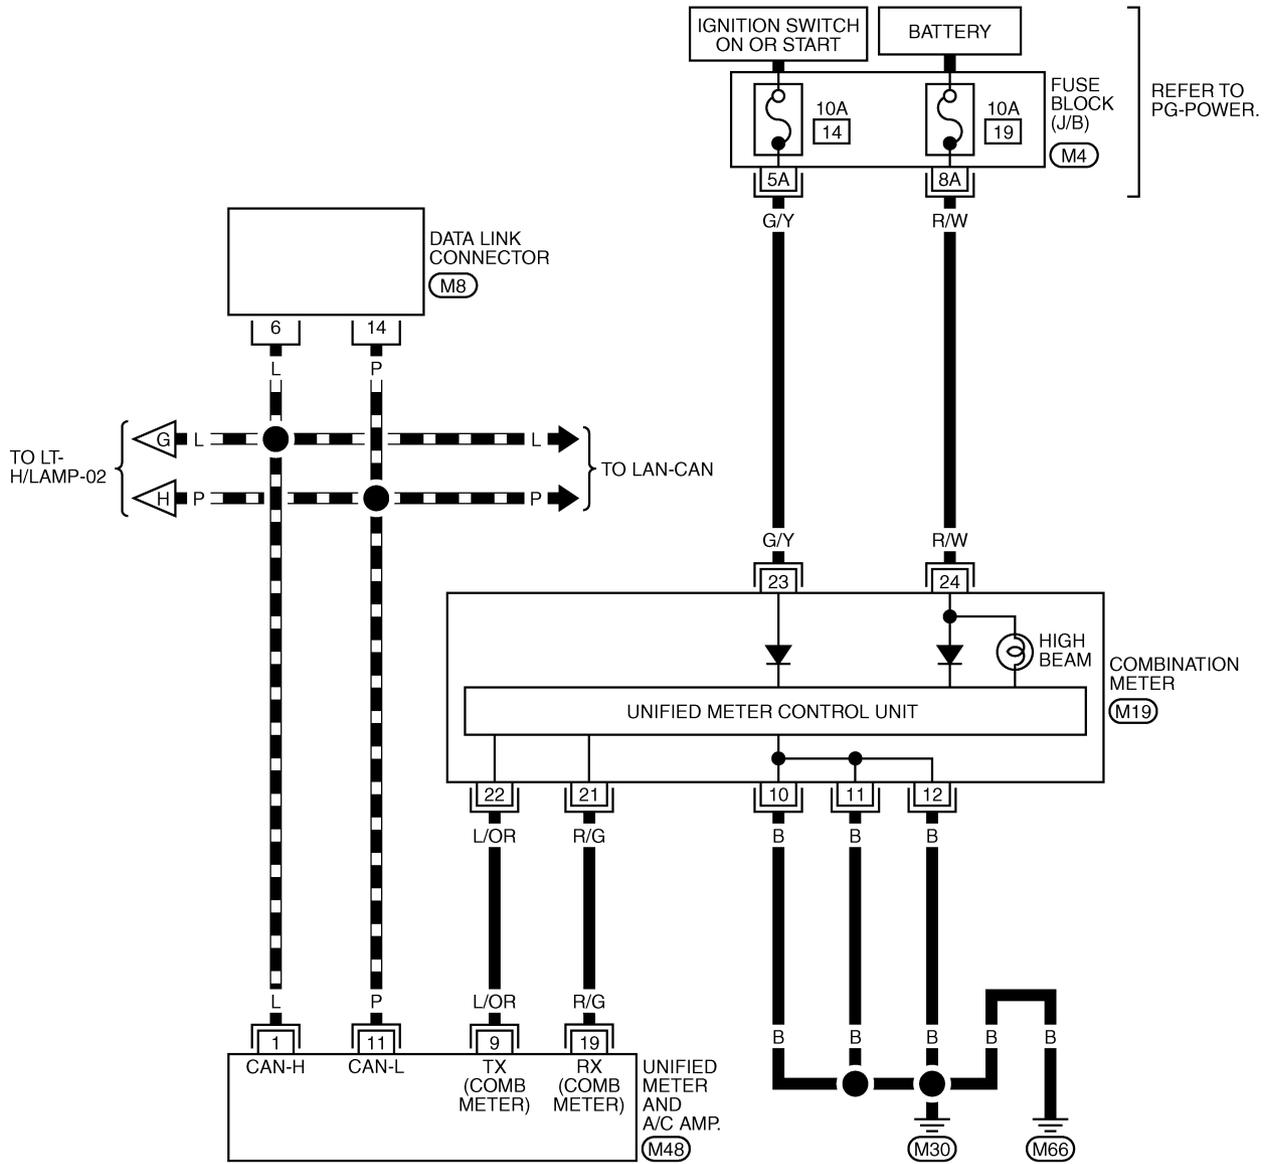

(M8)
W

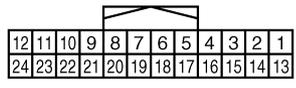

(M19)
W

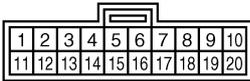

(M48)
GY



REFER TO THE FOLLOWING.

(M4) - FUSE BLOCK-JUNCTION BOX (J/B)

TKWT2258E

HEADLAMP (FOR USA)

NKS004WS

Terminals and Reference Values for BCM

CAUTION:

- Check combination switch system terminal waveform under the loaded condition with lighting switch, turn signal switch and wiper switch OFF not to be fluctuated by overloaded.
- Turn wiper dial position to 4 except when checking waveform or voltage of wiper dial position. Wiper dial position can be confirmed on CONSULT-III. Refer to [LT-91, "DATA MONITOR"](#).

Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
2	GY	Combination switch input 5	ON	OFF	Approx. 0 V
				Any of the conditions below <ul style="list-style-type: none"> ● Lighting switch 1ST ● Lighting switch HIGH beam (Operates only HIGH beam switch) 	<p>PKIB4959J</p>
3	LW	Combination switch input 4	ON	Lighting switch 2ND	<p>PKIB4953J</p>
				Any of the conditions below <ul style="list-style-type: none"> ● Lighting switch 2ND ● Lighting switch PASSING (Operates only PASSING switch) 	<p>PKIB4959J</p>
11	LG	Ignition switch (ACC)	ACC	—	Battery voltage

A
B
C
D
E
F
G
H
I
J
L
M

LT

HEADLAMP (FOR USA)

Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
33	G	Combination switch output 4	ON	Lighting, turn, wiper switch (Wiper intermittent dial position 4)	<p style="text-align: right;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.2 V</p>
				Lighting switch 1ST (The same result with lighting switch 2ND)	<p style="text-align: right;">PKIB4958J</p> <p style="text-align: center;">Approx. 1.2 V</p>
34	W/L	Combination switch output 3	ON	Lighting, turn, wiper switch (Wiper intermittent dial position 4)	<p style="text-align: right;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.2 V</p>
				Any of the conditions below <ul style="list-style-type: none"> ● Lighting switch 2ND ● Lighting switch HI beam (Operates only HI beam switch) 	<p style="text-align: right;">PKIB4958J</p> <p style="text-align: center;">Approx. 1.2 V</p>
35	W/G	Combination switch output 2	ON	Lighting, turn, wiper switch (Wiper intermittent dial position 4)	<p style="text-align: right;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.2 V</p>
				Any of the conditions below <ul style="list-style-type: none"> ● Lighting switch 2ND ● Lighting switch PASSING (Operates only PASSING switch) 	<p style="text-align: right;">PKIB4958J</p> <p style="text-align: center;">Approx. 1.2 V</p>
38	W/L	Ignition switch (ON)	ON	—	Battery voltage

HEADLAMP (FOR USA)

Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
39	L	CAN – H	—	—	—
40	P	CAN – L	—	—	—
42	GY	Battery power supply	OFF	—	Battery voltage
52	B	Ground	ON	—	Approx. 0 V
55	R	Battery power supply	OFF	—	Battery voltage

Terminals and Reference Values for IPDM E/R

NKS004WT

Terminal No.	Wire color	Signal name	Measuring condition		Reference value	
			Ignition switch	Operation or condition		
20	R/L	Headlamp low (RH)	ON	Lighting switch 2ND position	OFF	Approx. 0 V
					ON	Battery voltage
27	BR	Headlamp high (RH)	ON	Lighting switch HIGH or PASS position	OFF	Approx. 0 V
					ON	Battery voltage
28	R/Y	Headlamp high (LH)	ON	Lighting switch HIGH or PASS position	OFF	Approx. 0 V
					ON	Battery voltage
30	R/W	Headlamp low (LH)	ON	Lighting switch 2ND position	OFF	Approx. 0 V
					ON	Battery voltage
38	B	Ground	ON	—	Approx. 0 V	
48	L	CAN – H	—	—	—	
49	P	CAN – L	—	—	—	
60	B	Ground	ON	—	Approx. 0 V	

How to Proceed With Trouble Diagnosis

NKS004WU

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-5, "System Description"](#) .
3. Perform the preliminary check. Refer to [LT-15, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does headlamp operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END

Preliminary Check

NKS004WV

CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES AND FUSIBLE LINK

Check for blown fuses and fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	F
		18
	Ignition switch ON or START position	1
	Ignition switch ACC or ON position	6

HEADLAMP (FOR USA)

Unit	Power source	Fuse and fusible link No.
IPDM E/R	Battery	72
		74
		76
		86

Refer to [LT-9, "Wiring Diagram — H/LAMP —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

Terminals		(-)	Ignition switch position		
(+)	BCM connector		Terminal	OFF	ACC
M90	11	Ground	Approx. 0 V	Battery voltage	Battery voltage
	38		Approx. 0 V	Approx. 0 V	Battery voltage
M91	42		Battery voltage	Battery voltage	Battery voltage
	55		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

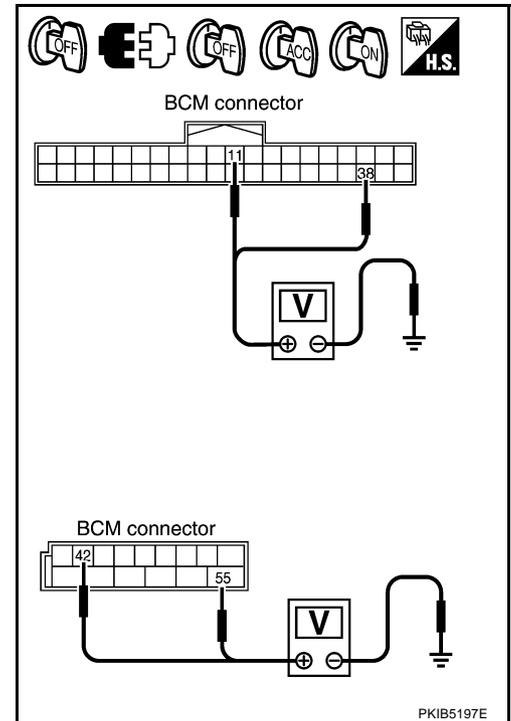

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

BCM connector	Terminal	Ground	Continuity
M91	52		Yes

OK or NG

OK >> INSPECTION END

NG >> Repair harness or connector.

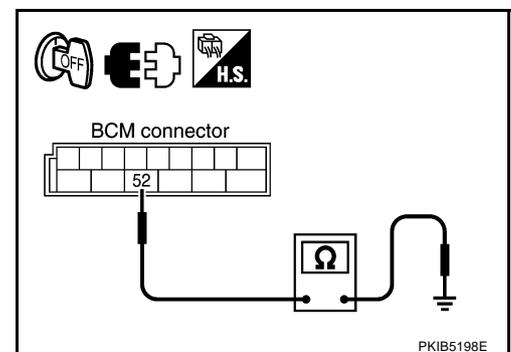

HEADLAMP (FOR USA)

CONSULT-III Function (BCM)

NKS004WW

CONSULT-III can display each diagnostic item using the diagnostic test mode shown following.

BCM diagnosis part	Diagnosis mode	Description
HEADLAMP	WORK SUPPORT	Changes the setting for each function.
	DATA MONITOR	Displays BCM input data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
BCM	SELF-DIAG RESULTS	BCM performs self-diagnosis of CAN communication.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.

WORK SUPPORT

Display Item List

Item	Description	CONSULT-III	Factory setting
BATTERY SAVER SET	Exterior lamp battery saver control mode can be changed in this mode. Selects exterior lamp battery saver control mode between two ON/OFF.	ON	×
		OFF	—

DATA MONITOR

Display Item List

Monitor item	Contents
IGN ON SW	“ON/OFF” Displays “IGN position (ON)/OFF, ACC position (OFF)” judged from the ignition switch signal.
ACC ON SW	“ON/OFF” Displays “ACC (ON)/OFF, Ignition OFF (OFF)” status judged from ignition switch signal.
HI BEAM SW	“ON/OFF” Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1	“ON/OFF” Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 1 judged from lighting switch signal.
HEAD LAMP SW 2	“ON/OFF” Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1 ST	“ON/OFF” Displays status (lighting switch 1ST or 2ND position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
PASSING SW	“ON/OFF” Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW ^{NOTE}	“ON/OFF” —
DOOR SW - DR	“ON/OFF” Displays status of driver door as judged from driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - AS	“ON/OFF” Displays status of passenger door as judged from passenger door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - RR ^{NOTE}	“OFF” —
DOOR SW - RL ^{NOTE}	“OFF” —
BACK DOOR SW	“ON/OFF” <ul style="list-style-type: none"> ● Displays status of back door as judged from back door switch signal. (Coupe models) ● Displays status of rear trunk hood as judged from trunk lamp switch signal. (Roadster models)
TURN SIGNAL R	“ON/OFF” Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L	“ON/OFF” Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW ^{NOTE}	“OFF” —

NOTE:

This item is displayed, but cannot be monitored.

HEADLAMP (FOR USA)

ACTIVE TEST

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay to operate by switching ON-OFF.
FR FOG LAMP ^{NOTE}	—
CORNERING LAMP ^{NOTE}	—

NOTE:

This item is displayed, but cannot be tested.

CONSULT-III Function (IPDM E/R)

NKS004WX

CONSULT-III can display each diagnostic item using the diagnostic test mode shown following.

Check Item, Diagnosis Mode	Description
SELF-DIAGNOSTIC RESULTS	Refer to PG-18. "SELF-DIAG RESULTS" .
DATA MONITOR	The input/output data of IPDM E/R is displayed in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	IPDM E/R sends a drive signal to electronic components to check their operation.

DATA MONITOR

All Signals, Main Signals, Selection From Menu

Item name	CONSULT-III screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Position lights request	TAIL & CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with ignition switch ON. When ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Display Item List

Test item	CONSULT-III screen display	Description
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI ON, LO ON) at your option (Headlamp high beam repeats ON-OFF every 1 second).

HEADLAMP (FOR USA)

Headlamp Does Not Change To High Beam (Both Sides)

NKS004WY

1. CHECK COMBINATION SWITCH INPUT SIGNAL

CONSULT-III DATA MONITOR

1. Select "HI BEAM SW" of BCM data monitor item.
2. With operating the lighting switch, check the monitor status.

When lighting switch is HIGH BEAM : HI BEAM SW ON

CHECK THE COMBINATION SWITCH

Refer to [LT-92, "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check combination switch (lighting switch). Refer to [LT-92, "Combination Switch Inspection"](#) .

2. HEADLAMP ACTIVE TEST

CONSULT-III ACTIVE TEST

1. Select "LAMPS" of IPDM E/R active test item.
2. With operating the test item, check the headlamp high beam operation.

**Headlamp high beam should operate.
(Headlamp high beam repeats ON-OFF every 1 second).**

IPDM E/R AUTO ACTIVE TEST

1. Start auto active test. Refer to [PG-20, "Auto Active Test"](#) .
2. Check that the headlamp high beam operation.

Headlamp high beam should operate.

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

3. CHECK IPDM E/R

CONSULT-III DATA MONITOR

1. Select "HL LO REQ" and "HL HI REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status

**When lighting switch is HIGH BEAM : HL LO REQ ON
: HL HI REQ ON**

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#) .

NG >> Replace BCM. Refer to [BCS-17, "Removal and Installation of BCM"](#) .

HEADLAMP (FOR USA)


4. CHECK HEADLAMP INPUT SIGNAL

CONSULT-III ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connector.
3. Select "LAMPS" of IPDM E/R active test item
4. With operating the test item, check voltage between front combination lamp (RH and LH) harness connector and ground.

NOTE:

Headlamp high beam repeats ON-OFF every 1 second.

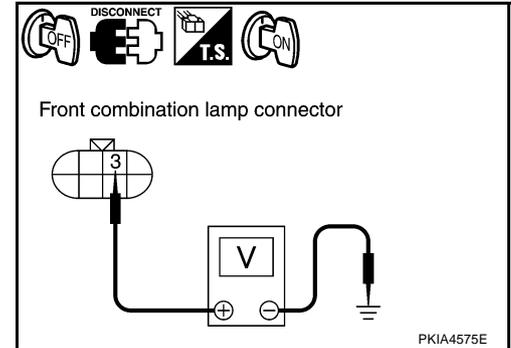

Terminals			(-)	Voltage (Approx.)
(+)		Terminal		
Front combination lamp connector				Ground
RH	E24	3		
LH	E40	3		

IPDM E/R AUTO ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connector.
3. Start auto active test. Refer to [PG-20, "Auto Active Test"](#).
4. With operating the test item, check voltage between front combination lamp (RH and LH) harness connector and ground.

NOTE:

Headlamp high beam repeats ON-OFF every 1 second.


Terminals			(-)	Voltage (Approx.)
(+)		Terminal		
Front combination lamp connector				Ground
RH	E24	3		
LH	E40	3		

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 5.

5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp (RH and LH) harness connector.

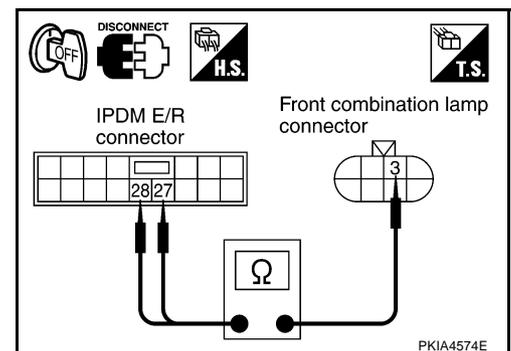

Terminals				Continuity
IPDM E/R		Front combination lamp		
Connector	Terminal	Connector	Terminal	
RH	E7	E24	3	Yes
LH		E40	3	

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#).
 NG >> Repair harness or connector.

HEADLAMP (FOR USA)


6. CHECK HEADLAMP GROUND

Check continuity between front combination lamp (RH and LH) harness connector and ground.

Front combination lamp connector		Terminal	Ground	Continuity
RH	E24	4		Yes
LH	E40	4		

OK or NG

- OK >> Check headlamp harness, connector and bulb.
 NG >> Repair harness or connector.

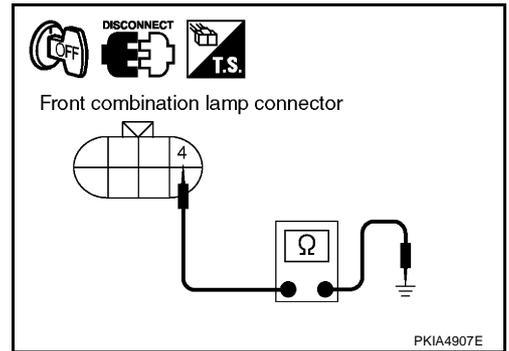

Headlamp Does Not Change To High Beam (One Side)

NKS004WZ


1. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH or LH connector.
3. Turn ignition switch ON.
4. Lighting switch is turned HIGH BEAM position.
5. Check voltage between front combination lamp RH or LH harness connector and ground.

Terminals			Voltage (Approx.)
(+)		(-)	
Front combination lamp connector	Terminal	Ground	Battery voltage
RH	E24	3	Battery voltage
LH	E40	3	

OK or NG

- OK >> GO TO 3.
 NG >> GO TO 2.

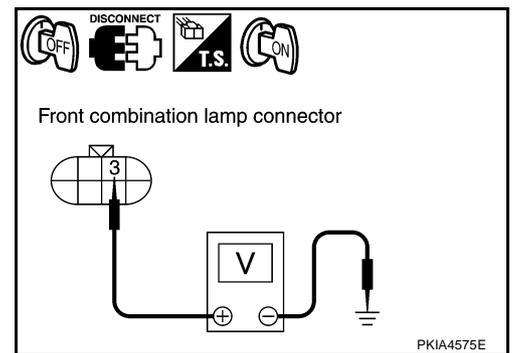


2. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp RH or LH harness connector.

Terminals					Continuity
IPDM E/R		Front combination lamp			
Connector	Terminal	Connector	Terminal		
RH	E7	27	E24	3	Yes
LH		28	E40	3	

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#) .
 NG >> Repair harness or connector.

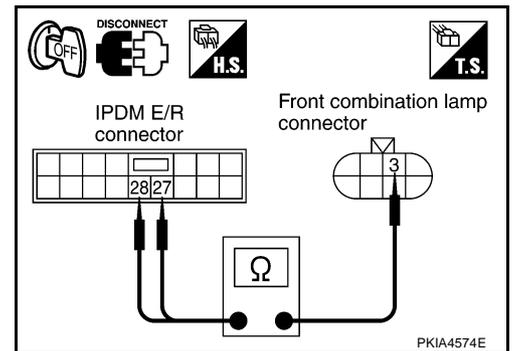

HEADLAMP (FOR USA)


3. CHECK HEADLAMP GROUND

Check continuity between front combination lamp RH or LH harness connector and ground.

Front combination lamp connector		Terminal	Ground	Continuity
RH	E24	4		Yes
LH	E40	4		

OK or NG

- OK >> Check headlamp harness and connector.
- NG >> Repair harness or connector.

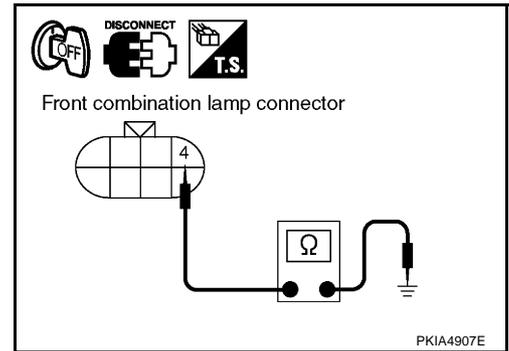

NKS004X0

High Beam Indicator Lamp Does Not Illuminate

1. CHECK BULB

Check bulb of high beam indicator lamp.

OK or NG

- OK >> Replace combination meter. Refer to [DI-24, "Removal and Installation for Combination Meter"](#).
- NG >> Replace indicator bulb.

Headlamp Low Beam Does Not Illuminate (Both Sides)

NKS004X1

1. CHECK COMBINATION SWITCH INPUT SIGNAL

CONSULT-III DATA MONITOR

1. Select "HEAD LAMP SW1" and "HEAD LAMP SW2" of BCM data monitor item.
2. With operating the lighting switch, check the monitor status.

**When lighting switch is 2ND position : HEAD LAMP SW1 ON
: HEAD LAMP SW2 ON**

CHECK THE COMBINATION SWITCH

Refer to [LT-92, "Combination Switch Inspection"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Check combination switch (lighting switch). Refer to [LT-92, "Combination Switch Inspection"](#).

2. HEADLAMP ACTIVE TEST

CONSULT-III ACTIVE TEST

1. Select "LAMPS" of IPDM E/R active test item.
2. With operating the test item, check the headlamp low beam operation.

Headlamp low beam should operate.

IPDM E/R AUTO ACTIVE TEST

1. Start auto active test. Refer to [PG-20, "Auto Active Test"](#).
2. Check that the headlamp low beam operation.

Headlamp low beam should operate.

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 4.

HEADLAMP (FOR USA)

3. CHECK IPDM E/R

CONSULT-III DATA MONITOR

1. Select "HL LO REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status.

When lighting switch is 2ND : HL LO REQ ON position


OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#) .
 NG >> Replace BCM. Refer to [BCS-17, "Removal and Installation of BCM"](#) .

4. CHECK HEADLAMP INPUT SIGNAL

CONSULT-III ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connector.
3. Select "LAMPS" of IPDM E/R active test item.
4. With operating the test item, check voltage between front combination lamp (RH and LH) harness connector and ground.

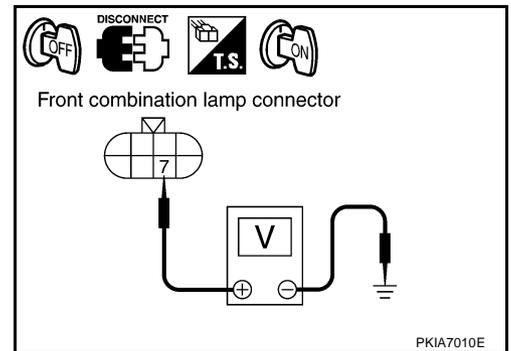

Terminals			(-)	Voltage (Approx.)
(+)		Terminal		
Front combination lamp connector				
RH	E24	7	Ground	Battery voltage
LH	E40	7		

IPDM E/R AUTO ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connector.
3. Start auto active test. Refer to [PG-20, "Auto Active Test"](#) .
4. With operating the test item, check voltage between front combination lamp (RH and LH) harness connector and ground.

Terminals			(-)	Voltage (Approx.)
(+)		Terminal		
Front combination lamp connector				
RH	E24	7	Ground	Battery voltage
LH	E40	7		

OK or NG


- OK >> GO TO 6.
 NG >> GO TO 5.

HEADLAMP (FOR USA)

5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp (RH and LH) harness connector.

Terminals					Continuity
IPDM E/R		Front combination lamp			
Connector	Terminal	Connector	Terminal		
RH	E7	20	E24	7	Yes
LH		30	E40	7	

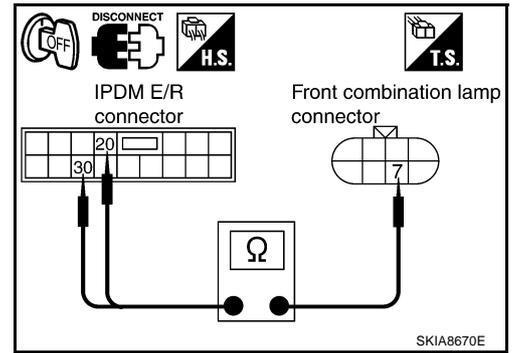


OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#) .
 NG >> Repair harness or connector.

6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front combination lamp (RH and LH) harness connector and ground.

Front combination lamp connector		Terminal	Ground	Continuity
RH	E24	4		Yes
LH	E40	4		

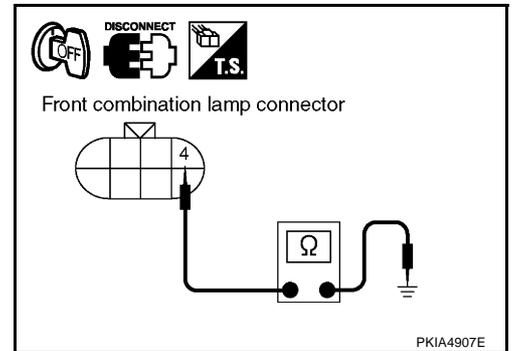

OK or NG

- OK >> Check headlamp harness and connectors, ballasts (HID control unit), and xenon bulbs. Refer to [LT-27, "Xenon Headlamp Trouble Diagnosis"](#) .
 NG >> Repair harness or connector.

Headlamp Low Beam Does Not Illuminate (One Side)

NKS004X2

1. CHECK BULB

Check ballast (HID control unit) and xenon bulb of lamp which does not illuminate. Refer to [LT-27, "Xenon Headlamp Trouble Diagnosis"](#) .

OK or NG

- OK >> GO TO 2.
 NG >> Replace malfunctioning part.

HEADLAMP (FOR USA)


2. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH or LH connector.
3. Turn ignition switch ON.
4. Lighting switch is turned 2ND position.
5. Check voltage between front combination lamp RH or LH harness connector and ground.

Terminals			Voltage (Approx.)
(+)		(-)	
Front combination lamp connector	Terminal		
RH	E24	7	Ground
LH	E40	7	
			Battery voltage

OK or NG

- OK >> GO TO 4.
 NG >> GO TO 3.

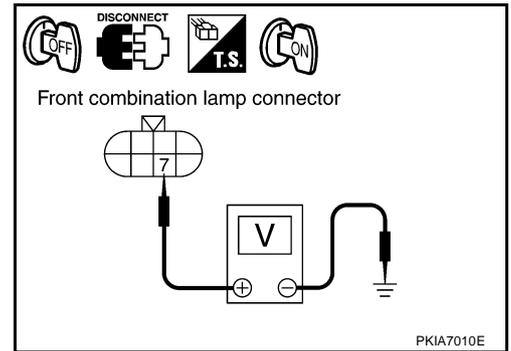


3. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp RH or LH harness connector.

Terminals				Continuity
IPDM E/R		Front combination lamp		
Connector	Terminal	Connector	Terminal	
RH	E7	20	E24	Yes
LH		30	E40	

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness or connector.

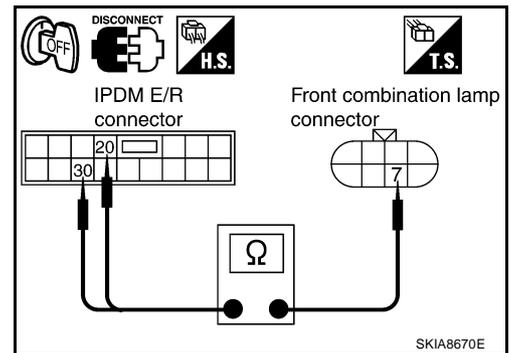


4. CHECK HEADLAMP GROUND

Check continuity between front combination lamp RH or LH harness connector and ground.

Front combination lamp connector	Terminal	Ground	Continuity
RH	E24		4
LH	E40	4	

OK or NG

- OK >> Check headlamp harness and connector.
 NG >> Repair harness or connector.

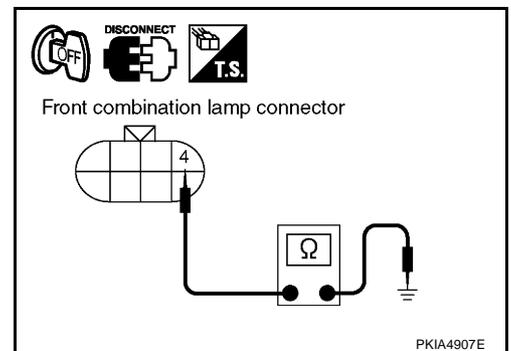

HEADLAMP (FOR USA)

Headlamps Does Not Turn OFF

NKS004X3

1. CHECK HEADLAMP TURN OFF

Make sure that lighting switch is OFF. And check if headlamp turns off when ignition switch is turned OFF.

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. CHECK COMBINATION SWITCH INPUT SIGNAL

CONSULT-III DATA MONITOR

1. Select "HEAD LAMP1" and "HEAD LAMP2" of BCM data monitor item.
2. With operating the lighting switch, check the monitor status.

**When lighting switch is OFF : HEAD LAMP SW1 OFF
: HEAD LAMP SW2 OFF**

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#) .
- NG >> Check combination switch (lighting switch). Refer to [LT-92, "Combination Switch Inspection"](#) .

3. CHECKING CAN COMMUNICATIONS BETWEEN BCM AND IPDM E/R

Perform self-diagnosis for "BCM" with CONSULT-III.

Display of self-diagnosis results

- NO DTC>> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#) .
- CAN COMM CIRCUIT>> Refer to [BCS-16, "CAN Communication Inspection Using CONSULT-III \(Self-Diagnosis\)"](#) .

General Information for Xenon Headlamp Trouble Diagnosis

NKS004X4

In most cases, malfunction of xenon headlamp - "does not illuminate", "flickers" or "dark" - is caused by a malfunctioning xenon bulb. A malfunctioning HID control unit or lamp housing, however, may be a cause. Be sure to perform trouble diagnosis following the steps described below.

Caution:

NKS004X5

- Installation or removal of connector must be done with lighting switch OFF.
- Disconnect the battery cable from the negative terminal or remove power fuse.

CAUTION:

After the battery cables are disconnected, never open/close the driver and/or front passenger door with the window in the full up position. The automatic window adjusting function will not work and the side roof panel may be damaged.

- When the lamp is illuminated (when lighting switch is ON), never touch harness, HID control unit, inside of lamp, or lamp metal parts.
- To check illumination, temporarily install lamp in vehicle. Be sure to connect power at vehicle side connector.
- If error can be traced directly to electrical system, first check for items such as blown fuses and fusible links, broken wires or loose connectors, dislocated terminals, and improper connections.
- Never work with wet hands.
- Using a tester for HID control unit circuit trouble diagnosis is prohibited.
- Disassembling HID control unit or harnesses (bulb socket harness, ECM harness) is prohibited.
- Immediately after illumination, light intensity and color will fluctuate, but there is nothing wrong.
- When bulb has come to end of its life, brightness will drop significantly, it will flash repeatedly, or light color will turn reddish.

HEADLAMP (FOR USA)

Xenon Headlamp Trouble Diagnosis

NKS004X6

1. CHECK 1: XENON HEADLAMP LIGHTING

Install normal xenon bulb to corresponding xenon bulb headlamp, and check if lamp lights up.

OK or NG

- OK >> Replace xenon bulb.
- NG >> GO TO 2.

2. CHECK 2: XENON HEADLAMP LIGHTING

Install normal HID control unit to corresponding xenon headlamp, and check if lamp lights up.

OK or NG

- OK >> Replace HID control unit.
- NG >> GO TO 3.

3. CHECK 3: XENON HEADLAMP LIGHTING


Install normal xenon lamp housing assembly to corresponding xenon headlamp, and check if lamp lights up.

OK or NG

- OK >> Replace xenon headlamp housing assembly. [Malfunction in starter (boosting circuit) in xenon headlamp housing]
- NG >> INSPECTION END

Aiming Adjustment

NKS004X7

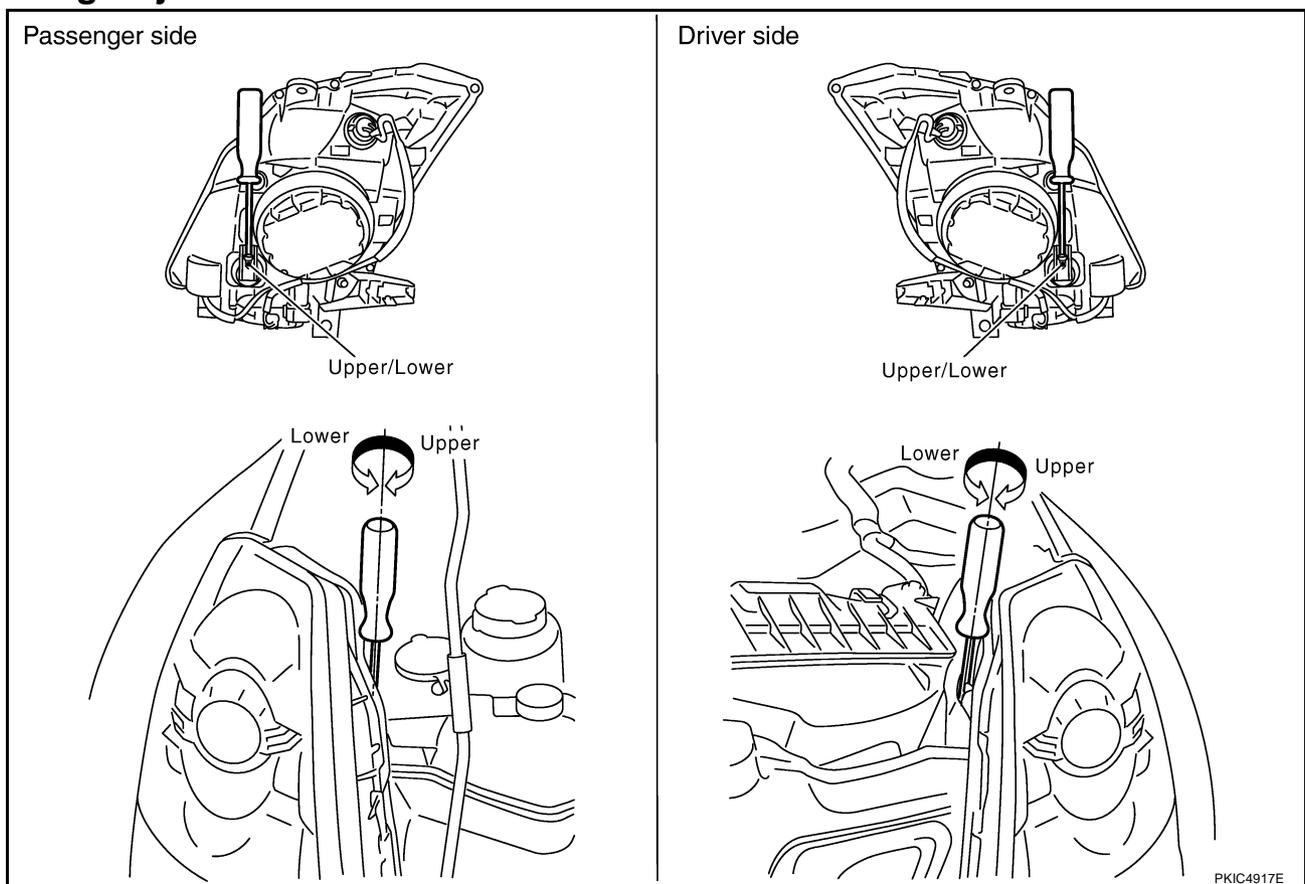

PREPARATION BEFORE ADJUSTING

For details, refer to the regulations in your own country.

Before performing aiming adjustment, check the following.

1. Keep all tires inflated to correct pressures.
2. Place vehicle on level surface.


HEADLAMP (FOR USA)

- Set that there is no-load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant, engine oil filled up to correct level and full fuel tank.

LOW BEAM AND HIGH BEAM

- Turn headlamp low beam ON.
- Use adjusting screws to perform aiming adjustment.

ADJUSTMENT USING AN ADJUSTMENT SCREEN (LIGHT/DARK BORDERLINE)

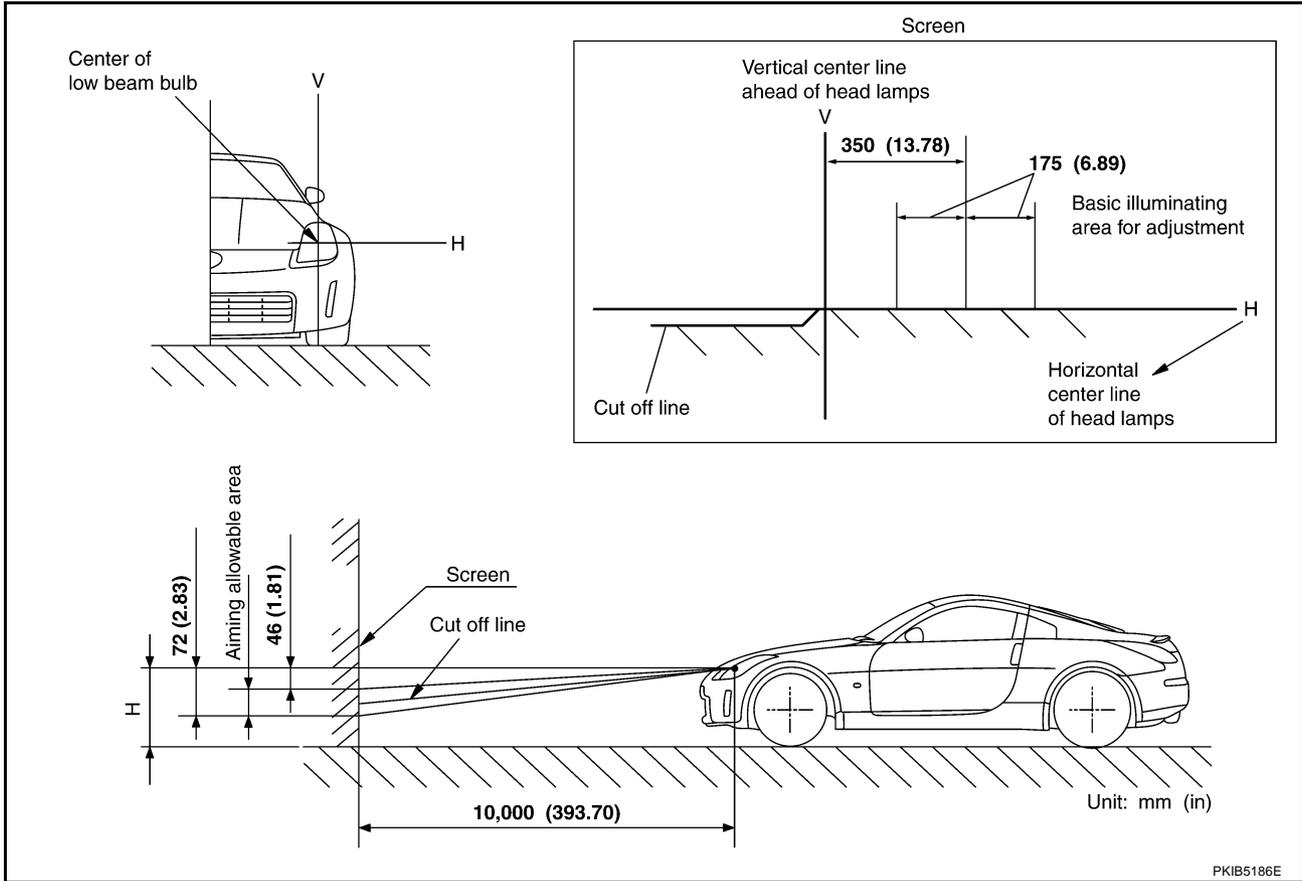

If the vehicle front body has been repaired and/or the headlamp assembly has been replaced, check aiming. Use the aiming chart shown in the figure.

- Basic illumination area for adjustment should be within the range shown on the aiming chart. Adjust headlamp accordingly.

Bulb Replacement HEADLAMP HIGH/LOW BEAM


NKS004X8

- Turn lighting switch OFF.
- Open the driver and front passenger window, and then disconnect the battery cable from the negative terminal or remove power fuse.

CAUTION:

After the battery cables are disconnected, never open/close the driver and/or front passenger door with the window in the full up position. The automatic window adjusting function will not work and the side roof panel may be damaged.

- Remove headlamp. Refer to [LT-29, "Removal and Installation"](#).
- Turn plastic cap counterclockwise and unlock it.
- Turn bulb socket counterclockwise and unlock it.
- Unlock retaining spring and remove bulb from headlamp.
- Installation is reverse order of removal.

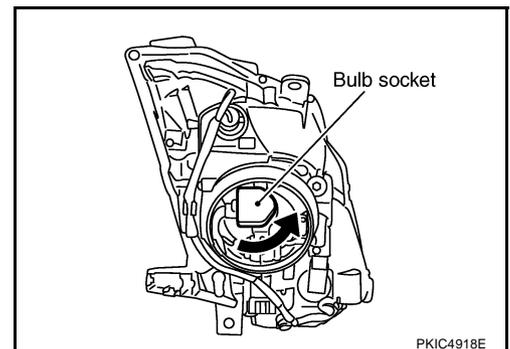

HEADLAMP (FOR USA)

NOTE:

After installation, perform aiming adjustment. Refer to [LT-27, "Aiming Adjustment"](#) .

Headlamp high/low beam (Xenon) : 12V - 35W (D2R)

PARKING LAMP

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) .
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Installation is reverse order of removal.

Parking lamp : 12V - 5W

FRONT TURN SIGNAL LAMP

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) .
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Installation is reverse order of removal.

Front turn signal lamp/— : 12V - 28/8W (amber)

FRONT SIDE MARKER LAMP

1. Remove headlamp. Refer to [LT-29, "Removal and Installation"](#) .
2. Replacement integral with headlamp housing assembly.
3. Installation is reverse order of removal.

Front side marker lamp : LED

CAUTION:

After installing bulb, be sure to install plastic cap and bulb socket securely to insure watertightness.

Removal and Installation


REMOVAL

1. Open the driver and front passenger window, and then disconnect the battery cable from the negative terminal or remove power fuse.

CAUTION:

After battery cables are disconnected, never open/close the driver and/or front passenger door with the window in the full up position. The automatic window adjusting function will not work and the side roof panel may be damaged.

2. Remove front bumper fascia. Refer to [EI-14, "FRONT BUMPER"](#) .
3. Remove headlamp mounting bolts.
4. Pull head lamp toward vehicle front, disconnect connector, and remove headlamp.

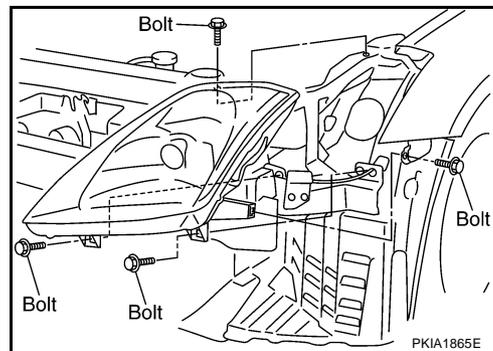

INSTALLATION

Installation is the reverse order of removal.

Headlamp mounting bolt  : 6.1 N-m (0.62 kg-m, 54 in-lb)


NOTE:

After installation, perform aiming adjustment. Refer to [LT-27, "Aiming Adjustment"](#) .

HEADLAMP (FOR USA)

Disassembly and Assembly

NKS004XA

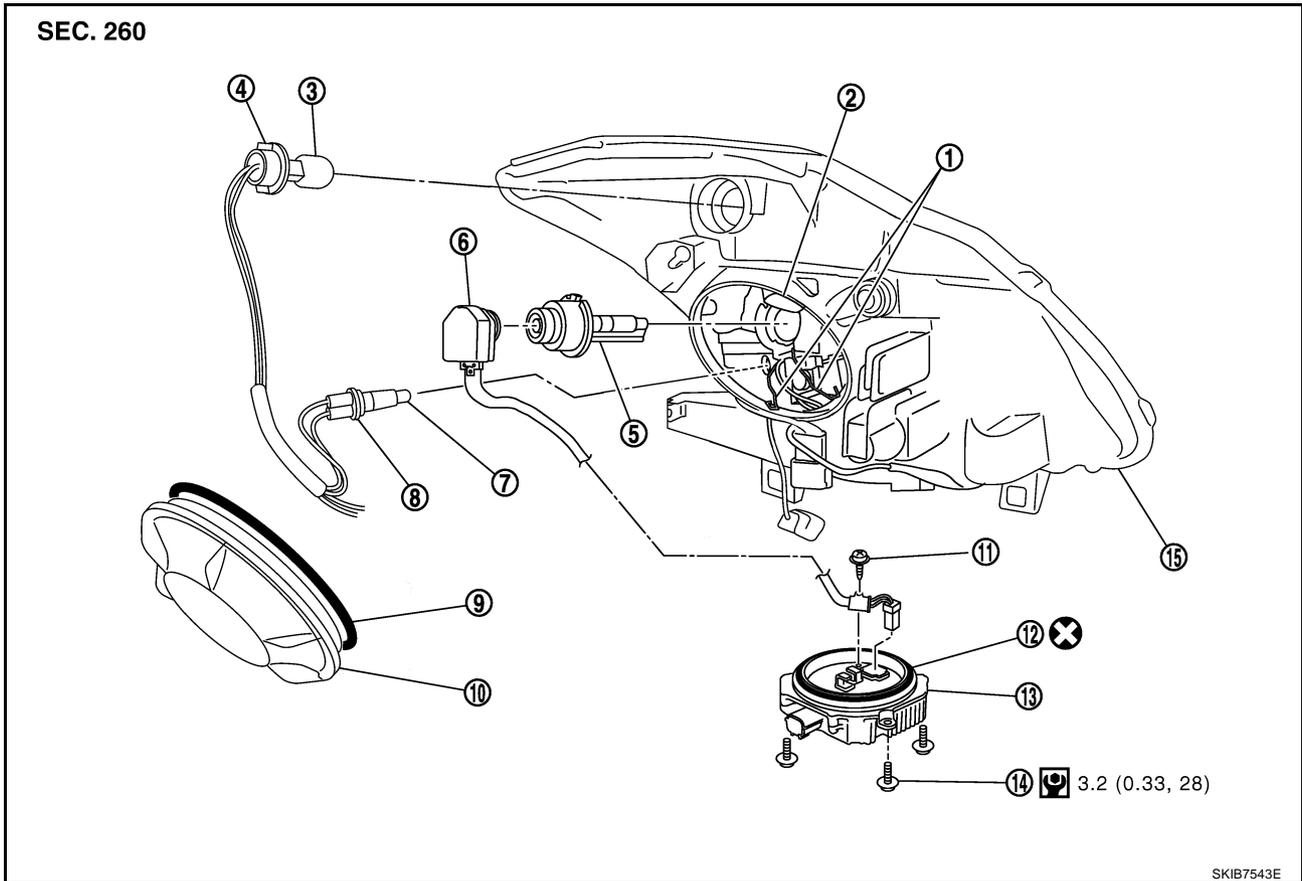

- | | | |
|---------------------------------------|-------------------------------------|--------------------------------|
| 1. Retaining spring | 2. Xenon bulb socket ground | 3. Front turn signal lamp bulb |
| 4. Front turn signal lamp bulb socket | 5. Xenon bulb | 6. Xenon bulb socket |
| 7. Parking lamp bulb | 8. Parking lamp bulb socket | 9. Seal packing |
| 10. Plastic cap | 11. Ground screw | 12. Seal packing |
| 13. HID control unit | 14. HID control unit mounting screw | 15. Headlamp housing assembly |

 :N·m (kg·m, in·lb)

 : Always replace after every disassembly.

DISASSEMBLY

1. Turn plastic cap counterclockwise, and unlock it.
2. Turn xenon bulb socket counterclockwise, and unlock it.
3. Unlock retaining spring, and remove xenon bulb.
4. Disconnect xenon bulb socket ground.
5. Remove HID control unit mounting screws.
6. Remove ground screw from HID control unit.
7. Disconnect connectors from HID control unit.
8. Pull out xenon bulb socket from head lamp housing assembly.
9. Turn parking lamp bulb socket counterclockwise and unlock it.
10. Remove parking lamp bulb from its socket.
11. Turn front turn signal lamp bulb socket counterclockwise and unlock it.
12. Remove front turn signal lamp bulb from its socket.

HEADLAMP (FOR USA)

ASSEMBLY

Assembly is the reverse order of disassembly.


HID control unit mounting screw  : 3.2 N·m (0.33 kg·m, 28 in·lb)

CAUTION:

- When HID control unit is removed, reinstall it securely and avoid any looseness.
- After installing bulb, be sure to install plastic cap and bulb socket securely to insure watertightness


Servicing to Replace Headlamps When Damaged

If only installation part as shown in the figure is damaged, and headlamp housing itself is not damaged, repair can be completed easily by installing correction brackets.

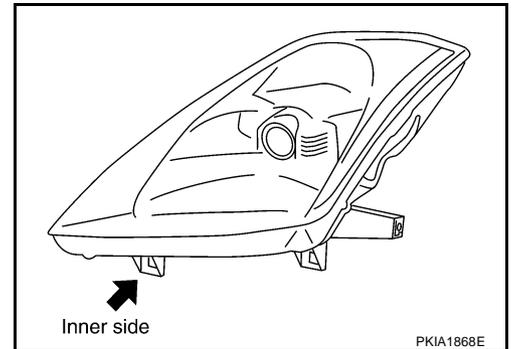

INSTALLATION OF HEADLAMP BRACKET

1. Remove headlamps. Refer to [LT-29, "Removal and Installation"](#).
2. Cut damaged section of installation part, then shape with sandpaper.
3. Attach each correction bracket to headlamp housing boss with 2 screws.

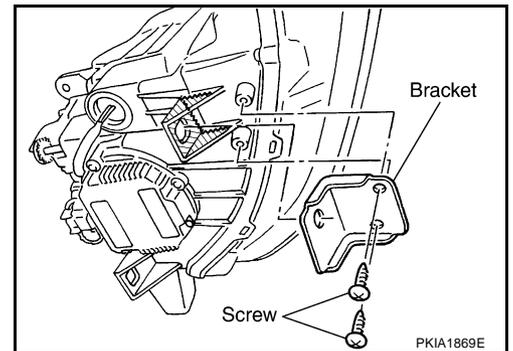

A
B
C
D
E
F
G
H
I
J
LT
L
M


HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

PFP:26010

Component Parts and Harness Connector Location

NKS004XC

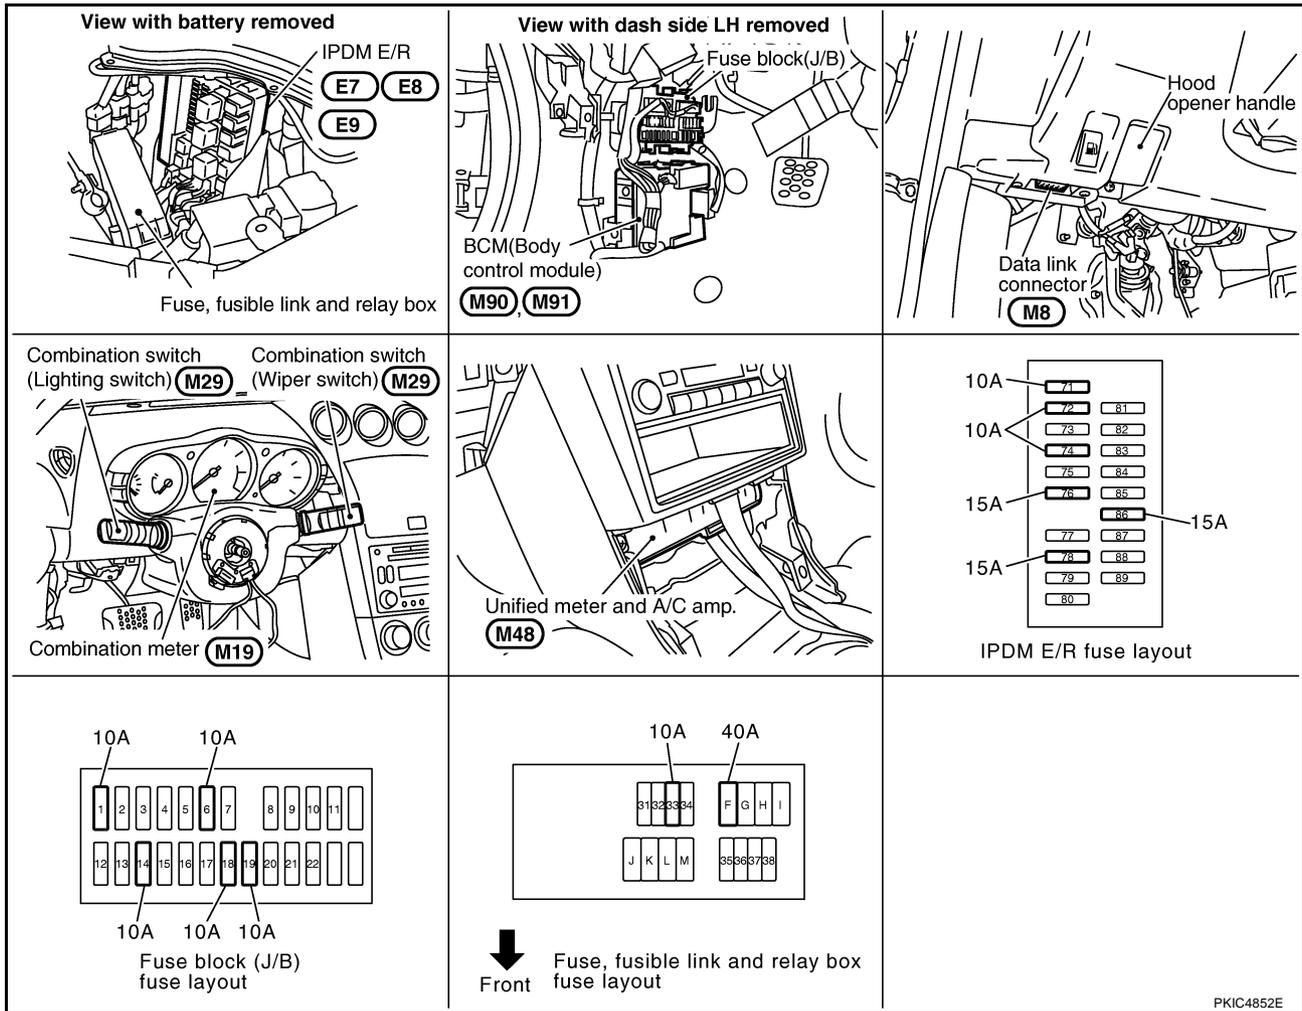

System Description

NKS004XD

- BCM (Body Control Module) controls headlamps low beam, high beam and daytime light operation.
- Daytime light system operates parking, license plate, side marker, tail lamps and headlamp low beam according to signals from unified meter and A/C amp. (receive parking brake switch signal through CAN communication), ECM (receive engine status signal through CAN communication), lighting switch, and ignition switch.
- IPDM E/R (Intelligent Power Distribution Module Engine Room) operates parking, license plate, side marker, tail lamps, headlamp bulbs and high beam solenoids according to CAN communication signals from BCM.
- Unified meter and A/C amp. operates high beam indicator lamp according to CAN communication signals from BCM.

OUTLINE

Power is supplied at all times

- to headlamp high relay, located in IPDM E/R and
- to headlamp low relay, located in IPDM E/R, from battery directly,
- through 15A fuse [No. 78, located in IPDM E/R]
- to CPU (central processing unit) located in IPDM E/R,
- through 40A fusible link [letter F, located in the fuse, fusible link and relay box]
- to BCM terminal 55,
- through 10A fuse [No.18, located in fuse block (J/B)]

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

- to BCM terminal 42,
- through 10A fuse [No. 71, located in IPDM E/R]
- to CPU located in IPDM E/R,
- through 10A fuse [No.19, located in fuse block (J/B)]
- to combination meter terminal 24,
- through 10A fuse [No.33, located in the fuse, fusible link and relay box]
- to daytime light relay terminals 1 and 3.

With ignition switch in ON or START position, power is supplied

- to CPU located in IPDM E/R,
- through 10A fuse [No. 1, located in fuse block (J/B)]
- to BCM terminal 38,
- through 10A fuse [No.14, located in fuse block (J/B)]
- to combination meter terminal 23.

With ignition switch in ACC or ON position, power is supplied

- through 10A fuse [No. 6, located in fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to IPDM E/R terminals 38 and 60
- through grounds E17, E43 and B102 (with VDC system, navigation system or telephone)
- through grounds E17, E43 and F152 (without VDC system, navigation system and telephone),
- to BCM terminal 52
- through grounds M30 and M66,
- to combination meter terminals 10, 11 and 12
- through grounds M30 and M66.

HEADLAMP OPERATION

Low Beam Operation

With the lighting switch in 2ND position, the BCM receives input signal requesting the headlamps to illuminate. This input signal is communicated to the IPDM E/R through CAN communication. The CPU located in the IPDM E/R controls the headlamp low relay turned ON, which when energized, supplies power,

- through 15A fuse [No. 76, located in IPDM E/R]
- through IPDM E/R terminal 20
- to front combination lamp RH terminal 7,
- through 15A fuse [No. 86, located in IPDM E/R]
- through IPDM E/R terminal 30
- to front combination lamp LH terminal 7.

Ground is supplied

- to front combination lamp RH terminal 4, and
- to front combination lamp LH terminal 4
- through grounds E17, E43 and B102 (with VDC system, navigation system or telephone)
- through grounds E17, E43 and F152 (without VDC system, navigation system and telephone).

With power and ground supplied, headlamp bulbs illuminate.

High Beam Operation /Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input signal requesting headlamp high beams to illuminate. High beam request signal and low beam request signal is communicated to the IPDM E/R through CAN communication. The CPU located in the IPDM E/R controls headlamp high relay and headlamp low relay turned ON, which when energized, supplies power,

- through 15A fuse [No. 76, located in IPDM E/R]
- through IPDM E/R terminal 20
- to front combination lamp RH terminal 7,

A
B
C
D
E
F
G
H
I
J

LT

L
M

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

- through 15A fuse [No. 86, located in IPDM E/R]
- through IPDM E/R terminal 30
- to front combination lamp LH terminal 7,
- through 10A fuse [No.72, located in IPDM E/R]
- through IPDM E/R terminal 27
- to front combination lamp RH terminal 3,
- through 10A fuse [No.74, located in IPDM E/R]
- through IPDM E/R terminal 28
- to front combination lamp LH terminal 3.

Ground is supplied

- to front combination lamp RH terminal 4, and
- to front combination lamp LH terminal 4
- through grounds E17, E43 and B102 (with VDC system, navigation system or telephone)
- through grounds E17, E43 and F152 (without VDC system, navigation system and telephone).

With the power and ground supplied, headlamp bulbs illuminate. High beam solenoids move the bulb shades in the front combination lamps, and the bulb shades change to high beam position.

Unified meter and A/C amp. receives signal from BCM through CAN communication, and then combination meter indicator illuminates high beam,

DAYTIME LIGHT OPERATION

Once the parking brake is turned OFF after ignition switch ON, if the lighting switch is turned OFF while engine is running, the BCM outputs the signal requesting parking, license plate, side marker, tail lamps and headlamp low beam to illuminate. This output signal is communicated to the IPDM E/R through CAN communication. The CPU located in the IPDM E/R controls headlamp low relay and daytime light relay turned ON, which when energized, supplies power,

- through 15A fuse [No.76, located in the IPDM E/R]
- through IPDM E/R terminal 20
- to front combination lamp RH terminal 7,
- through 15A fuse [No.86, located in the IPDM E/R]
- through IPDM E/R terminal 30
- to front combination lamp LH terminal 7,
- through 10A fuse [No.33, located in the fuse, fusible link and relay box]
- through daytime light relay terminal 2
- to IPDM E/R terminal 55,
- through daytime light relay terminal 5
- to front combination lamp RH terminal 6
- to front combination lamp LH terminal 6
- to rear combination lamp RH terminal 2
- to rear combination lamp LH terminal 2
- to license plate lamp RH terminal 2
- to license plate lamp LH terminal 2.

Ground is supplied

- to front combination lamp RH terminal 4
- to front combination lamp LH terminal 4
- to front combination lamp RH terminal 8
- to front combination lamp LH terminal 8
- through grounds E17, E43 and B102 (with VDC system, navigation system or telephone)
- through grounds E17, E43 and F152 (without VDC system, navigation system and telephone),
- to rear combination lamp RH terminal 3
- to rear combination lamp LH terminal 3
- to license plate lamp RH terminal 1

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

- to license plate lamp LH terminal 1
- through grounds B5, B6, D105 and T14 (Coupe models)
- through grounds B5, B6 and T14 (Roadster models).

With power and ground supplied, the headlamp low, parking, license plate and tail lamps illuminate.

OPERATION

Engine		With engine stopped									With engine running								
Lighting switch		OFF			1ST			2ND			OFF			1ST			2ND		
		OFF	Hi	P	T	Hi	P	Lo	Hi	P	OFF	Hi	P	T	Hi	P	Lo	Hi	P
Headlamp	High beams	-	-	-	-	-	×	-	×	×	-	-	×	-	-	×	-	×	×
	Low beams	-	-	-	-	-	-	×	-	-	×*	×*	-	×*	×*	-	×	-	-
Parking, license plate, side marker and tail lamps		-	-	-	×	-	×	×	×	×	×*	×*	-	×	×	×	×	×	×
Illumination		-	-	-	×	-	×	×	×	×	-	-	-	×	×	×	×	×	×

- T: "TAIL LAMP" position
- Hi: "HIGH BEAM" position
- Lo: "LOW BEAM" position
- P: "FLASH TO PASS" position
- ×: Lamp "ON"
- -: Lamp "OFF"
- *: Once the parking brake is turned OFF after ignition switch ON, parking, license plate, side marker, tail lamps and headlamp low are turned ON.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, then the headlamps are turned off. Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-III.

INTERLOCKED OPERATION WITH REMOTE KEYLESS ENTRY SYSTEM

Refer to [BL-59, "REMOTE KEYLESS ENTRY SYSTEM"](#) .

INTERLOCKED OPERATION WITH VEHICLE SECURITY SYSTEM

Refer to [BL-125, "VEHICLE SECURITY \(THEFT WARNING\) SYSTEM"](#) .

XENON HEADLAMP

Xenon type lamps are used for headlamps. Xenon bulbs do not use a filament. Instead, they produce light when a high voltage current is passed between two tungsten electrodes through a mixture of xenon (an inert gas) and certain other metal halides. In addition to strong lighting power, electronic control of the power supply gives the headlamps stable quality and tone color.

Followings are some advantages of the xenon type headlamp.

- The light produced by the headlamps is white color similar to sunlight that is easy to the eyes.
- Light output is nearly double that of halogen headlamps, affording increased area of illumination.
- Counter-reflected luminance increases and the contrast enhances on the wet road in the rain. That makes visibility go up more than the increase of the light volume.
- Power consumption is approximately 25 percent less than halogen headlamps, reducing battery load.

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

CAN Communication System Description

NKS004XE

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit


NKS004XF

Refer to [LAN-48. "CAN System Specification Chart"](#) .

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Schematic

NKS004XG

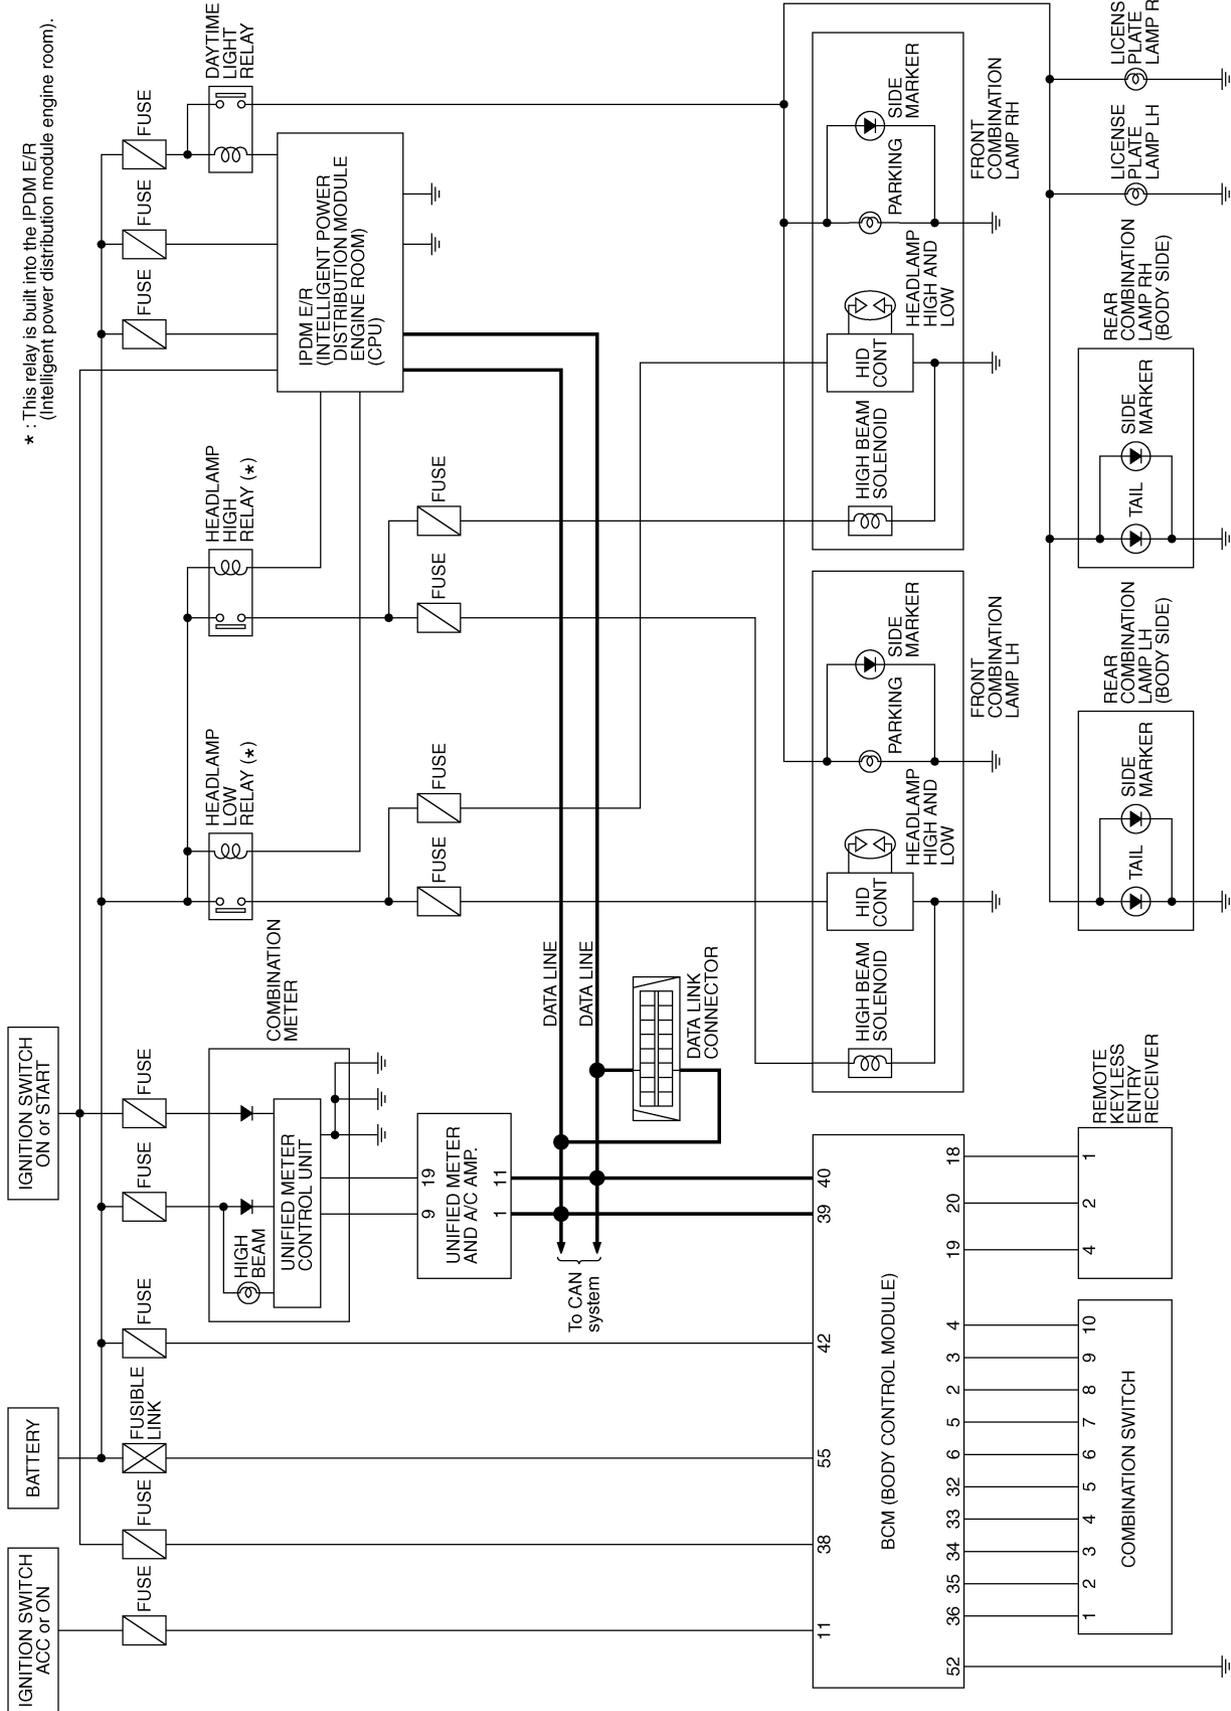

TKWT4022E

A
B
C
D
E
F
G
H
I
J
K
L
M



LT

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -


NKS004XH

LT-DTRL-01

Wiring Diagram — DTRL —

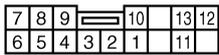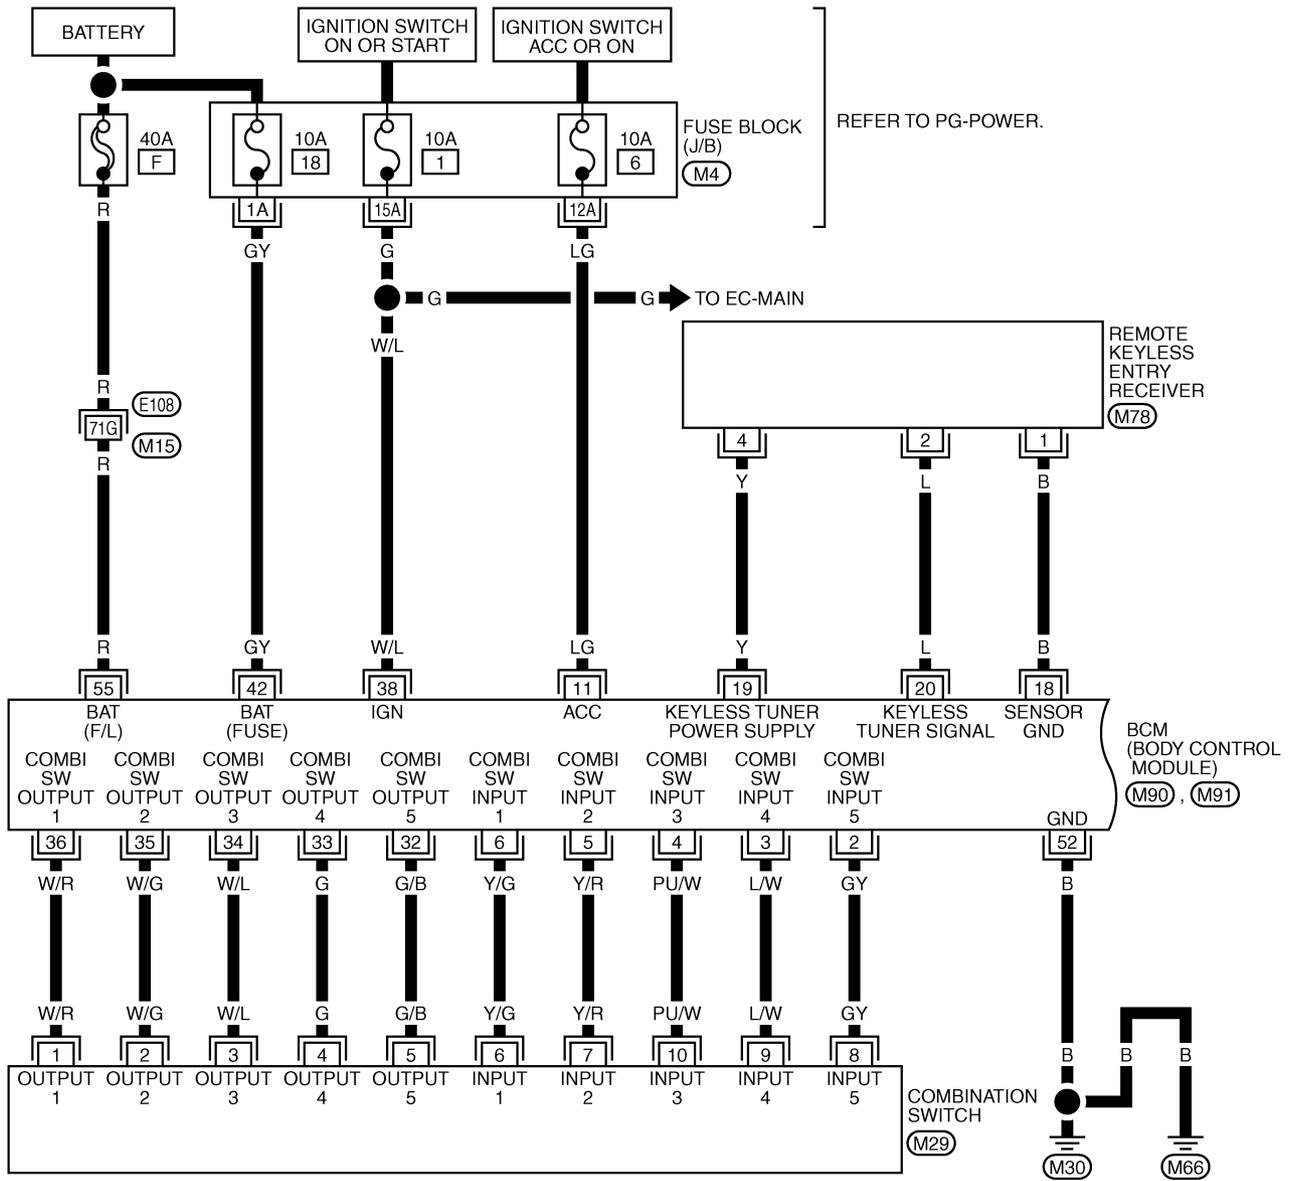

(M29)
W

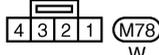

(M78)
W

REFER TO THE FOLLOWING.

(E108) -SUPER MULTIPLE JUNCTION (SMJ)

(M4) -FUSE BLOCK-JUNCTION BOX (J/B)


(M90), (M91) -ELECTRICAL UNITS

TKWT5747E


HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-02

▬ : DATA LINE

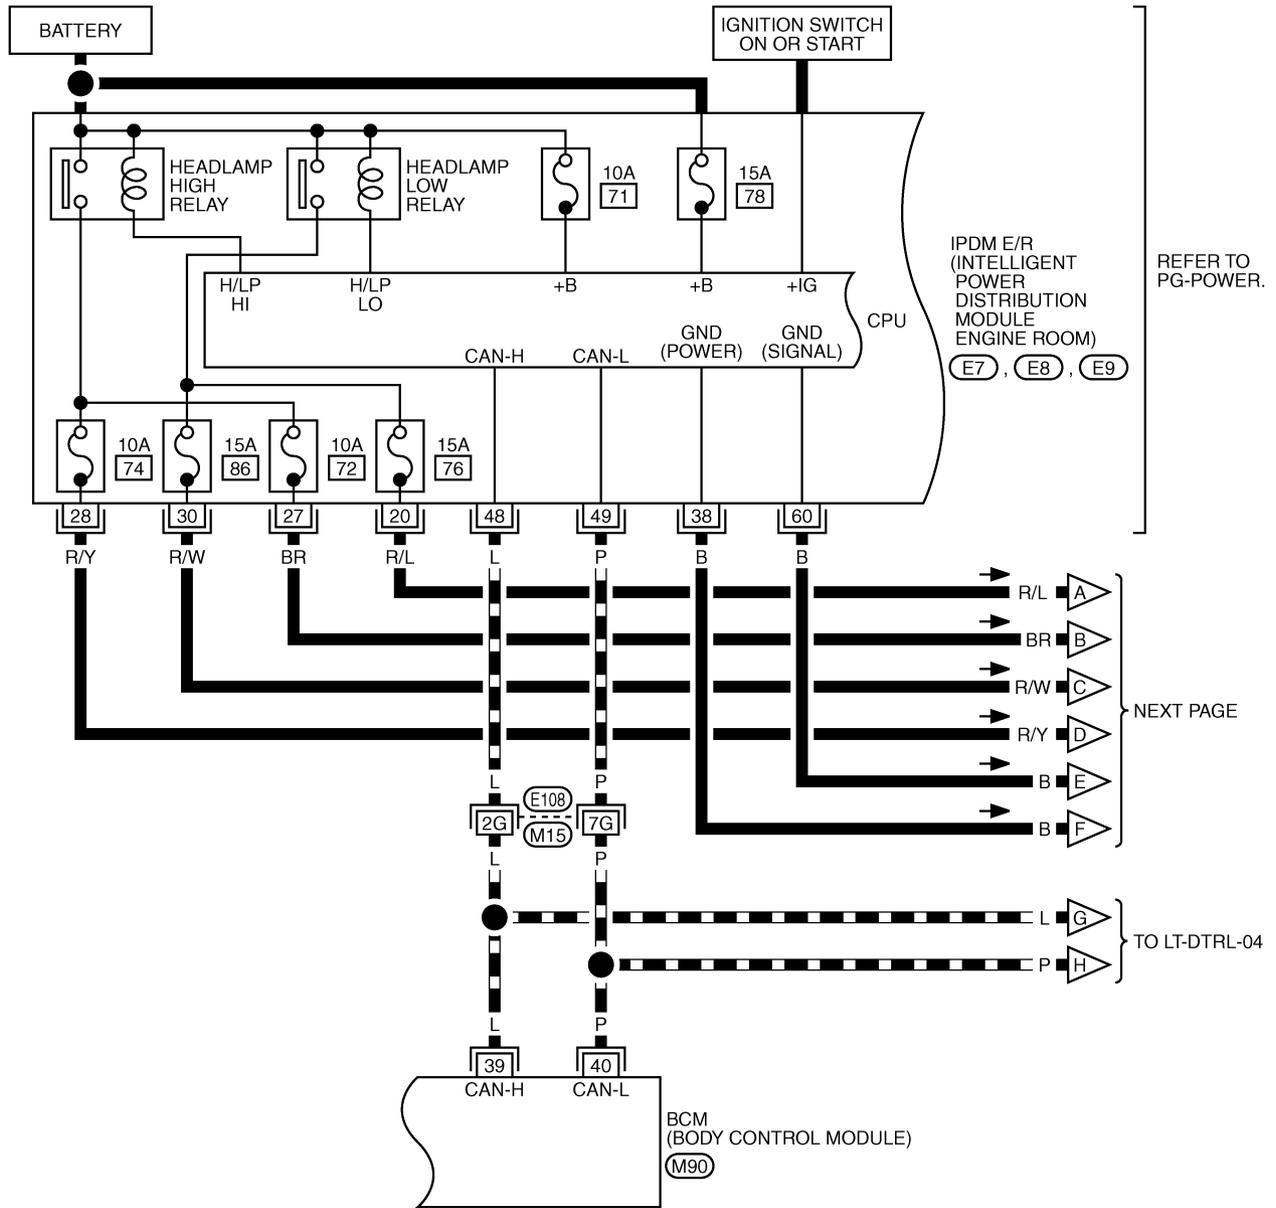

A
B
C
D
E
F
G
H
I
J
LT
L
M

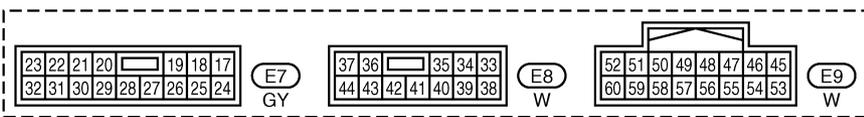

REFER TO THE FOLLOWING.

(E108) -SUPER MULTIPLE JUNCTION (SMJ)



(M90) -ELECTRICAL UNITS



HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-03

NT : WITH VDC SYSTEM,
 NAVIGATION SYSTEM OR TELEPHONE
OT : WITHOUT VDC SYSTEM,
 NAVIGATION SYSTEM AND TELEPHONE



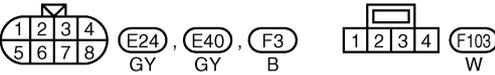
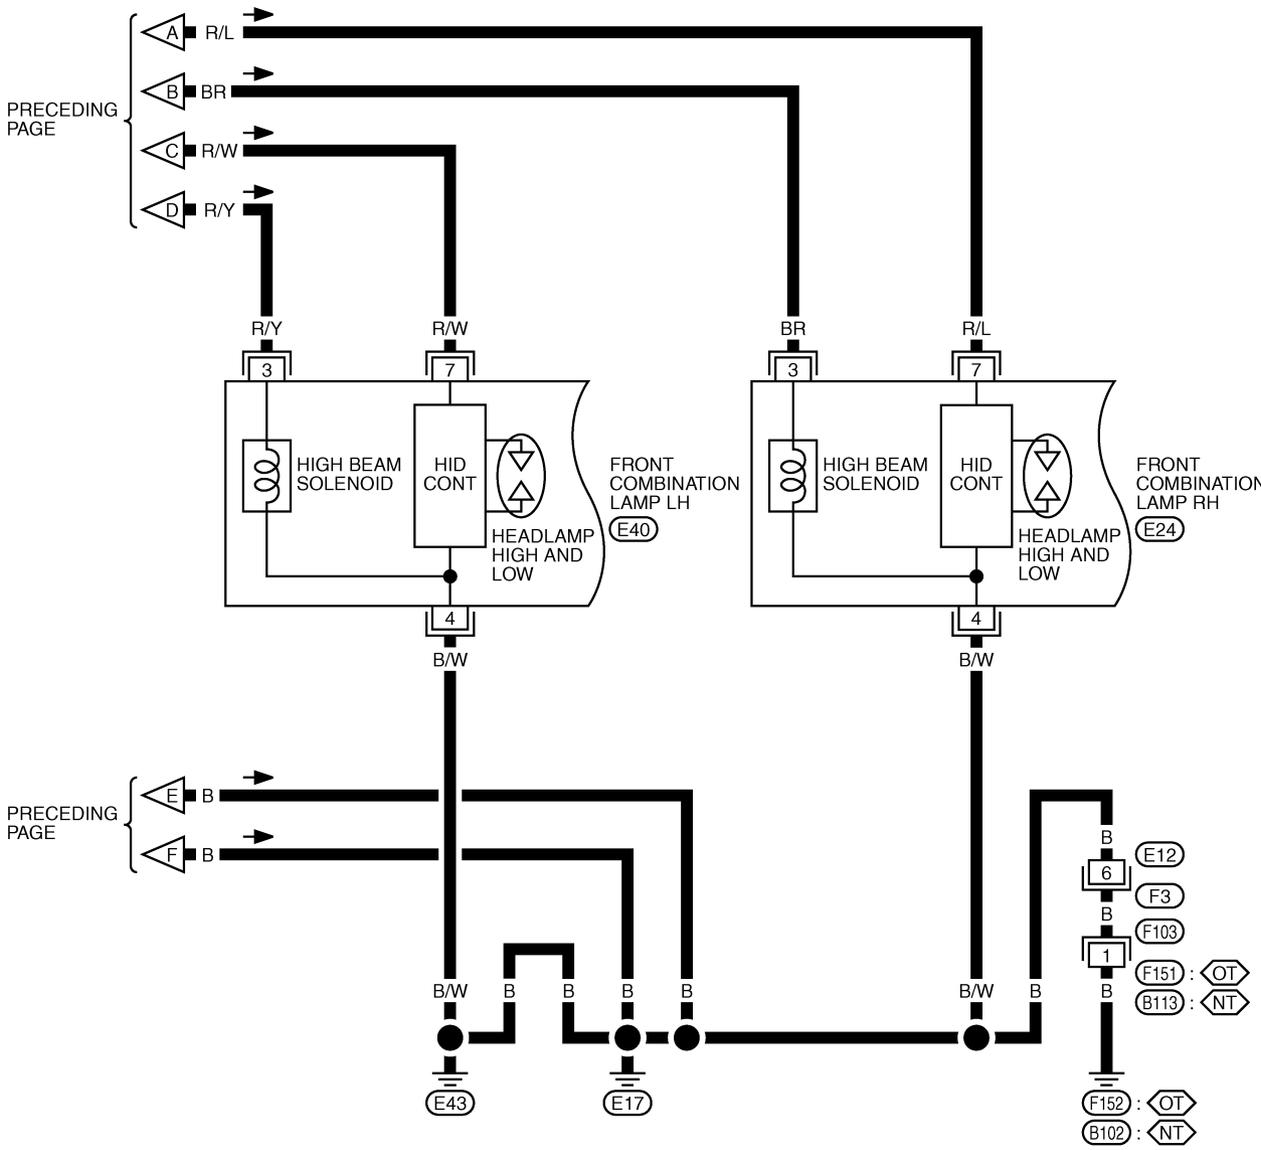


TKWT5749E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-04

▬ : DATA LINE

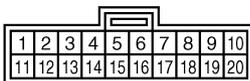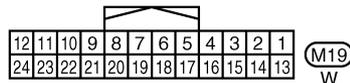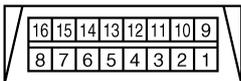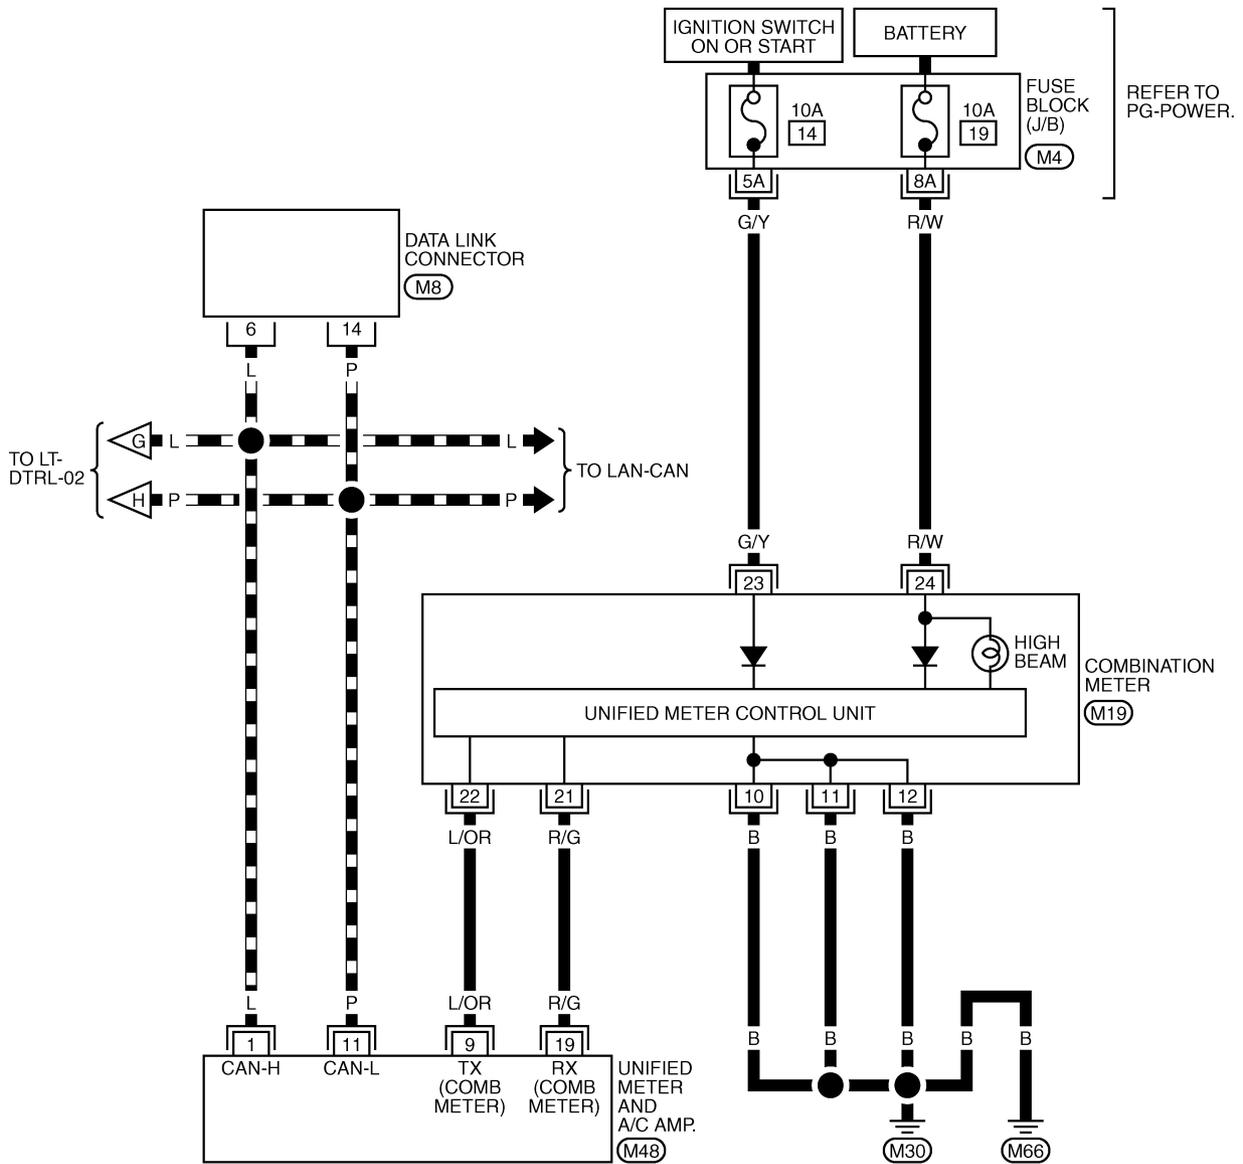







REFER TO THE FOLLOWING.

(M4) -FUSE BLOCK-JUNCTION BOX (J/B)

TKWT4026E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-05

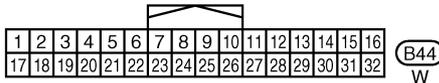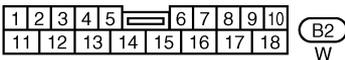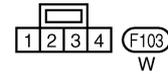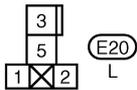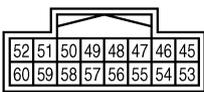
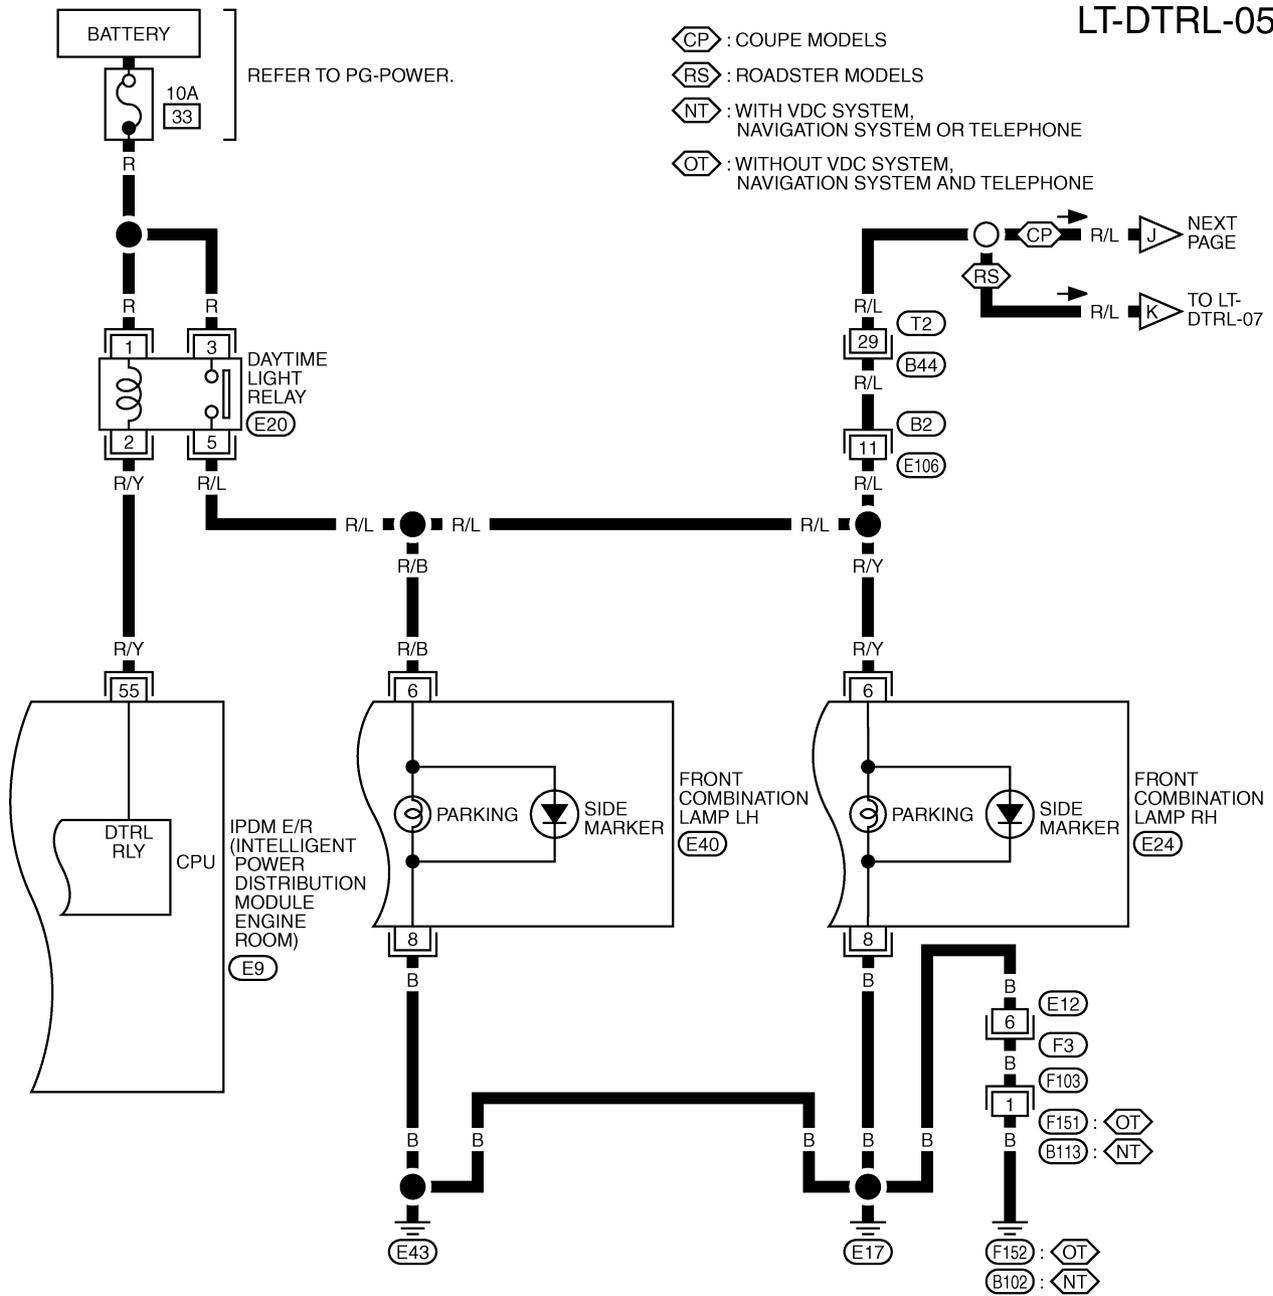


TKWT5750E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-06

◊CP◊ : COUPE MODELS

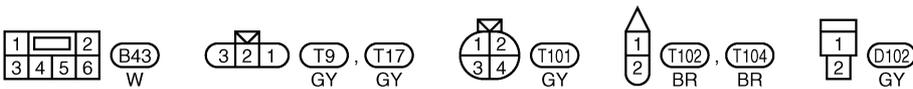
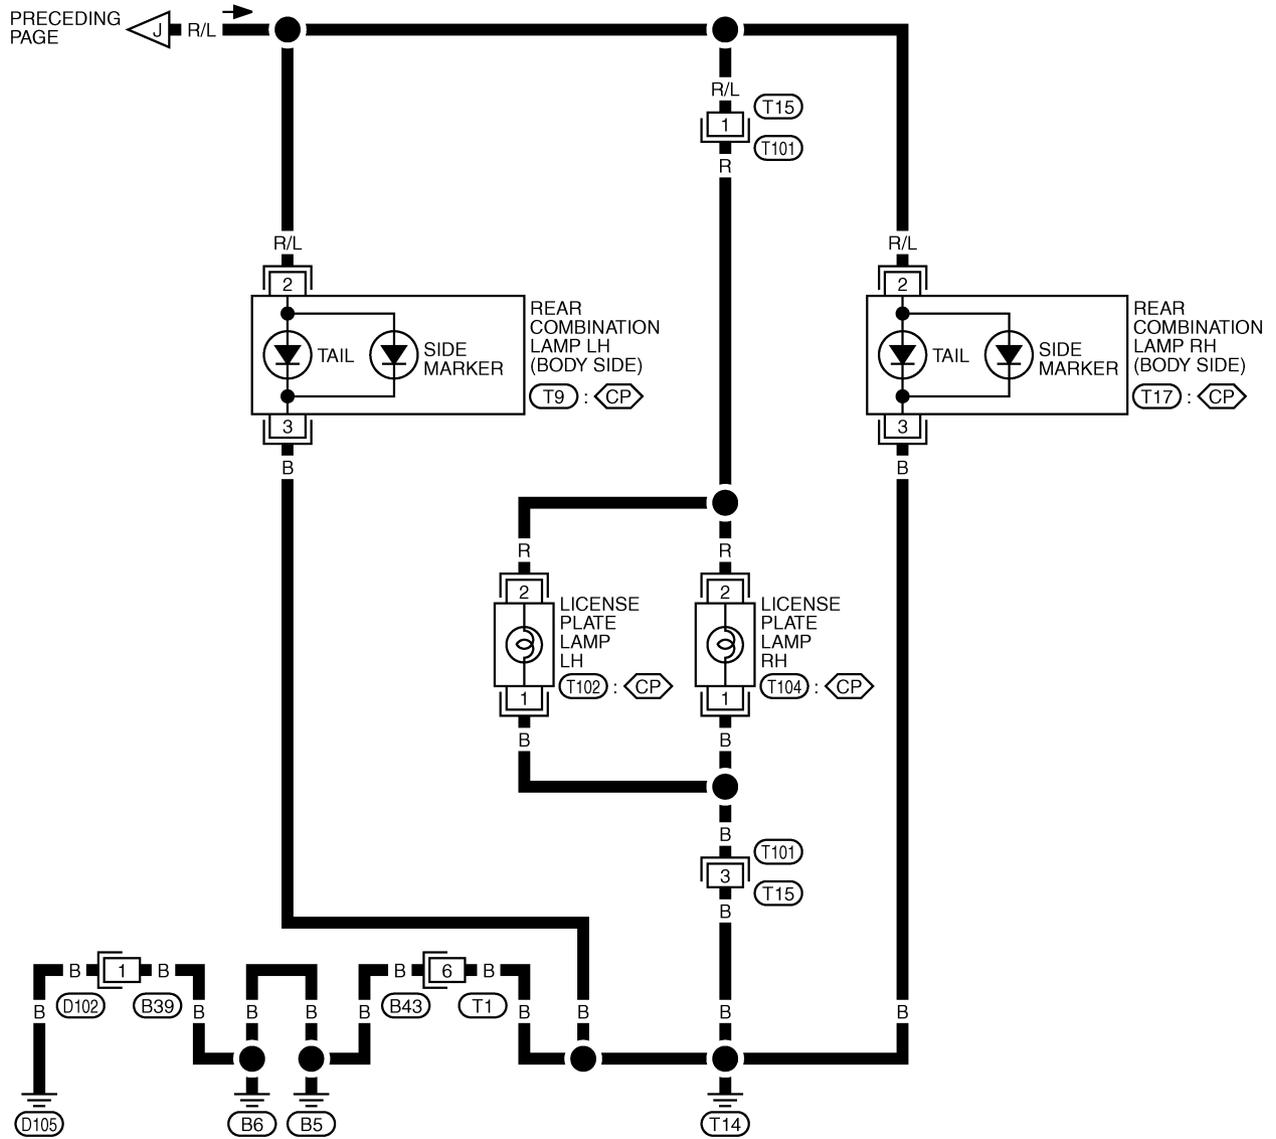


TKWT4028E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-07

⬡RS⬡ : ROADSTER MODELS

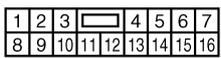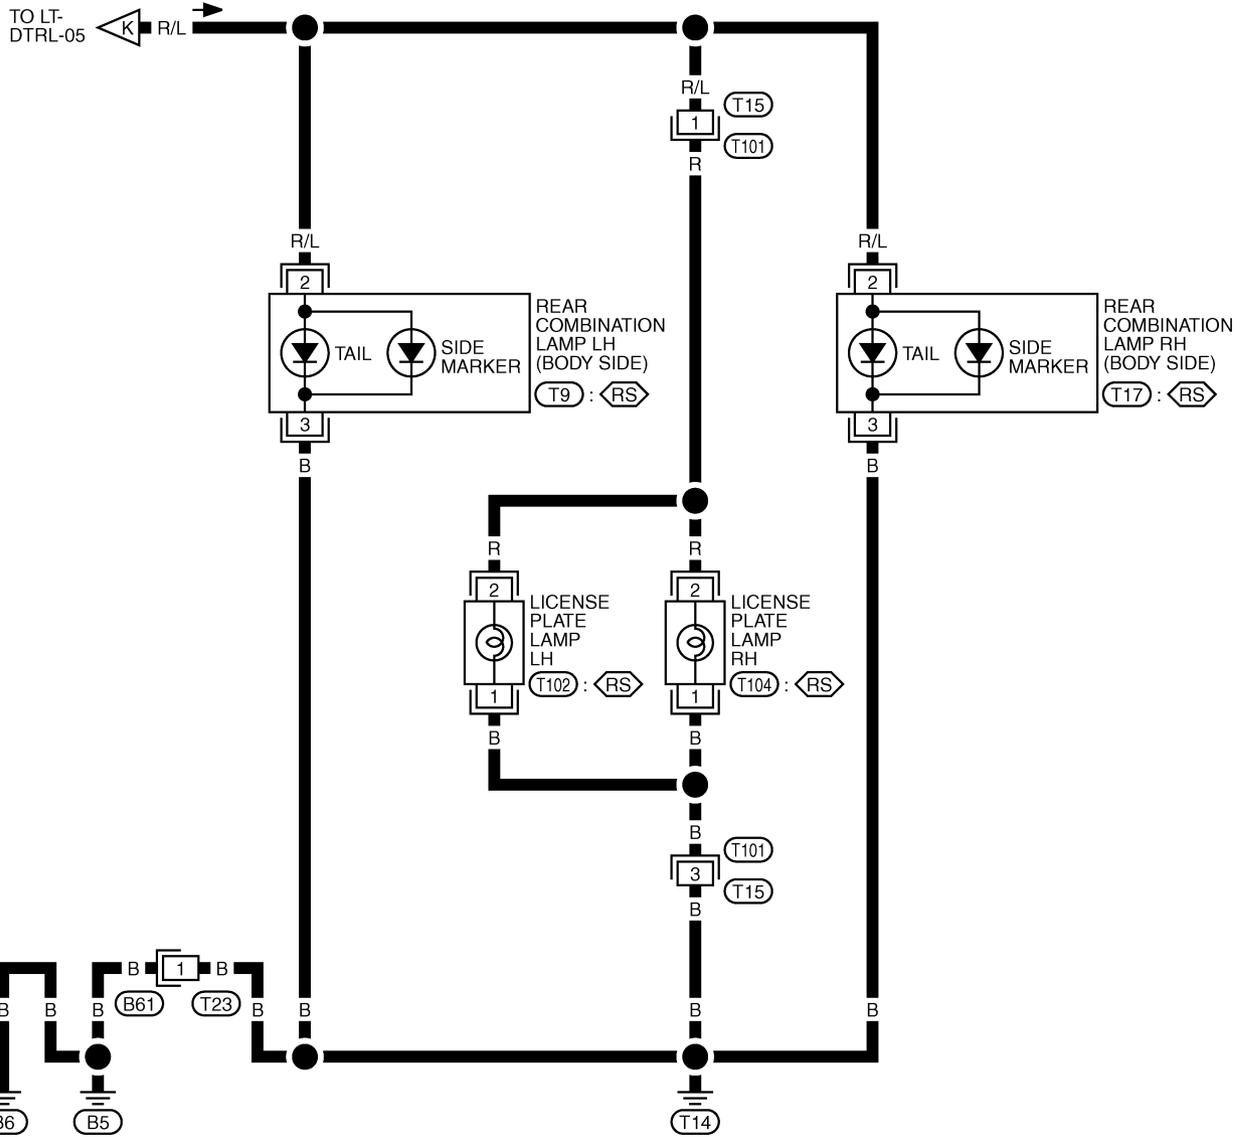

(B61)
W



(T9), (T17)
GY GY



(T101)
GY



(T102), (T104)
BR BR

TKWT4029E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Terminals and Reference Values for BCM

NKS004X1

CAUTION:







- Check combination switch system terminal waveform under the loaded condition with lighting switch, turn signal switch and wiper switch OFF not to be fluctuated by overloaded.
- Turn wiper dial position to 4 except when checking waveform or voltage of wiper dial position. Wiper dial position can be confirmed on CONSULT-III. Refer to [LT-91. "DATA MONITOR"](#) .

Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
2	GY	Combination switch input 5	ON	OFF	Approx. 0 V
				Any of the conditions below <ul style="list-style-type: none"> ● Lighting switch 1ST ● Lighting switch HIGH beam (Operates only HIGH beam switch) 	<p>Approx. 1.0 V</p>
				Lighting, turn, wiper switch (Wiper intermittent dial position 4)	Lighting switch 2ND
3	LW	Combination switch input 4	ON	OFF	Approx. 0 V
				Any of the conditions below <ul style="list-style-type: none"> ● Lighting switch 2ND ● Lighting switch PASSING (Operates only PASSING switch) 	<p>Approx. 1.0 V</p>
11	LG	Ignition switch (ACC)	ACC	—	Battery voltage

A
B
C
D
E
F
G
H
I
J
L
M

LT

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

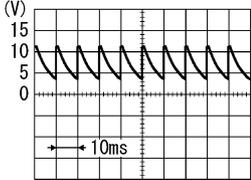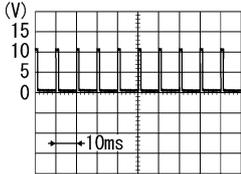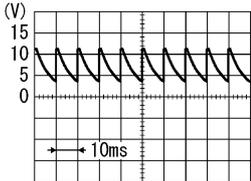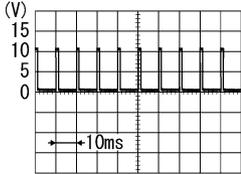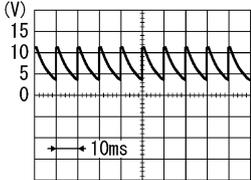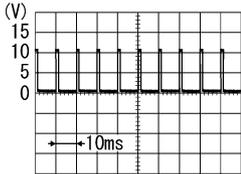Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
33	G	Combination switch output 4	ON	Lighting, turn, wiper switch (Wiper intermittent dial position 4)	 <p style="text-align: right; font-size: small;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.2 V</p>
				Lighting switch 1ST (The same result with lighting switch 2ND)	 <p style="text-align: right; font-size: small;">PKIB4958J</p> <p style="text-align: center;">Approx. 1.2 V</p>
34	W/L	Combination switch output 3	ON	Lighting, turn, wiper switch (Wiper intermittent dial position 4)	 <p style="text-align: right; font-size: small;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.2 V</p>
				Any of the conditions below <ul style="list-style-type: none"> ● Lighting switch 2ND ● Lighting switch HI beam (Operates only HI beam switch) 	 <p style="text-align: right; font-size: small;">PKIB4958J</p> <p style="text-align: center;">Approx. 1.2 V</p>
35	W/G	Combination switch output 2	ON	Lighting, turn, wiper switch (Wiper intermittent dial position 4)	 <p style="text-align: right; font-size: small;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.2 V</p>
				Any of the conditions below <ul style="list-style-type: none"> ● Lighting switch 2ND ● Lighting switch PASSING (Operates only PASSING switch) 	 <p style="text-align: right; font-size: small;">PKIB4958J</p> <p style="text-align: center;">Approx. 1.2 V</p>
38	W/L	Ignition switch (ON)	ON	—	Battery voltage

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
39	L	CAN – H	—	—	—
40	P	CAN – L	—	—	—
42	GY	Battery power supply	OFF	—	Battery voltage
52	B	Ground	ON	—	Approx. 0 V
55	R	Battery power supply	OFF	—	Battery voltage

Terminals and Reference Values for IPDM E/R

NKS004XJ

Terminal No.	Wire color	Signal name	Measuring condition			Reference value
			Ignition switch	Operation or condition		
20	R/L	Headlamp low (RH)	ON	Lighting switch 2ND position	OFF	Approx. 0 V
					ON	Battery voltage
27	BR	Headlamp high (RH)	ON	Lighting switch HIGH or PASS position	OFF	Approx. 0 V
					ON	Battery voltage
28	R/Y	Headlamp high (LH)	ON	Lighting switch HIGH or PASS position	OFF	Approx. 0 V
					ON	Battery voltage
30	R/W	Headlamp low (LH)	ON	Lighting switch 2ND position	OFF	Approx. 0 V
					ON	Battery voltage
38	B	Ground	ON	—	Approx. 0 V	
48	L	CAN – H	—	—	—	
49	P	CAN – L	—	—	—	
55	R/Y	Daytime light relay signal	ON	Lighting switch 1ST position	OFF	Approx. 0 V
					ON	Battery voltage
60	B	Ground	ON	—	Approx. 0 V	

How to Proceed With Trouble Diagnosis

NKS004XK

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-32, "System Description"](#) .
3. Perform the preliminary check. Refer to [LT-47, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does headlamp operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END

Preliminary Check

NKS004XL

CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES AND FUSIBLE LINK

Check for blown fuses and fusible link.

UNIT	POWER SOURCE	Fuse and fusible link No.
BCM	Battery	F
		18
	Ignition switch ON or START position	1
	Ignition switch ACC or ON position	6

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

UNIT	POWER SOURCE	Fuse and fusible link No.
IPDM E/R	Battery	33
		72
		74
		76
		86

Refer to [LT-38, "Wiring Diagram — DTRL —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

Terminals		Ignition switch position			
(+)		(-)	OFF	ACC	ON
BCM connector	Terminal				
M90	11	Ground	Approx. 0 V	Battery voltage	Battery voltage
	38		Approx. 0 V	Approx. 0 V	Battery voltage
M91	42		Battery voltage	Battery voltage	Battery voltage
	55		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

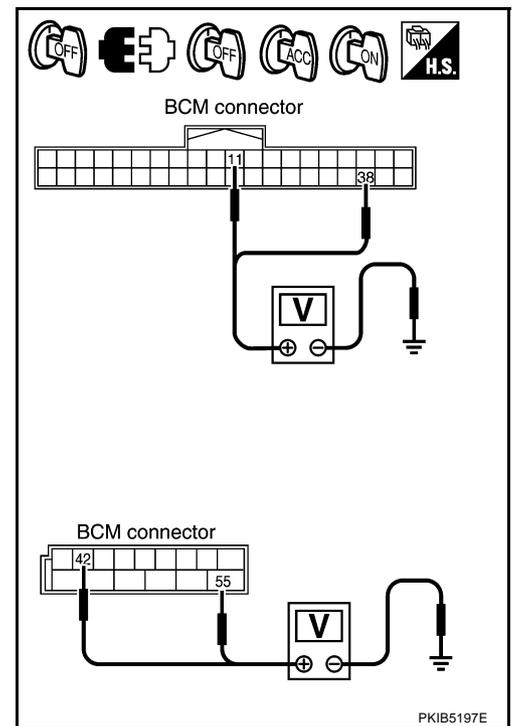

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

BCM connector	Terminal	Ground	Continuity
M91	52		Yes

OK or NG

OK >> INSPECTION END

NG >> Repair harness or connector.

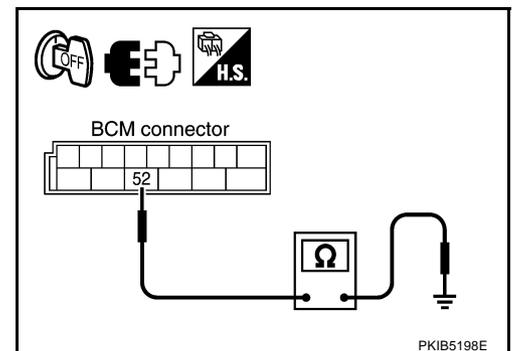

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

CONSULT-III Function (BCM)

NKS004XM

CONSULT-III can display each diagnostic item using the diagnostic test mode shown following.

BCM diagnosis part	Diagnosis mode	Description
HEADLAMP	WORK SUPPORT	Changes the setting for each function.
	DATA MONITOR	Displays BCM input data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
BCM	SELF-DIAG RESULTS	BCM performs self-diagnosis of CAN communication.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.

WORK SUPPORT

Display Item List

Item	Description	CONSULT-III	Factory setting
BATTERY SAVER SET	Exterior lamp battery saver control mode can be changed in this mode. Select exterior lamp battery saver control mode between two ON/OFF.	ON	×
		OFF	—

DATA MONITOR

Display Item List

Monitor item	Contents
IGN ON SW	"ON/OFF" Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW	"ON/OFF" Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW	"ON/OFF" Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1	"ON/OFF" Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 1 judged from lighting switch signal.
HEAD LAMP SW 2	"ON/OFF" Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1 ST	"ON/OFF" Displays status (lighting switch 1ST or 2ND position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
PASSING SW	"ON/OFF" Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW ^{NOTE}	"ON/OFF" —
DOOR SW - DR	"ON/OFF" Displays status of driver door as judged from driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - AS	"ON/OFF" Displays status of passenger door as judged from passenger door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - RR ^{NOTE}	"OFF" —
DOOR SW - RL ^{NOTE}	"OFF" —
BACK DOOR SW	"ON/OFF" <ul style="list-style-type: none"> ● Displays status of back door as judged from back door switch signal. (Coupe models) ● Displays status of rear trunk hood as judged from trunk lamp switch signal. (Roadster models)
TURN SIGNAL R	"ON/OFF" Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L	"ON/OFF" Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
ENGINE RUN	"ON/OFF" Displays status (engine running: ON/ engine stopped: OFF) of engine judged from engine run signal.
PKB SW	"ON/OFF" Displays status (parking brake released: ON/ parking brake applied: OFF) of parking brake switch judged from parking brake switch signal.
CARGO LAMP SW ^{NOTE}	"OFF" —

NOTE:

This item is displayed, but cannot be monitored.

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

ACTIVE TEST

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay to operate by switching ON-OFF.
FR FOG LAMP ^{NOTE}	—
CORNERING LAMP ^{NOTE}	—
DAYTIME RUNNING LIGHT	Allows headlamp low relay and daytime light relay to operate switching ON-OFF.

NOTE:

This item is displayed, but cannot be tested.

CONSULT-III Function (IPDM E/R)

NKS004XN

CONSULT-III can display each diagnostic item using the diagnostic test mode shown following.

Check Item, Diagnosis Mode	Description
SELF-DIAG RESULTS	Refer to PG-18, "SELF-DIAG RESULTS" .
DATA MONITOR	The input/output data of IPDM E/R is displayed in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	IPDM E/R sends a drive signal to electronic components to check their operation.

DATA MONITOR

All Signals, Main Signals, Selection From Menu

Item name	CONSULT-III screen display	Display or unit	Monitor item selection			Description
			ALL SIG- NALS	MAIN SIGNALS	SELECTION FROM MENU	
Position lights request	TAIL&CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Daytime running light request	DTRL REQ	ON/OFF	×		×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with ignition switch ON. When ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Display Item List

Test item	CONSULT-III screen display	Description
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI ON, LO ON) at your option (Headlamp high beam repeats ON-OFF every 1 second).

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

NKS004XO

Daytime Light Control Does Not Operate

NOTE:

Check if parking, license plate, side marker, tail lamps and head lamps low operates normally.

1. ACTIVE TEST

CONSULT-III ACTIVE TEST

1. Select "DAYTIME RUNNING LIGHT" of BCM active test item.
2. With operating the test item, check the headlamp low beam, parking, license plate and tail lamps operate.

Headlamp low beam, parking, license plate and tail lamps should operate.

OK or NG

OK >> GO TO 2.

NG >> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#) .

2. CHECK INPUT SIGNAL

CONSULT-III DATA MONITOR

1. Select "HEAD LAMP" of BCM data monitor item.
2. With the engine running or stop, check the monitor status.

Engine running : ENGINE RUN ON

Engine stop : ENGINE RUN OFF

3. With operating the parking brake, check the monitor status.

Parking brake ON : PKB SW ON

Parking brake OFF : PKB SW OFF

OK or NG

OK >> Replace BCM. Refer to [BCS-17, "Removal and Installation of BCM"](#) .

NG >> Refer to [BCS-16, "CAN Communication Inspection Using CONSULT-III \(Self-Diagnosis\)"](#) .

Headlamp Does Not Change To High Beam (Both Sides)

NKS004XP

1. CHECK COMBINATION SWITCH INPUT SIGNAL

CONSULT-III DATA MONITOR

1. Select "HEAD LAMP" of BCM data monitor item.
2. With operating the lighting switch, check the monitor status.

When lighting switch is HIGH BEAM : HI BEAM SW ON

Without CONSULT-III

Refer to [LT-92, "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check combination switch (lighting switch). Refer to [LT-92, "Combination Switch Inspection"](#) .

A
B
C
D
E
F
G
H
I
J
L
M

LT

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

2. HEADLAMP ACTIVE TEST

CONSULT-III ACTIVE TEST

1. Select "LAMPS" of IPDM E/R active test item.
2. With operating the test item, check the headlamp high beam operation.

**Headlamp high beam should operate.
(Headlamp high beam repeats ON-OFF every 1 second).**

IPDM E/R AUTO ACTIVE TEST

1. Start auto active test. Refer to [PG-20, "Auto Active Test"](#) .
2. Check that the headlamp high beam operation.

Headlamp high beam should operate.

OK or NG

- OK >> GO TO 3.
NG >> GO TO 4.

3. CHECK IPDM E/R

1. Select "HL LO REQ" and "HL HI REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status

**When lighting switch is : HL LO REQ ON
HIGH BEAM : HL HI REQ ON**

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#) .
NG >> Replace BCM. Refer to [BCS-17, "Removal and Installation of BCM"](#) .

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

4. CHECK HEADLAMP INPUT SIGNAL


CONSULT-III ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connector.
3. Select "LAMPS" of IPDM E/R active test item
4. With operating the test item, check voltage between front combination lamp (RH and LH) harness connector and ground.

NOTE:

Headlamp high beam repeats ON-OFF every 1 second.

Terminals				Voltage (Approx.)
(+)		(-)		
Front combination lamp connector	Terminal			
RH	E24	3		Battery voltage
LH	E40	3		

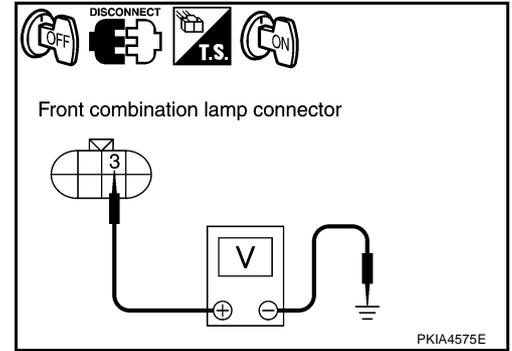

IPDM E/R AUTO ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connector.
3. Start auto active test. Refer to [PG-20, "Auto Active Test"](#).
4. With operating the test item, check voltage between front combination lamp (RH and LH) harness connector and ground.

NOTE:

Headlamp high beam repeats ON-OFF every 1 second.

Terminals				Voltage (Approx.)
(+)		(-)		
Front combination lamp connector	Terminal			
RH	E24	3		Battery voltage
LH	E40	3		


OK or NG

- OK >> GO TO 6.
 NG >> GO TO 5.

5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp (RH and LH) harness connector.

Terminals					Continuity
IPDM E/R		Front combination lamp			
Connector	Terminal	Connector	Terminal		
RH	E7	E24	27	3	Yes
LH			28	3	

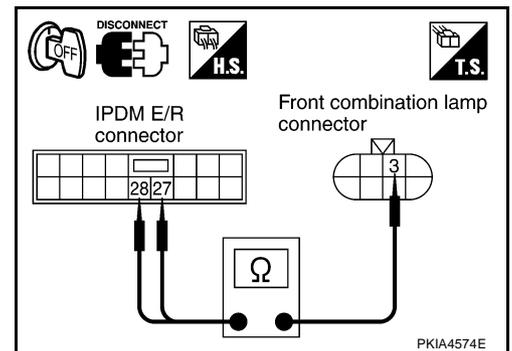

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#).
 NG >> Repair harness or connector.

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -


6. CHECK HEADLAMP GROUND

Check continuity between front combination lamp (RH and LH) harness connector and ground.

Front combination lamp connector		Terminal	Ground	Continuity
RH	E24	4		Yes
LH	E40	4		

OK or NG

- OK >> Check headlamp harness, connector and bulb.
- NG >> Repair harness or connector.

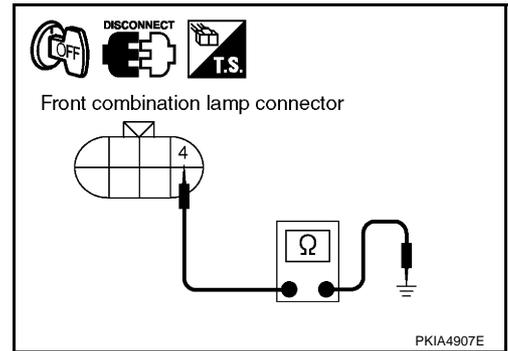

Headlamp Does Not Change To High Beam (One Side)

NKS004XQ


1. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH or LH connector.
3. Turn ignition switch ON.
4. Lighting switch is turned HIGH BEAM position.
5. Check voltage between front combination lamp RH or LH harness connector and ground.

Terminals			Voltage (Approx.)
(+)		(-)	
Front combination lamp connector	Terminal	Ground	Battery voltage
RH	E24	3	Battery voltage
LH	E40	3	

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

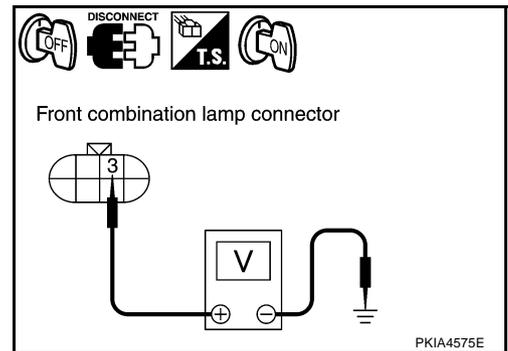


2. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp RH or LH harness connector.

Terminals					Continuity
IPDM E/R		Front combination lamp			
Connector	Terminal	Connector	Terminal		
RH	E7	27	E24	3	Yes
LH		28	E40	3	

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

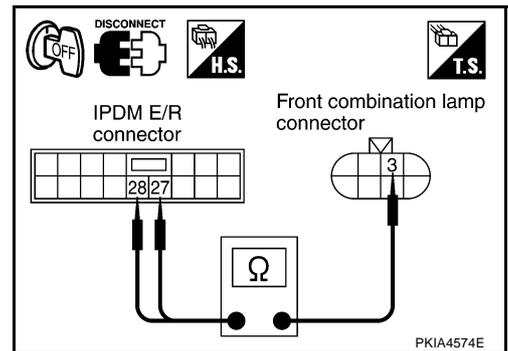

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -


3. CHECK HEADLAMP GROUND

Check continuity between front combination lamp RH or LH harness connector and ground.

Front combination lamp connector		Terminal	Ground	Continuity
RH	E24	4		Yes
LH	E40	4		

OK or NG

- OK >> Check headlamp harness and connector.
- NG >> Repair harness or connector.

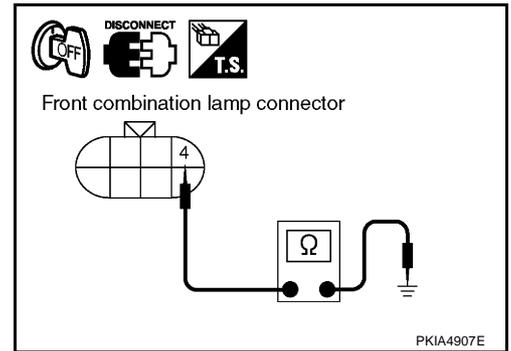

High Beam Indicator Lamp Does Not Illuminate

1. CHECK BULB

Check bulb of high beam indicator lamp.

OK or NG

- OK >> Replace combination meter. Refer to [DI-24, "Removal and Installation for Combination Meter"](#).
- NG >> Replace indicator bulb.

Headlamp Low Beam Does Not Illuminate (Both Sides)

1. CHECK COMBINATION SWITCH INPUT SIGNAL

ⓅCONSULT-III DATA MONITOR

1. Select "HEAD LAMP SW1" and "HEAD LAMP SW2" of BCM data monitor item.
2. With operating the lighting switch, check the monitor status.

**When lighting switch is 2ND : HEAD LAMP SW 1 ON
: HEAD LAMP SW 2 ON**

⊗CHECK COMBINATION SWITCH

Refer to [LT-92, "Combination Switch Inspection"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Check combination switch (lighting switch). Refer to [LT-92, "Combination Switch Inspection"](#).

2. HEADLAMP ACTIVE TEST

ⓅCONSULT-III ACTIVE TEST

1. Select "LAMPS" of IPDM E/R active test item.
2. With operating the test item, check the headlamp low beam operation.

Headlamp low beam should operate.

⊗IPDM E/R AUTO ACTIVE TEST

1. Start auto active test. Refer to [PG-20, "Auto Active Test"](#).
2. Check that the headlamp low beam operation.

Headlamp low beam should operate.

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 4.

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

3. CHECK IPDM E/R

1. Select "HL LO REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status.

When lighting switch is 2ND : HL LO REQ ON position


OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#) .
 NG >> Replace BCM. Refer to [BCS-17, "Removal and Installation of BCM"](#) .

4. CHECK HEADLAMP INPUT SIGNAL

CONSULT-III ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connector.
3. Select "LAMPS" of IPDM E/R active test item.
4. With operating the test item, check voltage between front combination lamp (RH and LH) harness connector and ground.

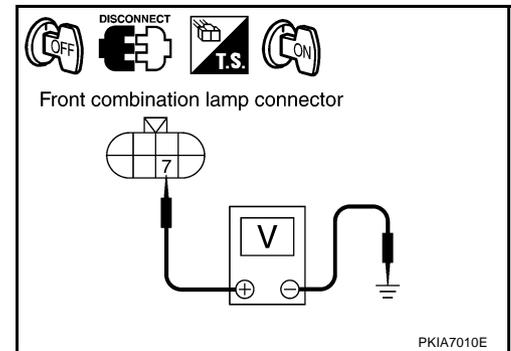

Terminals			(-)	Voltage (Approx.)
(+) Front combination lamp connector		Terminal		
RH	E24	7	Ground	Battery voltage
LH	E40	7		

IPDM E/R AUTO ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connector.
3. Start auto active test. Refer to [PG-20, "Auto Active Test"](#) .
4. With operating the test item, check voltage between front combination lamp (RH and LH) harness connector and ground.

Terminals			(-)	Voltage (Approx.)
(+) Front combination lamp connector		Terminal		
RH	E24	7	Ground	Battery voltage
LH	E40	7		

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 5.

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -


5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp (RH and LH) harness connector.

Terminals					Continuity
IPDM E/R		Front combination lamp			
Connector	Terminal	Connector	Terminal		
RH	E7	20	E24	7	Yes
LH		30	E40	7	

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness or connector.

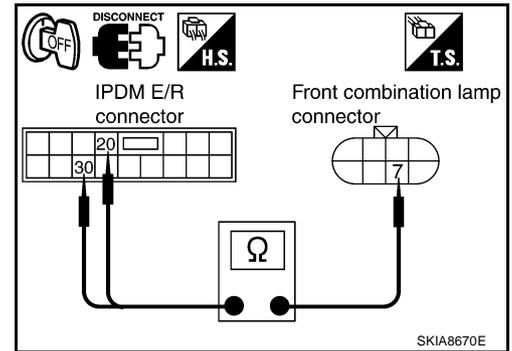


6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front combination lamp (RH and LH) harness connector and ground.

Front combination lamp connector		Terminal	Ground	Continuity
RH	E24	4		Yes
LH	E40	4		

OK or NG

- OK >> Check headlamp harness and connectors, ballasts (HID control unit), and xenon bulbs. Refer to [LT-60, "Xenon Headlamp Trouble Diagnosis"](#) .
 NG >> Repair harness or connector.

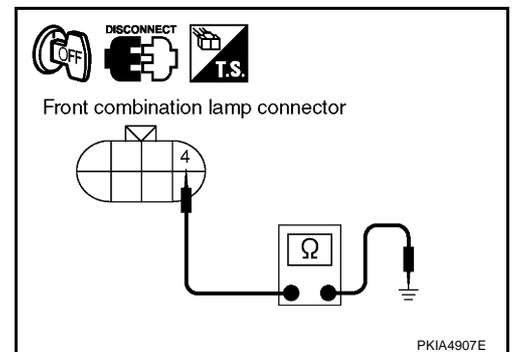

Headlamp Low Beam Does Not Illuminate (One Side)

NKS004XT

1. CHECK BULB

Check ballast (HID control unit) and xenon bulb of lamp which does not illuminate. Refer to [LT-60, "Xenon Headlamp Trouble Diagnosis"](#) .

OK or NG

- OK >> GO TO 2.
 NG >> Replace malfunctioning part.

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

2. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH or LH connector.
3. Turn ignition switch ON.
4. Lighting switch is turned 2ND position.
5. Check voltage between front combination lamp RH or LH harness connector and ground.

Terminals				Voltage (Approx.)
(+)		(-)		
Front combination lamp connector	Terminal			
RH	E24	7		Battery voltage
LH	E40	7		

OK or NG

- OK >> GO TO 4.
 NG >> GO TO 3.

3. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp RH or LH harness connector.

Terminals					Continuity
IPDM E/R		Front combination lamp			
Connector	Terminal	Connector	Terminal		
RH	E7		E24	7	Yes
LH			E40	7	

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness or connector.




4. CHECK HEADLAMP GROUND

Check continuity between front combination lamp RH or LH harness connector and ground.

Front combination lamp connector	Terminal	Ground	Continuity
RH	E24		4
LH	E40	4	

OK or NG

- OK >> Check headlamp harness and connector.
 NG >> Repair harness or connector.

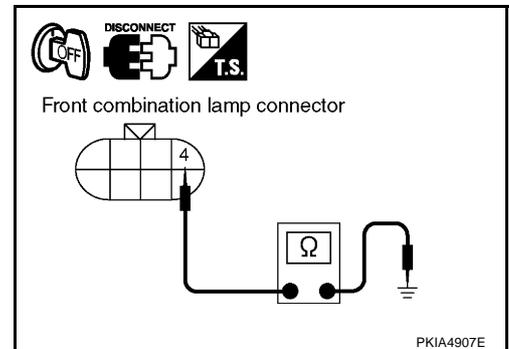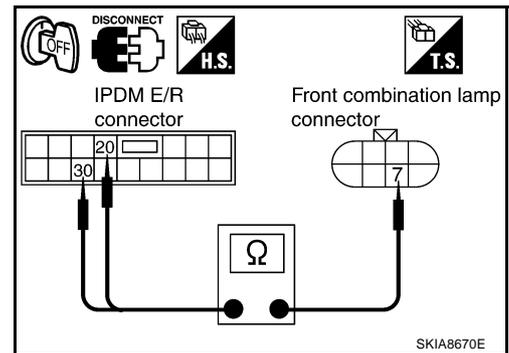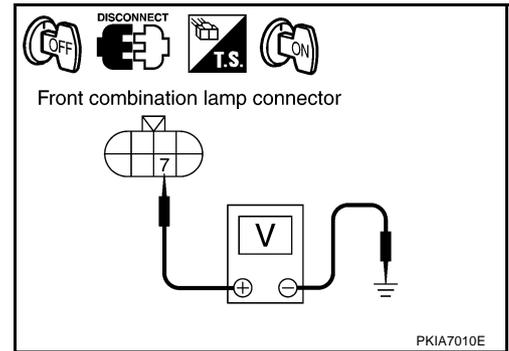

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Headlamps Does Not Turn OFF

NKS004XU

1. CHECK HEADLAMP TURN OFF

Make sure that lighting switch is OFF. And check if headlamp turns off when ignition switch is turned OFF.

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. CHECK COMBINATION SWITCH INPUT SIGNAL

CONSULT-III DATA MONITOR

1. Select "HEAD LAMP1" and "HEAD LAMP2" of BCM data monitor item.
2. With operating the lighting switch, check the monitor status.

When lighting switch is OFF : HEAD LAMP SW1 OFF
: HEAD LAMP SW2 OFF

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#) .
- NG >> Check combination switch (lighting switch). Refer to [LT-92, "Combination Switch Inspection"](#) .

3. CHECKING CAN COMMUNICATIONS BETWEEN BCM AND IPDM E/R

Perform self-diagnosis for "BCM" with CONSULT-III.

Display of self-diagnosis results

- NO DTC>> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#) .
- CAN COMM CIRCUIT>> Refer to [BCS-16, "CAN Communication Inspection Using CONSULT-III \(Self-Diagnosis\)"](#) .

General Information for Xenon Headlamp Trouble Diagnosis

NKS004XV

In most cases, malfunction of xenon headlamp - "does not illuminate", "flickers" or "dark" - is caused by a malfunctioning xenon bulb. A malfunctioning HID control unit or lamp housing, however, may be a cause. Be sure to perform trouble diagnosis following the steps described below.

Caution:

NKS004XW

- Installation or removal of connector must be done with lighting switch OFF.
- Disconnect the battery cable from the negative terminal or remove power fuse.

CAUTION:

After the battery cables are disconnected, never open/close the driver and/or front passenger door with the window in the full up position. The automatic window adjusting function will not work and the side roof panel may be damaged.

- When the lamp is illuminated (when lighting switch is ON), never touch harness, HID control unit, inside of lamp, or lamp metal parts.
- To check illumination, temporarily install lamp in vehicle. Be sure to connect power at vehicle side connector.
- If error can be traced directly to electrical system, first check for items such as blown fuses and fusible links, broken wires or loose connectors, dislocated terminals, and improper connections.
- Never work with wet hands.
- Using a tester for HID control unit circuit trouble diagnosis is prohibited.
- Disassembling HID control unit or harnesses (bulb socket harness, ECM harness) is prohibited.
- Immediately after illumination, light intensity and color will fluctuate, but there is nothing wrong.
- When bulb has come to end of its life, brightness will drop significantly, it will flash repeatedly, or light color will turn reddish.

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Xenon Headlamp Trouble Diagnosis

NKS004XX

1. CHECK 1: XENON HEADLAMP LIGHTING

Install normal xenon bulb to corresponding xenon bulb headlamp, and check if lamp lights up.

OK or NG

- OK >> Replace xenon bulb.
- NG >> GO TO 2.

2. CHECK 2: XENON HEADLAMP LIGHTING

Install normal HID control unit to corresponding xenon headlamp, and check if lamp lights up.

OK or NG

- OK >> Replace HID control unit.
- NG >> GO TO 3.

3. CHECK 3: XENON HEADLAMP LIGHTING


Install normal xenon lamp housing assembly to corresponding xenon headlamp, and check if lamp lights up.

OK or NG

- OK >> Replace xenon headlamp housing assembly. [Malfunction in starter (boosting circuit) in xenon headlamp housing]
- NG >> INSPECTION END

Aiming Adjustment

NKS004XY

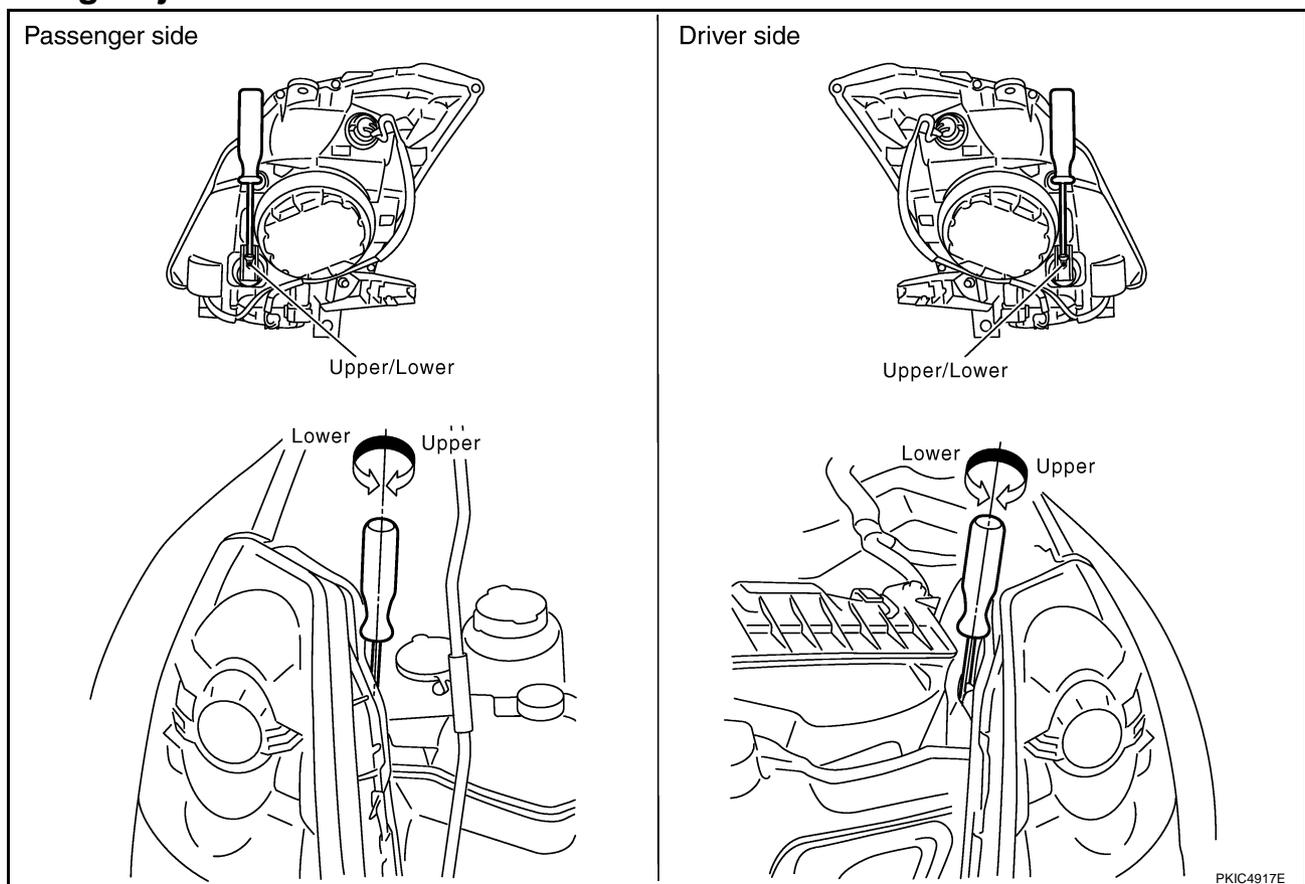

PREPARATION BEFORE ADJUSTING

For details, refer to the regulations in your own country.
Before performing aiming adjustment, check the following.

1. Keep all tires inflated to correct pressures.
2. Place vehicle on level surface.


HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

3. Set that there is no-load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant, engine oil filled up to correct level and full fuel tank.

LOW BEAM AND HIGH BEAM

1. Turn headlamp low beam ON.
2. Use adjusting screws to perform aiming adjustment.

ADJUSTMENT USING AN ADJUSTMENT SCREEN (LIGHT/DARK BORDERLINE)

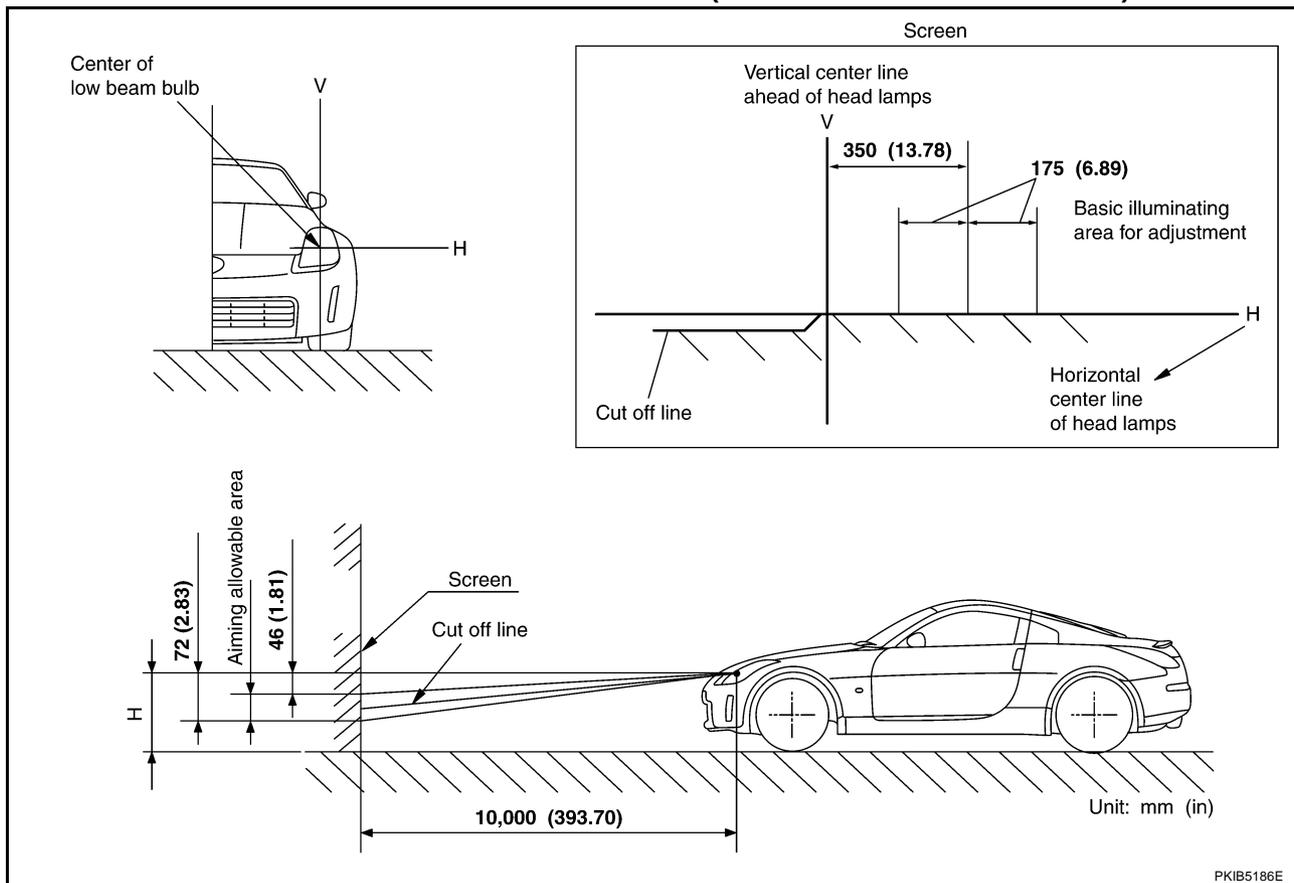

If the vehicle front body has been repaired and/or the headlamp assembly has been replaced, check aiming. Use the aiming chart shown in the figure.

- Basic illumination area for adjustment should be within the range shown on the aiming chart. Adjust headlamp accordingly.


Bulb Replacement HEADLAMP HIGH/LOW BEAM

1. Turn lighting switch OFF.
2. Open the driver and front passenger window, and then disconnect the battery cable from the negative terminal or remove power fuse.

CAUTION:

After the battery cables are disconnected, never open/close the driver and/or front passenger door with the window in the full up position. The automatic window adjusting function will not work and the side roof panel may be damaged.

3. Remove headlamp. Refer to [LT-62, "Removal and Installation"](#).
4. Turn plastic cap counterclockwise and unlock it.
5. Turn bulb socket counterclockwise and unlock it.
6. Unlock retaining spring and remove bulb from headlamp.
7. Installation is the reverse order of removal.

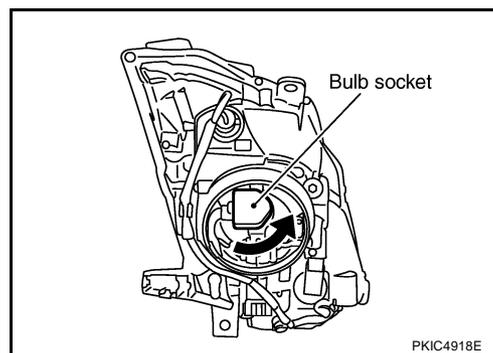

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

NOTE:

After installation, perform aiming adjustment. Refer to [LT-60, "Aiming Adjustment"](#) .

Headlamp high/low beam (Xenon) : 12V - 35W (D2R)

PARKING LAMP

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) .
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Installation is the reverse order of removal.

Parking lamp : 12V - 5W

FRONT TURN SIGNAL LAMP

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) .
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Installation is the reverse order of removal.

Front turn signal lamp/— : 12V - 28/8W (amber)

FRONT SIDE MARKER LAMP

1. Remove headlamp. Refer to [LT-62, "Removal and Installation"](#) .
2. Replacement integral with headlamp housing assembly.
3. Installation is reverse order of removal.

Front side marker lamp : LED

CAUTION:

After installing bulb, be sure to install plastic cap and bulb socket securely to insure watertightness.

Removal and Installation


REMOVAL

1. Open the driver and front passenger window, and then disconnect the battery cable from the negative terminal or remove power fuse.

CAUTION:

After the battery cables are disconnected, never open/close the driver and/or front passenger door with the window in the full up position. The automatic window adjusting function will not work and the side roof panel may be damaged.

2. Remove front bumper fascia. Refer to [EI-14, "FRONT BUMPER"](#) .
3. Remove headlamp mounting bolts.
4. Pull head lamp toward vehicle front, disconnect connector, and remove headlamp.

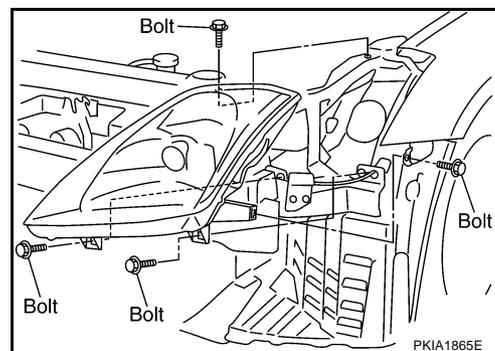

INSTALLATION

Installation is the reverse order of removal.

Headlamp mounting bolt  : 6.1N-m (0.62 kg-m, 54 in lb)

NOTE:


After installation, perform aiming adjustment. Refer to [LT-60, "Aiming Adjustment"](#) .

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Disassembly and Assembly

NKS004Y1

A
B
C
D
E
F
G
H
I
J
LT
L
M

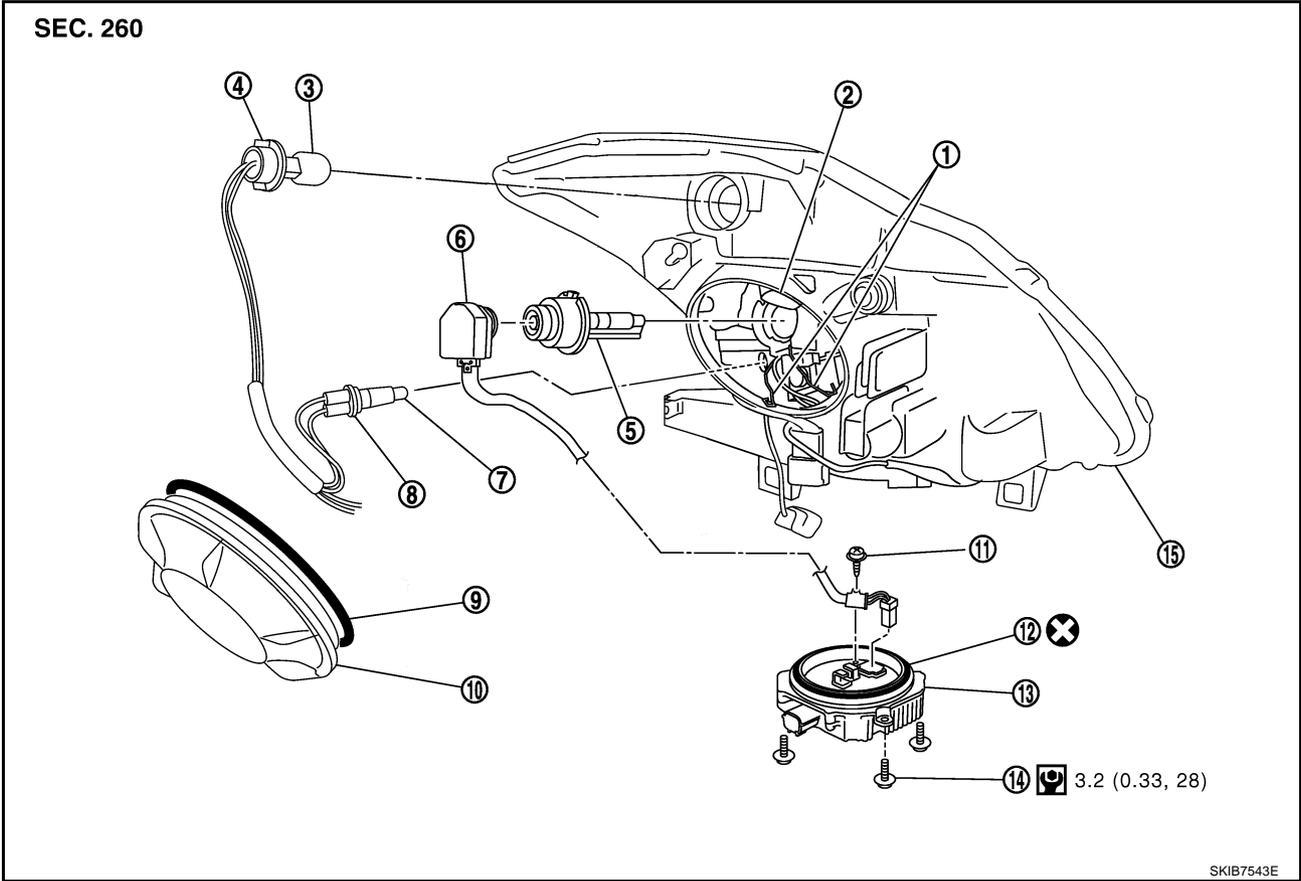

SKIB7543E

- | | | |
|---------------------------------------|-------------------------------------|--------------------------------|
| 1. Retaining spring | 2. Xenon bulb socket ground | 3. Front turn signal lamp bulb |
| 4. Front turn signal lamp bulb socket | 5. Xenon bulb | 6. Xenon bulb socket |
| 7. Parking lamp bulb | 8. Parking lamp bulb socket | 9. Seal packing |
| 10. Plastic cap | 11. Ground screw | 12. Seal packing |
| 13. HID control unit | 14. HID control unit mounting screw | 15. Headlamp housing assembly |

:N·m (kg·m, in·lb)

: Always replace after every disassembly.

DISASSEMBLY

1. Turn plastic cap counterclockwise, and unlock it.
2. Turn xenon bulb socket counterclockwise, and unlock it.
3. Unlock retaining spring, and remove xenon bulb.
4. Disconnect xenon bulb socket ground.
5. Remove HID control unit mounting screws.
6. Remove ground screw from HID control unit.
7. Disconnect connectors from HID control unit.
8. Pull out xenon bulb socket from head lamp housing assembly.
9. Turn parking lamp bulb socket counterclockwise and unlock it.
10. Remove parking lamp bulb from its socket.
11. Turn front turn signal lamp bulb socket counterclockwise and unlock it.
12. Remove front turn signal lamp bulb from its socket.

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

ASSEMBLY

Assembly is the reverse order of disassembly.


HID control unit mounting screw  : 3.2 N·m (0.33 kg-m, 28 in-lb)

CAUTION:

- When HID control unit is removed, reinstall it securely and avoid any looseness.
- After installing bulb, be sure to install plastic cap and bulb socket securely to insure watertightness


Serving to Replace Headlamps When Damaged

If only installation part as shown in the figure is damaged, and headlamp housing itself is not damaged, repair can be completed easily by installing correction brackets.

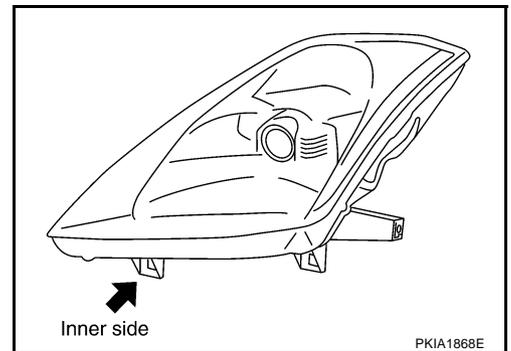

INSTALLATION OF HEADLAMP BRACKET

1. Remove headlamps. Refer to [LT-62, "Removal and Installation"](#).
2. Cut damaged section of installation part, then shape with sandpaper.
3. Attach each correction bracket to headlamp housing boss with 2 screws.

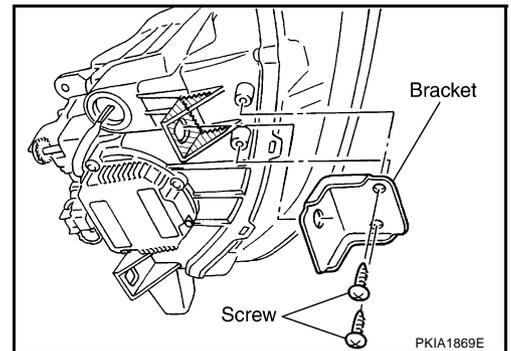


TURN SIGNAL AND HAZARD WARNING LAMPS

TURN SIGNAL AND HAZARD WARNING LAMPS

PF26120

Component Parts and Harness Connector Location

NKS004Y3

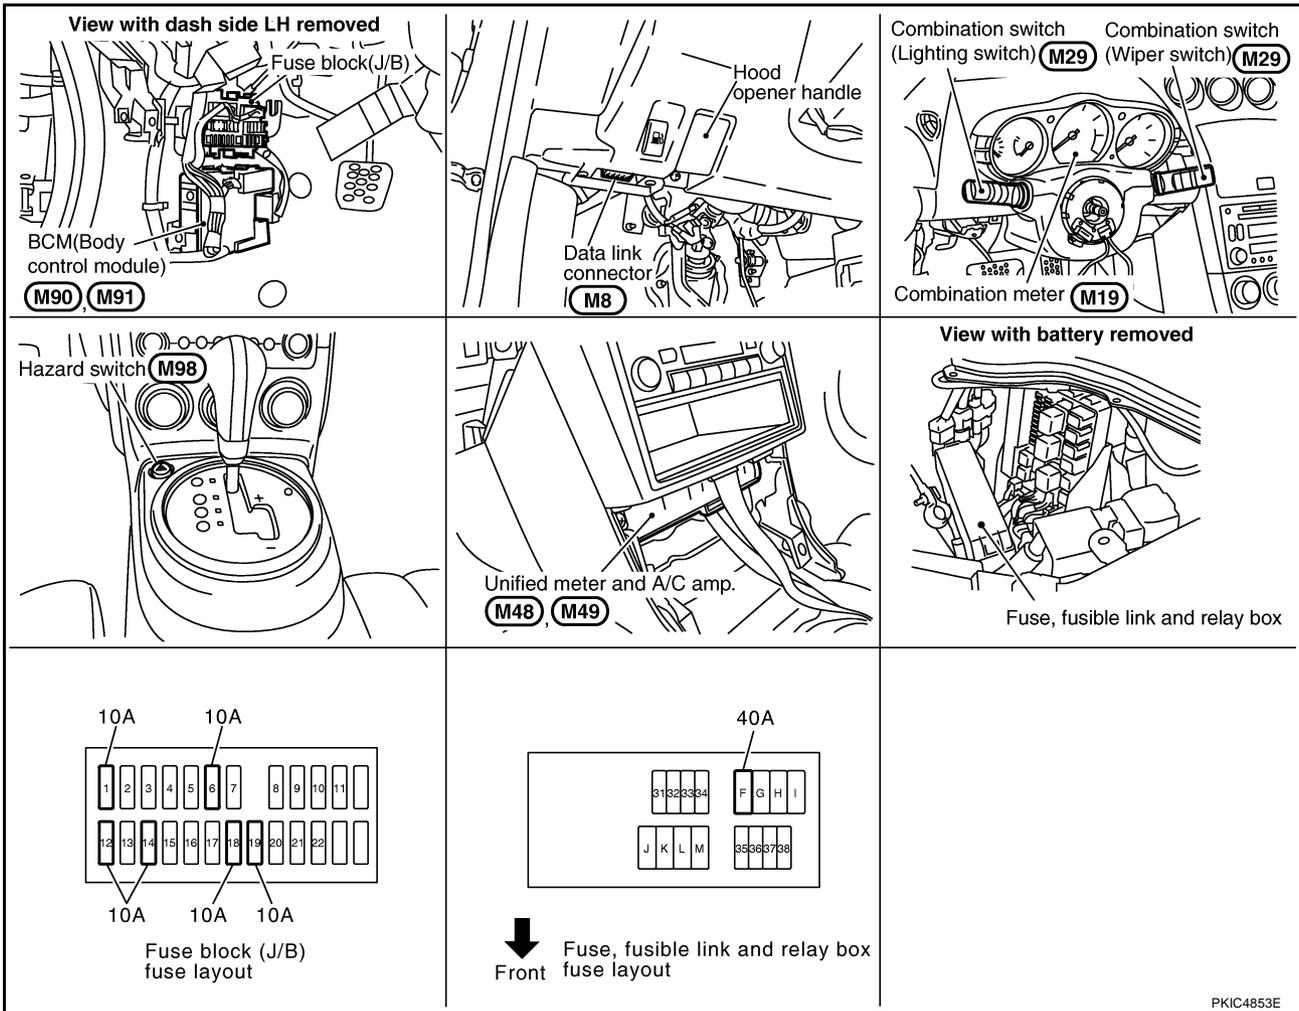

PKIC4853E

System Description TURN SIGNAL OPERATION

NKS004Y4

When the ignition switch is in ON or START position, power is supplied

- through 10A fuse [No.1, located in fuse block (J/B)]
- to BCM (body control module) terminal 38,
- through 10A fuse [No.12, located in fuse block (J/B)]
- to unified meter and A/C amp. terminal 22,
- through 10A fuse [No.14, located in fuse block (J/B)]
- to combination meter terminal 23.

Ground is supplied

- to BCM terminal 52
- to unified meter and A/C amp. terminals 29 and 30, and
- to combination meter terminals 10, 11 and 12
- through grounds M30 and M66.

LH Turn Signal Lamp

When the turn signal switch is moved to the left position, the BCM receives left turn signal by combination switch reading function (Refer to [BCS-3. "COMBINATION SWITCH READING FUNCTION"](#)). Power is supplied

- through BCM terminal 45
- to front combination lamp LH terminal 2

A
B
C
D
E
F
G
H
I
J

LT

L
M

TURN SIGNAL AND HAZARD WARNING LAMPS

- to rear combination lamp LH terminal 2.

Ground is supplied

- to front combination lamp LH terminal 8
- through grounds E17, E43 and B102 (with VDC system, navigation system or telephone)
- through grounds E17, E43 and F152 (without VDC system, navigation system and telephone),
- to rear combination lamp LH terminal 4
- through grounds B5, B6, D105 and T14 (Coupe models)
- through grounds B5, B6 and T14 (Roadster models).

The BCM also supplies ground to unified meter and A/C amp. terminals 1 and 11 through the CAN communication lines. This input signal is processed by the unified meter control unit in the combination meter through unified meter and A/C amp., which in turn supplies ground to left turn signal indicator lamp.

With the power and ground supplied, BCM controls the flashing of LH turn signal lamps.

RH Turn Signal Lamp

When the turn signal switch is moved to the right position, the BCM receives right turn signal by combination switch reading function (Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#)). Power is supplied

- through BCM terminal 46
- to front combination lamp RH terminal 2
- to rear combination lamp RH terminal 2.

Ground is supplied

- to front combination lamp RH terminal 8
- through grounds E17, E43 and B102 (with VDC system, navigation system or telephone)
- through grounds E17, E43 and F152 (without VDC system, navigation system and telephone),
- to rear combination lamp RH terminal 4
- through grounds B5, B6, D105 and T14 (Coupe models)
- through grounds B5, B6 and T14 (Roadster models).

The BCM also supplies ground to unified meter and A/C amp. terminals 1 and 11 through CAN communication lines. This input signal is processed by unified meter control unit in combination meter through unified meter and A/C amp., which in turn supplies ground to the right turn signal indicator lamp.

With power and ground supplied, BCM controls the flashing of RH turn signal lamps.

HAZARD WARNING LAMP OPERATION

Power is supplied at all times

- through 40A fusible link (letter F, located in fuse, fusible link and relay box)
- to BCM terminal 55,
- through 10A fuse [No. 18, located in fuse block (J/B)]
- to BCM terminal 42,
- through 10A fuse [No. 19, located in fuse block (J/B)]
- to combination meter terminal 24, and
- to unified meter and A/C amp. terminal 21.

Ground is supplied

- to BCM terminals 52
- to unified meter and A/C amp. terminals 29 and 30, and
- to combination meter terminals 10, 11 and 12
- through grounds M30 and M66.

When the hazard switch is depressed, power is supplied

- through BCM terminal 29
- to hazard lamp switch terminal 2.

Ground is supplied

- through hazard lamp switch terminal 1
- to grounds M30 and M66.

TURN SIGNAL AND HAZARD WARNING LAMPS

The BCM then supplies power

- through BCM terminal 45
- to front combination lamp LH terminal 2
- to rear combination lamp LH terminal 2,
- through BCM terminal 46
- to front combination lamp RH terminal 2
- to rear combination lamp RH terminal 2.

Ground is supplied

- to front combination lamp LH terminal 8, and
- to front combination lamp RH terminal 8
- through grounds E17, E43 and B102 (with VDC system, navigation system or telephone)
- through grounds E17, E43 and F152 (without VDC system, navigation system and telephone),
- to rear combination lamp LH terminal 4, and
- to rear combination lamp RH terminal 4
- through grounds B5, B6, D105 and T14 (Coupe models)
- through grounds B5, B6 and T14 (Roadster models).

The BCM also supplies input to unified meter and A/C amp. terminals 1 and 11 through the CAN communication lines. This input signal is processed by the unified meter control unit in the combination meter through the unified meter and A/C amp., which in turn supplies ground to the left and right turn signal indicator lamps. With the power and ground supplied, BCM controls the flashing of hazard warning lamps.

REMOTE KEYLESS ENTRY SYSTEM OPERATION

Refer to [BL-59, "REMOTE KEYLESS ENTRY SYSTEM"](#) .

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

CAN Communication System Description

NKS004Y5

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit


NKS004Y6

Refer to [LAN-48, "CAN System Specification Chart"](#) .

TURN SIGNAL AND HAZARD WARNING LAMPS

Schematic

NKS004Y7

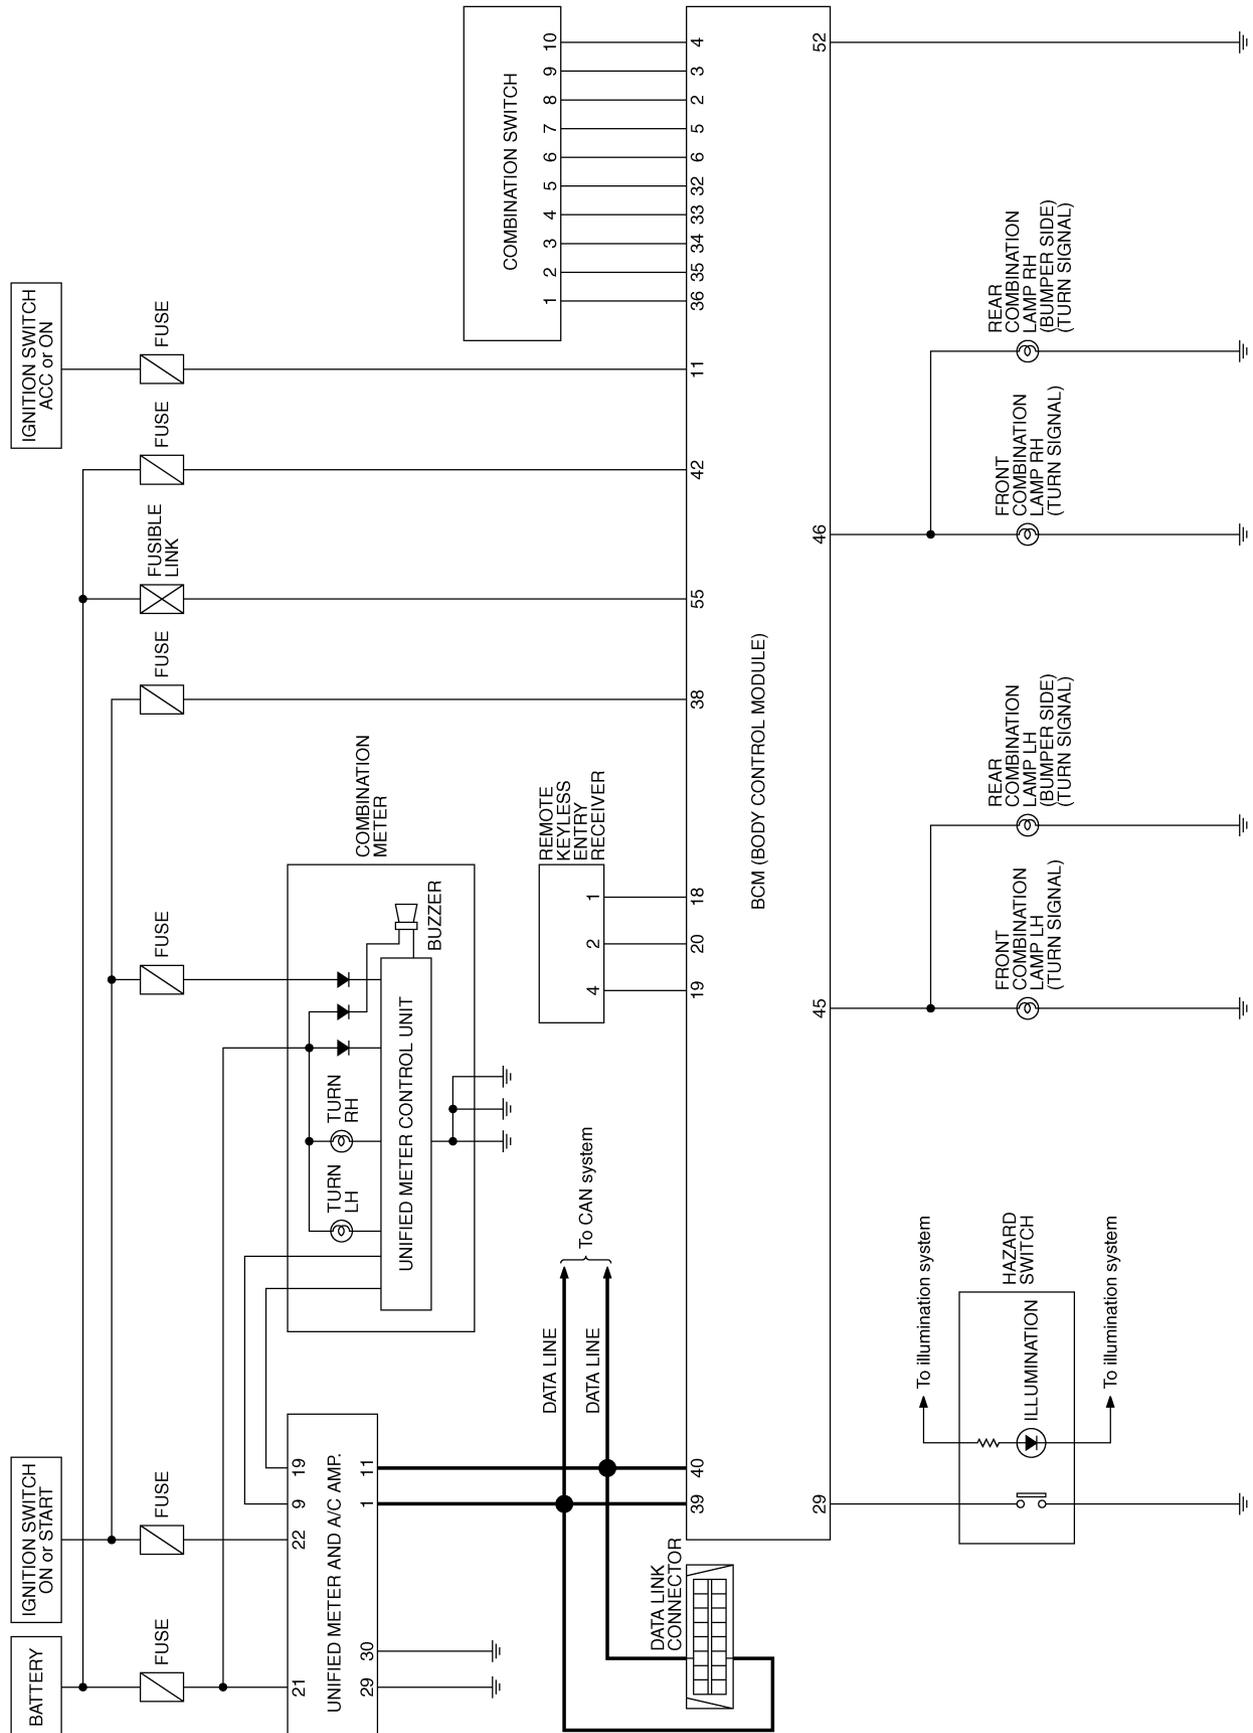


TKWT2278E

TURN SIGNAL AND HAZARD WARNING LAMPS

Wiring Diagram — TURN — COUPE MODELS

NKS004Y8

LT-TURN-01

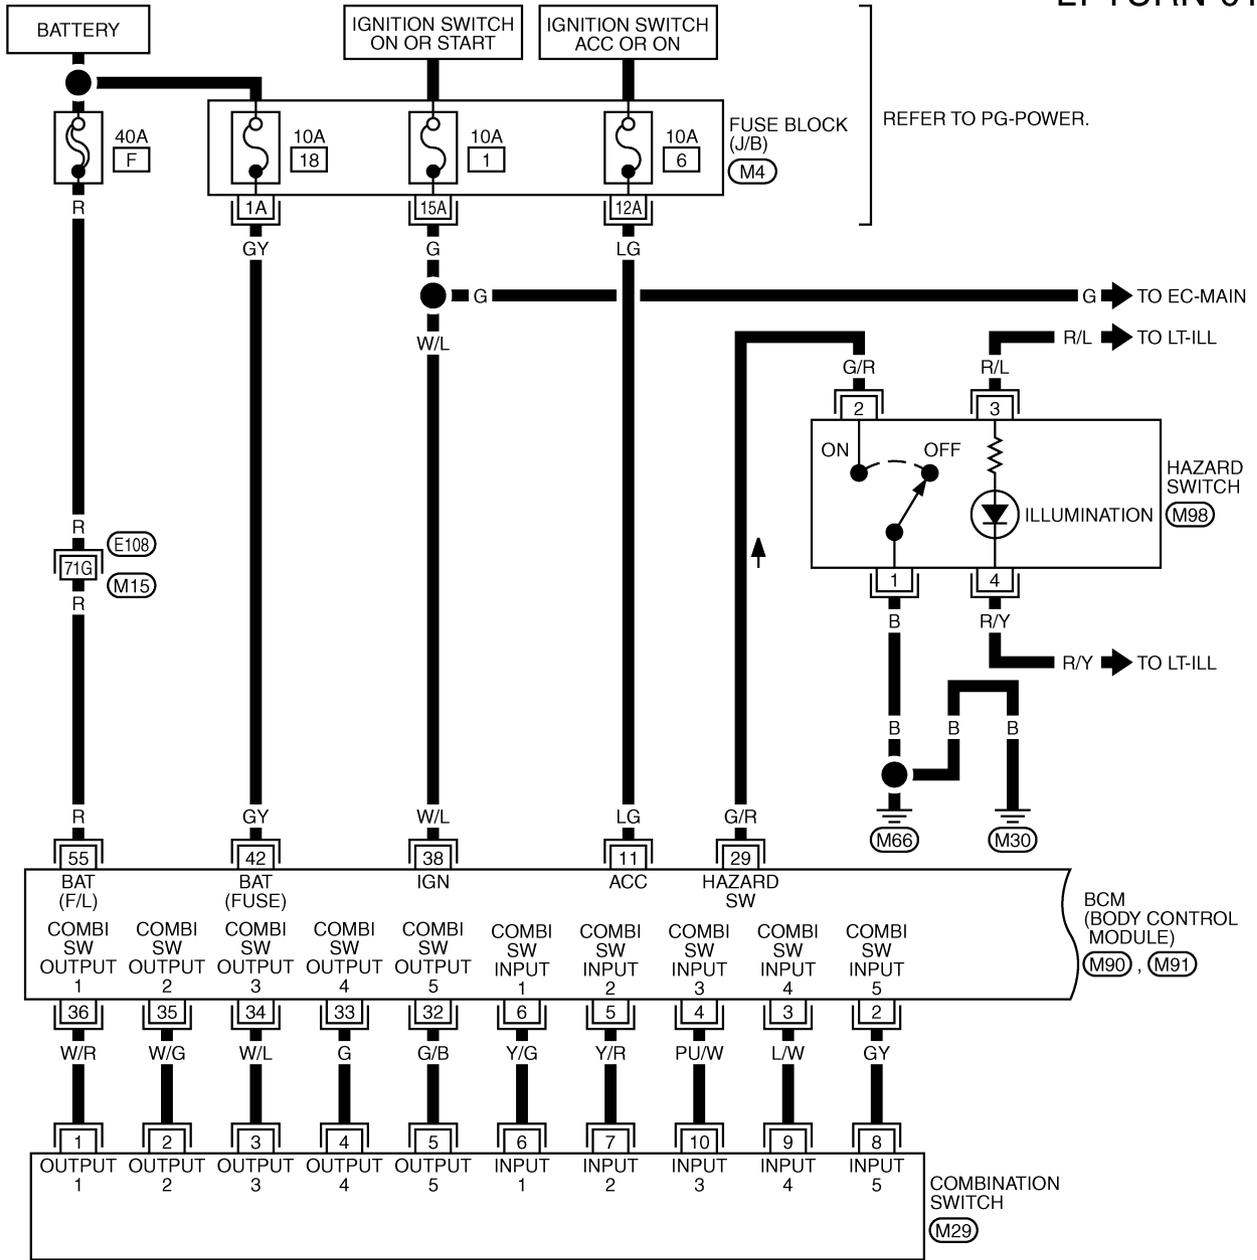

REFER TO THE FOLLOWING.

- (E108) -SUPER MULTIPLE JUNCTION (SMJ)
- (M4) -FUSE BLOCK-JUNCTION BOX (J/B)
- (M90) , (M91) -ELECTRICAL UNITS

A
B
C
D
E
F
G
H
I
J
LT
L
M






TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-02

: WITH VDC SYSTEM,
NAVIGATION SYSTEM OR TELEPHONE

: WITHOUT VDC SYSTEM,
NAVIGATION SYSTEM AND TELEPHONE

BCM
(BODY
CONTROL
MODULE)
(M91)

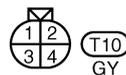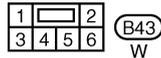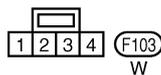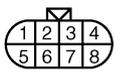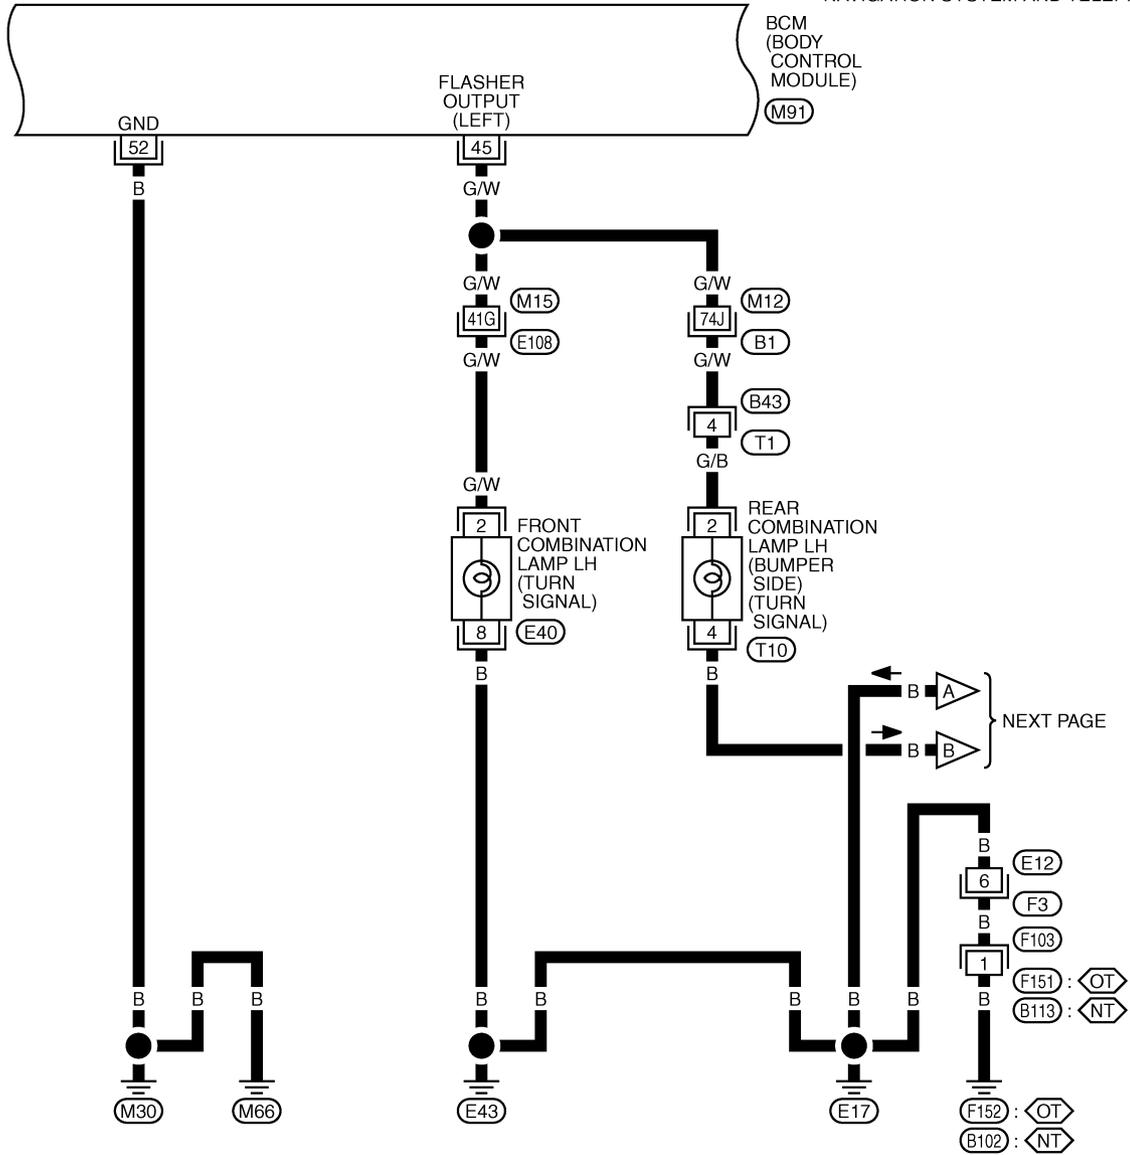

REFER TO THE FOLLOWING.

, -SUPER MULTIPLE
JUNCTION (SMJ)



-ELECTRICAL UNITS

TKWT5752E

TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-03

▬▬▬▬ : DATA LINE

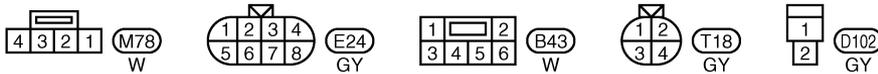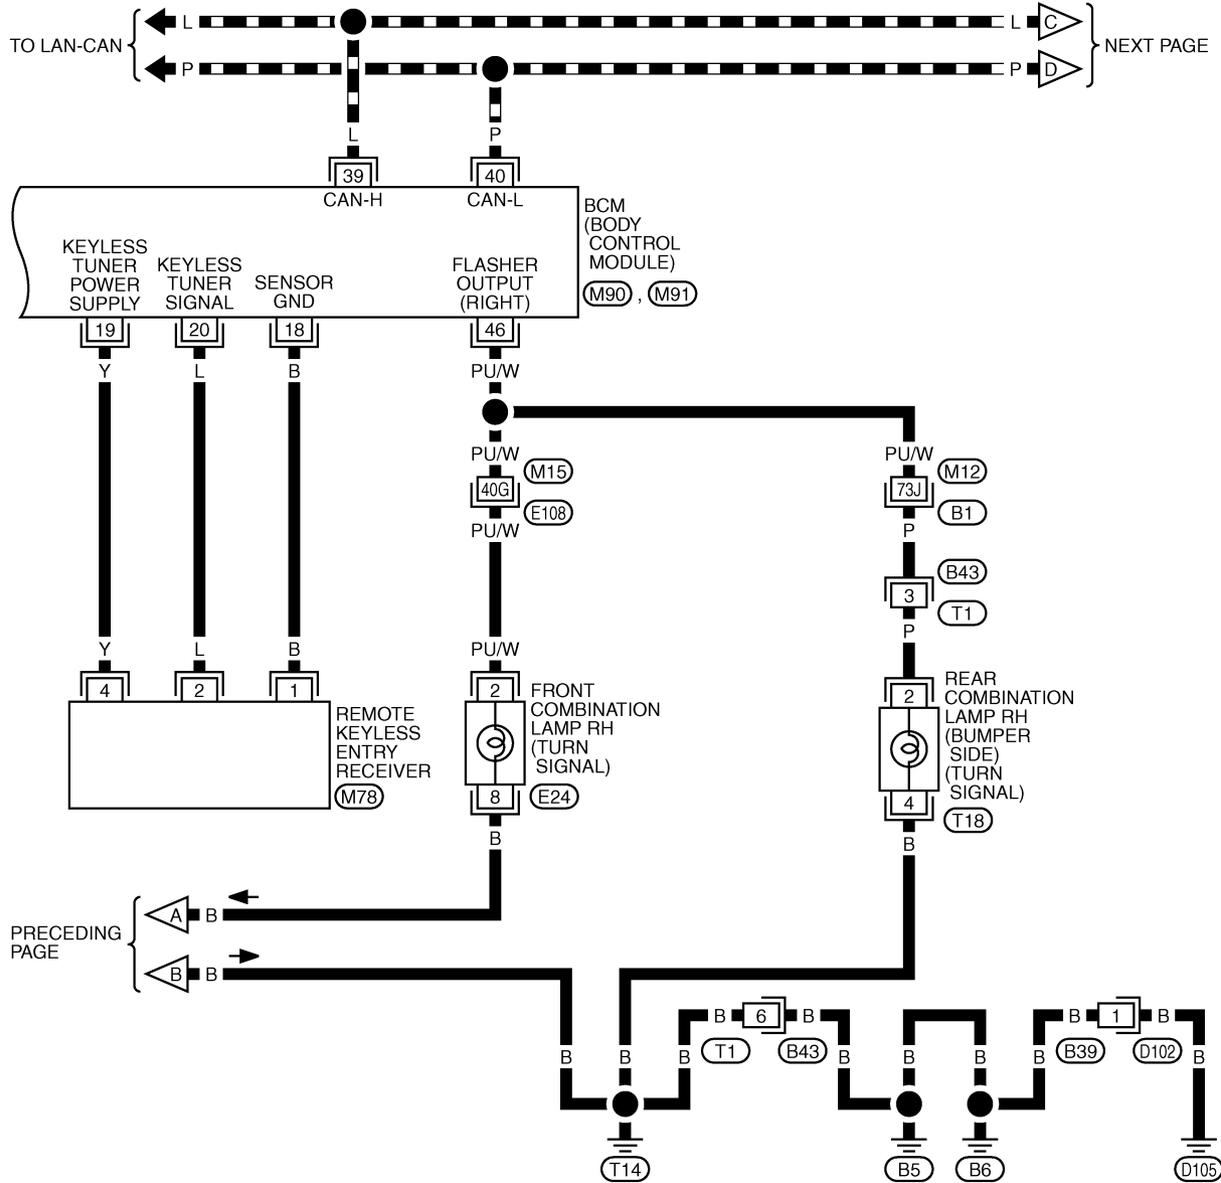



REFER TO THE FOLLOWING.
 (E108), (B1) -SUPER MULTIPLE JUNCTION (SMJ)
 (M90), (M91) -ELECTRICAL UNITS

TKWT4032E

TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-04

▬ : DATA LINE

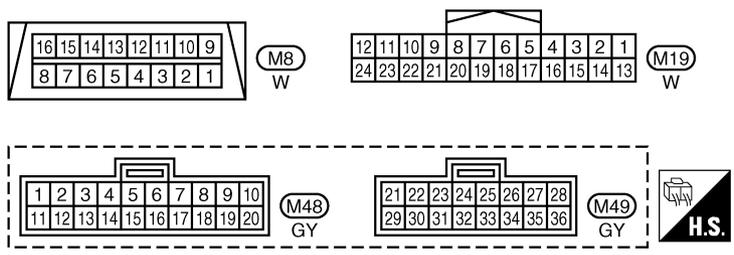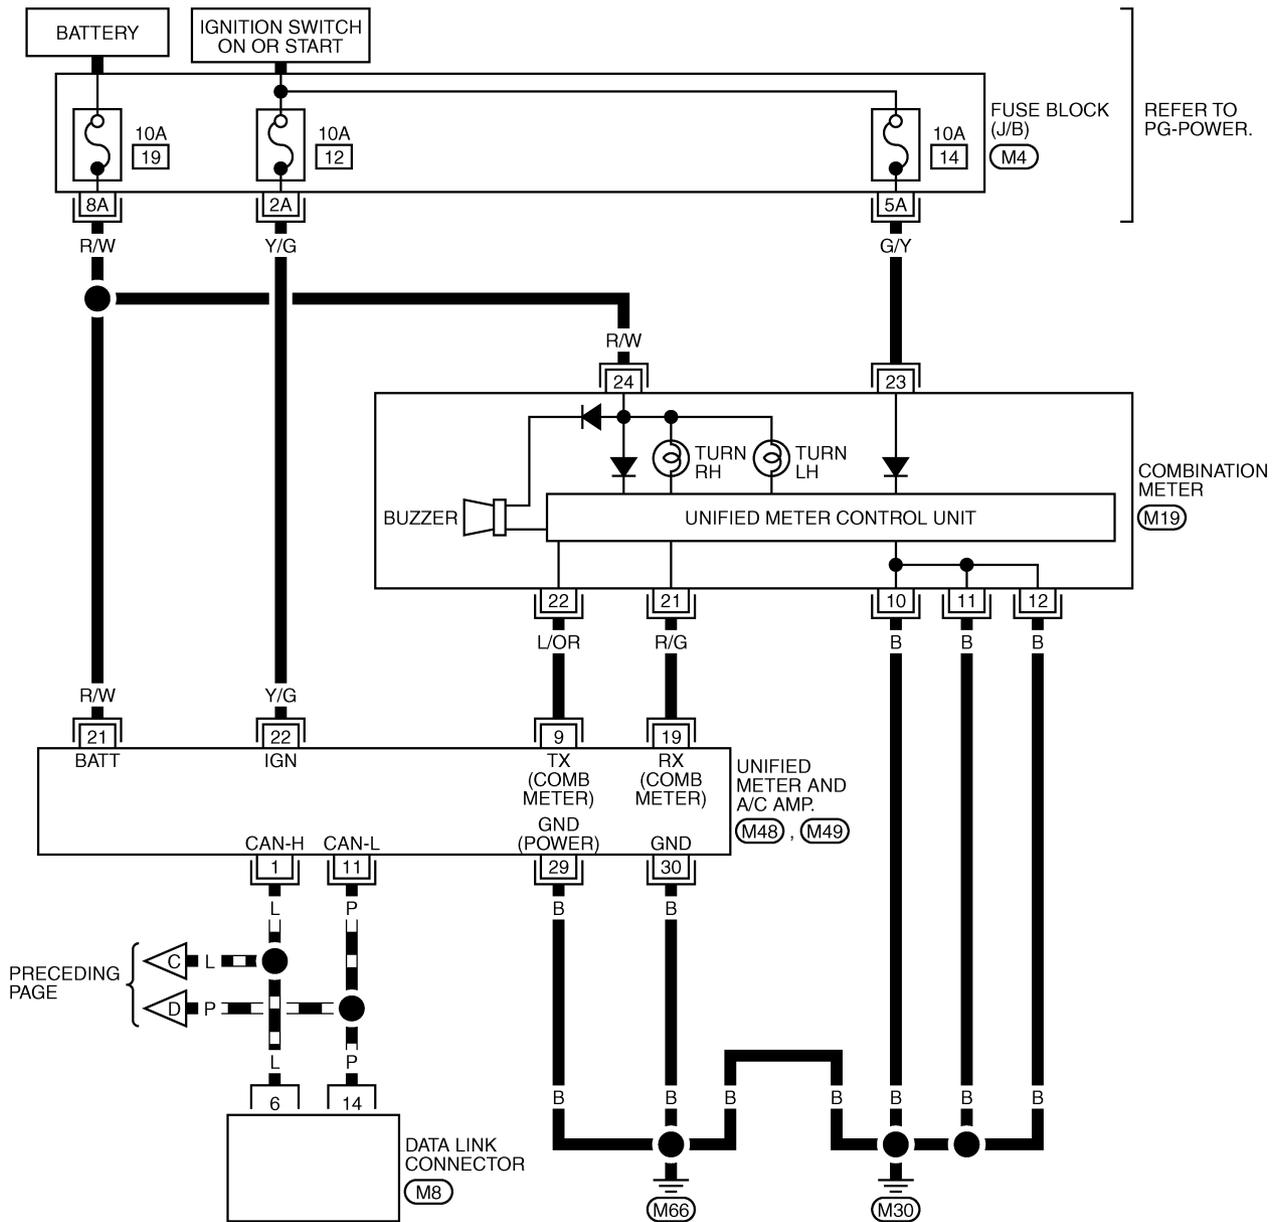




REFER TO THE FOLLOWING.
 (M4) -FUSE BLOCK-JUNCTION BOX (J/B)

TKWT2281E

TURN SIGNAL AND HAZARD WARNING LAMPS

ROADSTER MODELS

LT-TURN-05

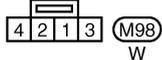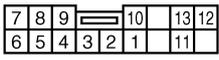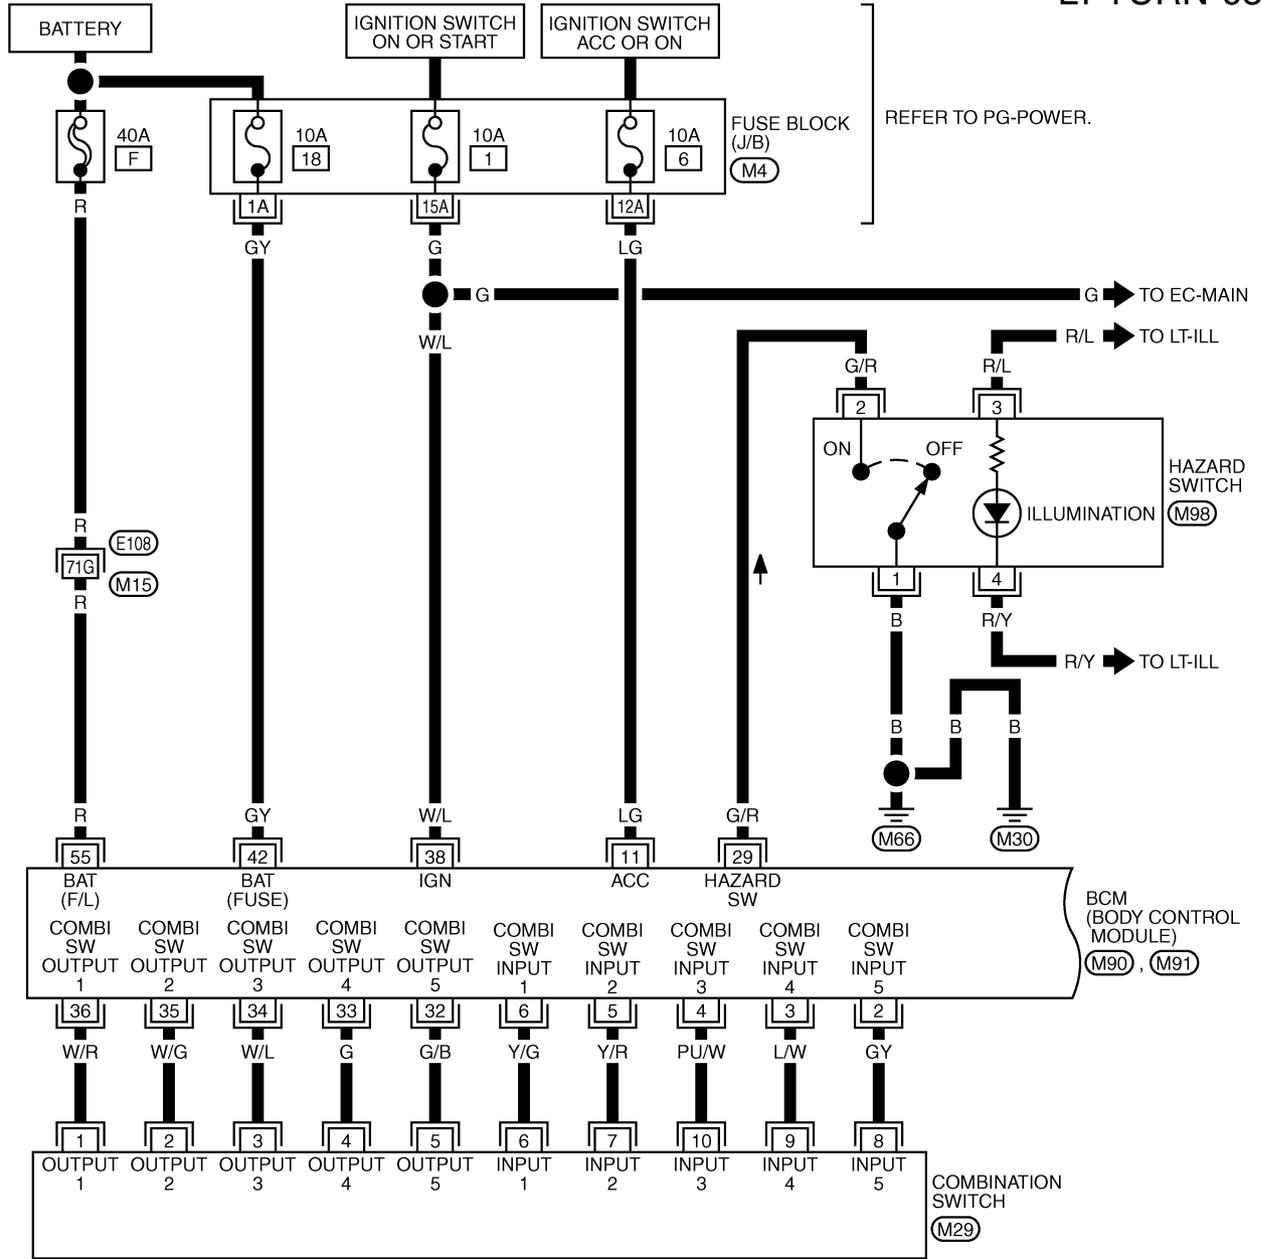

REFER TO THE FOLLOWING.

- (E108) -SUPER MULTIPLE JUNCTION (SMJ)
- (M4) -FUSE BLOCK-JUNCTION BOX (J/B)
- (M90), (M91) -ELECTRICAL UNITS



A
B
C
D
E
F
G
H
I
J
LT
L
M

TURN SIGNAL AND HAZARD WARNING LAMPS


LT-TURN-06

 : WITH VDC SYSTEM OR NAVIGATION SYSTEM

 : WITHOUT VDC SYSTEM AND NAVIGATION SYSTEM

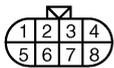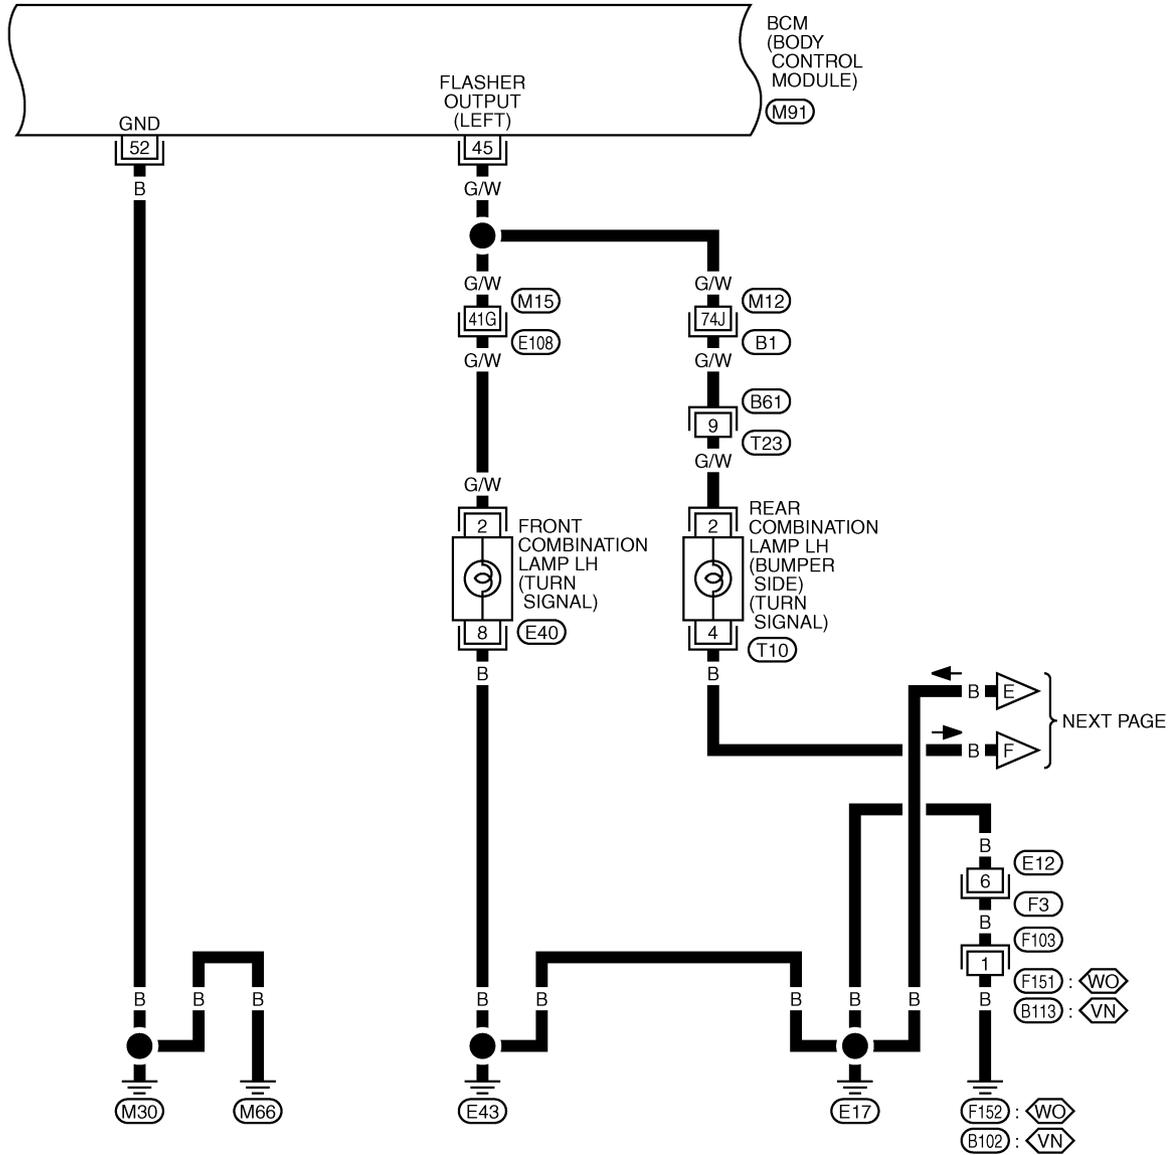


E40 : GY
F3 : B

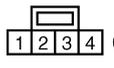

F103 : W



B61 : W

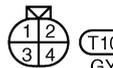

T10 : GY

REFER TO THE FOLLOWING.

 ,  -SUPER MULTIPLE JUNCTION (SMJ)





 -ELECTRICAL UNITS

TKWT5583E

TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-07

▬▬▬ : DATA LINE

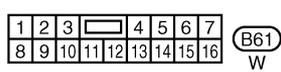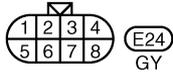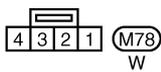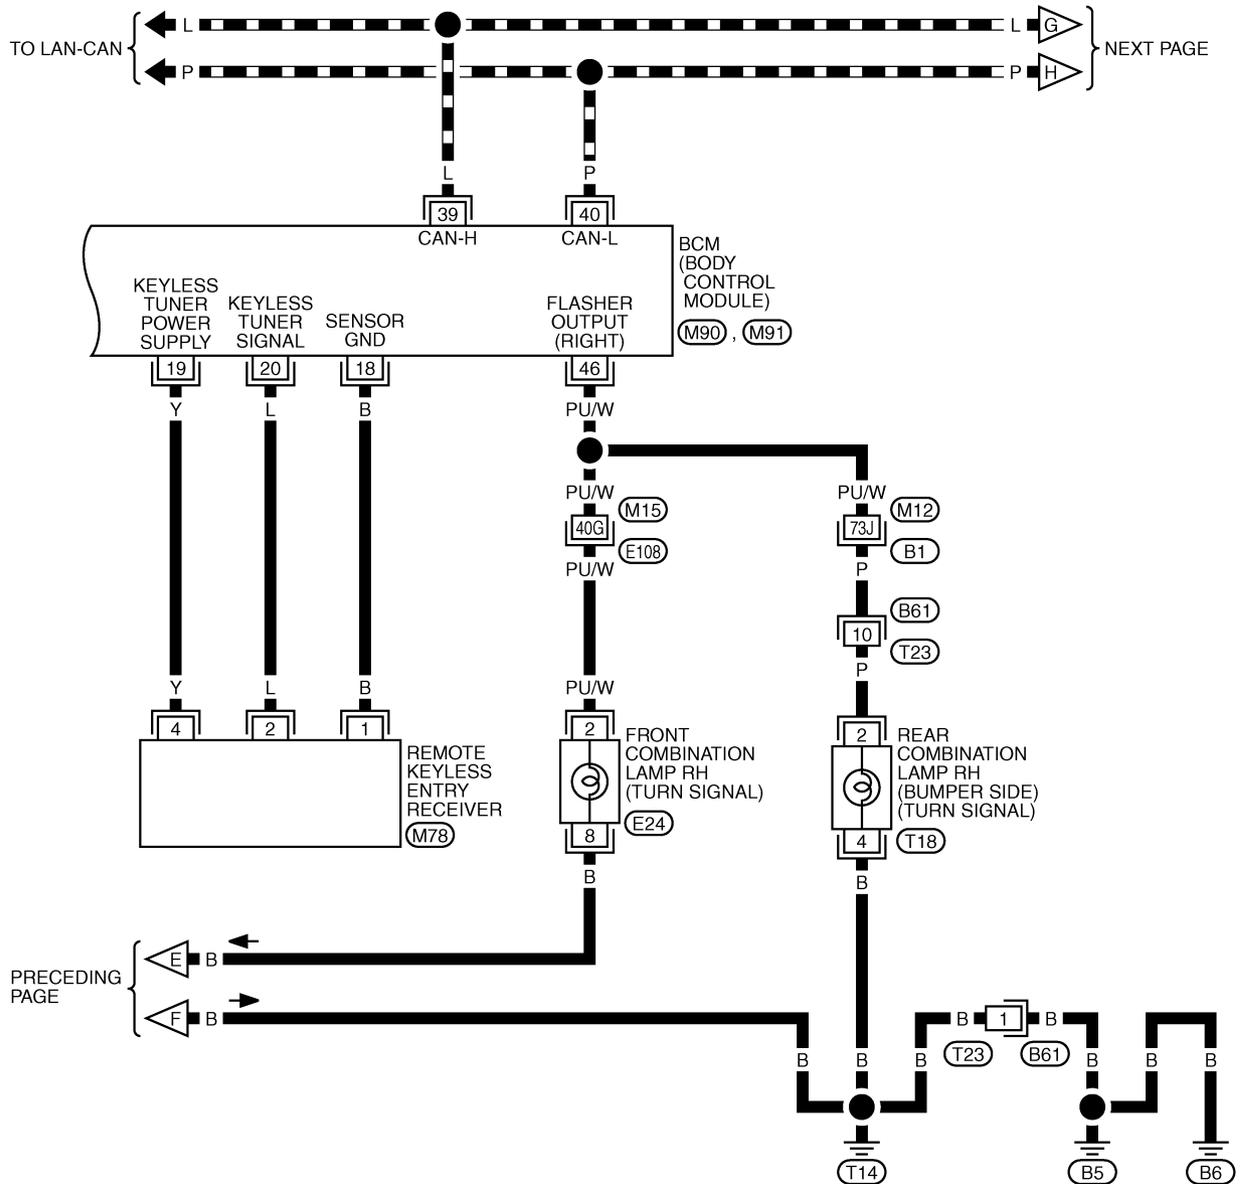



REFER TO THE FOLLOWING.
 (E108), (B1) -SUPER MULTIPLE JUNCTION (SMJ)
 (M90), (M91) -ELECTRICAL UNITS

TKWT4035E

TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-08

▬ : DATA LINE

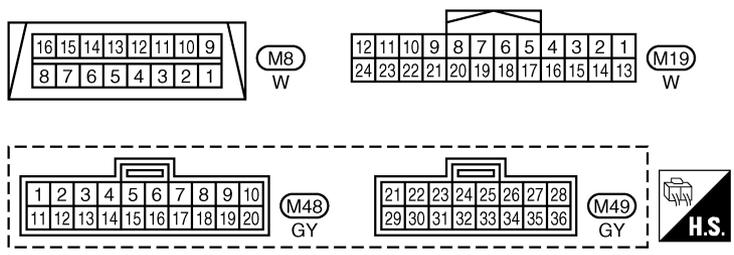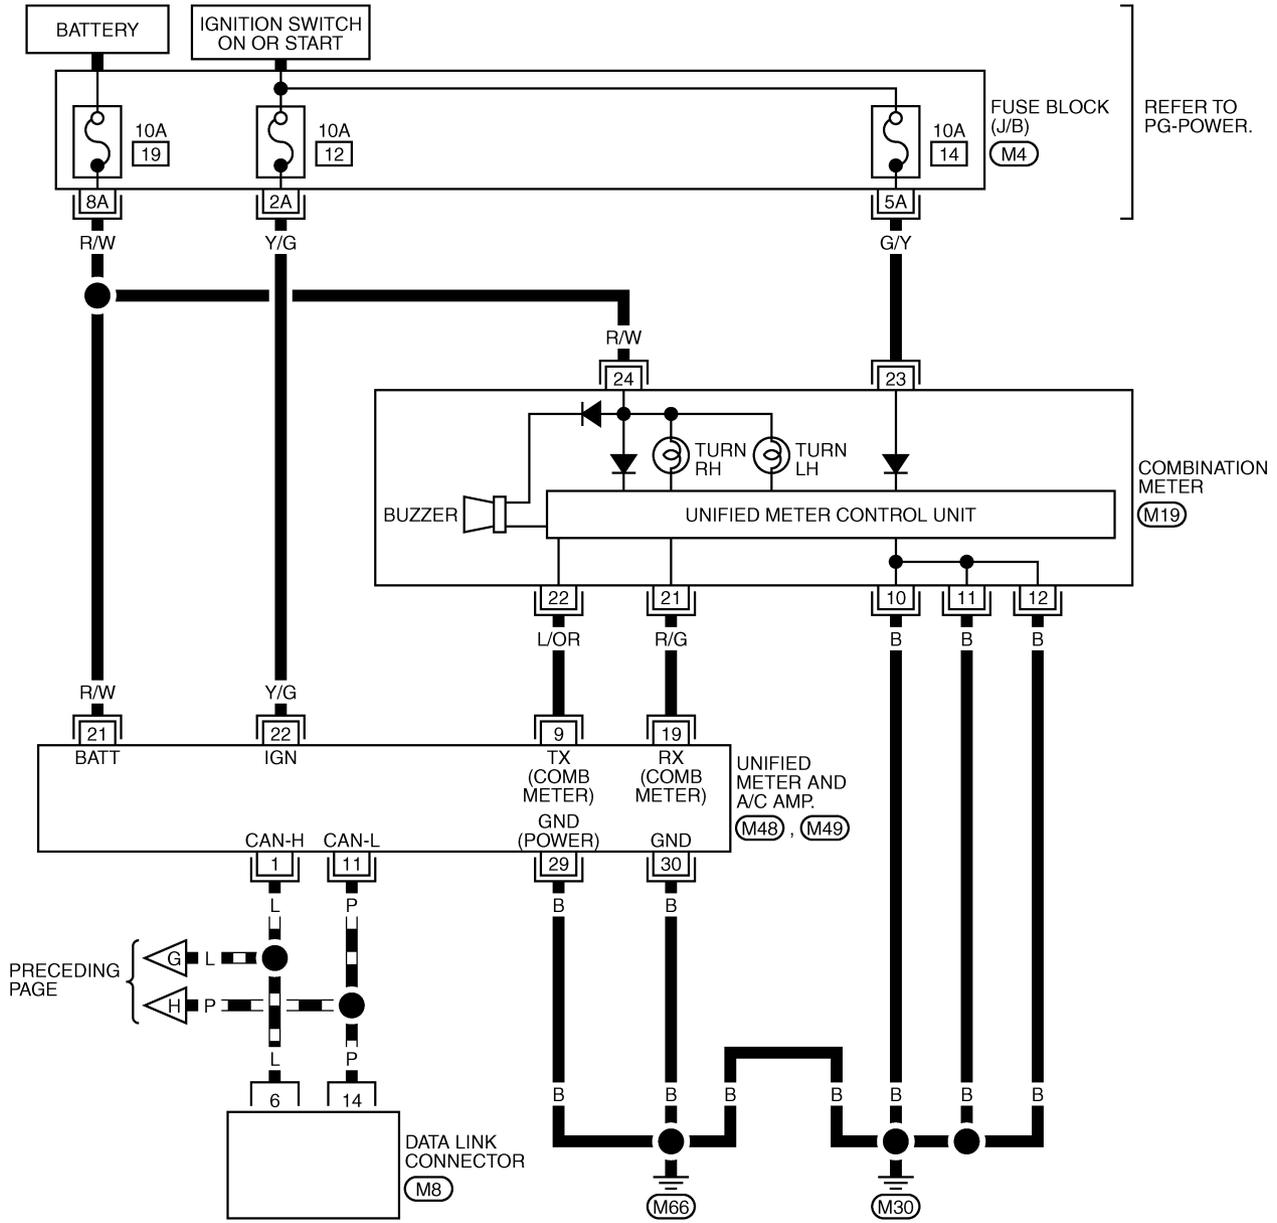

REFER TO THE FOLLOWING.
 (M4) - FUSE BLOCK-JUNCTION BOX (J/B)

TKWT2284E

TURN SIGNAL AND HAZARD WARNING LAMPS

Terminals and Reference Values for BCM



NKS004Y9

CAUTION:

- Check combination switch system terminal waveform under the loaded condition with lighting switch, turn signal switch and wiper switch OFF not to be fluctuated by overloaded.
- Turn wiper dial position to 4 except when checking waveform or voltage of wiper dial position. Wiper dial position can be confirmed on CONSULT-III. Refer to [LT-91, "DATA MONITOR"](#).

Terminal No.	Wire color	Signal name	Measuring condition		Reference value	
			Ignition switch	Operation or condition		
2	GY	Combination switch input 5	ON	Lighting, turn, wiper switch (Wiper intermittent dial position 4)	OFF	Approx. 0 V
					Turn signal switch to right	<p>Approx. 1.0 V</p>
3	L/W	Combination switch input 4	ON	Lighting, turn, wiper switch (Wiper intermittent dial position 4)	OFF	Approx. 0 V
					Turn signal switch to left	<p>Approx. 1.0 V</p>
11	LG	Ignition switch (ACC)	ACC	—	Battery voltage	
29	G/R	Hazard signal	OFF	Hazard switch	OFF	Battery voltage
					ON	Approx. 0 V
36	W/R	Combination switch output 1	ON	Lighting, turn, wiper switch (Wiper intermittent dial position 4)	OFF	<p>Approx. 7.2 V</p>
					Any of the conditions below	<p>Approx. 1.2 V</p>
38	W/L	Ignition switch (ON)	ON	—	Battery voltage	
39	L	CAN - H	—	—	—	
40	P	CAN - L	—	—	—	

TURN SIGNAL AND HAZARD WARNING LAMPS

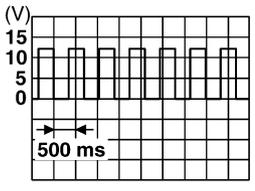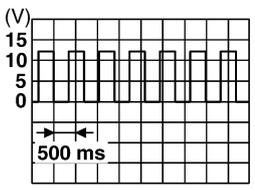Terminal No.	Wire color	Signal name	Measuring condition			Reference value
			Ignition switch	Operation or condition		
42	GY	Battery power supply	OFF	—		Battery voltage
45	G/W	Turn signal (left)	ON	Combination switch	Turn left ON	 <small>SKIA3009J</small>
46	PU/W	Turn signal (right)	ON	Combination switch	Turn right ON	 <small>SKIA3009J</small>
52	B	Ground	ON	—		Approx. 0V
55	R	Battery power supply	OFF	—		Battery voltage

How to Proceed With Trouble Diagnosis

NKS004YA

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-65, "System Description"](#) .
3. Perform preliminary check. Refer to [LT-79, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do turn signal and hazard warning lamps operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END

TURN SIGNAL AND HAZARD WARNING LAMPS

NKS004YB

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES AND FUSIBLE LINK

Check for blown fuses and fusible link.

UNIT	POWER SOURCE	Fuse and fusible link No.
BCM	Battery	F
		18
	Ignition switch ON or START position	1
	Ignition switch ACC or ON position	6

Refer to [LT-69, "Wiring Diagram — TURN —"](#) .

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector terminals and ground.

Terminals		(-)	Ignition switch position	
(+)			OFF	ON
BCM connector	Terminal	Ground	OFF	ON
M90	38		Approx. 0 V	Battery voltage
M91	42		Battery voltage	Battery voltage
	55	Battery voltage	Battery voltage	

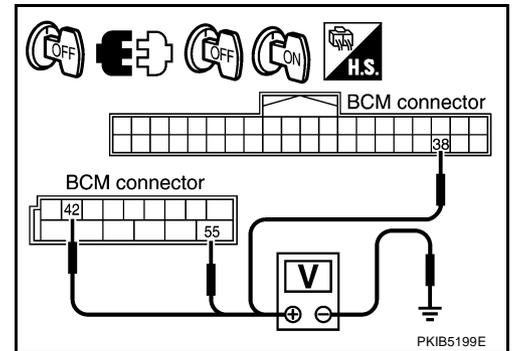

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector terminal and ground.

BCM connector	Terminal	Ground	Continuity
M91	52		Yes

OK or NG

OK >> INSPECTION END

NG >> Repair harness or connector.

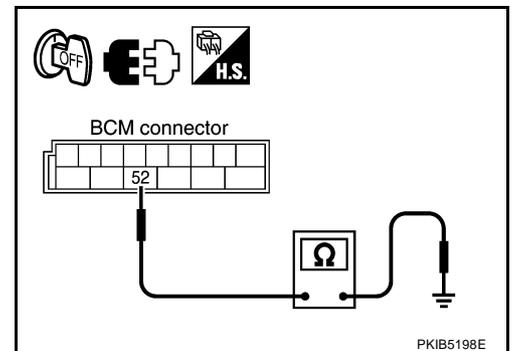

TURN SIGNAL AND HAZARD WARNING LAMPS

CONSULT-III Function (BCM)

NKS004YC

CONSULT-III can display each diagnostic item using the diagnostic test mode shown following.

BCM diagnosis part	Diagnosis mode	Description
FLASHER	DATA MONITOR	Displays BCM input data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending driving signal to them.

DATA MONITOR

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from ignition switch signal.
HAZARD SW "ON/OFF"	Displays "Hazard ON (ON)/Hazard OFF (OFF)" status, determined from hazard switch signal.
TURN SIGNAL R "ON/OFF"	Displays "Turn right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays "Turn left (ON)/Other (OFF)" status, determined from lighting switch signal.
BRAKE SW ^{NOTE} "OFF"	—

NOTE:

This item is displayed, but cannot be monitored.

ACTIVE TEST

Display Item List

Test item	Description
FLASHER	With a certain operation (OFF, RH, LH), turn signal lamp can be operated.

TURN SIGNAL AND HAZARD WARNING LAMPS

NKS004YD

Turn Signal Lamp Does Not Operate

1. CHECK BULB

Check bulb standard of each turn signal lamp is correct.

OK or NG

- OK >> GO TO 2.
- NG >> Replace turn signal lamp bulb.

2. CHECK COMBINATION SWITCH INPUT SIGNAL

CONSULT-III DATA MONITOR

1. Select "TURN SIGNAL R" and "TURN SIGNAL L" of BCM data monitor item.
2. With operating the lighting switch, check the monitor status.

**When lighting switch is : TURN SIGNAL R ON
TURN RH position**

**When lighting switch is : TURN SIGNAL L ON
TURN LH position**

CHECK COMBINATION SWITCH

Refer to [LT-92, "Combination Switch Inspection"](#).

OK or NG

- OK >> GO TO 3.
- NG >> Check combination switch (lighting switch). Refer to [LT-92, "Combination Switch Inspection"](#).

3. ACTIVE TEST

CONSULT-III ACTIVE TEST

1. Select "FLASHER" of BCM active test item.
2. With operating the test item, check the turn signal lamp operation.

Turn signal lamp should operate.

GO TO 4

OK or NG

- OK >> Replace BCM. Refer to [BCS-17, "Removal and Installation of BCM"](#).
- NG >> GO TO 4.


4. CHECK SHORT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and all turn signal lamp connectors.
3. Check continuity (short circuit) between BCM harness connector and ground.

BCM connector		Terminal	Ground	Continuity
RH	M91	46		No
LH		45		

OK or NG

- OK >> Replace BCM if turn signal lamps does not work after setting the connector again. Refer to [BCS-17, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

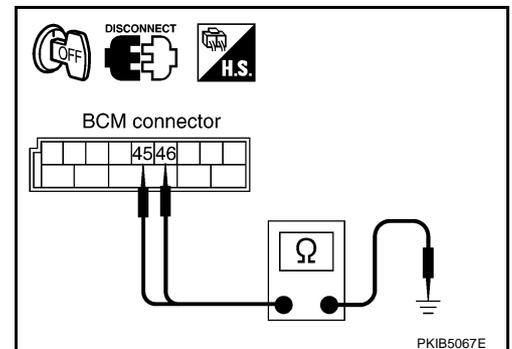

PKIB5067E

TURN SIGNAL AND HAZARD WARNING LAMPS

Hazard Warning Lamp Does Not Operate But Turn Signal Lamp Operate

NKS004YE

1. CHECK BULB

Make sure bulb standard of each turn signal lamp is correct.

OK or NG

- OK >> GO TO 2.
- NG >> Replace bulb.

2. CHECK HAZARD SWITCH INPUT SIGNAL

☑ With CONSULT-III

1. Select "HAZARD SW" of BCM data monitor item.
2. With operating the hazard switch, check the monitor status.

When hazard switch is ON : HAZARD SW ON position

☒ Without CONSULT-III

Check voltage between hazard switch harness connector and ground.

Terminal (+)		Terminal (-)	Condition	Voltage (Approx.)
Hazard switch connector	Terminal			
M98	2	Ground	Hazard switch is ON	0V
			Hazard switch is OFF	5V

OK or NG

- OK >> Replace BCM. Refer to [BCS-17, "Removal and Installation of BCM"](#).
- NG >> GO TO 3.



3. CHECK HAZARD SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and hazard switch connector.
3. Check continuity BCM harness connector and hazard switch harness connector.

Terminals				Continuity
BCM		Hazard switch		
Connector	Terminal	Connector	Terminal	
M90	29	M98	2	Yes

OK or NG

- OK >> GO TO 4.
- NG >> Repair harness or connector.

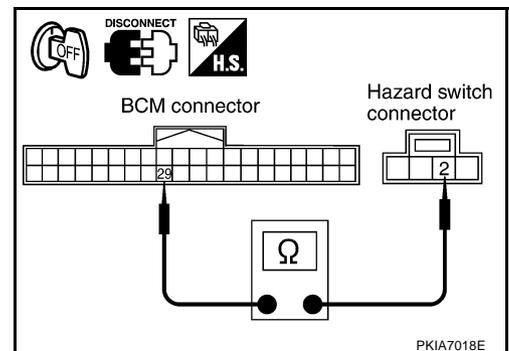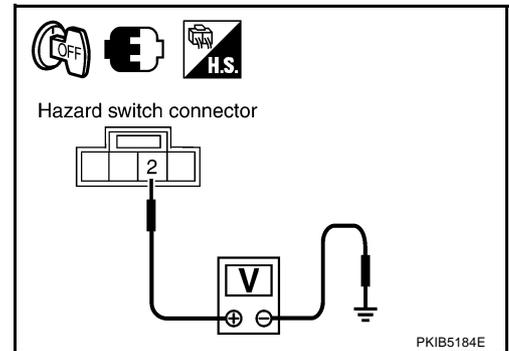

TURN SIGNAL AND HAZARD WARNING LAMPS


4. CHECK GROUND

Check continuity hazard switch harness connector and ground.

Hazard switch connector	Terminal	Ground	Continuity
M98	1		Yes

OK or NG

- OK >> GO TO 5.
- NG >> Repair harness or connector.

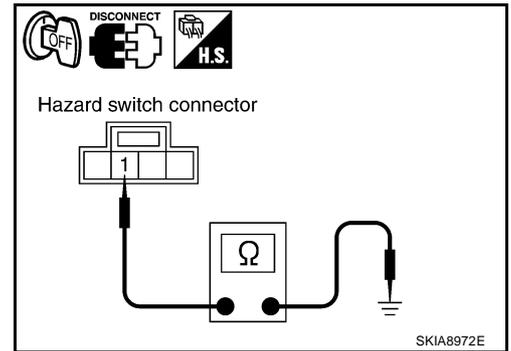


5. CHECK HAZARD SWITCH

Check continuity hazard switch.

Terminal		Condition	Continuity
Hazard switch			
1	2	Hazard switch is ON.	Yes
		Hazard switch is OFF.	No

OK or NG

- OK >> Replace BCM if turn signal lamps does not work after setting the connector again. Refer to [BCS-17, "Removal and Installation of BCM"](#) .
- NG >> Replace hazard switch.

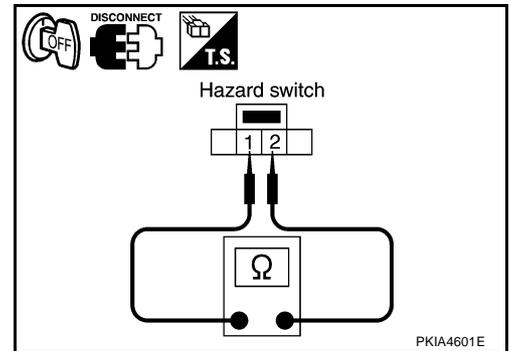

Turn Signal Indicator Lamp Does Not Operate

1. CHECK BULB

Check bulb of turn signal indicator lamp in combination meter.

OK or NG

- OK >> Replace combination meter.
- NG >> Replace indicator bulb.

Bulb Replacement (Front Turn Signal Lamp)

Refer to [LT-28, "Bulb Replacement"](#) .

Bulb Replacement (Rear Turn Signal Lamp)

Refer to [LT-126, "Bulb Replacement"](#) .

Removal and Installation of Front Turn Signal Lamp

Refer to [LT-29, "Removal and Installation"](#) .

Removal and Installation of Rear Turn Signal Lamp

Refer to [LT-127, "Removal and Installation"](#) .

LIGHTING AND TURN SIGNAL SWITCH

LIGHTING AND TURN SIGNAL SWITCH


PFP:25540

Removal and Installation

NKS004YK

REMOVAL

1. Remove steering column lower cover. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#).
2. Remove column upper cover and combination meter assembly. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#).
3. While pressing pawls in direction as shown in the figure, pull lighting and turn signal switch toward driver door and disconnect from the base.

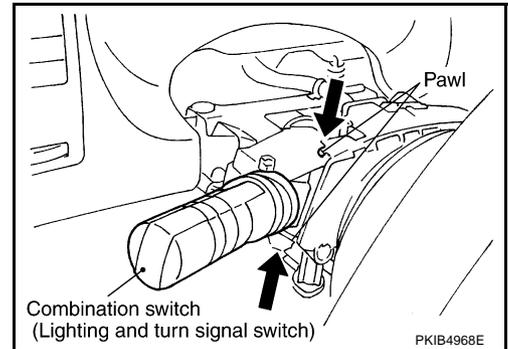

INSTALLATION

Installation is the reverse order of removal.

HAZARD SWITCH

HAZARD SWITCH


PPF:25290

Removal and Installation HAZARD SWITCH (A/T MODELS)

NKS004YL

Removal

1. Remove console finisher (1). Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#).
2. Disconnect hazard switch connector (2).
3. Remove screw (A), and remove hazard switch (3).

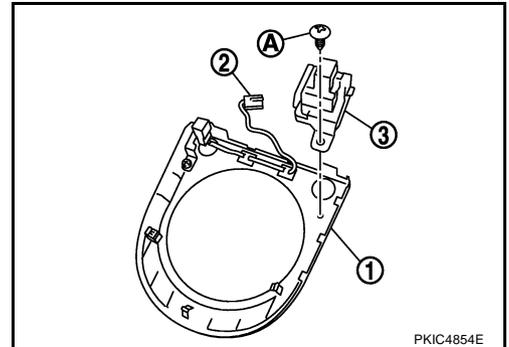


Installation

Installation is the reverse order of removal.

HAZARD SWITCH (M/T MODELS)

Removal

1. Removal console boot (1). Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#).
2. Disconnect hazard switch connector (2).
3. Remove screw (A), and remove hazard switch (3).

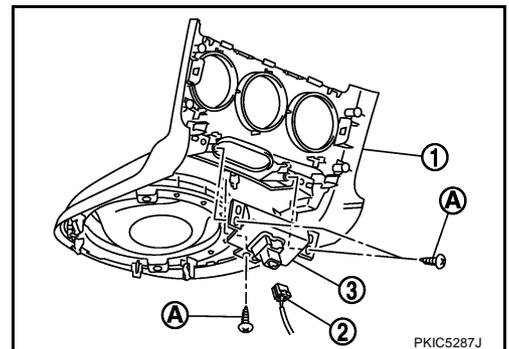

Installation

Installation is the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
LT
L
M

COMBINATION SWITCH

PFP:25567



COMBINATION SWITCH

Wiring Diagram —COMBSW—


NKS004YM

LT-COMBSW-01

▬ : DATA LINE

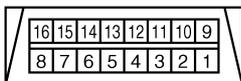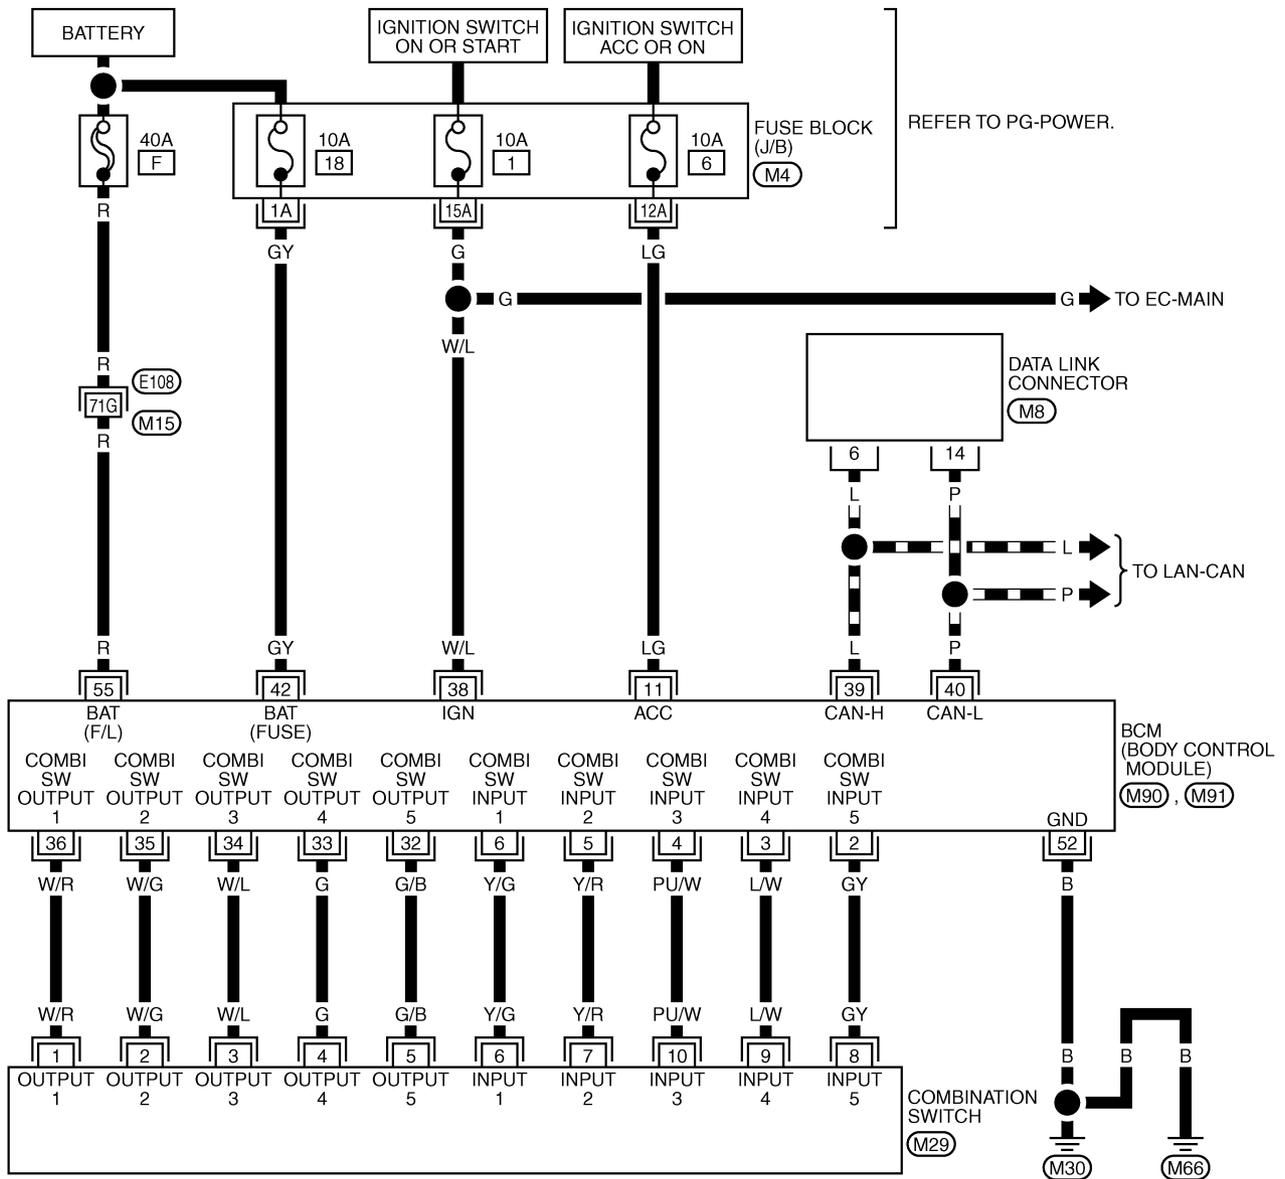

(M8)
W

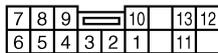

(M29)
W

REFER TO THE FOLLOWING.

- (E108) -SUPER MULTIPLE JUNCTION (SMJ)
- (M4) -FUSE BLOCK-JUNCTION BOX (J/B)
- (M90), (M91) -ELECTRICAL UNITS

TKWT5754E

COMBINATION SWITCH

Combination Switch Reading Function

NKS004YN

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

Terminals and Reference Values for BCM





NKS004YO

CAUTION:







- Check combination switch system terminal waveform under the loaded condition with lighting switch, turn signal switch and wiper switch OFF not to be fluctuated by overloaded.
- Turn wiper dial position to 4 except when checking waveform or voltage of wiper dial position. Wiper dial position can be confirmed on CONSULT-III. Refer to [LT-91, "DATA MONITOR"](#) .

Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
2	GY	Combination switch input 5	ON	OFF	Approx. 0 V
				Any of the conditions below <ul style="list-style-type: none"> ● Lighting switch 1ST ● Lighting switch HIGH beam (Operates only HIGH beam switch) ● Turn signal switch to right 	<p>PKIB4959J</p>
3	LW	Combination switch input 4	ON	Lighting switch 2ND	<p>PKIB4953J</p>
				OFF	Approx. 0 V
4	PU/W	Combination switch input 3	ON	Any of the conditions below <ul style="list-style-type: none"> ● Lighting switch 2ND ● Lighting switch PASSING (Operates only PASSING switch) ● Turn signal switch to left 	<p>PKIB4959J</p>
				OFF	Approx. 0 V
4	PU/W	Combination switch input 3	ON	Any of the conditions below <ul style="list-style-type: none"> ● Front wiper switch MIST ● Front wiper switch INT ● Front wiper switch LO 	<p>PKIB4959J</p>
				OFF	Approx. 0 V

COMBINATION SWITCH

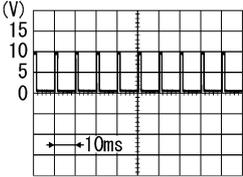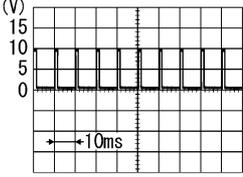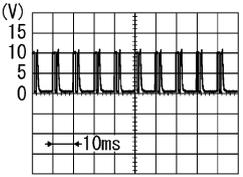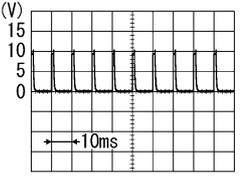Terminal No.	Wire color	Signal name	Measuring condition			Reference value
			Ignition switch	Operation or condition		
5	Y/R	Combination switch input 2	ON	Lighting, turn, wiper switch	OFF (Wiper intermittent dial position 4)	Approx. 0 V
					Any of the conditions below <ul style="list-style-type: none"> ● Front washer switch ● Rear washer switch ● Wiper intermittent dial position 1 ● Wiper intermittent dial position 5 ● Wiper intermittent dial position 6 	 <p style="text-align: right; font-size: small;">PKIB4959J</p>
					Rear wiper switch ON (Wiper intermittent dial position 4)	Approx. 1.0 V
6	Y/G	Combination switch input 1	ON	Lighting, turn, wiper switch	OFF (Wiper intermittent dial position 4)	Approx. 0 V
					Any of the conditions below <ul style="list-style-type: none"> ● Front wiper switch HI ● Rear wiper switch INT ● Wiper intermittent dial position 3 	 <p style="text-align: right; font-size: small;">PKIB4959J</p>
					Any of the conditions below <ul style="list-style-type: none"> ● Wiper intermittent dial position 1 ● Wiper intermittent dial position 2 	 <p style="text-align: right; font-size: small;">PKIB4952J</p>
					Any of the conditions below <ul style="list-style-type: none"> ● Wiper intermittent dial position 6 ● Wiper intermittent dial position 7 	 <p style="text-align: right; font-size: small;">PKIB4955J</p>
11	LG	Ignition switch (ACC)	ACC	—		Battery voltage





COMBINATION SWITCH

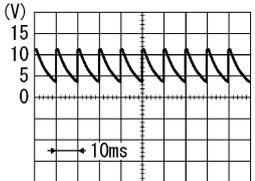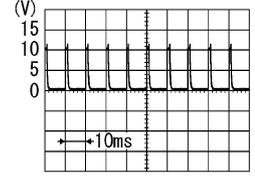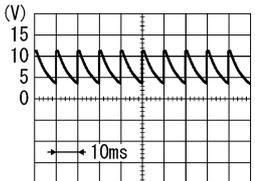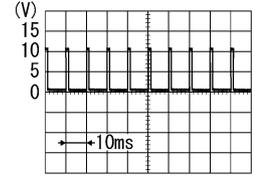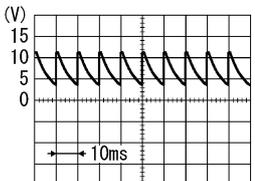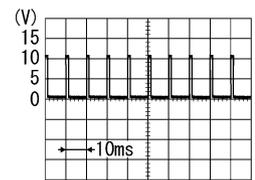Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
32	G/B	Combination switch output 5	ON	Lighting, turn, wiper switch	OFF (Wiper intermittent dial position 4)  <p style="text-align: right; font-size: small;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.2 V</p>
					Any of the conditions below <ul style="list-style-type: none"> ● Wiper intermittent dial position 1 ● Wiper intermittent dial position 2 ● Wiper intermittent dial position 6 ● Wiper intermittent dial position 7  <p style="text-align: right; font-size: small;">PKIB4956J</p> <p style="text-align: center;">Approx. 1.0 V</p>
33	G	Combination switch output 4	ON	Lighting, turn, wiper switch	OFF (Wiper intermittent dial position 4)  <p style="text-align: right; font-size: small;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.2 V</p>
					Any of the conditions below <ul style="list-style-type: none"> ● Lighting switch 1ST (The same result with lighting switch 2ND) ● Rear wiper switch INT ● Wiper intermittent dial position 1 ● Wiper intermittent dial position 5 ● Wiper intermittent dial position 6  <p style="text-align: right; font-size: small;">PKIB4958J</p> <p style="text-align: center;">Approx. 1.2 V</p>
34	W/L	Combination switch output 3	ON	Lighting, turn, wiper switch	OFF (Wiper intermittent dial position 4)  <p style="text-align: right; font-size: small;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.2 V</p>
					Any of the conditions below <ul style="list-style-type: none"> ● Lighting switch 2ND ● Lighting switch HI beam (Operates only HI beam switch) ● Rear washer switch ● Wiper intermittent dial position 1 ● Wiper intermittent dial position 2 ● Wiper intermittent dial position 3  <p style="text-align: right; font-size: small;">PKIB4956J</p> <p style="text-align: center;">Approx. 1.2 V</p>

A
B
C
D
E
F
G
H
I
J
LT
L
M



COMBINATION SWITCH

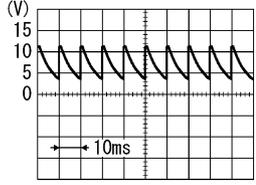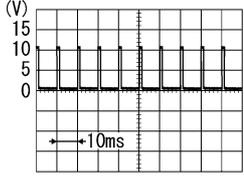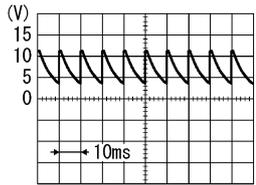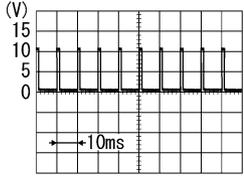Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
35	W/G	Combination switch output 2	ON	Lighting, turn, wiper switch (Wiper intermittent dial position 4)	 <p style="text-align: right;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.2 V</p>
				Any of the conditions below	 <p style="text-align: right;">PKIB4958J</p> <p style="text-align: center;">Approx. 1.2 V</p>
36	W/R	Combination switch output 1	ON	Lighting, turn, wiper switch (Wiper intermittent dial position 4)	 <p style="text-align: right;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.2 V</p>
				Any of the conditions below	 <p style="text-align: right;">PKIB4958J</p> <p style="text-align: center;">Approx. 1.2 V</p>
38	W/L	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN - H	—	—	—
40	P	CAN - L	—	—	—
42	GY	Battery power supply	OFF	—	Battery voltage
52	B	Ground	ON	—	Approx. 0V
55	R	Battery power supply	OFF	—	Battery voltage

COMBINATION SWITCH

CONSULT-III Function (BCM)

NKS004YP

CONSULT-III can display each diagnostic item using the diagnostic test mode shown following.

BCM diagnosis part	Diagnosis mode	Description
COMB SW	DATA MONITOR	Displays BCM input data in real time.

DATA MONITOR

Display Item List

Monitor item name "OPERATION OR UNIT"	Contents
TURN SIGNAL R "ON/OFF"	Displays "Turn Right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays "Turn Left (ON)/Other (OFF)" status, determined from lighting switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 1 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1ST or 2ND position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW ^{NOTE} "ON/OFF"	—
FR WIPER HI "ON/OFF"	Displays "Front Wiper HI (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER LOW "ON/OFF"	Displays "Front Wiper LOW (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER INT "ON/OFF"	Displays "Front Wiper INT (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WASHER SW "ON/OFF"	Displays "Front Washer Switch (ON)/Other (OFF)" status, determined from wiper switch signal.
INT VOLUME [1 - 7]	Displays intermittent operation knob setting (1 - 7), determined from wiper switch signal.
RR WIPER ON "ON/OFF"	Displays "rear Wiper (ON)/Other (OFF)" status as judged from wiper switch signal.
RR WIPER INT "ON/OFF"	Displays "rear Wiper INT (ON)/Other (OFF)" status as judged from wiper switch signal.
RR WASHER SW "ON/OFF"	Displays "rear Washer Switch (ON)/Other (OFF)" status as judged from wiper switch signal.

NOTE:

This item is displayed, but cannot be monitored.

COMBINATION SWITCH

Combination Switch Inspection

NKS004YQ

1. SYSTEM CHECK

Referring to table below, check which system malfunctioning switch belongs to.

System 1	System 2	System 3	System 4	System 5
—	FR WASHER	FR WIPER LO	TURN LH	TURN RH
FR WIPER HI	—	FR WIPER INT	PASSING	HEAD LAMP 1
INT VOLUME 1	RR WASHER	—	HEAD LAMP 2	HI BEAM
RR WIPER INT	INT VOLUME 3	—	—	LIGHT SW 1ST
INT VOLUME 2	RR WIPER ON	—	—	—

>> Check the system to which malfunctioning switch belongs, and GO TO 2.

2. SYSTEM CHECK

With CONSULT-III

1. Select "COMBI SW" of BCM data monitor item.
2. Confirm that other switches in malfunctioning system operate normally.
Example: When the HI BEAM switch is malfunctioning, confirm that "TURN RH", "HEAD LAMP 1" and "LIGHT SW 1 ST" in System 5, to which the HI BEAM switch belongs, turn ON-OFF normally.

Without CONSULT-III

Operating combination switch, and confirm that other switches in malfunctioning system operate normally.
Example: When the HI BEAM switch is malfunctioning, confirm that "TURN RH", "HEAD LAMP 1" and "LIGHT SW 1 ST" in System 5, to which HI BEAM switch belongs, turn ON-OFF normally.

Check results

Other switches in malfunctioning system operate normally.>>Replace lighting switch or wiper switch.


Other switches in malfunctioning system do not operate normally.>>GO TO 3.

COMBINATION SWITCH

3. HARNESS INSPECTION


1. Turn ignition switch OFF.
2. Disconnect BCM and combination switch connectors.
3. Check for continuity between BCM harness connector of the suspect system and the corresponding combination switch harness connector.

Suspect system	BCM		Combination switch		Continuity	
	Connector	Terminal	Connector	Terminal		
1	M90	Input 1	6	M29	6	Yes
		Output 1	36		1	
2		Input 2	5		7	
		Output 2	35		2	
3		Input 3	4		10	
		Output 3	34		3	
4		Input 4	3		9	
		Output 4	33		4	
5		Input 5	2		8	
		Output 5	32		5	

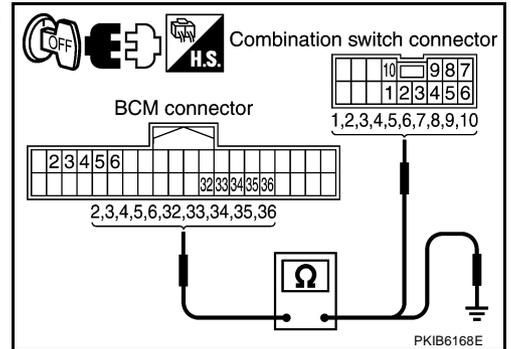

4. Check for continuity between BCM harness connector in suspect malfunctioning system and ground.

Suspect system	BCM		Continuity		
	Connector	Terminal			
1	M90	Input 1	6	Ground	No
		Output 1	36		
2		Input 2	5		
		Output 2	35		
3		Input 3	4		
		Output 3	34		
4		Input 4	3		
		Output 4	33		
5		Input 5	2		
		Output 5	32		

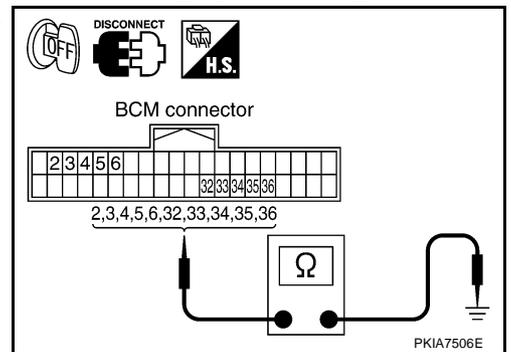

OK or NG


OK >> GO TO 4.

NG >> Check harness between BCM and combination switch for open or short circuit.

COMBINATION SWITCH

4. BCM OUTPUT TERMINAL INSPECTION

1. Connect BCM and combination switch connectors.
2. Set wiper intermittent dial position 4.
3. Turn ignition switch ON.
4. Check BCM output terminal voltage waveform of suspect malfunctioning system.

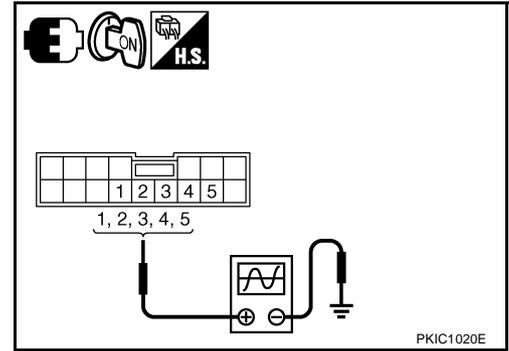

Suspect system	Terminals (+)		(-)	Reference value (Approx.)
	Combination switch connector	Terminal		
1	M29	1	Ground	
2		2		
3		3		
4		4		
5		5		

OK or NG

- OK >> Open circuit in combination switch, GO TO 5.
 NG >> Replace BCM. Refer to [BCS-17, "Removal and Installation of BCM"](#) .

5. COMBINATION SWITCH INSPECTION

Referring to table below, perform combination switch inspection.

Procedure									
1	2		3	4		5	6		7
Replace lighting switch	Confirm check results	OK	INSPECTION END	Confirm check results	OK	INSPECTION END	Confirm check results	OK	INSPECTION END
		NG	Replace wiper switch		NG	Replace switch base		NG	Confirm symptom again

>> INSPECTION END

Removal and Installation

Refer to [LT-84, "LIGHTING AND TURN SIGNAL SWITCH"](#) .

NKS004YR

STOP LAMP

PFP:26550

STOP LAMP



Wiring Diagram — STOP/L —

NKS004YS

LT-STOP/L-01

⬡CP⬢ : COUPE MODELS

⬡RS⬢ : ROADSTER MODELS

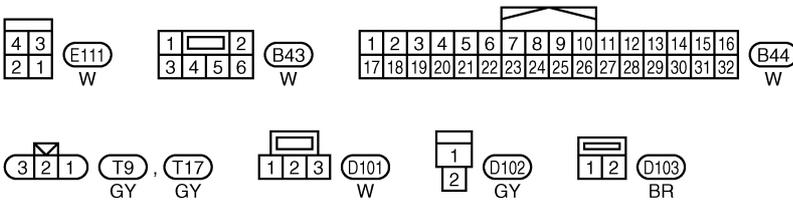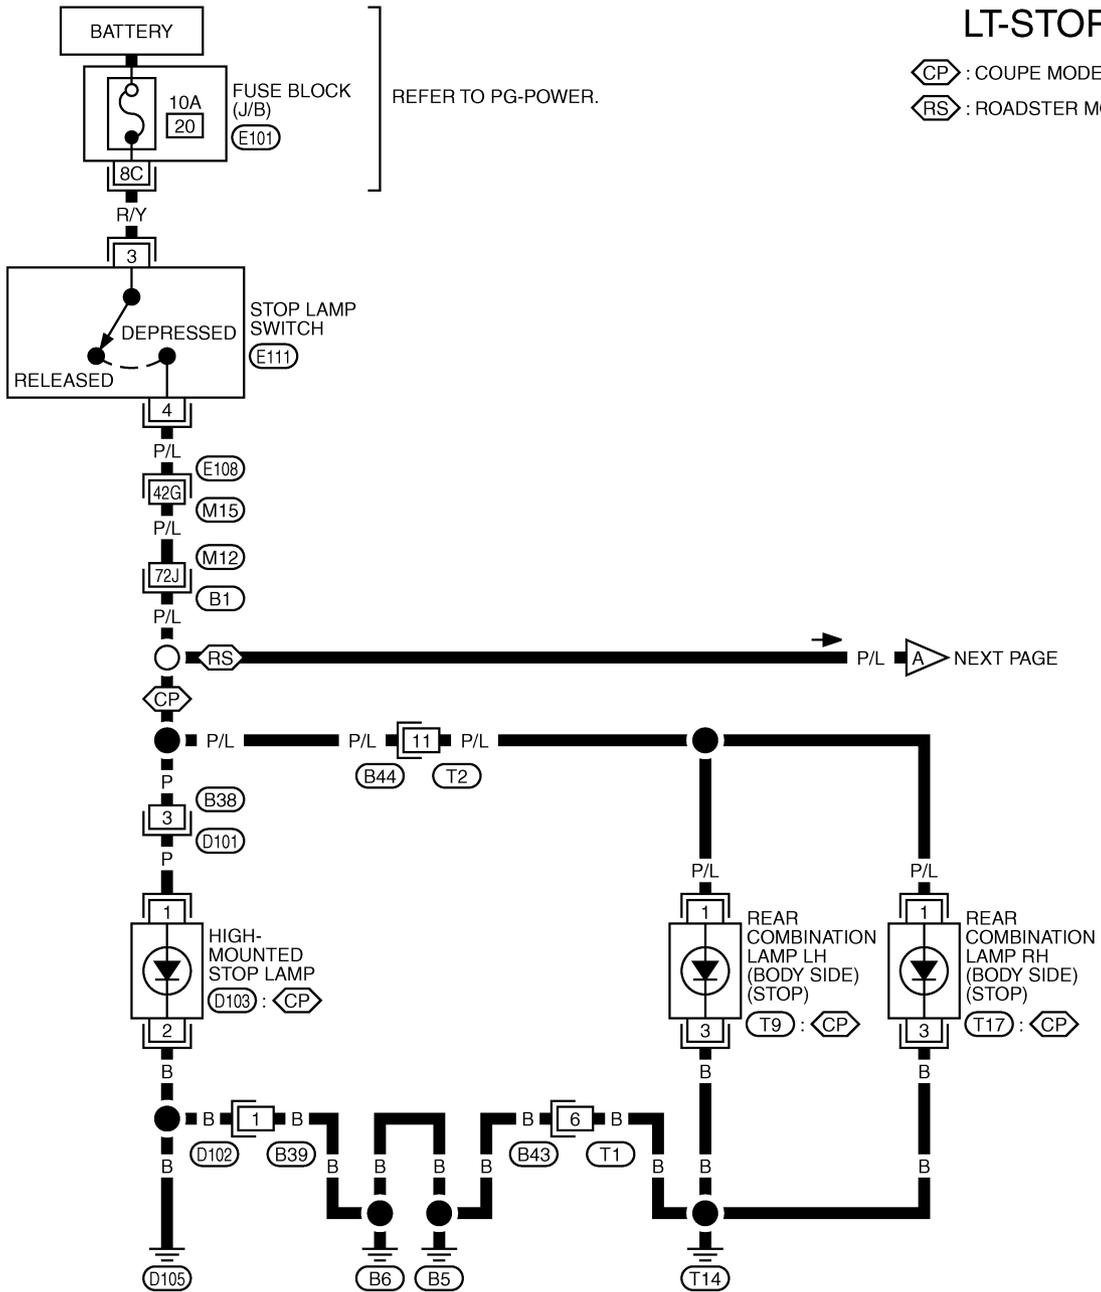

REFER TO THE FOLLOWING.
 ⬡E108⬢, ⬡B1⬢ -SUPER MULTIPLE JUNCTION (SMJ)
 ⬡E101⬢ -FUSE BLOCK-JUNCTION BOX (J/B)

TKWT5755E


STOP LAMP

High-Mounted Stop Lamp (Coupe Models) BULB REPLACEMENT, REMOVAL AND INSTALLATION

NKS004YT

1. Remove back door finisher upper. Refer to [EI-48, "BACK DOOR FINISHER"](#) .
2. Disconnect high-mounted stop lamp connector.
3. Remove nuts and remove high-mounted stop lamp with cover from back door. Be sure to pull toward the arrow in the figure.
4. Remove screws and remove high-mounted stop lamp assembly from cover.
5. Installation is the reverse order of removal.

High-mounted stop lamp : LED

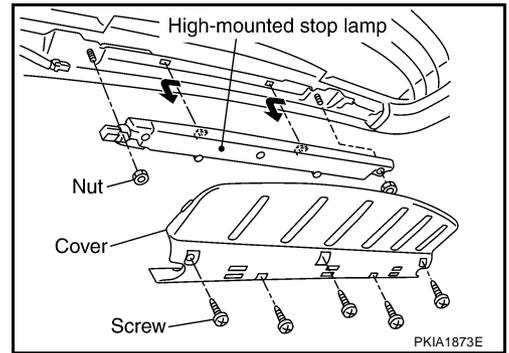


High-Mounted Stop Lamp (Roadster Models) BULB REPLACEMENT, REMOVAL AND INSTALLATION

NKS004YU

1. Turn ignition switch ON, and turn soft-top OPEN/CLOSE switch ON.
2. When the storage lid is fully opened, soft-top OPEN/CLOSE switch to OFF.
3. Remove battery negative cable.
4. Disconnect high-mounted stop lamp connector.
5. Remove high-mounted stop lamp.
6. Remove high-mounted stop lamp assembly from storage lid.
7. Installation is the reverse order of removal.

High-mounted stop lamp : LED

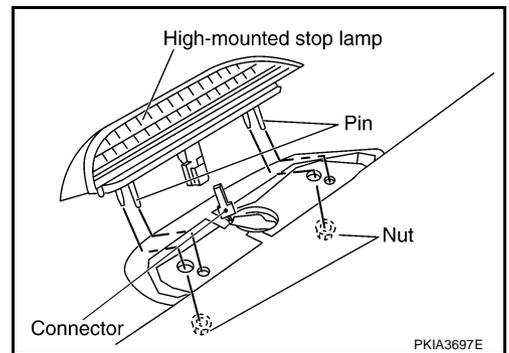

Stop Lamp BULB REPLACEMENT

NKS004YV

Refer to [LT-126, "Bulb Replacement"](#) .

REMOVAL AND INSTALLATION

Refer to [LT-127, "Removal and Installation"](#) .


A
B
C
D
E
F
G
H
I
J
L
M

LT

BACK-UP LAMP




COUPE MODELS (M/T)

LT-BACK/L-02




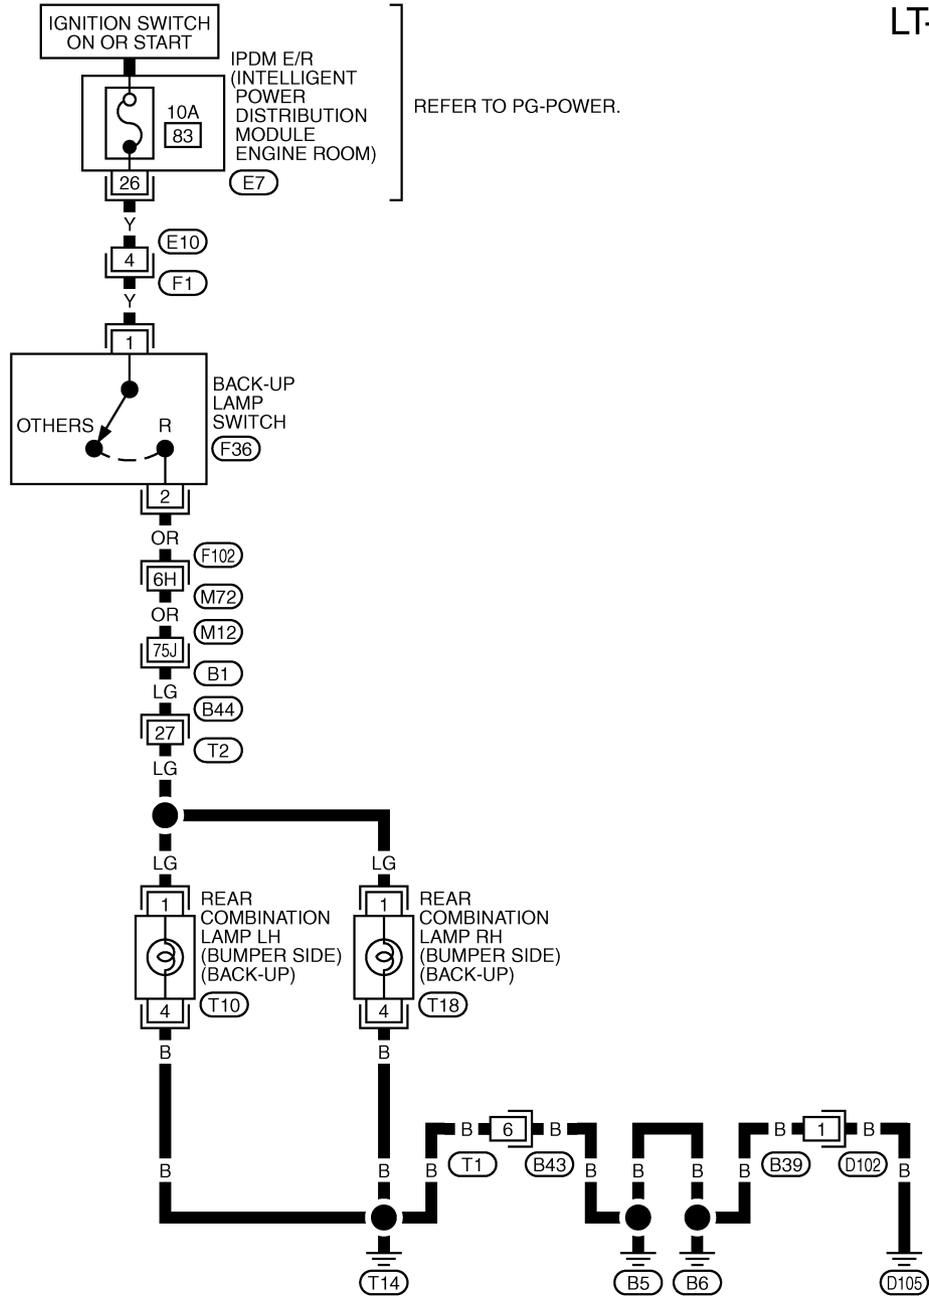


REFER TO PG-POWER.

A
B
C
D
E
F
G
H
I
J
LT
L
M

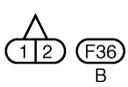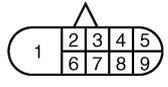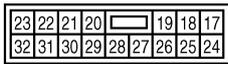

REFER TO THE FOLLOWING.
 (F102), (B1) -SUPER MULTIPLE JUNCTION (SMJ)

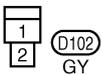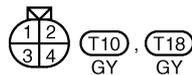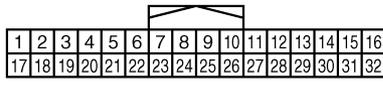
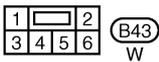


TKWT5757E

BACK-UP LAMP

ROADSTER MODELS (A/T)

LT-BACK/L-03

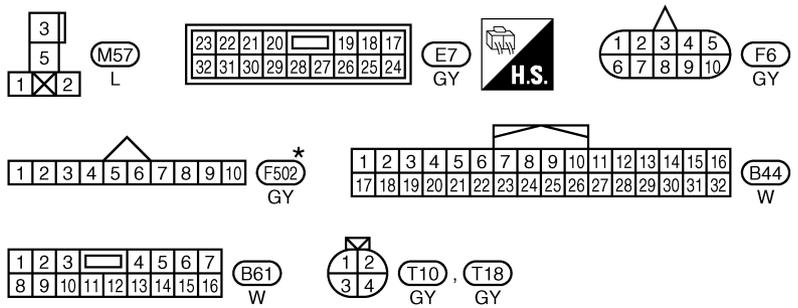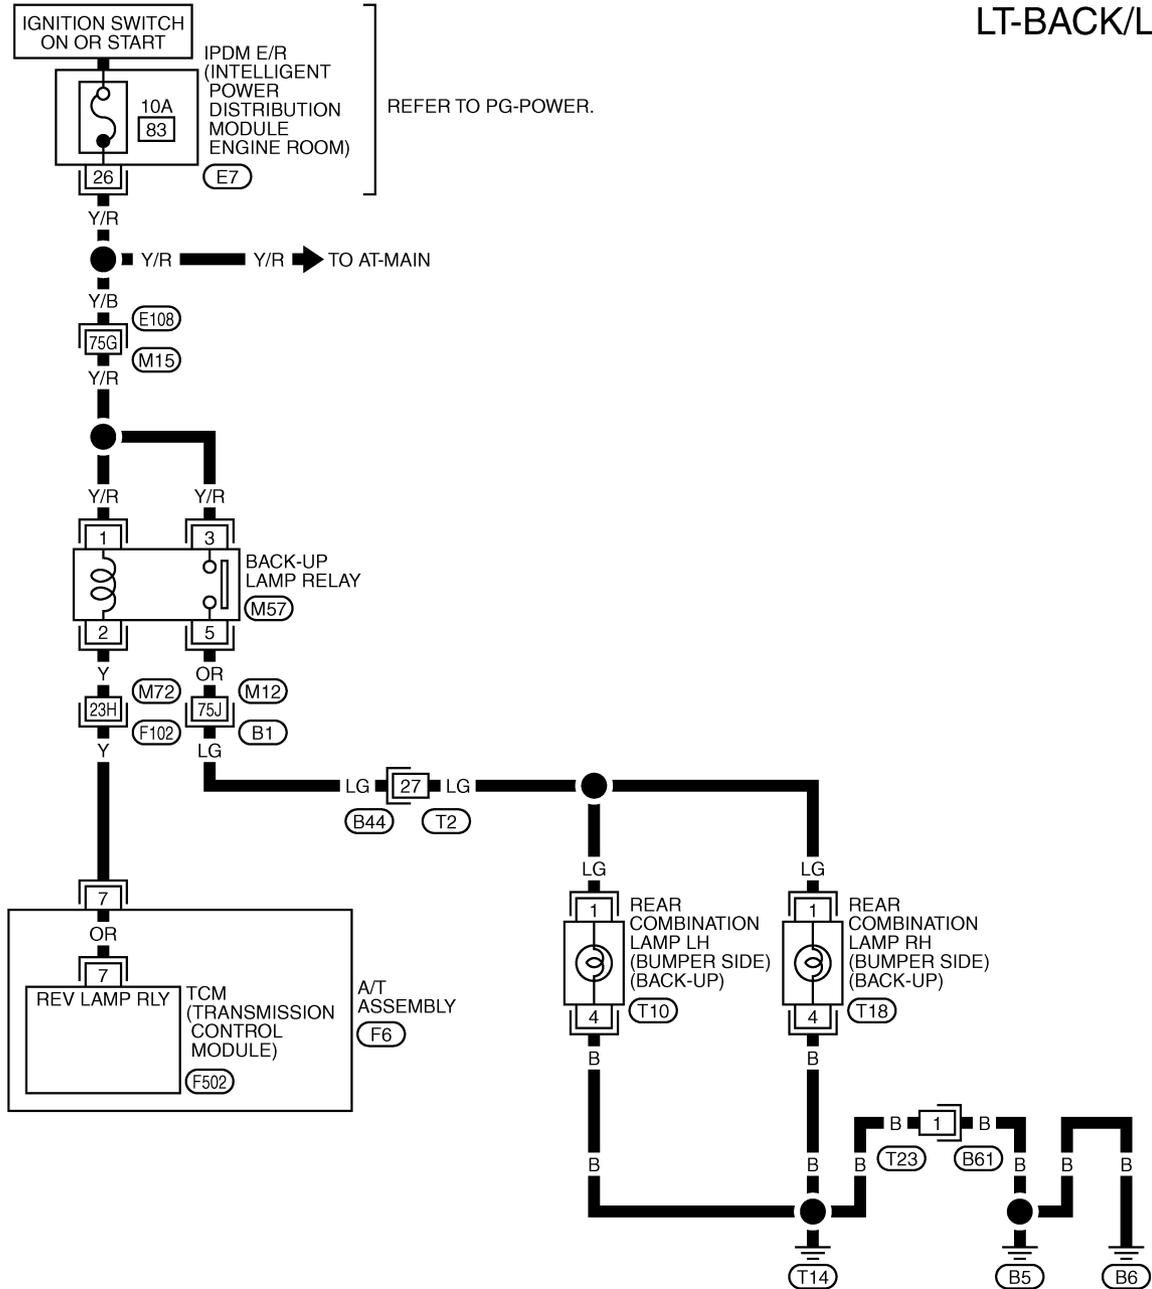

REFER TO THE FOLLOWING.
 (E108), (F102), (B1) -SUPER
 MULTIPLE JUNCTION (SMJ)


*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

TKWT5758E



BACK-UP LAMP

ROADSTER MODELS (M/T)



LT-BACK/L-04

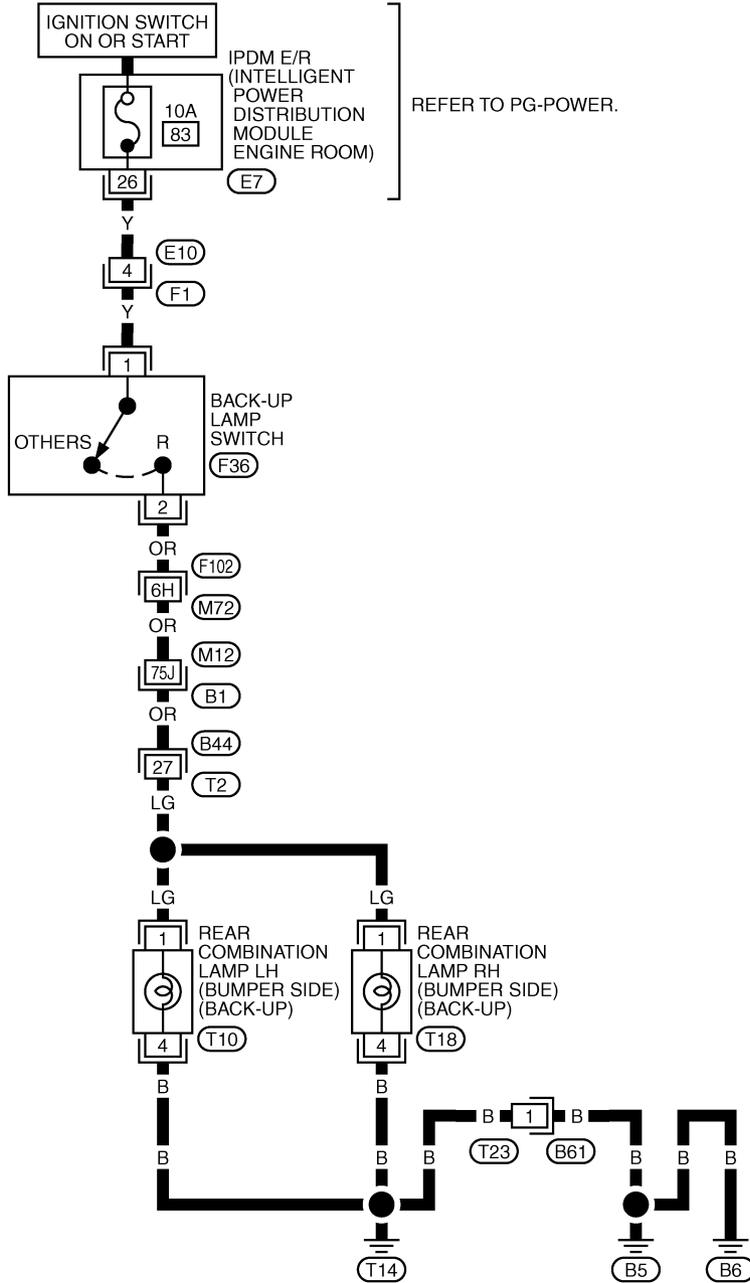

A
B
C
D
E
F
G
H
I
J
LT
L
M

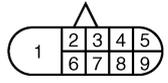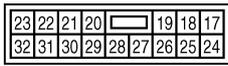

REFER TO THE FOLLOWING.
 (F102), (B1) -SUPER MULTIPLE JUNCTION (SMJ)

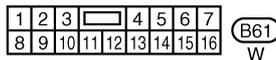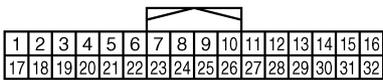

TKWT5759E

BACK-UP LAMP

Bulb Replacement

NKS004YX

Refer to [LT-126, "Bulb Replacement"](#) .

Removal and Installation

NKS004YY


Refer to [LT-127, "Removal and Installation"](#) .

PARKING, LICENSE PLATE AND TAIL LAMPS

PPF:26550

Component Parts and Harness Connector Location

NKS004YZ

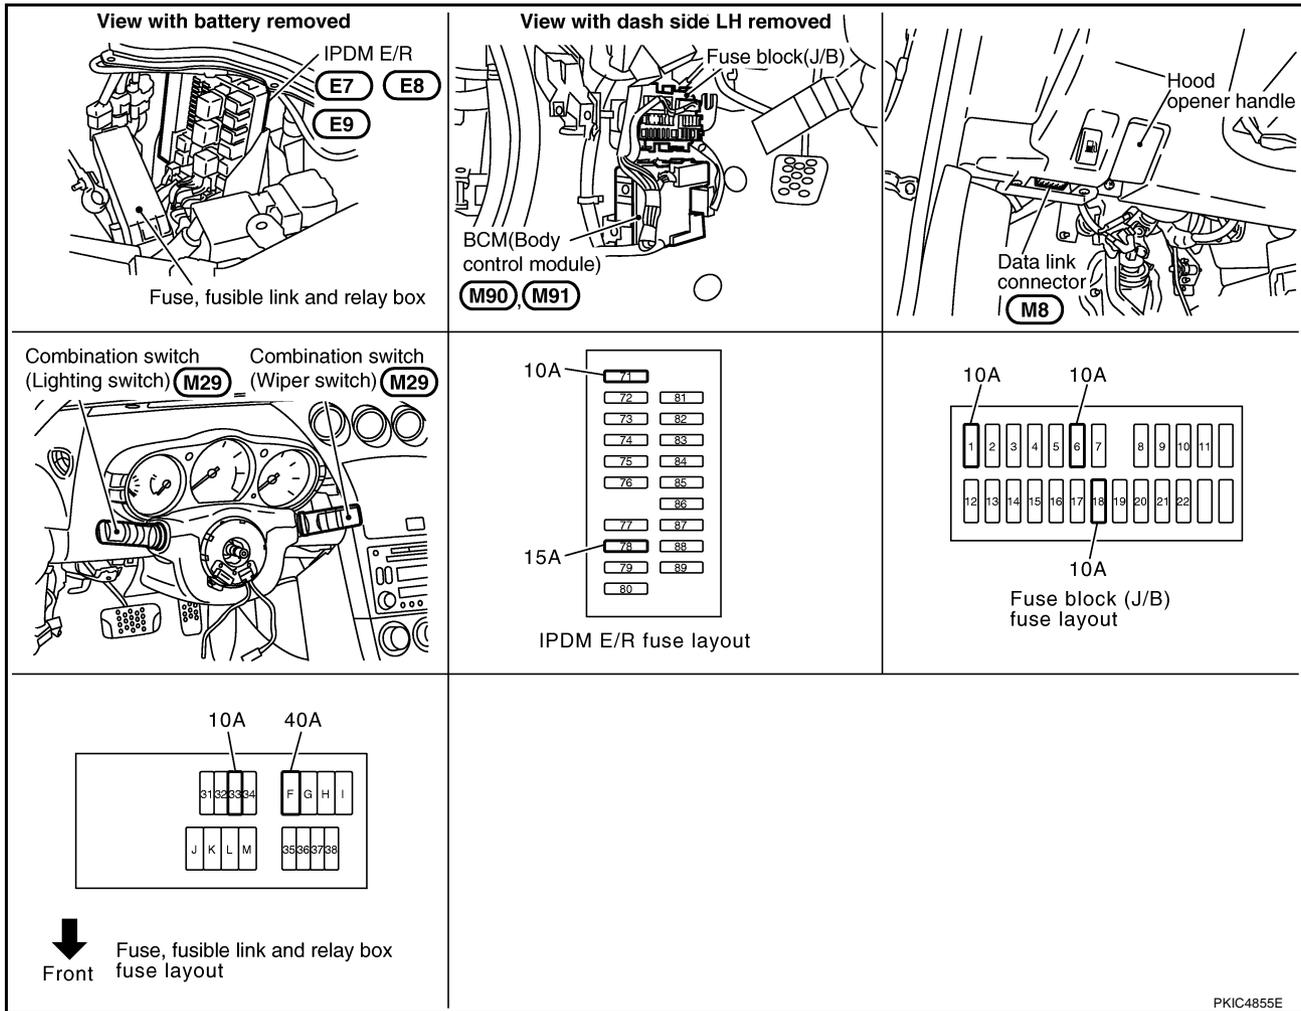

System Description

NKS004Z0

Control of parking, license plate, side maker and tail lamps operation is dependent upon the position of lighting switch (combination switch). When the lighting switch is in the 1ST position, the BCM (body control module) receives input signal requesting the parking, license plate, side marker and tail lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) through CAN communication. The CPU (central processing unit) located in the IPDM E/R controls the tail lamp relay coil and daytime light relay* coil. These relay, when energized, directs power to parking, license plate, side marker and tail lamps, which then illuminate.

NOTE:

Daytime light relay*: Canada models

OUTLINE

Power is supplied at all times

- through 10A fuse (No.71, located in IPDM E/R)
- to tail lamp relay, located in IPDM E/R, and
- to CPU located in IPDM E/R,
- through 15A fuse (No.78, located in IPDM E/R)
- to CPU located in IPDM E/R,
- through 40A fusible link (letter F, located in fuse, fusible link and relay box)
- to BCM terminal 55,
- through 10A fuse [No.18, located in fuse block (J/B)]

A
B
C
D
E
F
G
H
I
J

LT

L
M

PARKING, LICENSE PLATE AND TAIL LAMPS

- to BCM terminal 42.

With ignition switch in ON or START position, power is supplied

- to CPU located in IPDM E/R,
- through 10A fuse [No.1, located in fuse block (J/B)]
- to BCM terminal 38.

With ignition switch in ACC or ON position, power is supplied

- through 10A fuse [No. 6, located in fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 52
- through grounds M30 and M66,
- to IPDM E/R terminals 38 and 60
- through grounds E17, E43 and B102 (with VDC system, navigation system or telephone)
- through grounds E17, E43 and F152 (without VDC system, navigation system and telephone).

OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position, the BCM receives input signal requesting the parking, license plate, side marker and tail lamps to illuminate. This input is communicated to the IPDM E/R through the CAN communication lines. The CPU located in the IPDM E/R controls the tail lamp relay coil and daytime light relay* coil. These relay, when energized, directs power to parking, license plate, side marker and tail lamps, which when energized, directs power

- through IPDM E/R terminal 22 (USA models)
- through daytime light relay terminal 5 (Canada models)
- to front combination lamp LH terminals 6
- to front combination lamp RH terminals 6
- to rear combination lamp LH terminals 2
- to rear combination lamp RH terminals 2
- to license plate lamp LH terminal 2, and
- to license plate lamp RH terminal 2.

Ground is supplied at all times

- to front combination lamp LH terminal 8, and
- to front combination lamp RH terminal 8
- through grounds E17, E43 and B102 (with VDC system, navigation system or telephone)
- through grounds E17, E43 and F152 (without VDC system, navigation system and telephone),
- to rear combination lamp LH terminals 3
- to rear combination lamp RH terminals 3
- to license plate lamp LH terminal 1, and
- to license plate lamp RH terminal 1
- through grounds B5, B6, D105 and T14 (Coupe models)
- through grounds B5, B6 and T14 (Roadster models).

With power and ground supplied, parking, license plate side marker and tail lamps illuminate.

NOTE:

Daytime light relay*: Canada models

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the parking, license, side marker and tail lamps remain illuminated for 5 minutes, then the headlamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-III.

PARKING, LICENSE PLATE AND TAIL LAMPS

CAN Communication System Description

NKS004Z1

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

NKS004Z2

Refer to [LAN-48, "CAN System Specification Chart"](#) .

A

B

C

D

E

F

G

H

I

J

LT


L

M

PARKING, LICENSE PLATE AND TAIL LAMPS

Schematic

NKS004Z3


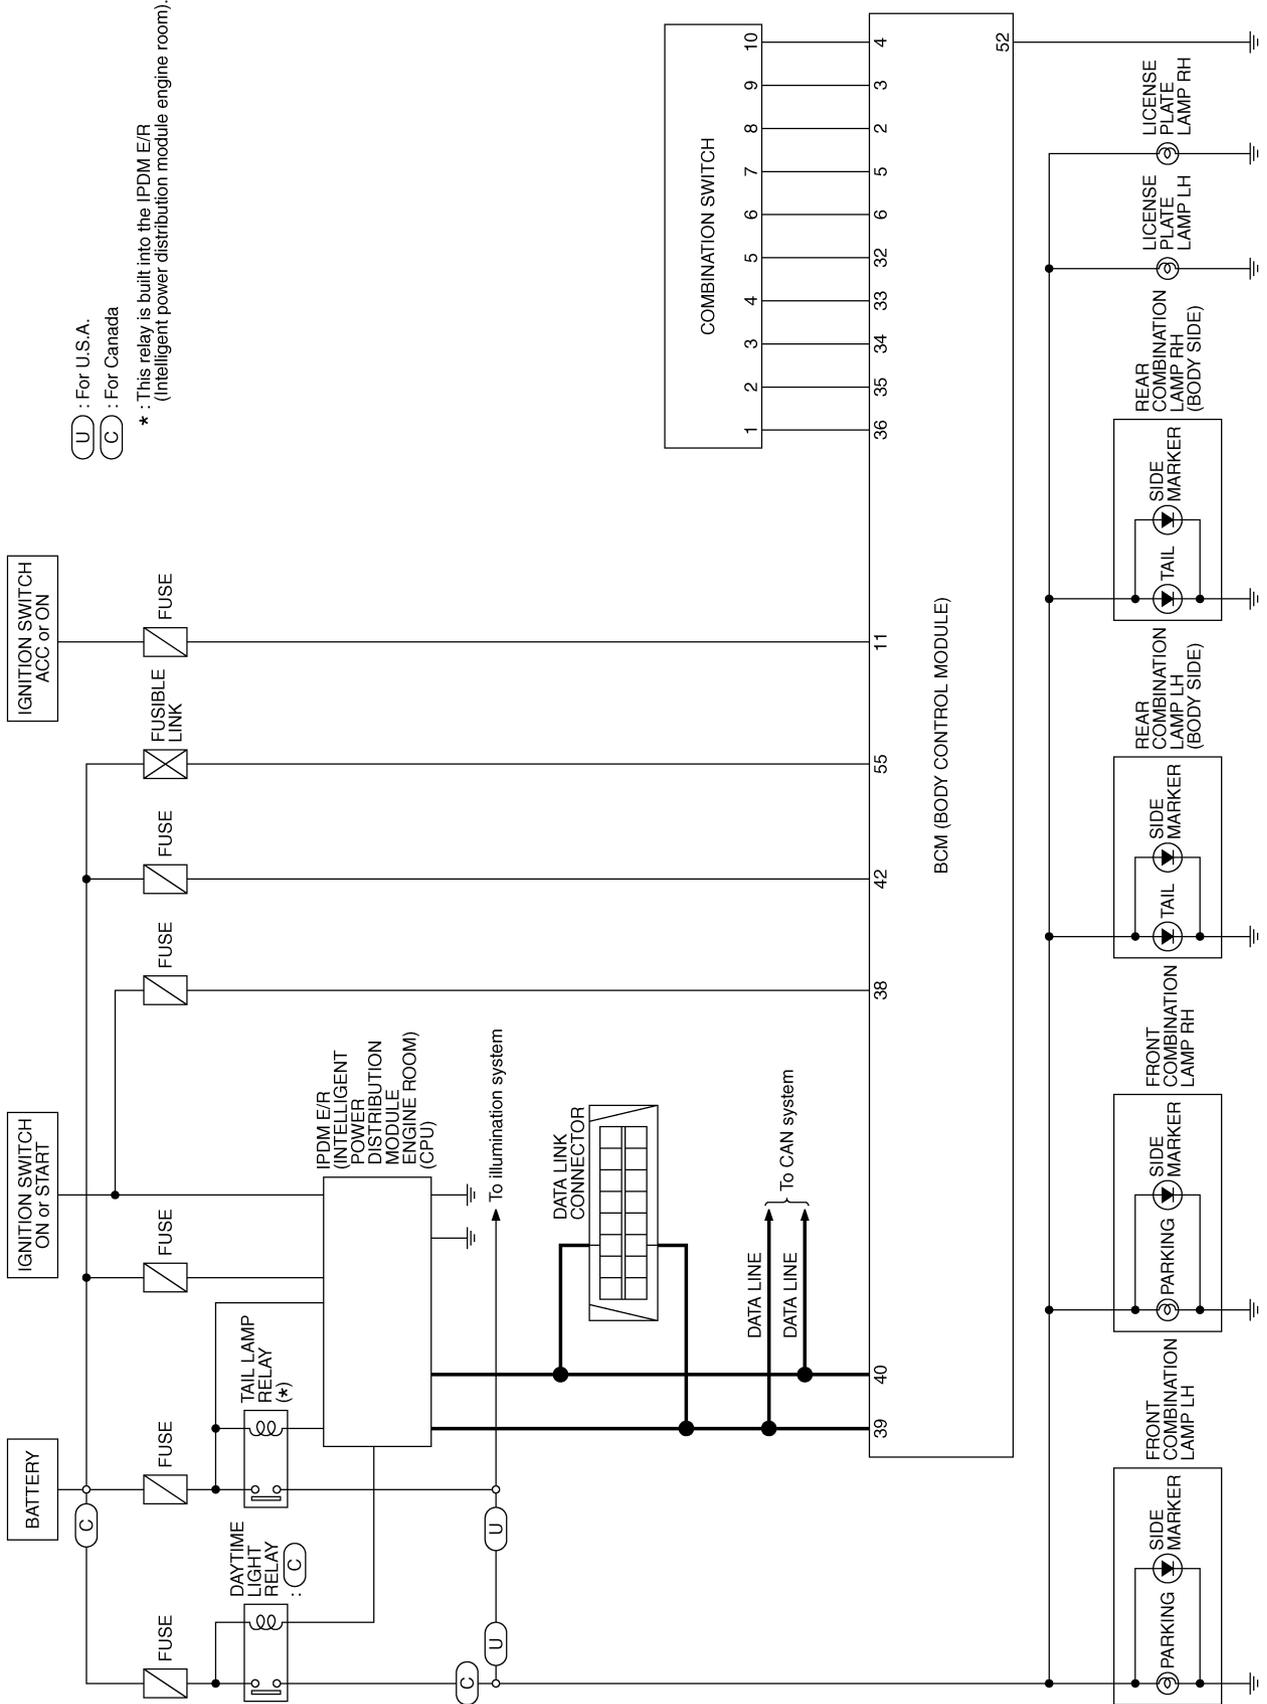


TKWT4043E

PARKING, LICENSE PLATE AND TAIL LAMPS


LT-TAIL/L-02

-  : DATA LINE
-  : FOR U.S.A.
-  : WITH VDC SYSTEM, NAVIGATION SYSTEM OR TELEPHONE
-  : WITHOUT VDC SYSTEM, NAVIGATION SYSTEM AND TELEPHONE

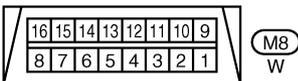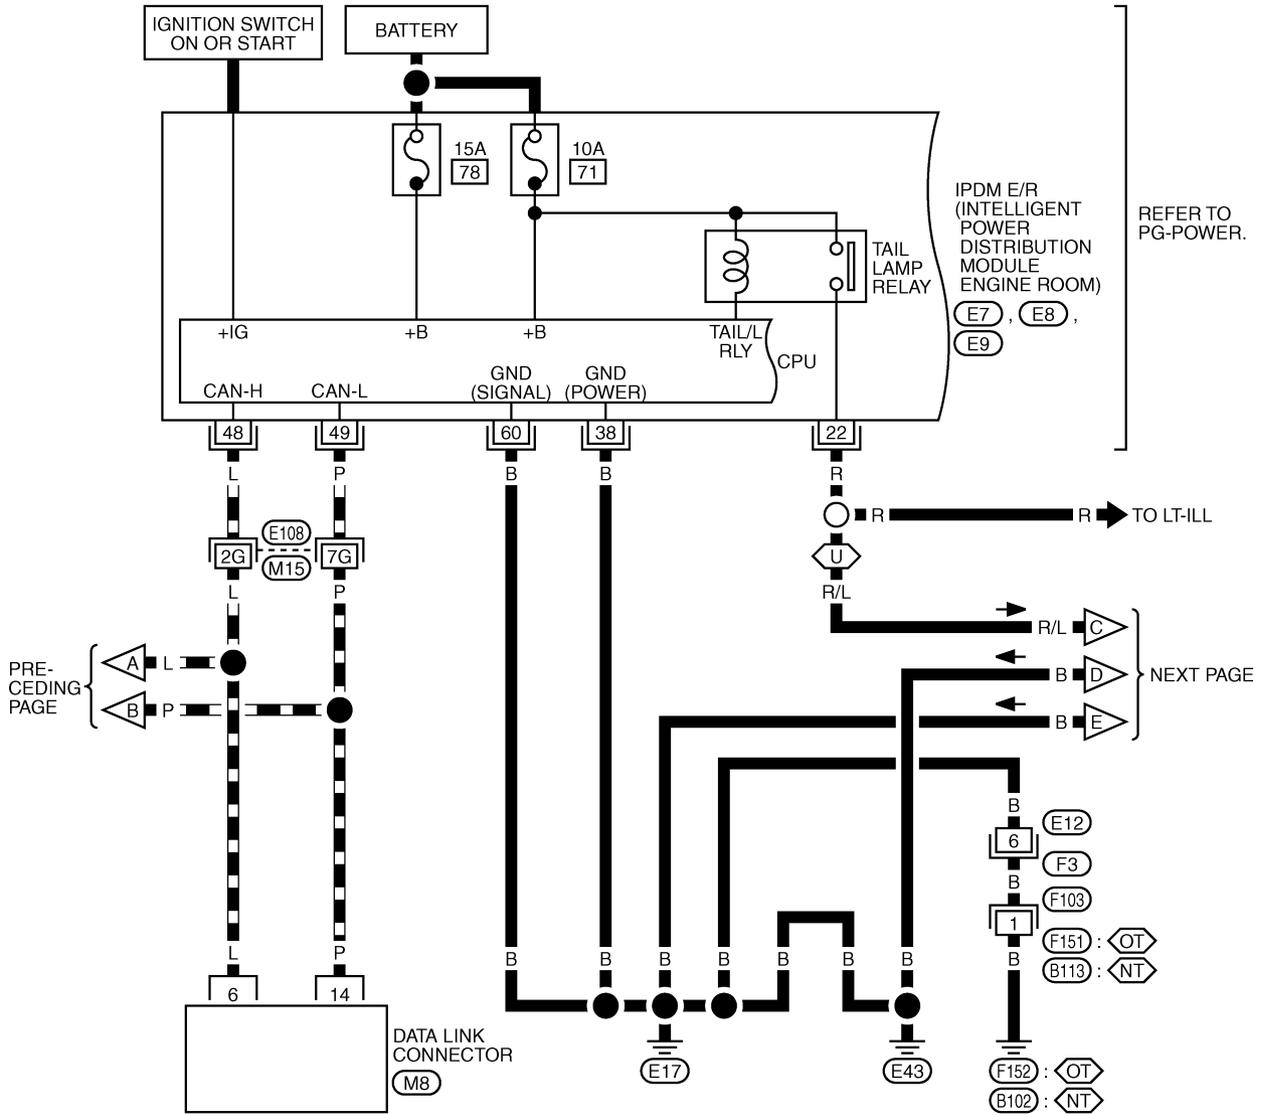

REFER TO THE FOLLOWING.

E108 -SUPER MULTIPLE JUNCTION (SMJ)




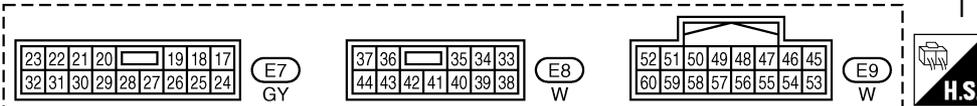


TKWT5761E

PARKING, LICENSE PLATE AND TAIL LAMPS

LT-TAIL/L-05

⬡(RS) : ROADSTER MODELS

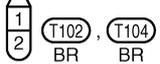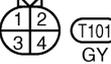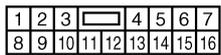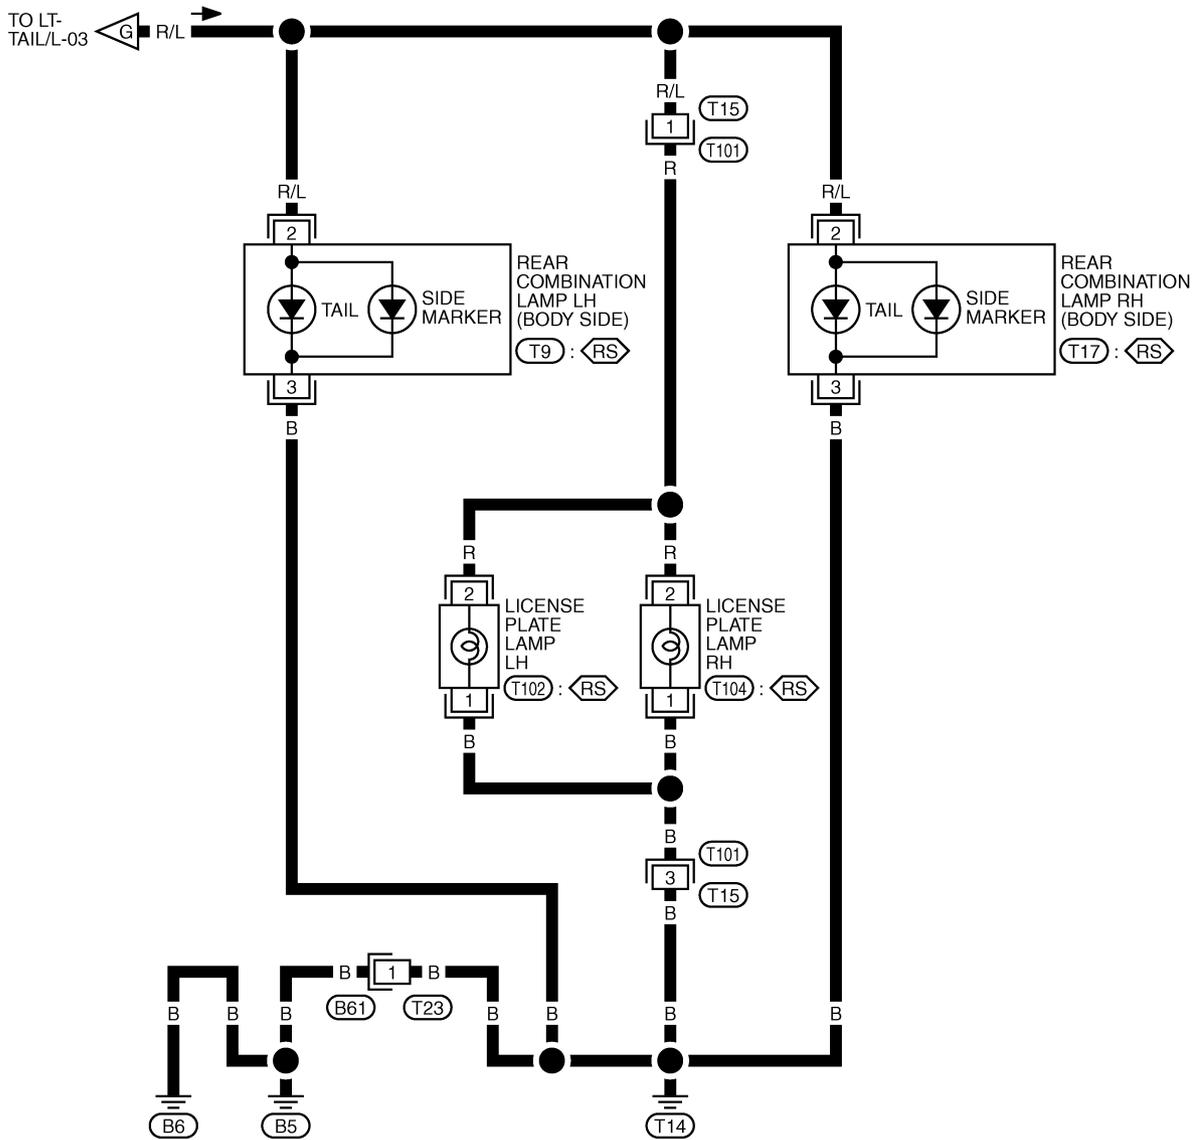

A
B
C
D
E
F
G
H
I
J
K
L
M

LT

TKWT4048E

PARKING, LICENSE PLATE AND TAIL LAMPS

NKS004Z5

Terminals and Reference Values for BCM

CAUTION:

- Check combination switch system terminal waveform under the loaded condition with lighting switch, turn signal switch and wiper switch OFF not to be fluctuated by overloaded.
- Turn wiper dial position to 4 except when checking waveform or voltage of wiper dial position. Wiper dial position can be confirmed on CONSULT-III. Refer to [LT-91, "DATA MONITOR"](#) .

Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
2	GY	Combination switch input 5	ON	OFF	Approx. 0 V
				Any of the conditions below <ul style="list-style-type: none"> ● Lighting switch 1ST ● Lighting switch HIGH beam (Operates only HIGH beam switch) 	<p style="text-align: right; font-size: small;">PKIB4959J</p>
				Lighting switch 2ND	<p style="text-align: right; font-size: small;">PKIB4953J</p>
3	L/W	Combination switch input 4	ON	OFF	Approx. 0 V
				Any of the conditions below <ul style="list-style-type: none"> ● Lighting switch 2ND ● Lighting switch PASSING (Operates only PASSING switch) 	<p style="text-align: right; font-size: small;">PKIB4959J</p>
11	LG	Ignition switch (ACC)	ACC	—	Battery voltage

PARKING, LICENSE PLATE AND TAIL LAMPS

Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
33	G	Combination switch output 4	ON	Lighting, turn, wiper switch (Wiper intermittent dial position 4)	<p style="text-align: right;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.2 V</p>
				Lighting switch 1ST (The same result with lighting switch 2ND)	<p style="text-align: right;">PKIB4958J</p> <p style="text-align: center;">Approx. 1.2 V</p>
34	W/L	Combination switch output 3	ON	Lighting, turn, wiper switch (Wiper intermittent dial position 4)	<p style="text-align: right;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.2 V</p>
				Any of the conditions below <ul style="list-style-type: none"> ● Lighting switch 2ND ● Lighting switch HI beam (Operates only HI beam switch) 	<p style="text-align: right;">PKIB4958J</p> <p style="text-align: center;">Approx. 1.2 V</p>
35	W/G	Combination switch output 2	ON	Lighting, turn, wiper switch (Wiper intermittent dial position 4)	<p style="text-align: right;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.2 V</p>
				Any of the conditions below <ul style="list-style-type: none"> ● Lighting switch 2ND ● Lighting switch PASSING (Operates only PASSING switch) 	<p style="text-align: right;">PKIB4958J</p> <p style="text-align: center;">Approx. 1.2 V</p>
38	W/L	Ignition switch (ON)	ON	—	Battery voltage

A
B
C
D
E
F
G
H
I
J
LT
L
M



PARKING, LICENSE PLATE AND TAIL LAMPS

Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
39	L	CAN – H	—	—	—
40	P	CAN – L	—	—	—
42	GY	Battery power supply	OFF	—	Battery voltage
52	B	Ground	ON	—	Approx. 0 V
55	R	Battery power supply	OFF	—	Battery voltage

Terminals and Reference Values for IPDM E/R

NKS004Z6

Terminal No.	Wire color	Signal name	Measuring condition			Reference value
			Ignition switch	Operation or condition		
22	R	Parking, license plate, side marker and tail lamp	ON	Lighting switch 1ST position	OFF	Approx. 0 V
					ON	Battery voltage
38	B	Ground	ON	—	—	Approx. 0 V
48	L	CAN – H	—	—	—	—
49	P	CAN – L	—	—	—	—
60	B	Ground	ON	—	—	Approx. 0 V

How to Proceed With Trouble Diagnosis

NKS004Z7

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-103, "System Description"](#) .
3. Carry out preliminary check. Refer to [LT-114, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do parking, license plate, side marker and tail lamps operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END

Preliminary Check

NKS004Z8

CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES AND FUSIBLE LINK

Check for blown fuses and fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	F
		18
	Ignition switch ON or START position	1
	Ignition switch ACC or ON position	6
IPDM E/R	Battery	71

Refer to [LT-107, "Wiring Diagram — TAIL/L —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

PARKING, LICENSE PLATE AND TAIL LAMPS


2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector terminals and ground.

Terminals		(-)	Ignition switch position		
(+)			OFF	ACC	ON
BCM connector	Terminal				
M90	11	Ground	Approx. 0 V	Battery voltage	Battery voltage
	38		Approx. 0 V	Approx. 0 V	Battery voltage
M91	42		Battery voltage	Battery voltage	Battery voltage
	55		Battery voltage	Battery voltage	Battery voltage

OK or NG

- OK >> GO TO 3.
 NG >> Repair harness or connector.

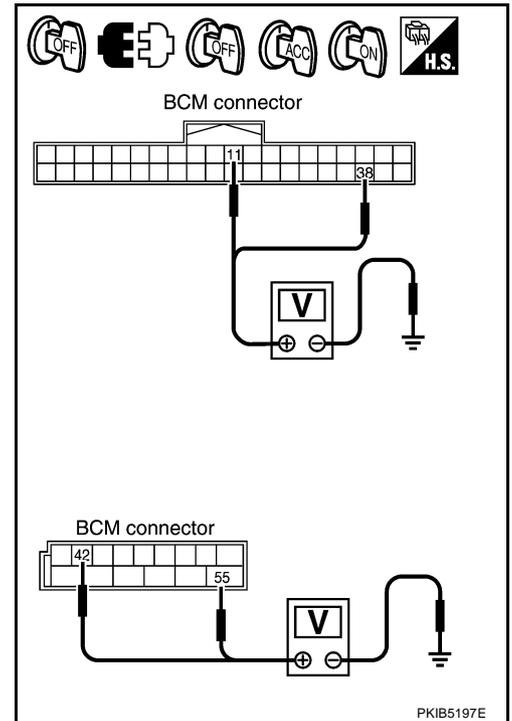


3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector terminal and ground.

BCM connector	Terminal	Ground	Continuity
M91	52		Yes

OK or NG

- OK >> INSPECTION END
 NG >> Repair harness or connector.

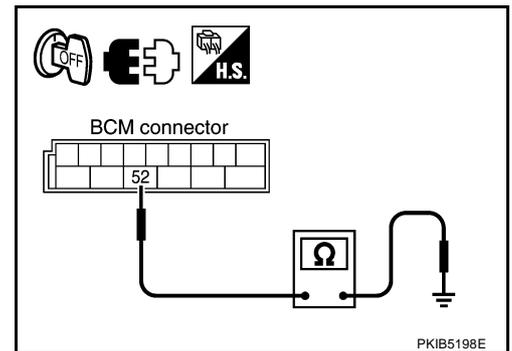

CONSULT-III Function (BCM)

Refer to [LT-17, "CONSULT-III Function \(BCM\)"](#) in HEADLAMP (FOR USA).
 Refer to [LT-49, "CONSULT-III Function \(BCM\)"](#) in HEADLAMP (FOR CANADA).

CONSULT-III Function (IPDM E/R)

Refer to [LT-18, "CONSULT-III Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).
 Refer to [LT-50, "CONSULT-III Function \(IPDM E/R\)"](#) in HEADLAMP (FOR CANADA).

PARKING, LICENSE PLATE AND TAIL LAMPS

Parking, License Plate, Side Marker and Tail Lamps Do Not Illuminate (for USA)

NKS004ZB

1. CHECK COMBINATION SWITCH INPUT SIGNAL

CONSULT-III DATA MONITOR

1. Select "LIGHT SW 1ST" of BCM data monitor item.
2. With operating the lighting switch, check the monitor status.

When lighting switch is 1ST : LIGHT SW 1ST ON position

CHECK COMBINATION SWITCH

Refer to [LT-92, "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check combination switch (lighting switch). Refer to [LT-92, "Combination Switch Inspection"](#) .

2. ACTIVE TEST

CONSULT-III ACTIVE TEST

1. Select "TAIL LAMP" of IPDM E/R active test item.
2. With operating the test item, check the parking, license plate, side marker and tail lamps operation.

Parking, license plate, side marker and tail lamps should operate.

IPDM E/R AUTO ACTIVE TEST

1. Start auto active test. Refer to [PG-20, "Auto Active Test"](#) .
2. Check that the parking, license plate, side marker and tail lamps operation.

Parking, license plate, side marker and tail lamps should operate.

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

3. CHECK IPDM E/R

1. Select "TAIL&CLR REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status.

When lighting switch is 1ST : TAIL&CLR REQ ON position

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#) .

NG >> Replace BCM. Refer to [BCS-17, "Removal and Installation of BCM"](#) .

PARKING, LICENSE PLATE AND TAIL LAMPS

4. CHECK IPDM E/R


CONSULT-III ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect front combination lamp, rear combination lamp and license plate lamp connectors.
3. Select "TAIL LAMP" of IPDM E/R active test item.
4. With operating the test item, check voltage between front combination lamp, rear combination lamp and license plate lamp harness connector and ground.


IPDM E/R AUTO ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect front combination lamp, rear combination lamp and license plate lamp connector.
3. Start auto active test. Refer to [PG-20, "Auto Active Test"](#).
4. With operating the test item, check voltage between front combination lamp, rear combination lamp and license plate lamp harness connector and ground.


Terminals				Voltage (Approx.)
(+)		Terminal	(-)	
Front combination lamp connector				6
RH	E24			
LH	E40			

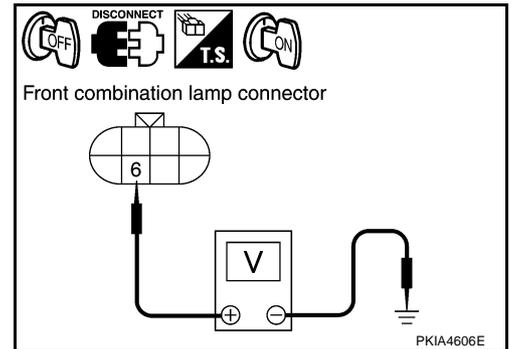

Terminals				Voltage (Approx.)
(+)		Terminal	(-)	
Rear combination lamp connector				2
RH	T17			
LH	T9			

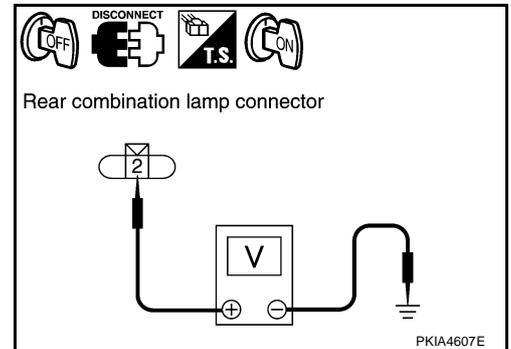

Terminals				Voltage (Approx.)
(+)		Terminal	(-)	
License plate lamp connector				2
RH	T104			
LH	T102			

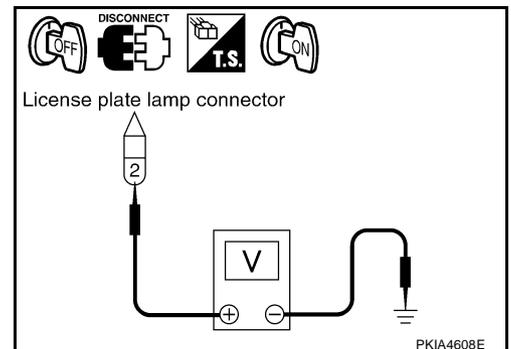

OK or NG


- OK >> GO TO 6.
 NG >> GO TO 5.

PARKING, LICENSE PLATE AND TAIL LAMPS


5. CHECK CIRCUIT BETWEEN IPDM E/R AND PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp, rear combination lamp and license plate lamp harness connector.


Terminals				Continuity
IPDM E/R		Front combination lamp		
Connector	Terminal	Connector	Terminal	
E7	22	RH	E24	6
		LH	E40	6

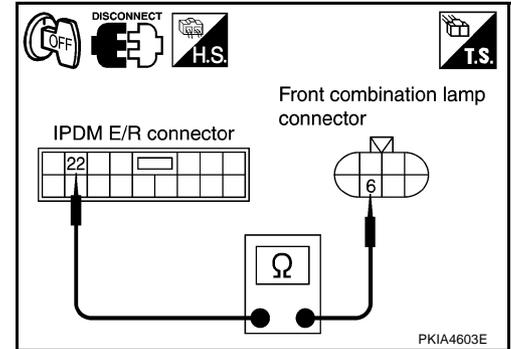

Terminals				Continuity
IPDM E/R		Rear combination lamp		
Connector	Terminal	Connector	Terminal	
E7	22	RH	T17	2
		LH	T9	2

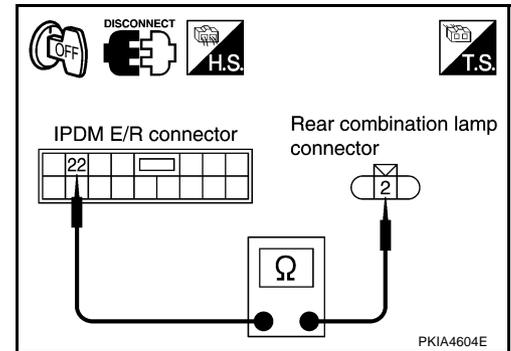

Terminals				Continuity
IPDM E/R		Licence plat lamp		
Connector	Terminal	Connector	Terminal	
E7	22	RH	T104	2
		LH	T102	2

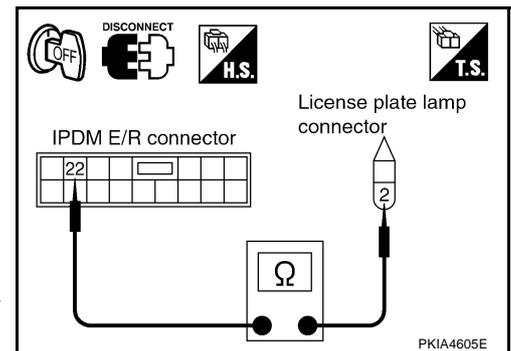

OK or NG


- OK >> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

PARKING, LICENSE PLATE AND TAIL LAMPS


6. CHECK GROUND

1. Check continuity between front combination lamp, rear combination lamp and license plate lamp harness connector and ground.


Front combination lamp connector		Terminal	Ground	Continuity
RH	E24	8		Yes
LH	E40			

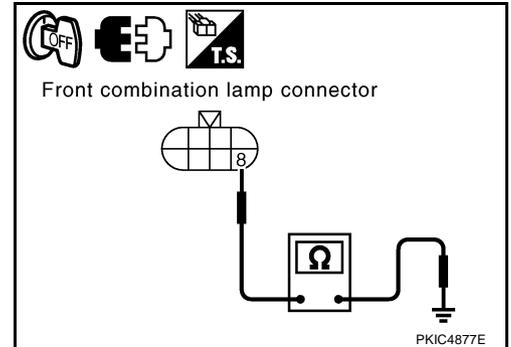

Rear combination lamp connector		Terminal	Ground	Continuity
RH	T17	3		Yes
LH	T9			

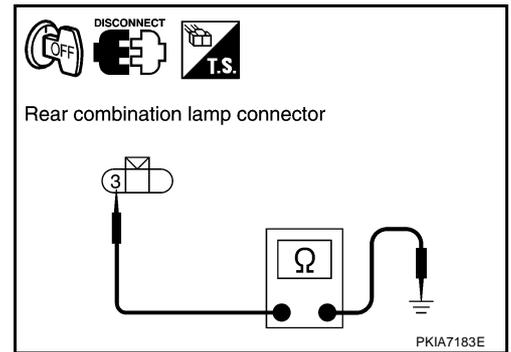

License plate lamp connector		Terminal	Ground	Continuity
RH	T104	1		Yes
LH	T102			

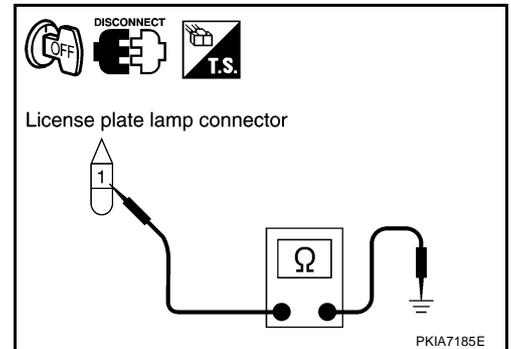

OK or NG

- OK >> Check bulb.
- NG >> Repair harness or connector.

Parking, License Plate, Side Marker, and Tail Lamps Do Not Illuminate (for Canada)

NKS004ZC

1. CHECK COMBINATION SWITCH INPUT SIGNAL

CONSULT-III DATA MONITOR

1. Select "LIGHT SW 1ST" of BCM data monitor item.
2. With operating the lighting switch, check the monitor status.

When lighting switch is 1ST : LIGHT SW 1ST ON position

CHECK COMBINATION SWITCH

Refer to [LT-92. "Combination Switch Inspection"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Check combination switch (lighting switch). Refer to [LT-92. "Combination Switch Inspection"](#).

PARKING, LICENSE PLATE AND TAIL LAMPS

2. ACTIVE TEST

CONSULT-III ACTIVE TEST

1. Select "TAIL LAMP" of IPDM E/R active test item.
2. With operating the test item, check the parking, license plate, side marker and tail lamps operation.

Parking, license plate, side marker and tail lamps should operate.

IPDM E/R AUTO ACTIVE TEST

1. Start auto active test. Refer to [PG-20, "Auto Active Test"](#) .
2. With operating the test item, check the parking, license plate, side marker and tail lamps operation.

Parking, license plate, side marker and tail lamps should operate.

OK or NG

- OK >> GO TO 3.
NG >> GO TO 4.

3. CHECK IPDM E/R

1. Select "TAIL&CLR REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status.

When lighting switch is 1ST : TAIL&CLR REQ ON position

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#) .
NG >> Replace BCM. Refer to [BCS-17, "Removal and Installation of BCM"](#) .


4. CHECK POWER SUPPLY CIRCUIT TO DAYTIME LIGHT RELAY

1. Turn ignition OFF.
2. Disconnect daytime light relay.
3. Check voltage between daytime light relay harness connector and ground.

Terminal (+)		Terminal (-)	voltage (Approx.)
Daytime light relay connector	Terminal		
E20	1	Ground	Battery voltage
	3		

OK or NG

- OK >> GO TO 5.
NG >> Repair harness or connector.

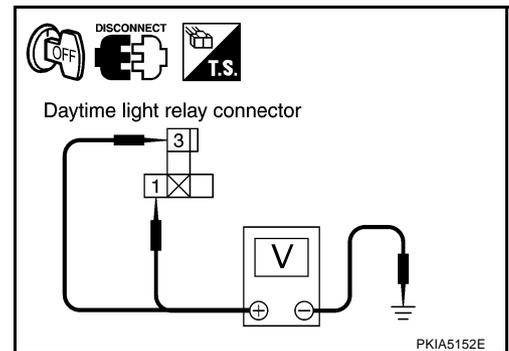

PARKING, LICENSE PLATE AND TAIL LAMPS


5. CHECK DAYTIME LIGHT RELAY

Apply battery voltage to between daytime light relay E20 terminal 1, 2 and check continuity between terminal 3 and 5.

3 – 5 : Continuity should exist.

OK or NG

- OK >> GO TO 6.
- NG >> Replace daytime light relay.

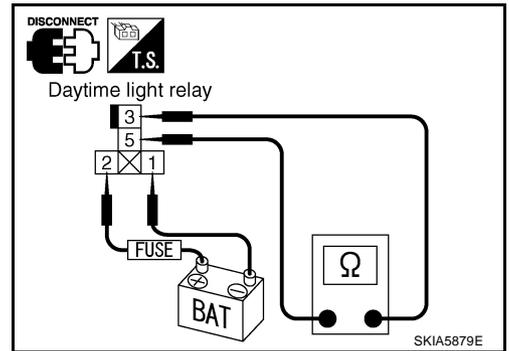


6. CHECK DAYTIME LIGHT RELAY CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and daytime light relay harness connector.

Terminals				Continuity
IPDM E/R		Daytime light relay		
Connector	Terminal	Connector	Terminal	
E9	55	E20	2	Yes

OK or NG

- OK >> GO TO 7.
- NG >> Repair harness or connector.

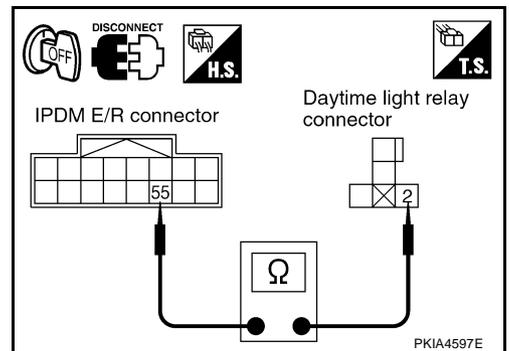

A
B
C
D
E
F
G
H
I
J
LT
L
M

PARKING, LICENSE PLATE AND TAIL LAMPS

7. CHECK IPDM E/R


CONSULT-III ACTIVE TEST

1. Connect daytime light relay and IPDM E/R connector.
2. Disconnect front combination lamp, rear combination lamp and license plate lamp connectors.
3. Select "TAIL LAMP" of IPDM E/R active test item.
4. With operating the test item, check voltage between front combination lamp, rear combination lamp and license plate lamp harness connector and ground.


IPDM E/R AUTO ACTIVE TEST

1. Connect daytime light relay and IPDM E/R connector.
2. Disconnect front combination lamp, rear combination lamp and license plate lamp connector.
3. Start auto active test. Refer to [PG-20, "Auto Active Test"](#) .
4. With operating the test item, check voltage between front combination lamp, rear combination lamp and license plate lamp harness connector and ground.


Terminals				Voltage (Approx.)
(+)		Terminal	(-)	
Front combination lamp connector				6
RH	E24			
LH	E40			

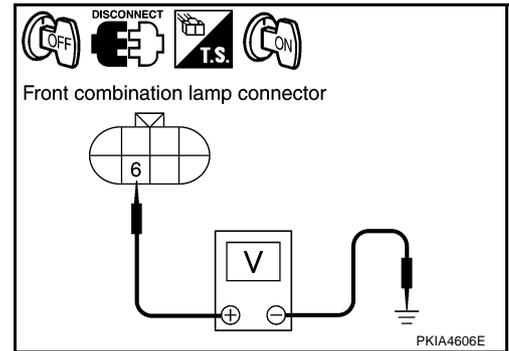

Terminals				Voltage (Approx.)
(+)		Terminal	(-)	
Rear combination lamp connector				2
RH	T17			
LH	T9			

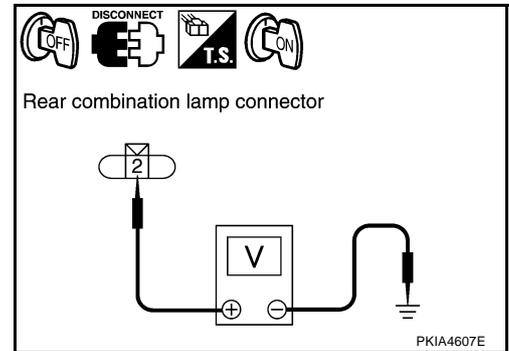

Terminals				Voltage (Approx.)
(+)		Terminal	(-)	
License plate lamp connector				2
RH	T104			
LH	T102			

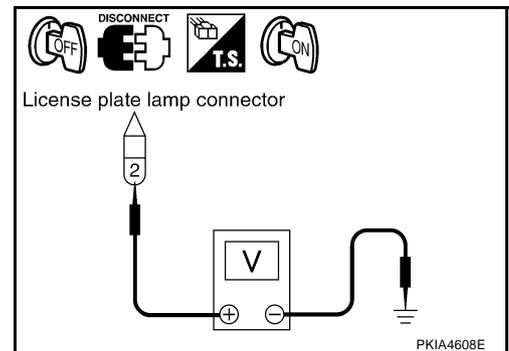

OK or NG


- OK >> GO TO 9.
 NG >> GO TO 8.

PARKING, LICENSE PLATE AND TAIL LAMPS


8. CHECK CIRCUIT BETWEEN IPDM E/R AND PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp, rear combination lamp and license plate lamp harness connector.


Terminals					Continuity
IPDM E/R		Front combination lamp			
Connector	Terminal	Connector	Terminal		
E7	22	RH	E24	6	Yes
		LH	E40	6	

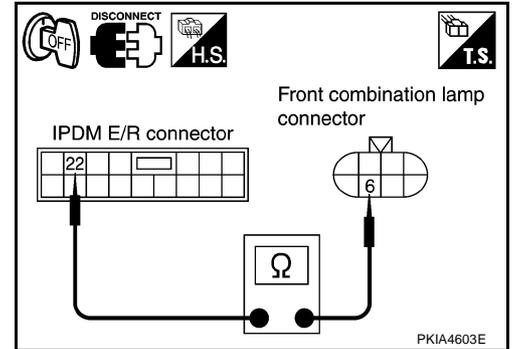

Terminals					Continuity
IPDM E/R		Rear combination lamp			
Connector	Terminal	Connector	Terminal		
E7	22	RH	T17	2	Yes
		LH	T9	2	

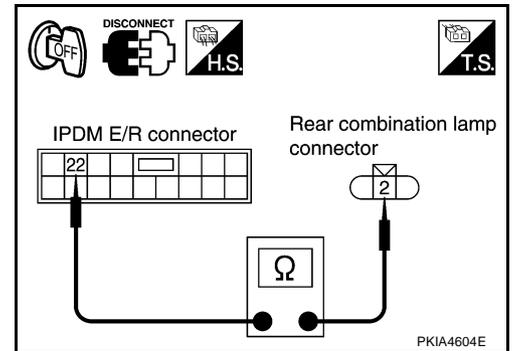

Terminals					Continuity
IPDM E/R		Licence plat lamp			
Connector	Terminal	Connector	Terminal		
E7	22	RH	T104	2	Yes
		LH	T102	2	

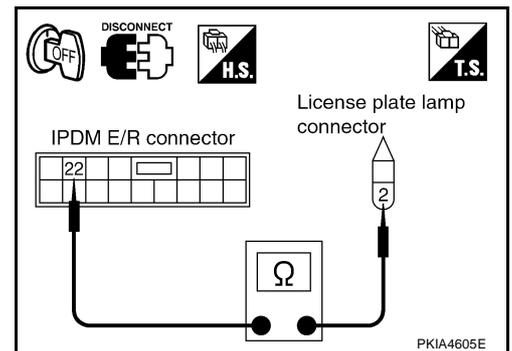

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.


A
B
C
D
E
F
G
H
I
J
LT
L
M

PARKING, LICENSE PLATE AND TAIL LAMPS


9. CHECK GROUND

1. Check continuity between front combination lamp, rear combination lamp and license plate lamp harness connector and ground.


Front combination lamp connector		Terminal	Ground	Continuity
RH	E24	8		Yes
LH	E40			

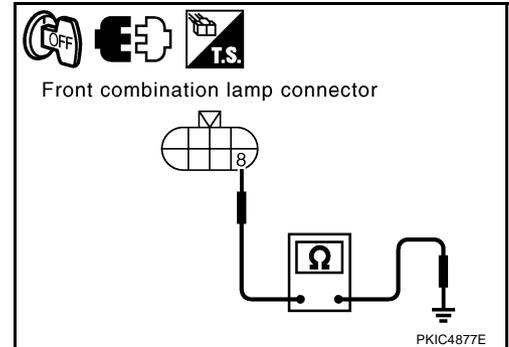

Rear combination lamp connector		Terminal	Ground	Continuity
RH	T17	3		Yes
LH	T9			

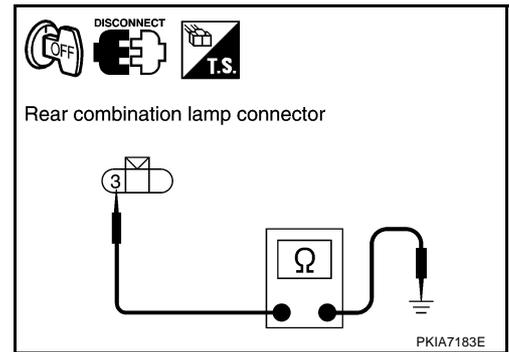

License plate lamp connector		Terminal	Ground	Continuity
RH	T104	1		Yes
LH	T102			

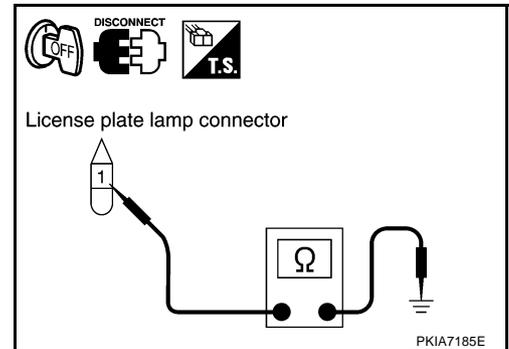

OK or NG

- OK >> Check bulb.
 NG >> Repair harness or connector.

Parking, Side Marker, License Plate and Tail Lamps Do Not Turn OFF (After Approx. 10 Minutes)

NKS004ZD

1. CHECK IPDM E/R

1. Turn ignition switch ON. Place combination switch (lighting switch) in the ON position. Turn ignition switch OFF.
2. Make sure parking, license plate, and tail lamps turn OFF after approximately 10 minutes.

OK or NG


- OK >> INSPECTION END.
 NG >> Ignition relay malfunction. Refer to [PG-17, "Function of Detecting Ignition Relay Malfunction"](#).

PARKING, LICENSE PLATE AND TAIL LAMPS

License Plate Lamp BULB REPLACEMENT, REMOVAL AND INSTALLATION

NKS004ZE


1. While pressing license plate lamp to rightward, pull left side of it and remove.
2. Disconnect license plate lamp connector.

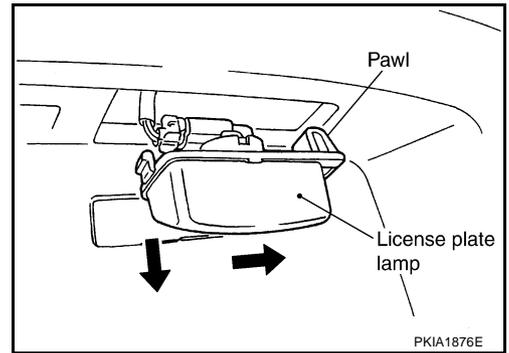

3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from it's socket.

License plate lamp : 12V - 5W

5. Installation is the reverse order of removal.

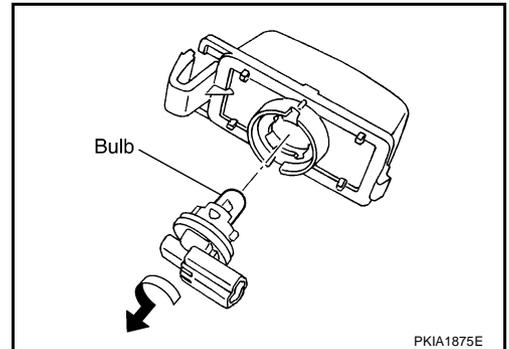

Front Parking Lamp BULB REPLACEMENT

NKS004ZF

Refer to [LT-28, "Bulb Replacement"](#) .

REMOVAL AND INSTALLATION

Refer to [LT-29, "Removal and Installation"](#) .

Tail Lamp BULB REPLACEMENT

NKS004ZG

Refer to [LT-126, "Bulb Replacement"](#) .

REMOVAL AND INSTALLATION

Refer to [LT-127, "Removal and Installation"](#) .

A
B
C
D
E
F
G
H
I
J
LT
L
M

REAR COMBINATION LAMP

PFP:26554

REAR COMBINATION LAMP

Bulb Replacement

NKS004ZH

REAR FENDER SIDE (STOP & TAIL LAMP, REAR SIDE MARKER LAMP)


1. Remove rear combination lamp. Refer to [LT-127, "Removal and Installation"](#).
2. Replacement integral with rear combination lamp (rear fender side).

Stop/tail lamp : LED

Rear side marker lamp : LED

REAR BUMPER SIDE (BACK-UP LAMP BULB, REAR TURN SIGNAL LAMP BULB)


1. Remove rear combination lamp. Refer to [LT-127, "Removal and Installation"](#)
2. Turn bulb socket counterclockwise and unlock it through bumper fascia crevice.

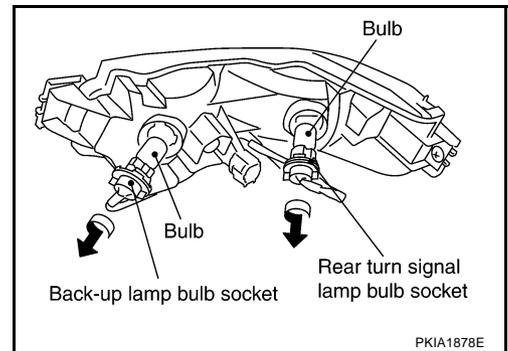

3. Remove bulb.
4. Installation is the reverse order of removal.

Rear turn signal lamp (rear bumper side) : 12 V - 21 W (amber)

Back-up lamp (rear bumper side) : 12 V - 21 W

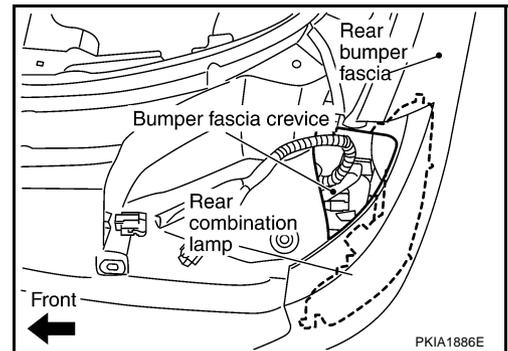

REAR COMBINATION LAMP


Removal and Installation

NKS004ZI

REMOVAL


Rear Fender Side

1. Remove plugs and remove rear combination lamp mounting bolts.
2. Pull rear combination lamp toward side of the vehicle and remove from the vehicle.
3. Disconnect rear combination lamp connector.

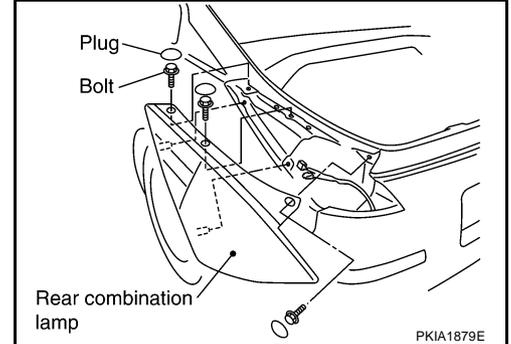

Rear Bumper Side

1. Remove rear bumper fascia. Refer to [EI-17, "REAR BUMPER"](#).
2. Disconnect rear combination lamp connector.
3. Remove rear combination lamp mounting screws.
4. Remove rear combination lamp from rear bumper fascia.

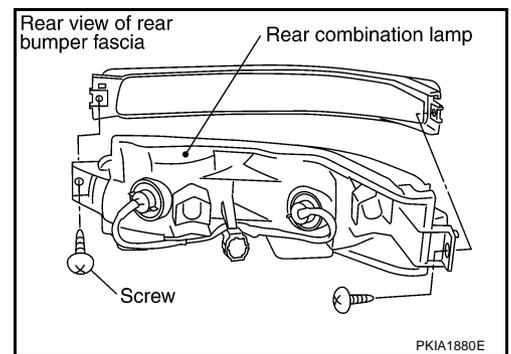

INSTALLATION

Installation is the reverse order of removal. Be careful of the following:

Rear combination lamp (Rear fender side) mounting bolt  : 5.5 N-m (0.56 kg-m, 49 in-lb)

A

B

C

D

E

F

G

H

I

J

LT

L

M


INTERIOR ROOM LAMP

PFP:26410

INTERIOR ROOM LAMP

Component Parts and Harness Connector Location

NKS004ZJ

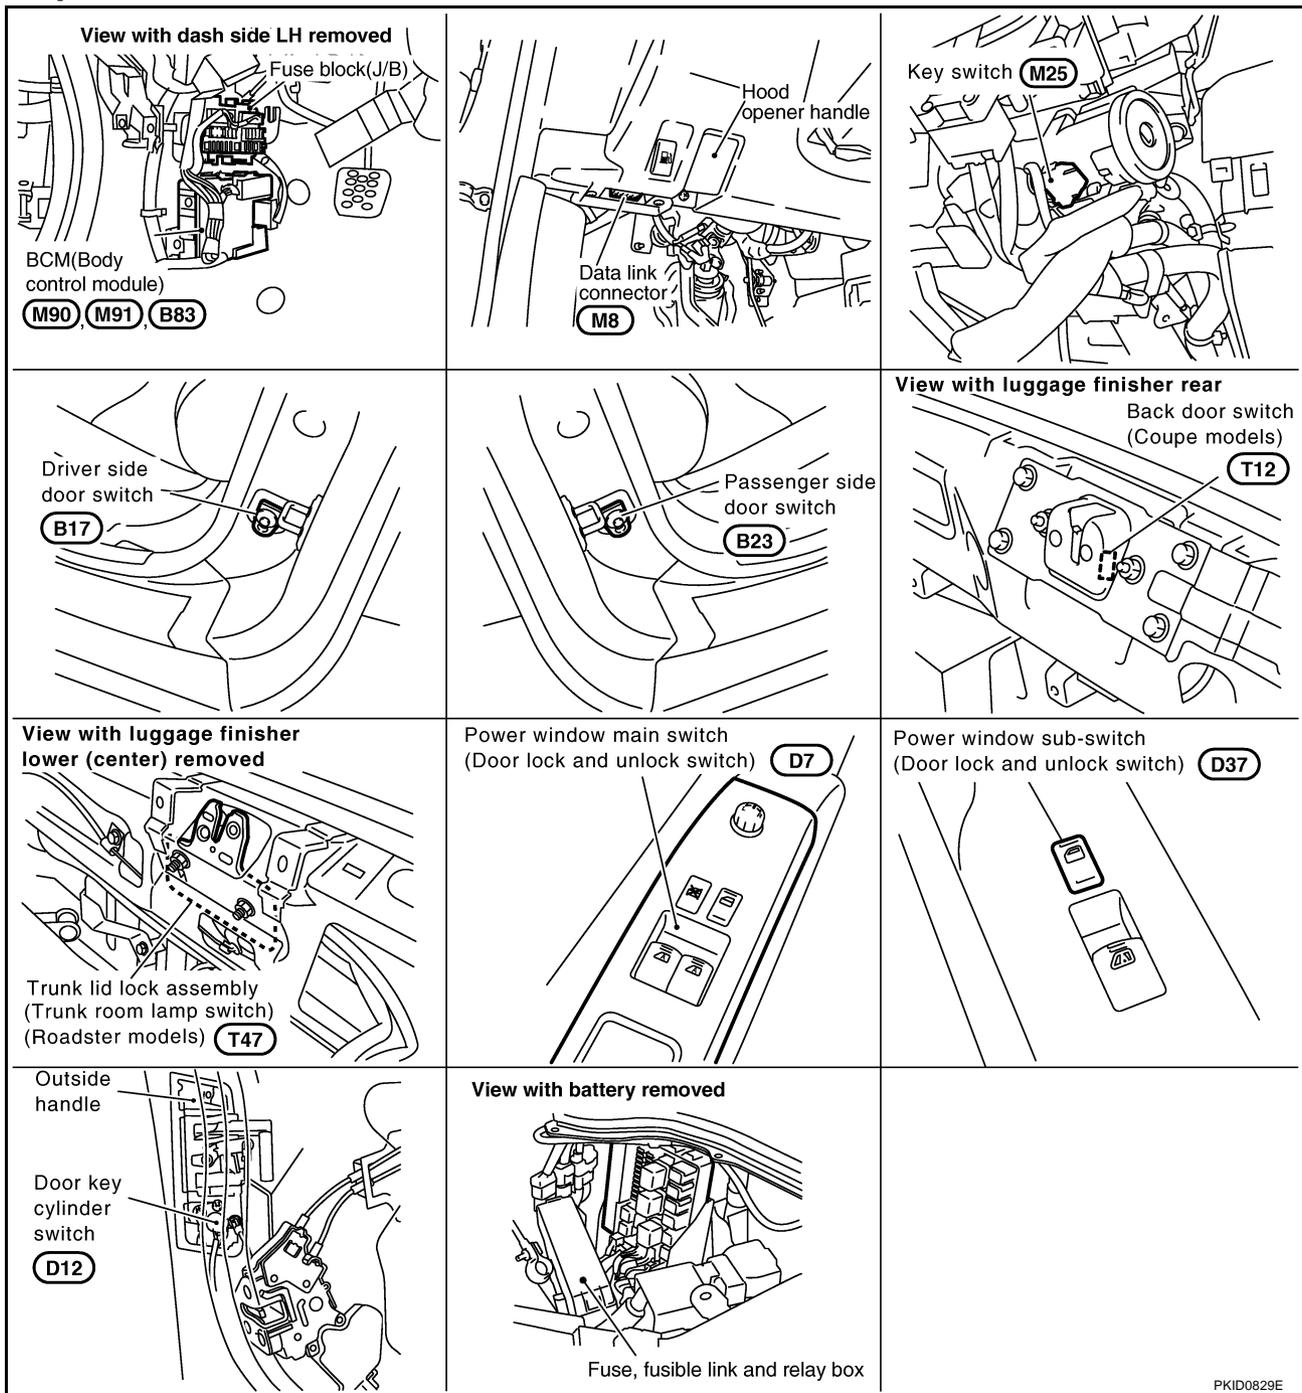

PKID0829E

System Description

NKS004ZK

When the map lamp switch is in the DOOR position, map lamp ON/OFF is controlled by timer according to signals from switches including key switch, door switch driver side and assist side, unlock and lock signal from key fob, door lock and unlock switch, key cylinder lock and unlock switch, ignition switch.

When the map lamp turns ON, there is a gradual brightening over 1 second. When map lamp turns OFF, there is a gradual dimming over 1 second.

Map lamp timer is controlled by BCM (body control module).

Map lamp timer control settings can be changed with CONSULT-III.

Ignition key hole illumination turns ON at time when driver door is opened (door switch ON) or removed key fob from key cylinder. Illumination turns OFF when driver door is closed (door switch OFF).

INTERIOR ROOM LAMP

POWER SUPPLY AND GROUND

Power is supplied at all times

- through 10A fuse [No.21, located in fuse block (J/B)]
- to key switch terminal 2,
- through 10A fuse [No.18, located in fuse block (J/B)]
- to BCM terminal 42,
- through 40A fusible link (letter F, located in fuse, fusible link and relay box)
- to BCM terminal 55.

When key is removed from ignition key cylinder, power is interrupted

- through key switch terminal 1
- to BCM terminal 37.

With ignition switch in ON or START position, power is supplied

- through 10A fuse [No.1, located in fuse block (J/B)]
- to BCM terminal 38.

When map lamp and vanity mirror lamp power is supplied at times

- through BCM terminal 41
- to ignition key hole illumination terminal1
- to map lamp terminal 3 (Coupe models)
- to map lamp terminal 2 (Roadster models)
- to luggage room lamp terminal 1 (Coupe models)
- to trunk room lamp terminal 1 (Roadster models) and
- to vanity mirror lamp LH and RH terminals 1.

Ground is supplied

- to BCM terminal 52
- through grounds M30 and M66.

When driver side door is opened, ground is supplied

- through case ground of driver side door switch
- to BCM terminal 62.

When passenger side door is opened, ground is supplied

- through case ground of passenger side door switch
- to BCM terminal 12.

When back door is opened, ground is supplied (Coupe models)

- through grounds B5, B6, D105 and T14
- to back door switch terminal 3
- through back door switch terminal 1
- to BCM terminal 58.

When trunk lid is opened, ground is supplied (Roadster models)

- through grounds B5, B6 and T14
- to trunk lid lock assembly (trunk room lamp switch) terminal 1
- through trunk lid lock assembly (trunk room lamp switch) terminal 3
- to BCM terminal 57.

When the driver side door or passenger side door is unlocked by door lock and unlock switch, The BCM receives unlock signal with power window serial link

- through grounds M30 and M66
- to power window main switch (door lock and unlock switch) terminal 15 or power window sub switch (door lock and unlock switch) terminal 11
- through power window main switch (door lock and unlock switch) terminal 12 and power window sub switch (door lock and unlock switch) terminal 16
- to BCM terminal 22.

A

B

C

D

E

F

G

H

I

J

LT

L

M

INTERIOR ROOM LAMP

When the driver side door is unlocked by door key cylinder switch, The BCM receives information by communicating with power window main switch

- through grounds M30 and M66
- to door key cylinder switch terminal 2
- through door key cylinder switch terminal 1
- to power window main (door lock and unlock switch) switch terminal 7
- through power window main switch (door lock and unlock switch) terminal 12
- to BCM terminal 22.

When a signal, or combination of signals is received by BCM, ground is supplied

- through BCM terminal 48
- to map lamp terminal 2 (Coupe models)
- to map lamp terminal 3 (Roadster models).

With power and ground are supplied, map lamp illuminates.

SWITCH OPERATION

When map lamp switch is ON, ground is supplied

- to map lamp terminal 1 (Coupe models)
- to map lamp terminal 1 (Roadster models)
- through grounds M30 and M66.

And power is supplied

- through BCM terminal 41
- to ignition key hole illumination terminal 1
- to map lamp terminal 3 (Coupe models)
- to map lamp terminal 2 (Roadster models).

When vanity mirror lamp LH and RH is ON, ground is supplied

- to vanity mirror lamp LH and RH terminals 2
- through grounds M30 and M66.

And power is supplied

- through BCM terminal 41
- to vanity mirror lamp terminal 1.

MAP LAMP TIMER OPERATION

When the map lamp switch is in the DOOR position, and when all conditions below are met, BCM performs timer control (maximum 30 seconds) for map lamp ON/OFF.

In addition, when map lamp turns ON or OFF there is gradual brightening or dimming over 1 second.

Power is supplied at all times

- to 10A fuse [No. 21 located in fuse block (J/B)]
- through key switch terminal 2.

When all doors are closed (all door switches OFF) and key is removed from key cylinder (key switch OFF), power will not be supplied to BCM terminal 37.

Ground is supplied

- through BCM terminal 22
- to power window main switch (door lock and unlock switch) terminal 12.

At this time, BCM detects that driver door is unlocked. It determines that map lamp timer operation conditions are met, and turns map lamp ON for 30 seconds.

When all doors are closed (all door switches OFF) and key is in key cylinder (key switch ON),

Power is supplied

- through key switch terminal 1
- to BCM terminal 37.

When the key is removed from key switch (key switch OFF), power supply to BCM terminal 37 is terminated. BCM detects that key has been removed. It determines that map lamp timer conditions are met, and turns map lamp ON for 30 seconds.

INTERIOR ROOM LAMP

When driver door opens → closes, and key is not inserted in key switch (key switch OFF), BCM terminal 62 changes between 0V (door open) → 5V (door closed). BCM determines that conditions for spot lamp operation are met and turns interior lamp ON for 30 seconds.

Timer control is canceled under the following conditions.

- Driver door is locked (When locked key fob or power window main switch (door lock and unlock switch, door key cylinder switch).
- Driver door is opened (driver door switch turns ON).
- Ignition switch ON.

INTERIOR LAMP BATTERY SAVER CONTROL

If the room lamp remains illuminated by door switch open signal, or if room lamp switch is in the ON position for more than 30 minutes after the ignition switch is turned to the OFF position, BCM will automatically turn off map lamp, luggage room lamp (Coupe models), trunk room lamp (Roadster models) and vanity mirror lamp. After lamps turn OFF by battery saver system, the lamps illuminate again when

- signal from key fob, door lock and unlock switch, or key cylinder is locked or unlocked,
- door is opened or closed,
- key is removed from ignition key cylinder or inserted in ignition key cylinder.


Interior lamp battery saver control period can be changed by the function setting of CONSULT-III.

A
B
C
D
E
F
G
H
I
J
LT
L
M

INTERIOR ROOM LAMP

Schematic

NKS004ZL

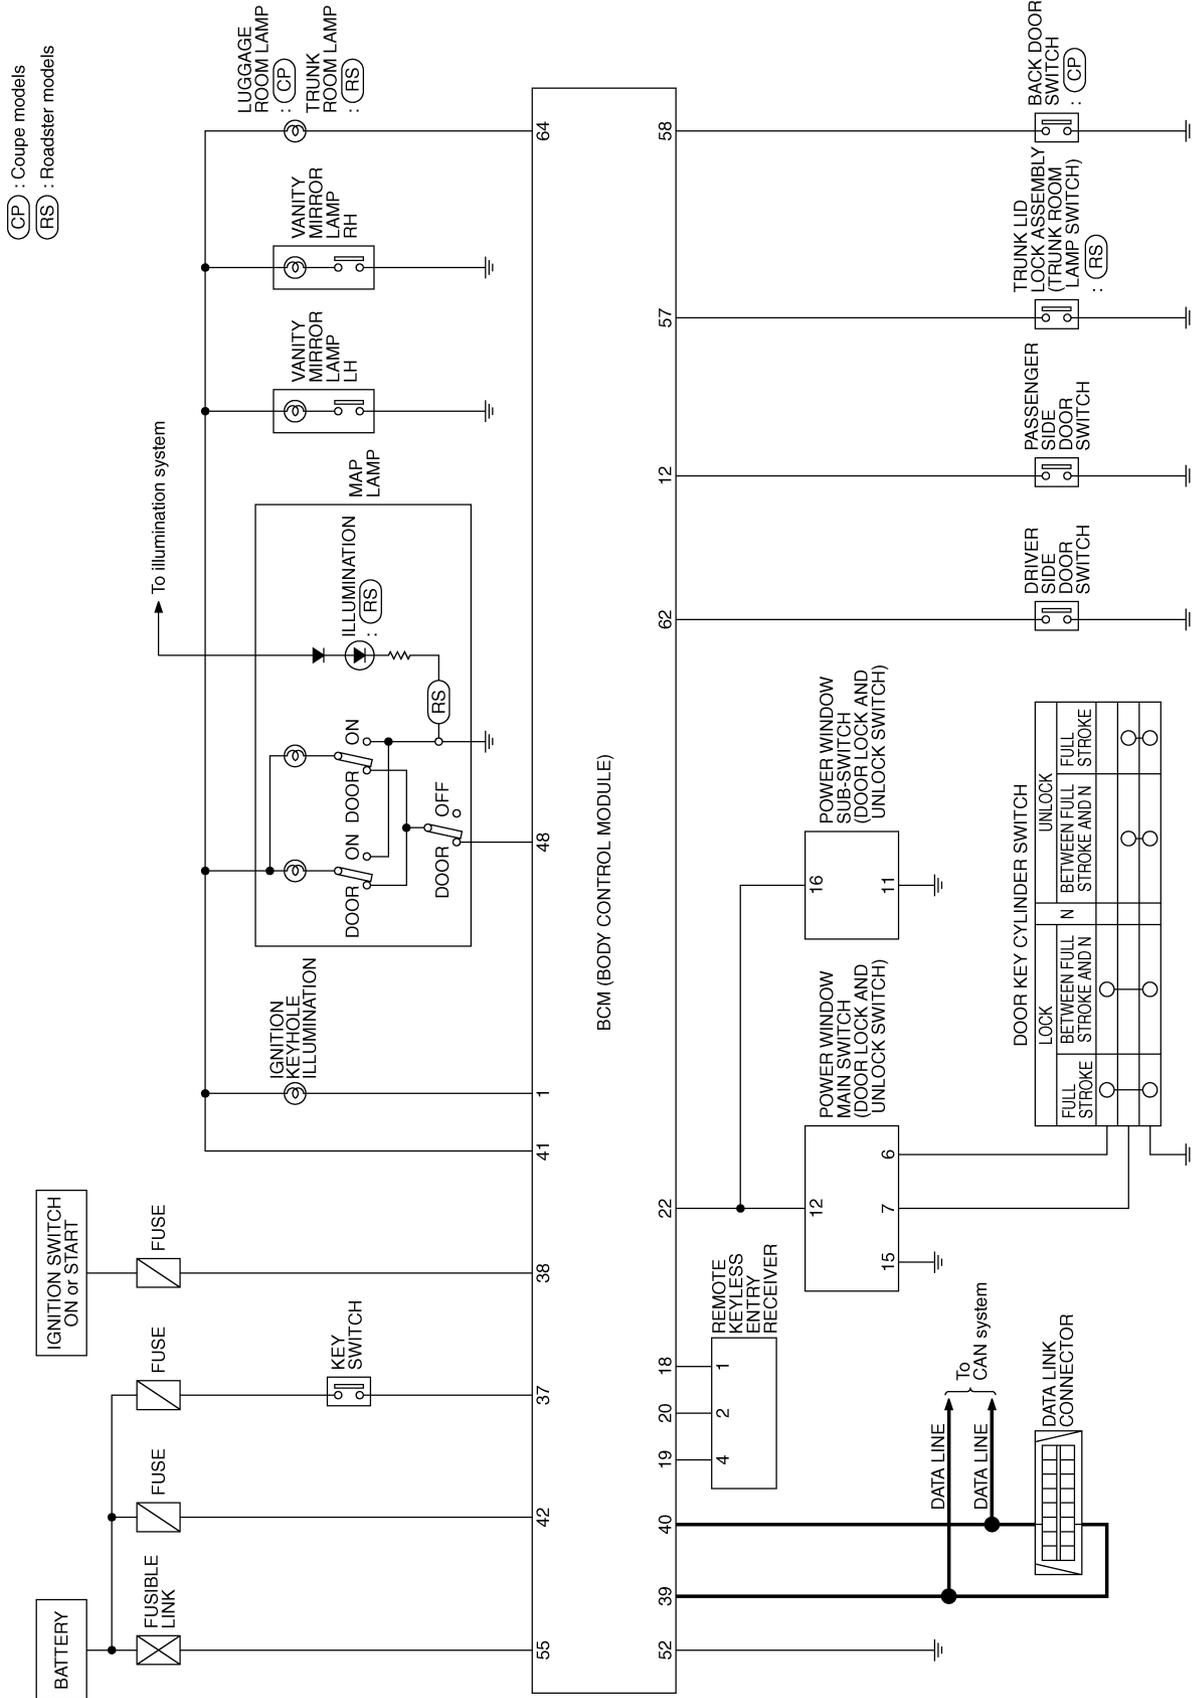

TKWT5763E



INTERIOR ROOM LAMP

Wiring Diagram — ROOM/L — COUPE MODELS

NKS004ZM

LT-ROOM/L-01

▬▬▬ : DATA LINE

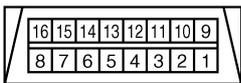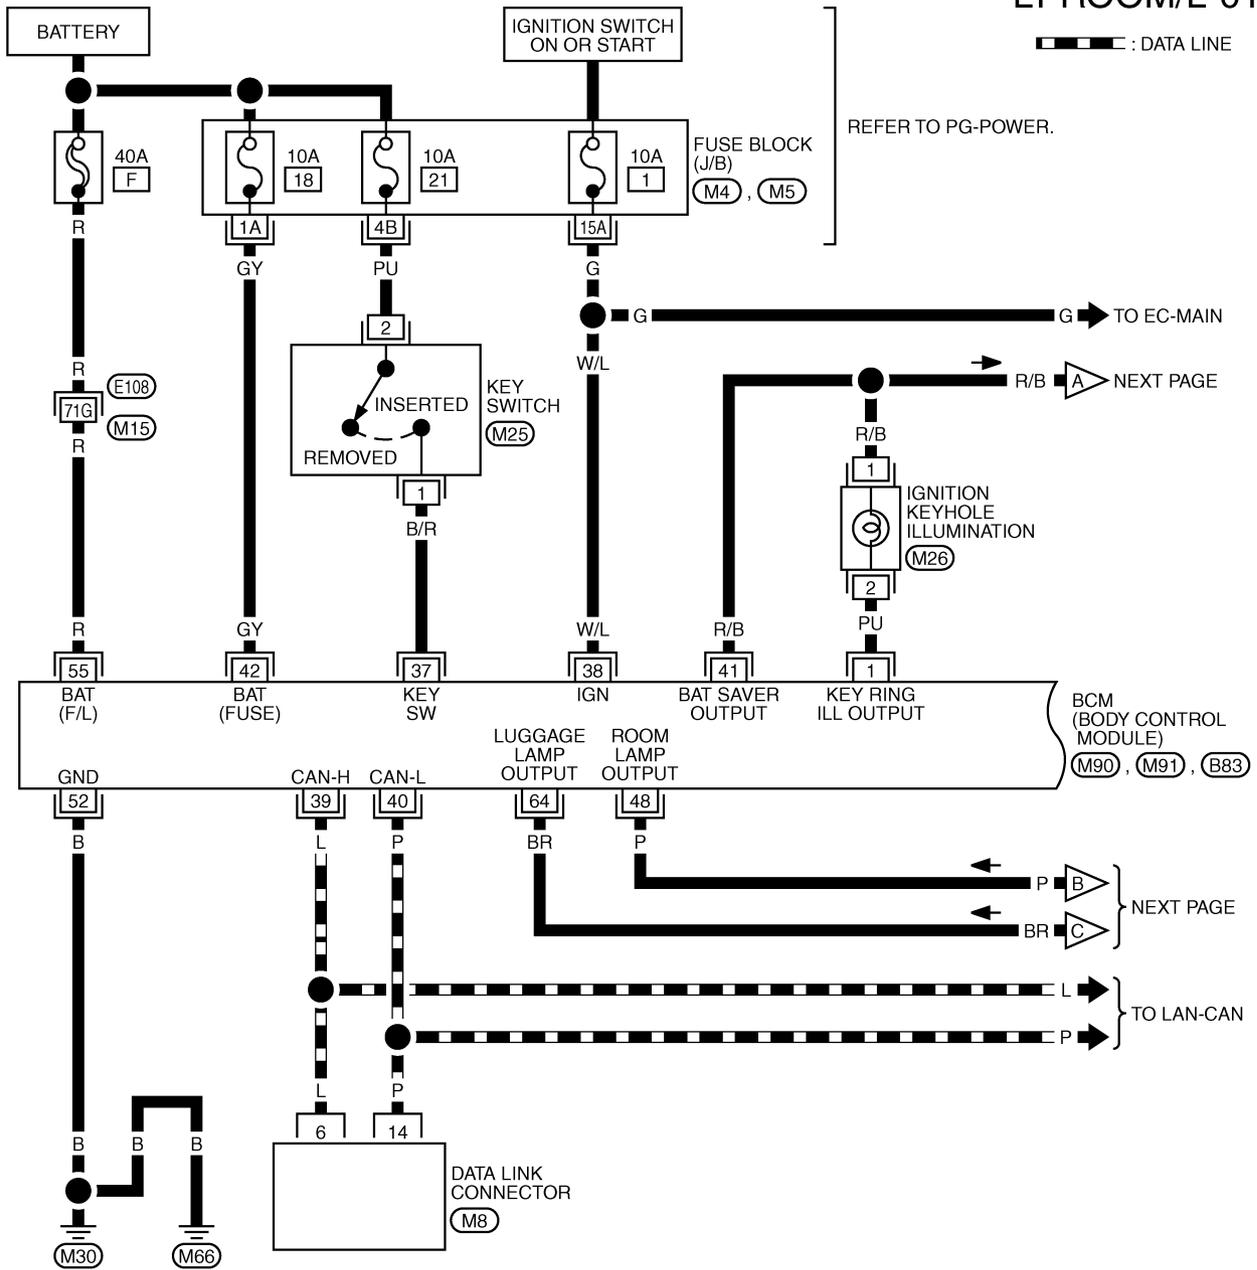

(M8) W

(M25) BR

(M26) W

REFER TO THE FOLLOWING.

(E108) -SUPER MULTIPLE JUNCTION (SMJ)



(M4), (M5) -FUSE BLOCK-JUNCTION BOX (J/B)

(M90), (M91), (B83) -ELECTRICAL UNITS

TKWT5764E

INTERIOR ROOM LAMP

LT-ROOM/L-02

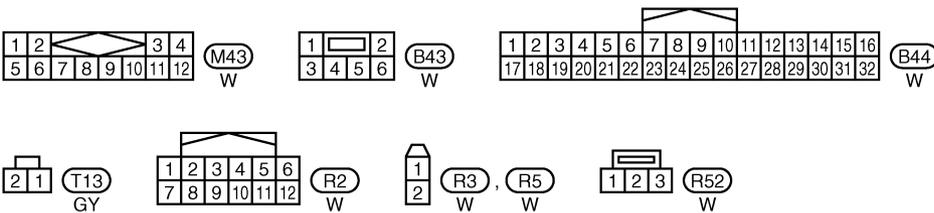
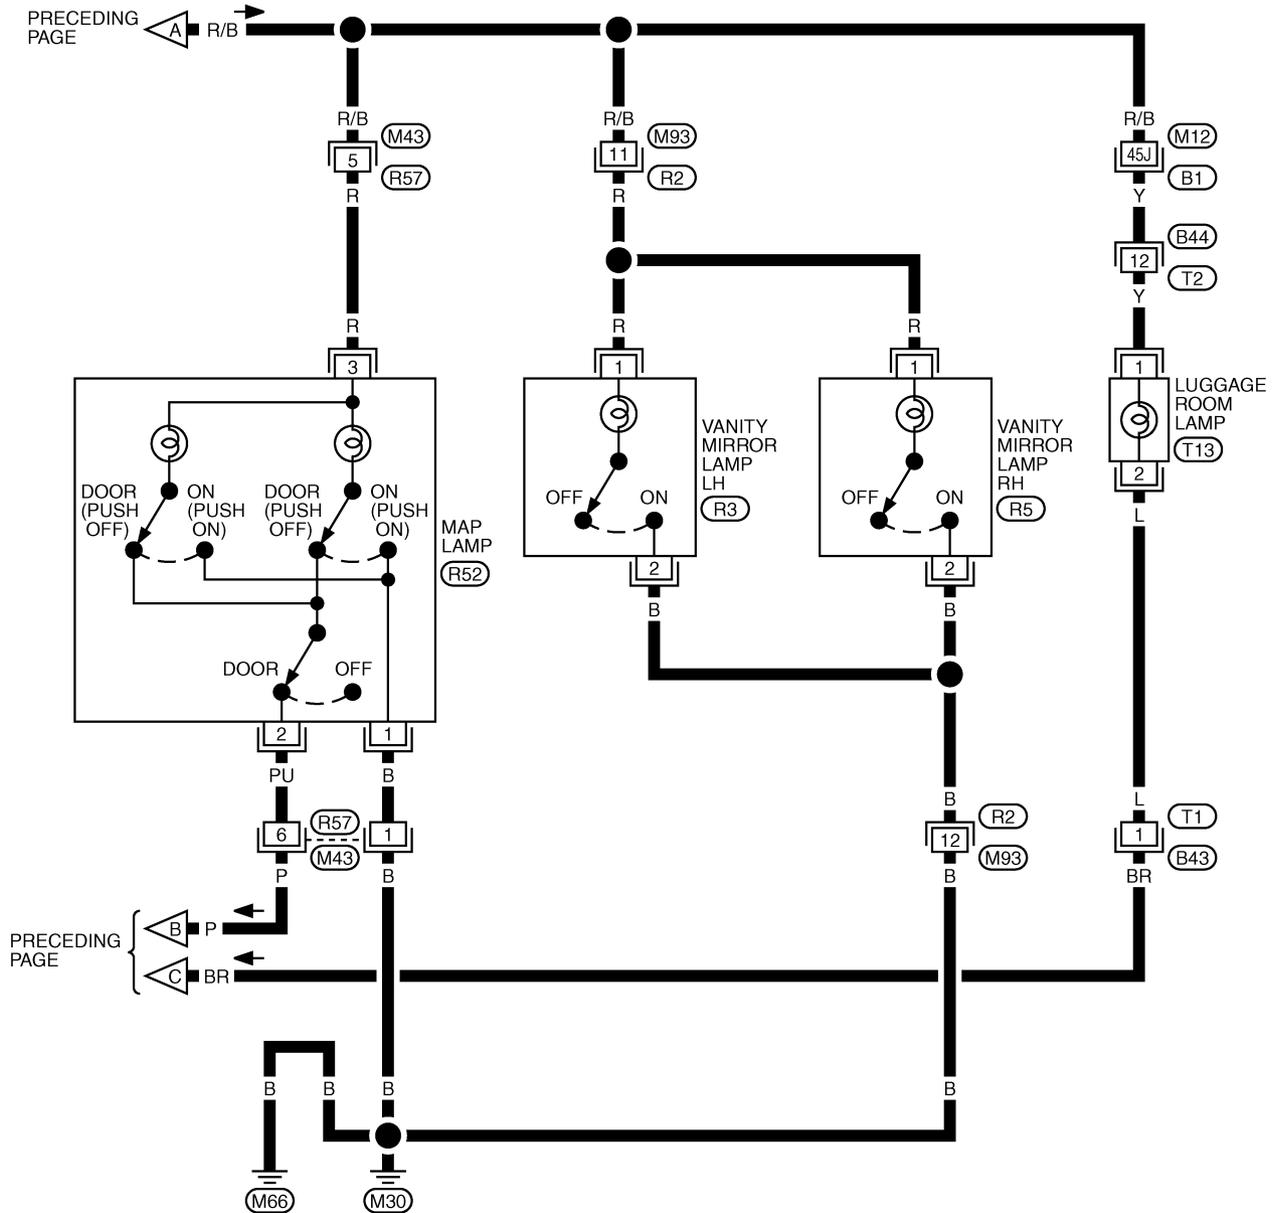


REFER TO THE FOLLOWING.
 (B1) -SUPER MULTIPLE
 JUNCTION (SMJ)

TKWT5589E

INTERIOR ROOM LAMP

LT-ROOM/L-03

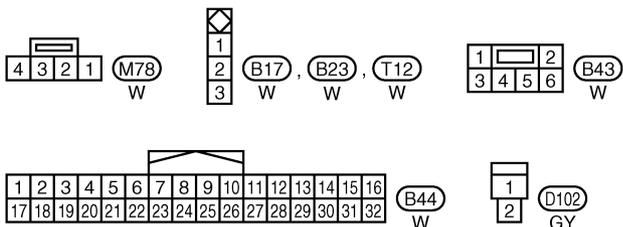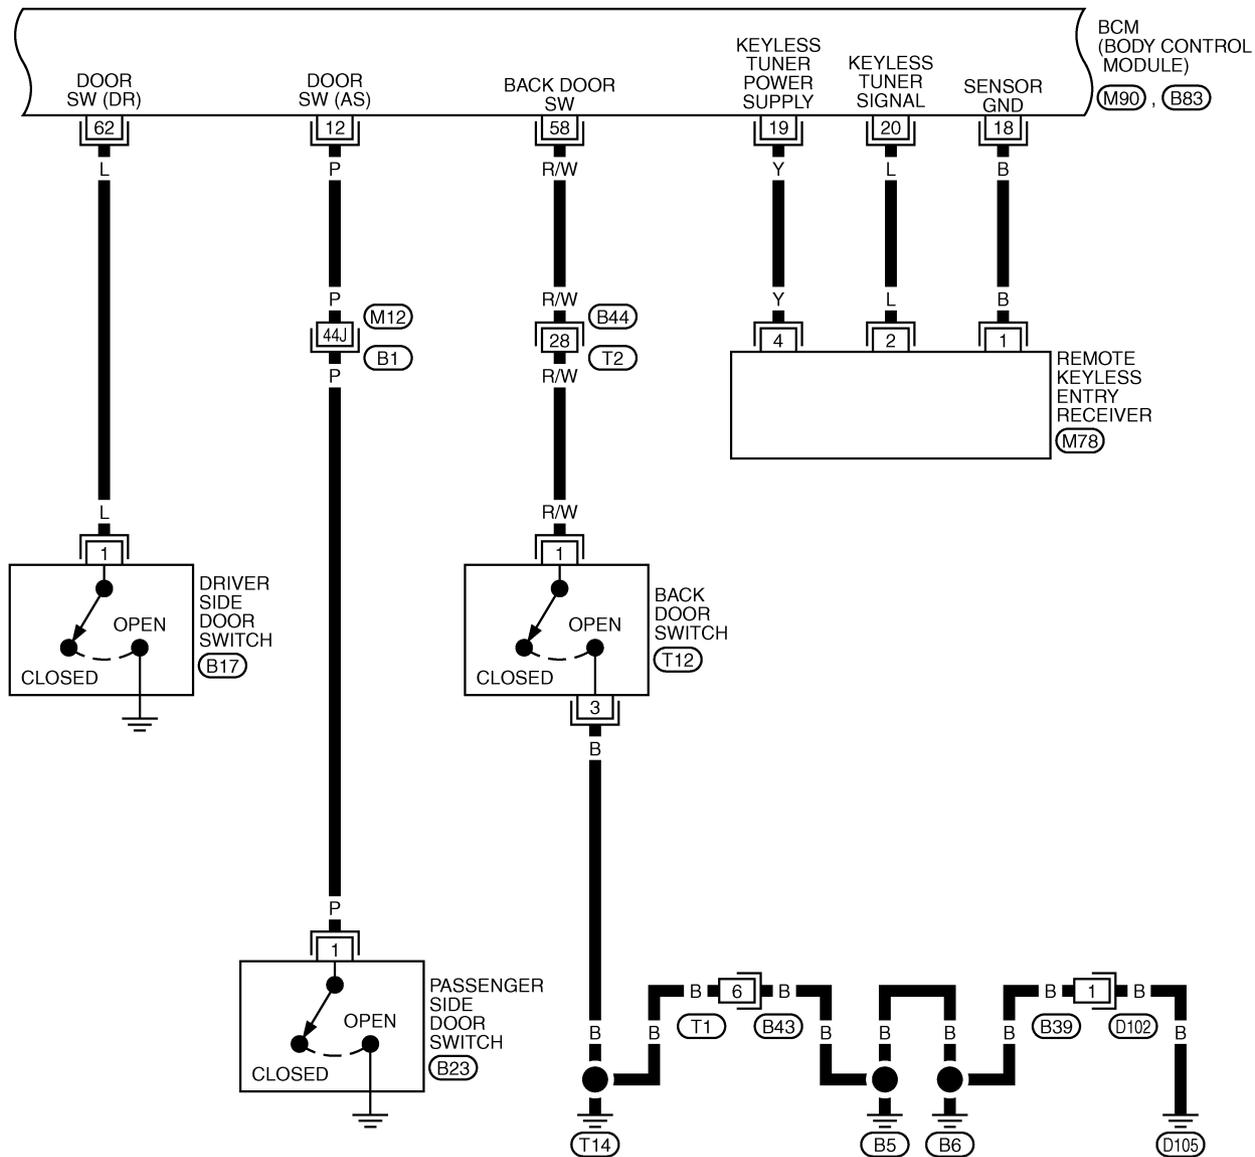


REFER TO THE FOLLOWING.

- (B1) -SUPER MULTIPLE JUNCTION (SMJ)
- (M90), (B83) -ELECTRICAL UNITS

TKWT4052E

INTERIOR ROOM LAMP

LT-ROOM/L-04

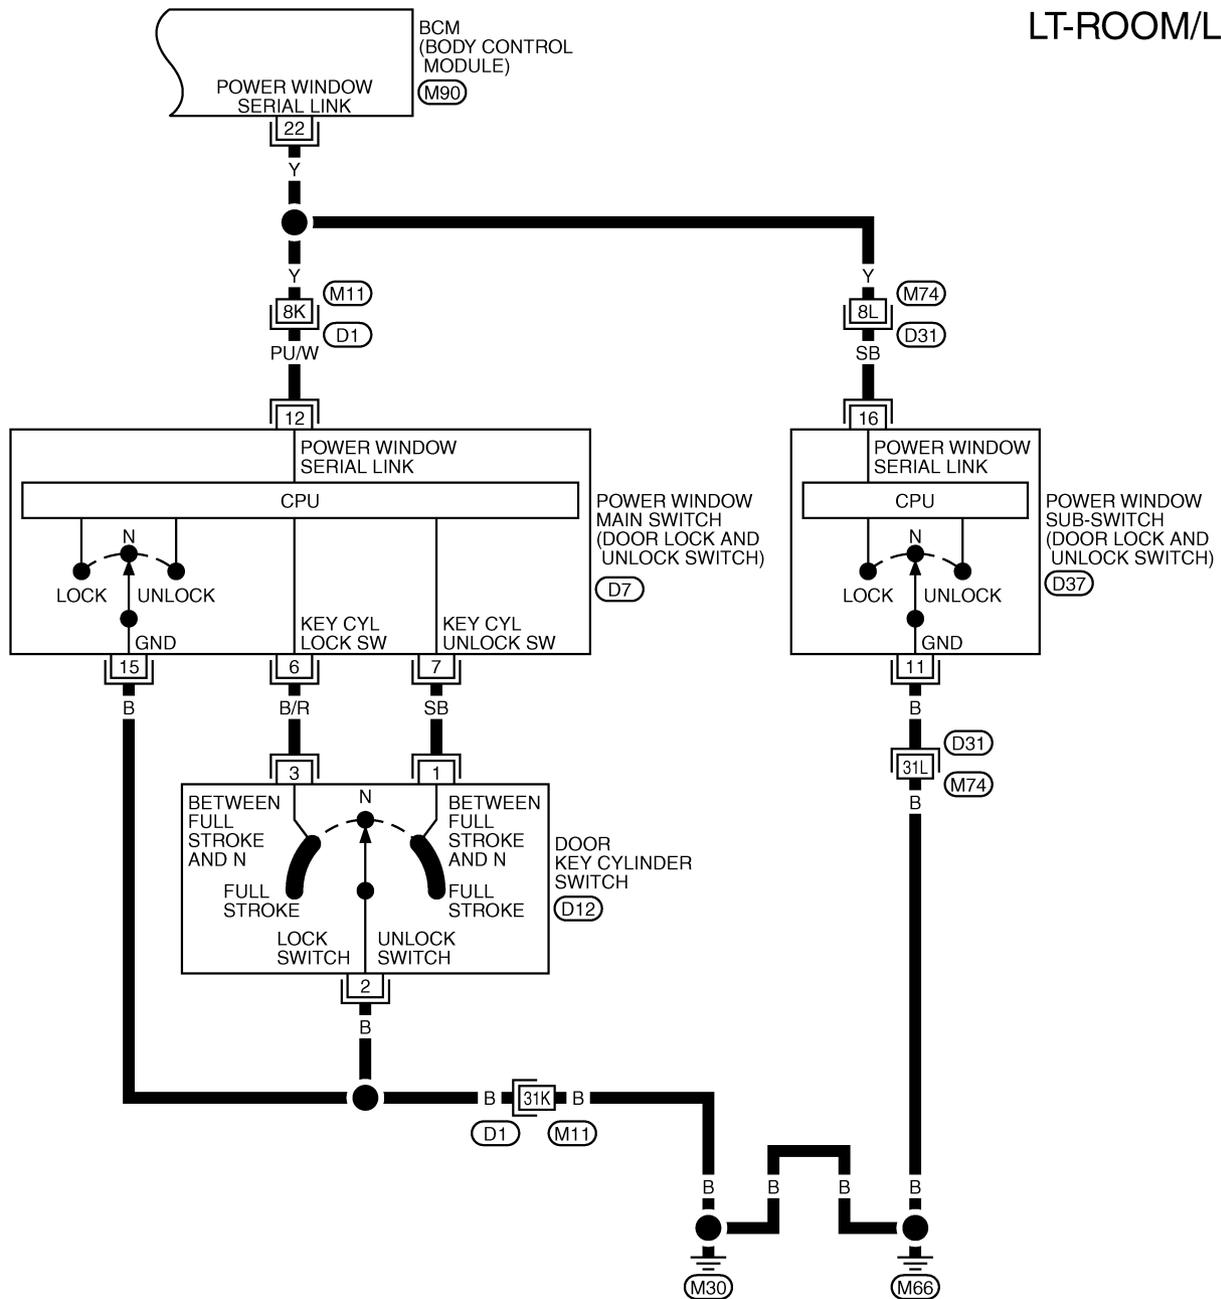

7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

(D7) W

(D37) W

3 2 1 (D12) BR

REFER TO THE FOLLOWING.



(D1), (D31) -SUPER MULTIPLE JUNCTION (SMJ)

(M90) -ELECTRICAL UNITS

TKWT4053E

INTERIOR ROOM LAMP

LT-ROOM/L-06

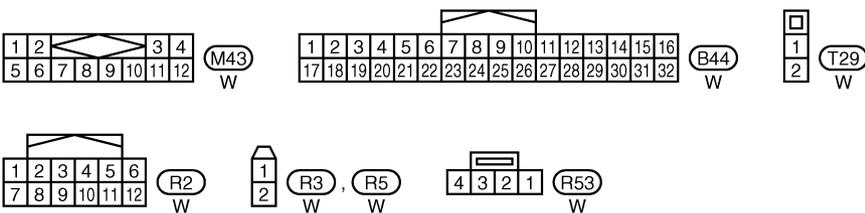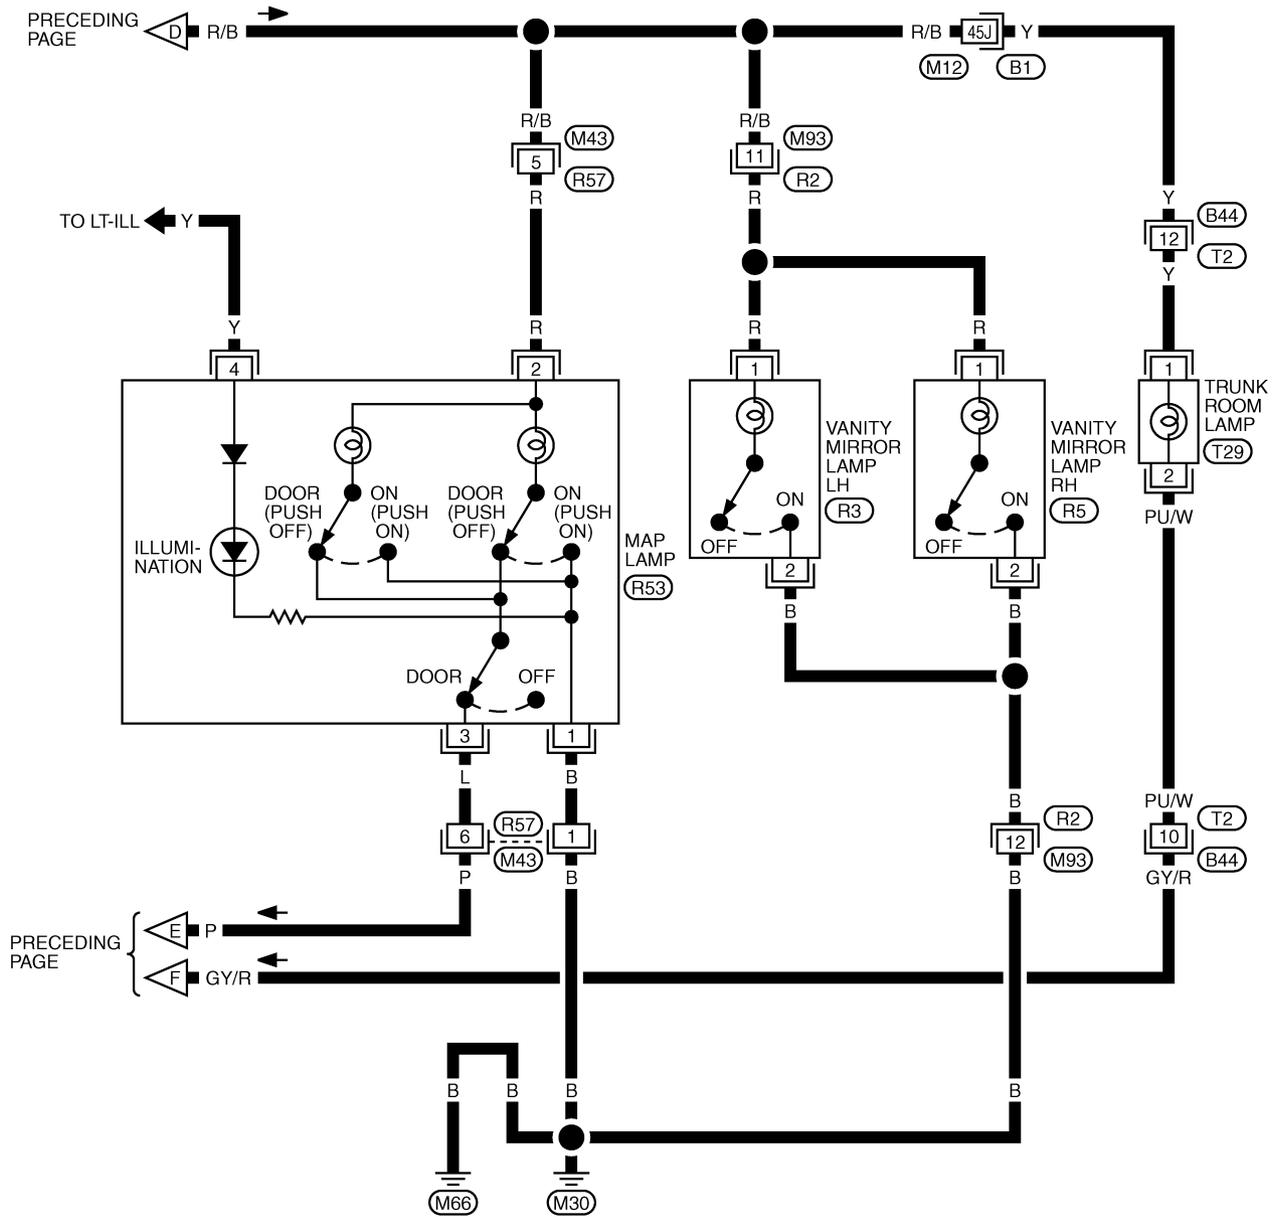


REFER TO THE FOLLOWING.

(B1) -SUPER MULTIPLE JUNCTION (SMJ)

TKWT5766E

INTERIOR ROOM LAMP


LT-ROOM/L-08

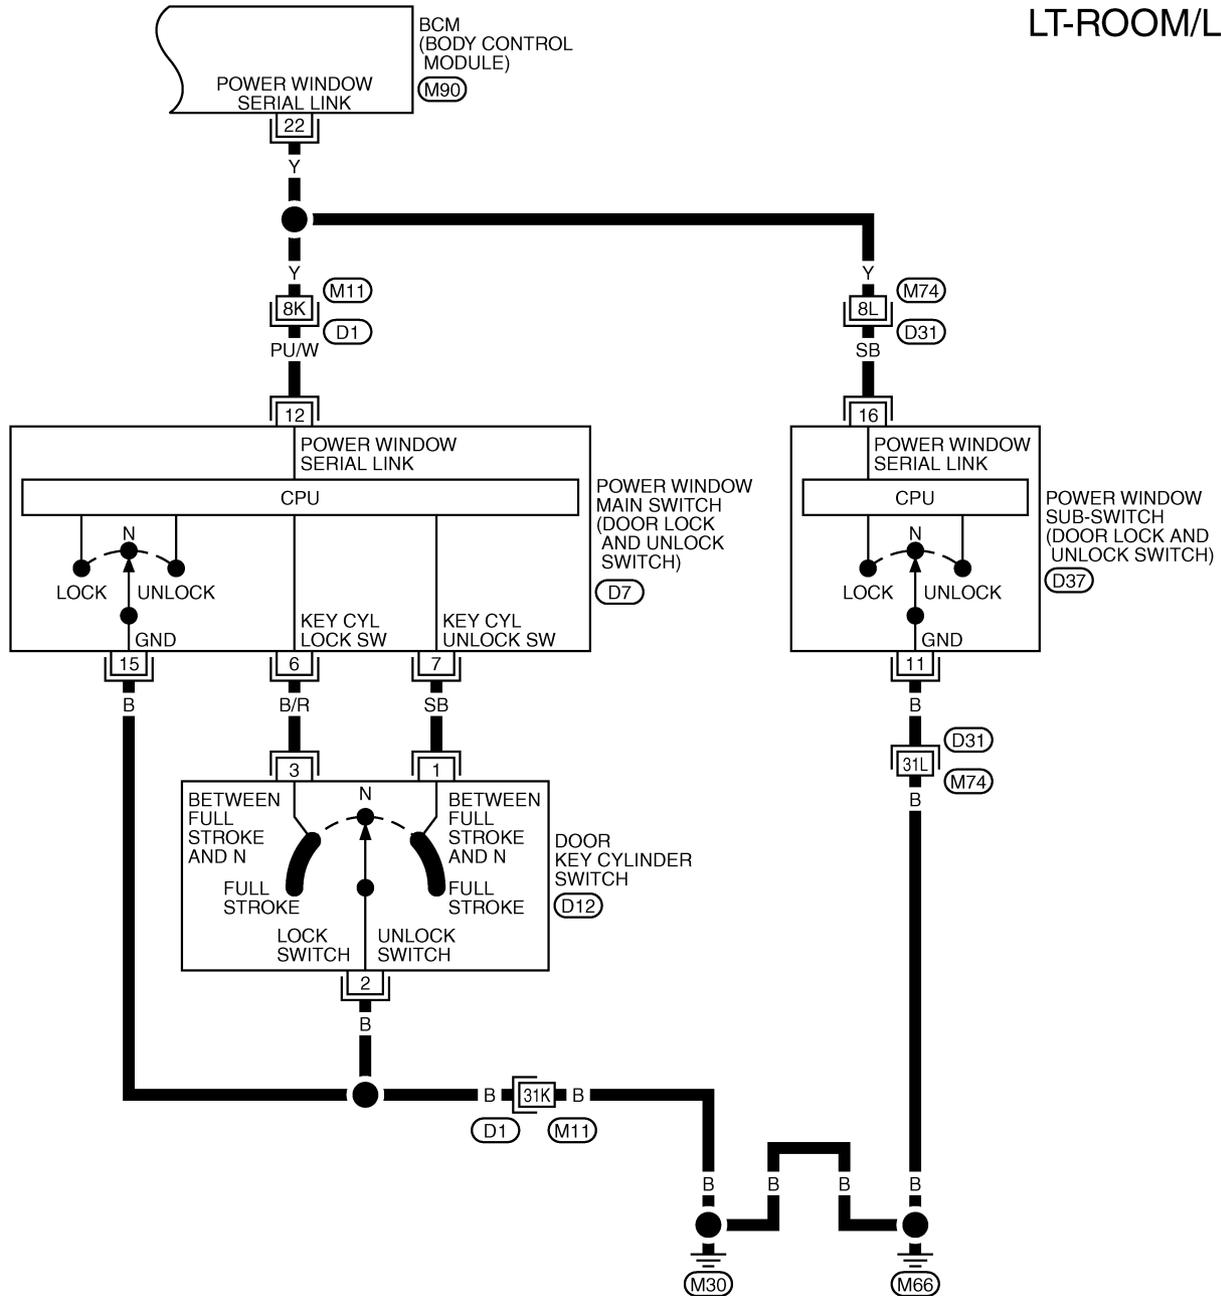

7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

(D7) W

(D37) W

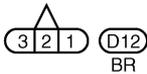

REFER TO THE FOLLOWING.

(D1), (D31) -SUPER MULTIPLE JUNCTION (SMJ)

(M90) -ELECTRICAL UNITS

TKWT4057E

INTERIOR ROOM LAMP

Terminals and Reference Values for BCM

NKS004ZN

Terminal No.	Wire color	Signal name	Measuring condition			Reference value
			Ignition switch	Operation or condition		
1	PU	Ignition keyhole illumination signal	OFF	Door is locked. (SW OFF)		Battery voltage
				Door is unlocked. (SW ON)		Approx. 0 V
12	P	Front door switch AS signal	OFF	Front door switch AS	ON (open)	Approx. 0 V
					OFF (closed)	Battery voltage
22	Y	Power window switch serial link	ON	—		
37	B/R	Key-in detection switch signal	OFF	Vehicle key is removed.		Approx. 0 V
				Vehicle key is inserted.		Battery voltage
38	W/L	Ignition power supply	ON	—		Battery voltage
39	L	CAN – H	—	—		—
40	P	CAN – L	—	—		—
41	R/B	Battery saver output signal	OFF	30 minutes after ignition switch is turned to OFF.		Approx. 0 V
			ON	—		Battery voltage
42	GY	Battery power supply	OFF	—		Battery voltage
48	P	Map lamp output signal	OFF	Map lamp door switch: DOOR position	Any door switch ON (open)	Approx. 0 V
					Any door switch OFF (closed)	Battery voltage
52	B	Ground	ON	—		Approx. 0 V
55	R	Battery power supply	OFF	—		Battery voltage
57*1	R/W	Trunk room lamp switch signal	OFF	Trunk room lamp switch	ON (open)	Approx. 0 V
					OFF (closed)	Battery voltage
58*2	R/W	Back door switch signal	OFF	Luggage room lamp switch	ON (open)	Approx. 0 V
					OFF (closed)	Battery voltage
62	L	Front door switch DR signal	OFF	Front door switch DR	ON (open)	Approx. 0 V
					OFF (closed)	Battery voltage
64	GY/R*1 BR*2	Trunk room lamp*1 or luggage lamp*2 switch signal	OFF	Trunk room lamp*1 or back door*2 switch	ON (open)	Approx. 0 V
					OFF (closed)	Battery voltage

*1: Roadster models, *2: Coupe models

How to Proceed with Trouble Diagnosis

NKS004ZO

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-128, "System Description"](#).
3. Perform preliminary check. Refer to [LT-142, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does interior room lamp operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END

INTERIOR ROOM LAMP

NKS004ZP

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES AND FUSIBLE LINK

Check for blown fuses and fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	F
		18
		21
	Ignition switch ON or START position	1

Refer to [LT-133, "Wiring Diagram — ROOM/L —"](#) .

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM connector and ground.

Terminals		(-)	Ignition switch position	
(+)			OFF	ON
BCM connector	Terminal	Ground	Approx. 0 V	Battery voltage
M90	38			
M91	42		Battery voltage	Battery voltage
	55		Battery voltage	Battery voltage

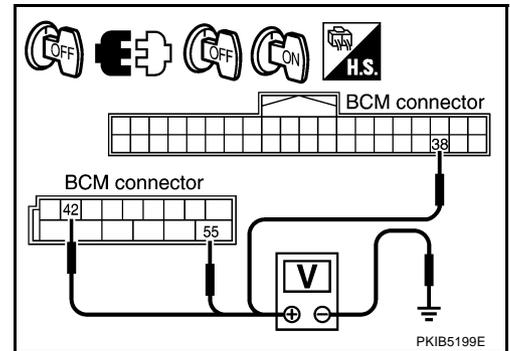

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

3. CHECK GROUND CIRCUIT


Check continuity between BCM and ground.

BCM connector	Terminal	Ground	Continuity
M91	52		Yes

OK or NG

OK >> INSPECTION END

NG >> Repair harness or connector.

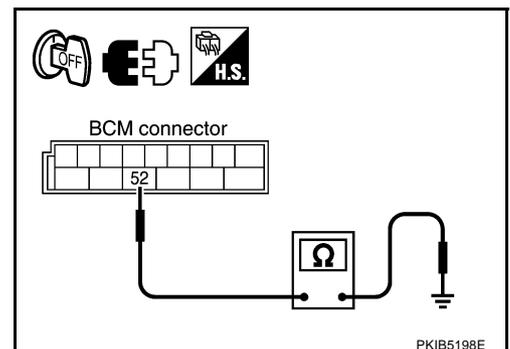

INTERIOR ROOM LAMP

CONSULT-III Function (BCM)

NKS004ZQ

CONSULT-III can display each diagnostic item using the diagnostic test mode shown following.

BCM diagnosis part	Diagnosis mode	Description
INT LAMP	WORK SUPPORT	Changes the setting for each function.
	DATA MONITOR	Displays BCM input data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending driving signal to them.

WORK SUPPORT

Display Item List

Item	Description	CONSULT-III
SET I/L D-UNLCK INTCON	The 30 seconds glowing function interior room lamps and ignition keyhole illumination can be selected when driver door is released (unlocked).	ON/OFF
ROOM LAMP ON TIME SET	The time in order to escalate illumination can be adjusted when interior room lamps and ignition keyhole illumination is turned on.	MODE 1 – 7
ROOM LAMP OFF TIME SET	The time in order to diminish illumination can be adjusted when interior room lamps and ignition keyhole illumination is turned off.	MODE 1 – 7

Reference between “MODE” and “TIME” for “TURN ON/OFF”

MODE	1	2	3	4	5	6	7
Time (sec.)	0.5	1	2	3	4	5	0

DATA MONITOR

Display Item List

Monitor item	Contents
IGN ON SW	“ON/OFF” Displays “IGN position (ON)/OFF, ACC position (OFF)” judged from ignition switch signal.
KEY ON SW	“ON/OFF” Displays “Key inserted (ON)/key removed (OFF)” status judged from key switch signal.
DOOR SW - DR	“ON/OFF” Displays status of driver door as judged from driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - AS	“ON/OFF” Displays “Door open (ON)/Door closed (OFF)” status, determined from passenger door switch signal.
DOOR SW - RR ^{NOTE}	“OFF” —
DOOR SW - RL ^{NOTE}	“OFF” —
BACK DOOR SW	“ON/OFF” <ul style="list-style-type: none"> ● Displays status of back door as judged from back door switch signal. (Coupe models) ● Displays status of rear trunk hood as judged from trunk lamp switch signal. (Roadster models)
KEY CYL LK - SW	“ON/OFF” Displays “Door locked (ON) status, determined from key cylinder lock switch in driver door.
KEY CYL UN - SW	“ON/OFF” Displays “Door unlocked (OFF) status, determined from key cylinder lock switch in driver door.
CDL LOCK SW	“ON/OFF” Displays “Door locked (ON)/Door unlocked (OFF) status, determined from locking detection switch in driver door.
CDL UNLOCK SW	“ON/OFF” Displays “Door unlocked (OFF)” status, determined from locking detection switch in passenger door.
KEYLESS LOCK	“ON/OFF” Displays “Locked (ON)/Other (OFF)” status, determined from lock signal.
KEYLESS UNLOCK	“ON/OFF” Displays “Unlocked (ON)/Other (OFF)” status, determined from unlock signal.

NOTE:

This item is displayed, but cannot be monitored.

INTERIOR ROOM LAMP

ACTIVE TEST

Display Item List

Test item	Description
INT LAMP	Map lamp can be operated by any ON-OFF operations.
IGN ILLUM ^{NOTE}	—
STEM LAMP TEST ^{NOTE}	—
LUGGAGE LAMP TEST	<ul style="list-style-type: none"> ● Luggage room lamp can be operated by any ON-OFF operations. (Coupe models) ● Trunk room lamp can be operated by any ON-OFF operations. (Roadster models)

NOTE:

This item is displayed, but cannot be tested.

Map Lamp Control Does Not Operate (Coupe models)

NKS004ZR

1. CHECK BETWEEN EACH SWITCH AND BCM

1. Select "INT LAMP" of BCM data monitor item.
2. Make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-143, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
 NG >> Inspect malfunctioning switch system.

2. CHECK BETWEEN BCM AND MAP LAMP

1. Select "INT LAMP" of BCM active test item.
2. With operating the test item, check the map lamp operation (When map lamp switch is in DOOR position).

Map lamp should operate.

OK or NG

- OK >> Replace BCM. Refer to [BCS-17, "Removal and Installation of BCM"](#) .
 NG >> GO TO 3.


3. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between map lamp harness connector and ground.

Terminal (+)		Terminal (-)	Voltage (Approx.)
Map lamp connector	Terminal		
R52	3	Ground	Battery voltage

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 4.

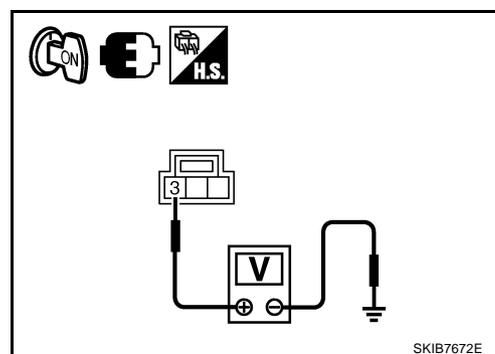

INTERIOR ROOM LAMP

4. CHECK MAP LAMP CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect BCM connector and map lamp connector.
3. Check continuity between BCM harness connector and map lamp harness connector.

Terminals				Continuity
BCM		Map lamp		
Connector	Terminal	Connector	Terminal	
M91	41	R52	3	Yes

OK or NO

OK >> GO TO 5.

NG >> Repair harness or connector.

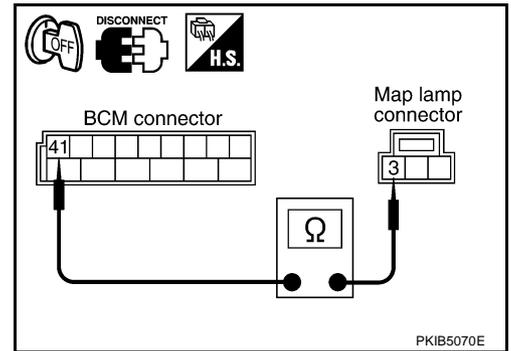

5. CHECK SHORT CIRCUIT


Check continuity between map lamp harness connector and ground.

Map lamp connector	Terminal	Ground	Continuity
R52	3		No

OK or NG

OK >> Replace BCM if map lamp does not work after setting the connector again. Refer to [BCS-17, "Removal and Installation of BCM"](#).

NG >> Repair harness or connector.

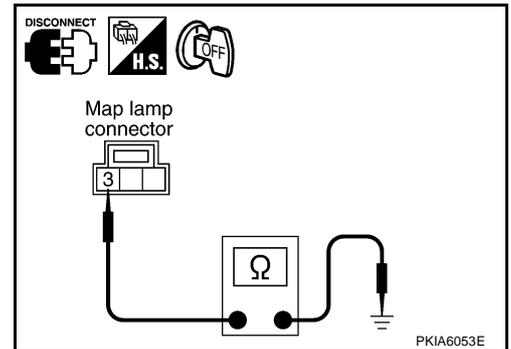

6. CHECK MAP LAMP


1. Turn ignition switch OFF.
2. Disconnect map lamp connector.
3. Check continuity between map lamp.

Terminal		Condition	Continuity
Map lamp			
3	2	Map lamp switch is DOOR.	Yes
		Map lamp switch is OFF.	No

OK or NG

OK >> GO TO 7.

NG >> Replace map lamp.

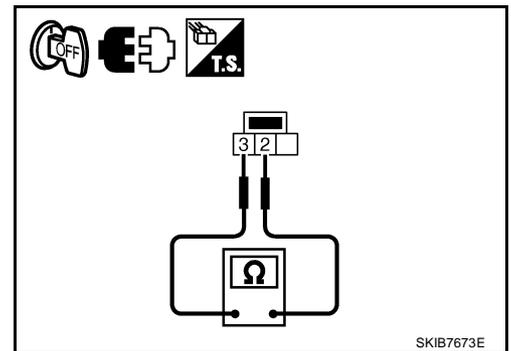

A
B
C
D
E
F
G
H
I
J
LT
L
M

INTERIOR ROOM LAMP


7. CHECK MAP LAMP CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and map lamp harness connector.

Terminals				Continuity
BCM		Map lamp		
Connector	Terminal	Connector	Terminal	
M91	48	R52	2	Yes

OK or NO

- OK >> Replace BCM if map lamp does not work after setting the connector again. Refer to [BCS-17, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

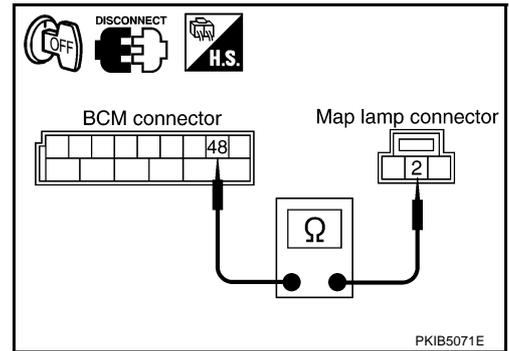

Map Lamp Control Does Not Operate (Roadster models)

NKS004ZS

1. CHECK BETWEEN EACH SWITCH AND BCM

1. Select "INT LAMP" of BCM data monitor item.
2. Make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-143, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning switch system.

2. CHECK BETWEEN BCM AND MAP LAMP

1. Select "INT LAMP" of BCM active test item.
2. With operating the test item, check the map lamp operation (When map lamp switch is in DOOR position).

Map lamp should operate.

OK or NG

- OK >> Replace BCM. Refer to [BCS-17, "Removal and Installation of BCM"](#).
- NG >> GO TO 3.


3. CHECK BETWEEN BCM AND MAP LAMP

1. Turn ignition switch ON.
2. Check voltage between map lamp harness connector and ground.

Terminal			Voltage (Approx.)
(+)		(-)	
Map lamp connector	Terminal	Ground	
R53	2	Ground	Battery voltage

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 4.

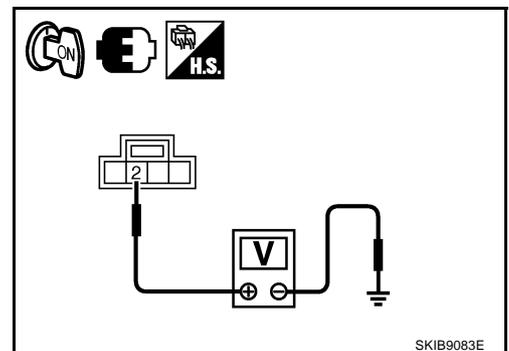

INTERIOR ROOM LAMP

4. CHECK POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect BCM connector and map lamp connector.
3. Check continuity between BCM harness connector (A) and map lamp harness connector (B).

Terminals				Continuity
A		B		
Connector	Terminal	Connector	Terminal	
M91	41	R53	2	Yes

OK or NO

OK >> GO TO 5.

NG >> Repair harness or connector.

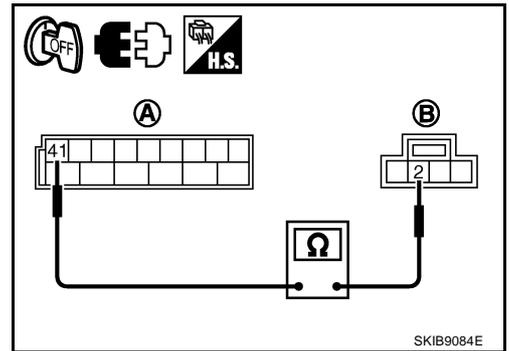

5. CHECK SHORT CIRCUIT


Check continuity between map lamp harness connector and ground.

Map lamp connector	Terminal	Ground	Continuity
R53	2		No

OK or NG

OK >> Replace BCM if map lamp does not work after setting the connector again. Refer to [BCS-17, "Removal and Installation of BCM"](#).

NG >> Repair harness or connector.

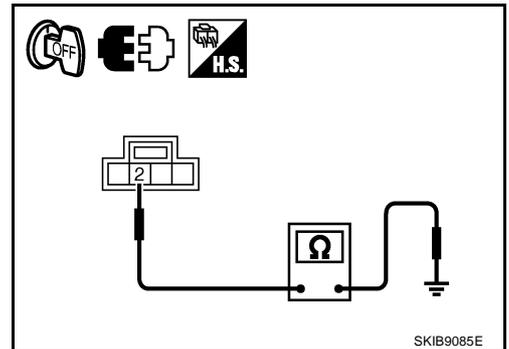

6. CHECK MAP LAMP


1. Turn ignition switch OFF.
2. Disconnect map lamp connector.
3. Check continuity between map lamp.

Terminal		Condition	Continuity
Map lamp			
3	2	Map lamp switch is DOOR.	Yes
		Map lamp switch is OFF.	No

OK or NG

OK >> GO TO 7.

NG >> Replace map lamp.

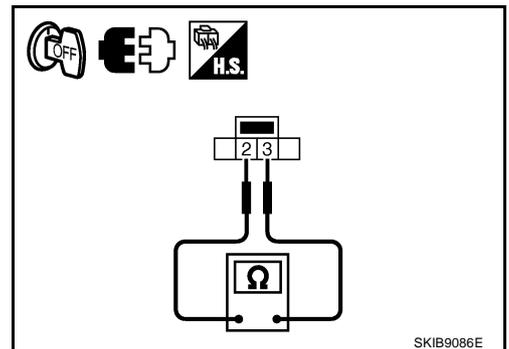

INTERIOR ROOM LAMP


7. CHECK MAP LAMP CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and map lamp harness connector.

Terminals				Continuity
BCM		Map lamp		
Connector	Terminal	Connector	Terminal	
M91	48	R53	3	Yes

OK or NO

- OK >> Replace BCM if map lamp does not work after setting the connector again. Refer to [BCS-17, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

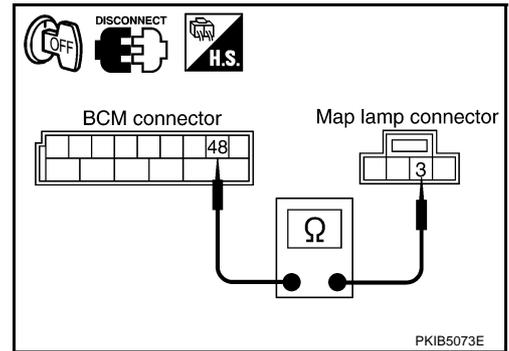

Ignition Key Hole Illumination Does Not Illuminate

NKS004ZT

1. CHECK BULB

Check bulb of lamp which does not operate.

OK or NG

- OK >> GO TO 2.
- NG >> Replace bulb.

2. CHECK BETWEEN EACH SWITCH AND BCM

1. Select "INT LAMP" of BCM data monitor item.
2. Make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-143, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 3.
- NG >> Inspect malfunctioning switch system.


3. CHECK POWER SUPPLY TO IGNITION KEY HOLE ILLUMINATION

1. Turn ignition switch OFF.
2. Disconnect ignition key hole illumination connector.
3. Turn ignition switch ON.
4. Check voltage between ignition key hole illumination harness connector and ground.

Terminal			Voltage (Approx.)
(+)		(-)	
Ignition key hole illumination connector	Terminal		
M26	1	Ground	Battery voltage

OK or NG

- OK >> GO TO 5.
- NG >> GO TO 4.

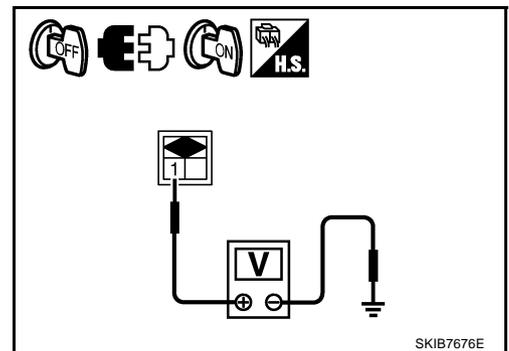

INTERIOR ROOM LAMP


4. CHECK POWER SUPPLY CIRCUIT FOR IGNITION KEY HOLE ILLUMINATION

1. Turn ignition switch OFF.
2. Disconnect BCM connector and key hole illumination connector.
3. Check continuity between BCM harness connector (A) and ignition key hole illumination harness connector (B).

Terminals				Continuity
A		B		
Connector	Terminal	Connector	Terminal	
M91	41	M26	1	Yes

OK or NG

- OK >> Replace BCM if ignition key hole illumination does not work after setting the connector again. Refer to [BCS-17, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

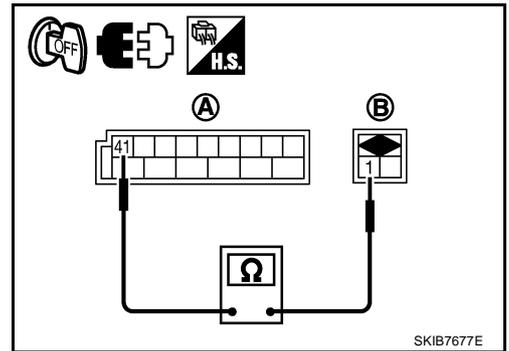


5. CHECK GROUND CIRCUIT FOR IGNITION KEY HOLE ILLUMINATION

1. Turn ignition switch OFF.
2. Disconnect BCM connector and key hole illumination connector.
3. Check continuity between BCM harness connector (A) and ignition key hole illumination harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M90	1	M26	2	Yes

OK or NG

- OK >> Replace BCM if ignition key hole illumination does not work after setting the connector again. Refer to [BCS-17, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

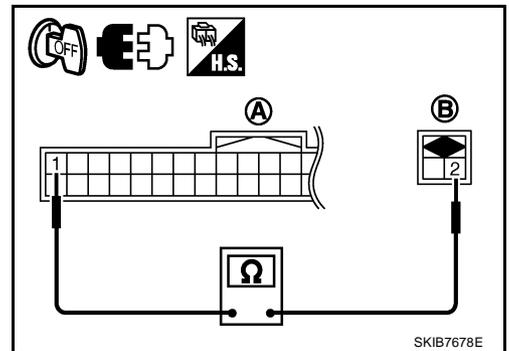

Luggage Room Lamp Does Not Illuminate (Coupe Models)

NKS004ZU

1. CHECK BULB

Inspect bulb of luggage room lamp.

OK or NG

- OK >> GO TO 2.
- NG >> Replace bulb of luggage room lamp.

2. CHECK BETWEEN EACH SWITCH AND BCM

1. Select "LUGGAGE LAMP TEST" of BCM data monitor item.
2. Make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-143, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 3.
- NG >> Inspect malfunctioning switch system.

INTERIOR ROOM LAMP

3. CHECK BETWEEN BCM AND LUGGAGE ROOM LAMP

1. Select "LUGGAGE LAMP TEST" of BCM active test item.
2. With operating the test item, check the luggage room lamp operation.

Luggage room lamp should operate.


OK or NG

- OK >> Replace BCM. Refer to [BCS-17, "Removal and Installation of BCM"](#) .
 NG >> GO TO 4.

4. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between luggage room lamp harness connector and ground.

Terminal (+)		Terminal (-)	Voltage (Approx.)
Luggage room lamp connector	Terminal		
T13	1	Ground	Battery voltage

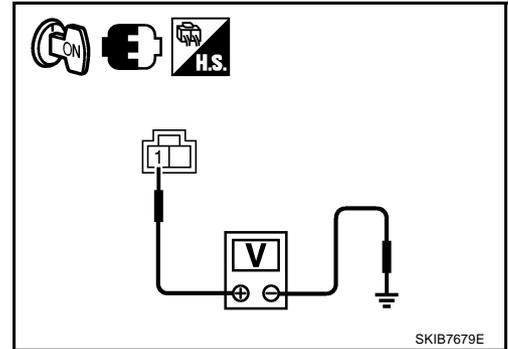


OK or NG

- OK >> GO TO 7.
 NG >> GO TO 5.

5. CHECK LUGGAGE ROOM LAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and luggage room lamp connector.
3. Check continuity between BCM harness connector and luggage room lamp harness connector.

Terminals				Continuity
BCM		Luggage room lamp		
Connector	Terminal	Connector	Terminal	
M91	41	T13	1	Yes

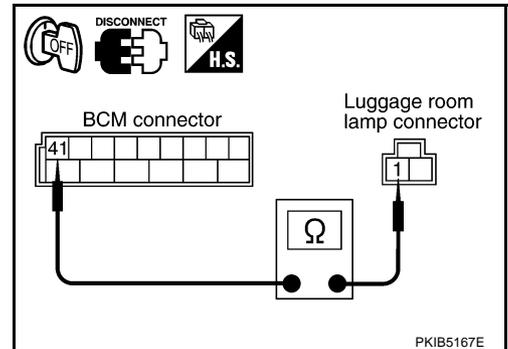

OK or NO

- OK >> GO TO 6.
 NG >> Repair harness or connector.


6. CHECK SHORT CIRCUIT

Check continuity between luggage room lamp harness connector and ground.

Luggage room lamp connector	Terminal	Ground	Continuity
T13	1		No

OK or NG

- OK >> Replace BCM if luggage room lamp does not work after setting the connector again. Refer to [BCS-17, "Removal and Installation of BCM"](#) .
 NG >> Repair harness or connector.

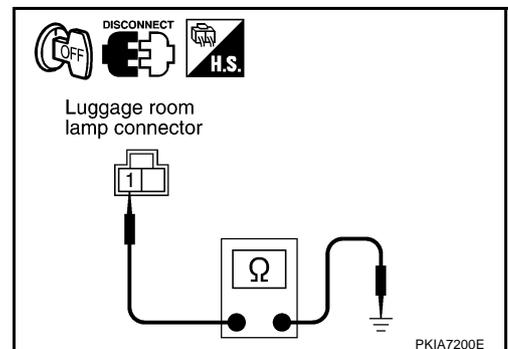

INTERIOR ROOM LAMP


7. CHECK LUGGAGE ROOM LAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and luggage room lamp harness connector.

Terminals				Continuity
BCM		Luggage room lamp		
Connector	Terminal	Connector	Terminal	
B83	64	T13	2	Yes

OK or NO

- OK >> Replace BCM if luggage room lamp does not work after setting the connector again. Refer to [BCS-17, "Removal and Installation of BCM"](#) .
- NG >> Repair harness or connector.

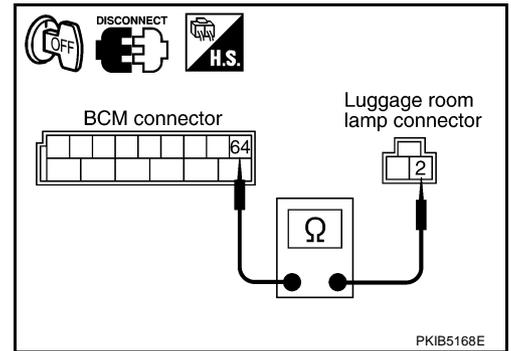

Trunk Room Lamp Does Not Illuminate (Roadster Models)

NKS004ZV

1. CHECK BULB

Inspect bulb of trunk room lamp.

OK or NG

- OK >> GO TO 2.
- NG >> Replace map lamp.

2. CHECK BETWEEN EACH SWITCH AND BCM

1. Select "LUGGAGE LAMP TEST" of BCM data monitor item.
2. Make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-143, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 3.
- NG >> Inspect malfunctioning switch system.

3. CHECK BETWEEN BCM AND TRUNK ROOM LAMP

1. Select "BCM" on CONSULT-III. Select "LUGGAGE LAMP TEST" active test.
2. With operating the test item, check the trunk room lamp operation.

Trunk room lamp should operate.

OK or NG

- OK >> Replace BCM. Refer to [BCS-17, "Removal and Installation of BCM"](#) .
- NG >> GO TO 4.

INTERIOR ROOM LAMP

4. CHECK POWER SUPPLY CIRCUIT


1. Turn ignition switch ON.
2. Check voltage between trunk room lamp harness connector and ground.

Terminal (+)		Terminal (-)	Voltage (Approx.)
Trunk room lamp connector	Terminal		
T29	1	Ground	Battery voltage

OK or NG

OK >> GO TO 7.

NG >> GO TO 5.

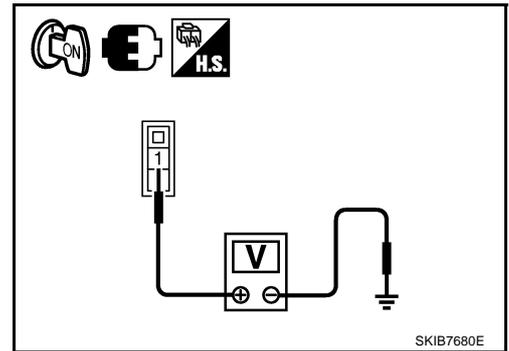

SKIB7680E

5. CHECK TRUNK ROOM LAMP CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect BCM connector and trunk room lamp connector.
3. Check continuity between BCM harness connector and trunk room lamp harness connector.

Terminals				Continuity
BCM		Trunk room lamp		
Connector	Terminal	Connector	Terminal	
M91	41	T29	1	Yes

OK or NO

OK >> GO TO 6.

NG >> Repair harness or connector.

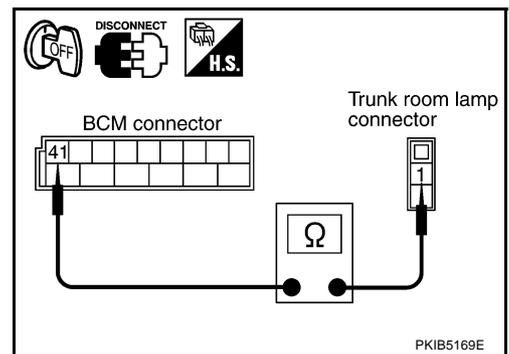

PKIB5169E

6. CHECK SHORT CIRCUIT


Check continuity between trunk room lamp harness connector and ground.

Trunk room lamp connector	Terminal	Ground	Continuity
T29	1		No

OK or NG

OK >> Replace BCM if trunk room lamp does not work after setting the connector again. Refer to [BCS-17, "Removal and Installation of BCM"](#).

NG >> Repair harness or connector.

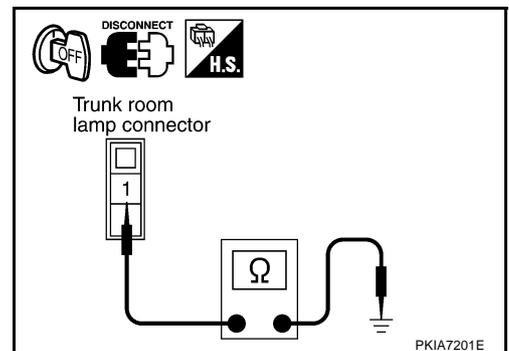

PKIA7201E

INTERIOR ROOM LAMP


7. CHECK TRUNK ROOM LAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and trunk room lamp harness connector.

Terminals				Continuity
BCM		Trunk room lamp		
Connector	Terminal	Connector	Terminal	
B83	64	T29	2	Yes

OK or NO

- OK >> Replace BCM if trunk room lamp does not work after setting the connector again. Refer to [BCS-17, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

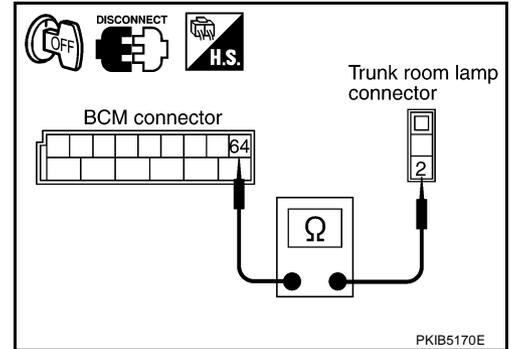

Bulb Replacement MAP LAMP

Coupe Models

1. Open driver and passenger window, and then disconnect battery cable from the negative terminal.


CAUTION:

After battery cables are disconnected, never open/close driver and/or passenger door with the window in the full up position. Automatic window adjusting function will not work and side roof panel may be damaged.

2. Remove lens using clip driver or suitable tool.
3. Remove bulb.

Map lamp : 12V - 8W

4. Installation is the reverse order of removal.

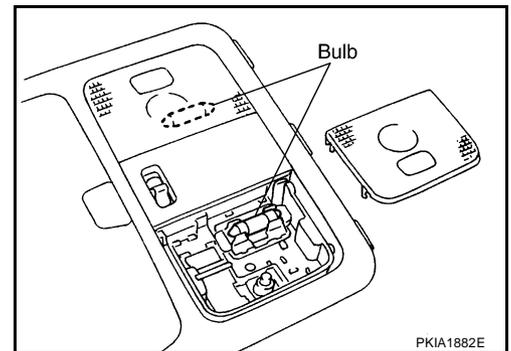

Roadster Models

1. Open driver and passenger window, and then disconnect battery cable from the negative terminal.


CAUTION:

After battery cables are disconnected, never open/close driver and/or passenger door with the window in the full up position. Automatic window adjusting function will not work and side roof panel may be damaged.

2. Remove lens using clip driver or suitable tool.
3. Remove bulb.

Map lamp : 12V - 8W

4. Installation is the reverse order of removal.

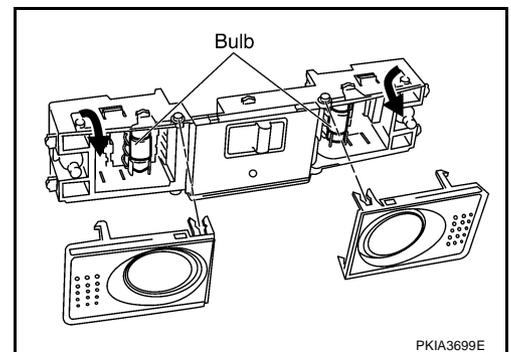

A
B
C
D
E
F
G
H
I
J
LT
L
M


INTERIOR ROOM LAMP

VANITY MIRROR LAMP

1. Insert a thin screwdriver in the lens end and remove lens.
2. Remove bulb.

Vanity mirror lamp : 12V - 1.32W

3. Installation is the reverse order of removal.

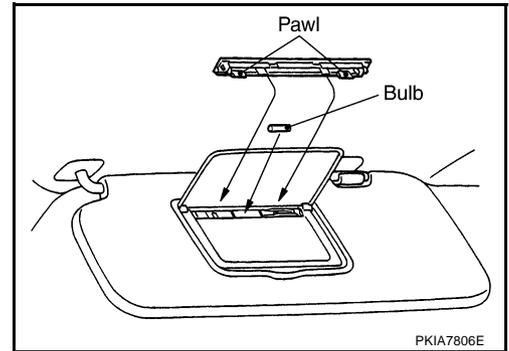


LUGGAGE ROOM LAMP & TRUNK ROOM LAMP

Luggage Room Lamp (Coupe Models)

1. Remove luggage room lamp. Refer to [LT-155, "Removal and Installation"](#).
2. Remove bulb.

Luggage room lamp : 12V - 5W

3. Installation is the reverse order of removal.

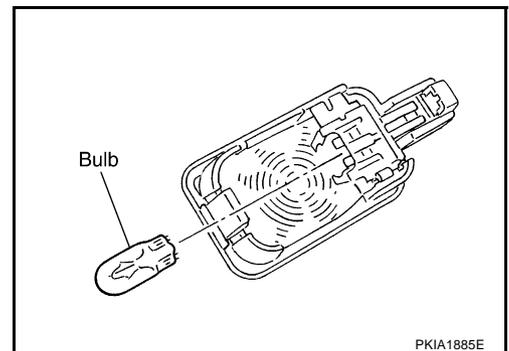


Trunk Room Lamp (Roadster Models)

1. Unfold pawl A and remove lens.
2. Remove trunk room lamp while pressing pawl B in the direction of the arrow.
3. Disconnect trunk room lamp connector.

Trunk room lamp : 12V - 3.4W

4. Installation is the reverse order of removal.

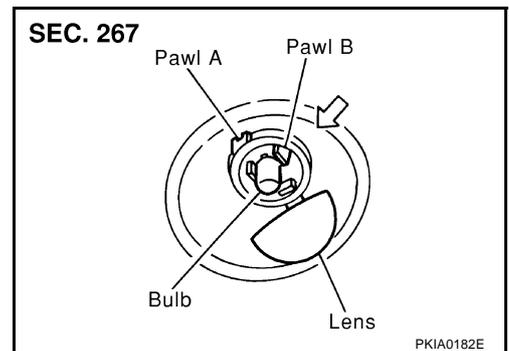


IGNITION KEY HOLE ILLUMINATION

1. Remove instrument lower driver panel. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#).
2. Turn bulb socket to left to release lock and remove bulb socket (1).
3. Remove ignition key illumination bulb (2) from its socket.

Ignition key hole illumination : 12V - 1.4W

4. Installation is the reverse order of removal.

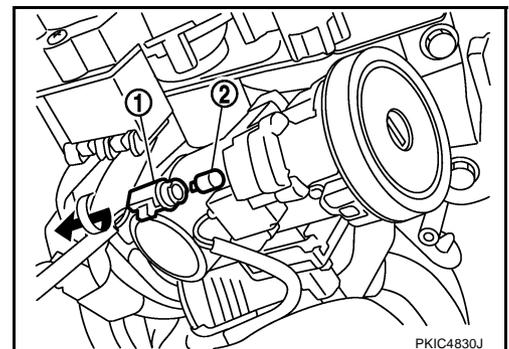

INTERIOR ROOM LAMP


Removal and Installation

MAP LAMP

NKS004ZX


Coupe Models

1. Insert a clip driver or suitable tool and disengage pawl fittings of map lamp.
2. Disconnect map lamp connector and remove map lamp.
3. Installation is the reverse order of removal.

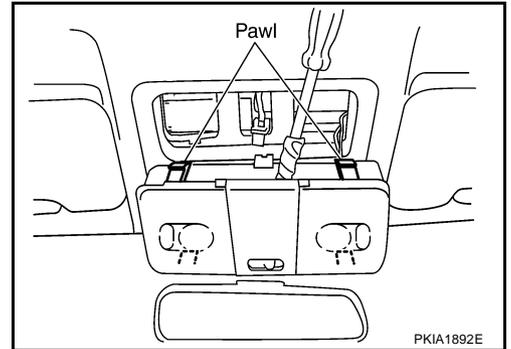


Roadster Models

1. Insert a clip driver or suitable tool and disengage pawl fittings of map lamp.
2. Disconnect map lamp connector and remove map lamp.
3. Installation is the reverse order of removal.

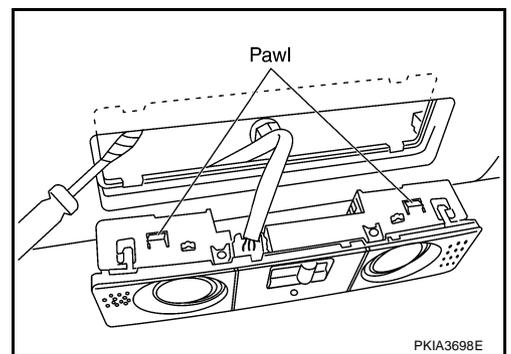

LUGGAGE ROOM LAMP

1. Pull out luggage room lamp in direction shown by the arrow in the figure.
2. Disconnect luggage room lamp connector.
3. Installation is the reverse order of removal.

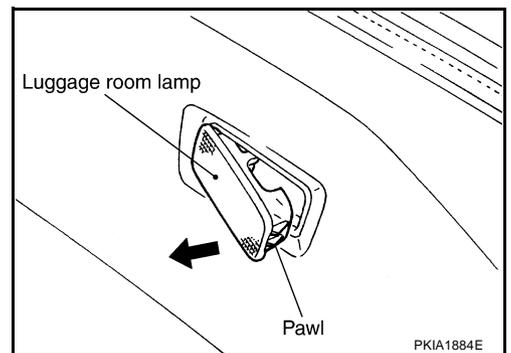

A
B
C
D
E
F
G
H
I
J
LT
L
M

ILLUMINATION

PFP:27545

System Description

NKS004ZY

Control of the illumination lamp operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST or 2ND position, the BCM (body control module) receives input signal requesting illumination lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) through the CAN communication lines. The CPU (central processing unit) located in the IPDM E/R controls tail lamp relay coil. This relay, when energized, directs power to illumination lamps, which then illuminate.

OUT LINE

Power is supplied at all times

- through 10A fuse (No.71, located in IPDM E/R)
- to tail lamp relay, located in IPDM E/R, and
- to CPU located in IPDM E/R,
- through 15A fuse (No.78, located in IPDM E/R)
- to CPU located in IPDM E/R.

Power is also supplied at all times

- through 40A fusible link (letter F, located in fuse, fusible link and relay box)
- to BCM terminal 55,
- through 10A fuse [No.18, located in fuse block (J/B)]
- to BCM terminal 42,
- through 10A fuse [No.19, located in fuse block (J/B)]
- to unified meter and A/C amp. terminal 21,
- through 10A fuse [No.19, located in fuse block (J/B)]
- to combination meter terminal 24.

With ignition switch in the ON or START position, power is supplied

- to CPU located in IPDM E/R,
- through 10A fuse [No.1, located in fuse block (J/B)]
- to BCM terminal 38,
- through 10A fuse [No.12, located in fuse block (J/B)]
- to unified meter and A/C amp. terminal 22, and
- to NAVI control unit terminal 63 (With navigation system),
- through 10A fuse [No.14, located in fuse block (J/B)]
- to combination meter terminal 23.

With ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No.6, located in fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 52
- through grounds M30 and M66,
- to IPDM E/R terminals 38 and 60
- through grounds E17, E43 and B102 (with VDC system, navigation system or telephone)
- through grounds E17, E43 and F152 (without VDC system, navigation system and telephone),
- to unified meter and A/C amp. terminals 29 and 30
- through grounds M30 and M66,
- to combination meter terminals 10, 11 and 12
- through grounds M30 and M66,
- to NAVI control unit terminal 1 (With navigation system)
- through ground B115 (With navigation system).

ILLUMINATION

ILLUMINATION OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position, the BCM receives input signal requesting illumination lamps to illuminate. This input signal is communicated to the IPDM E/R through the CAN communication lines. CPU located in the IPDM E/R controls tail lamp relay coil, which, when energized, directs power

- through terminal 22 of IPDM E/R
- to NAVI control unit terminal 61 (With navigation system)
- to NAVI switch terminal 2 (With navigation system)
- to audio unit terminal 8.
- to combination switch (spiral cable) terminal 26 (with steering switch)
- to soft top switch (illumination) terminal 5 (Roadster model)
- to A/T device (A/T illumination) terminal 3 (With A/T)
- to VDC off switch (illumination) terminal 3 (With VDC)
- to TCS off switch (illumination) terminal 3 (With TCS)
- to map lamp (illumination) terminal 4 (Roadster models)
- to hazard switch (illumination) terminal 3
- to heated seat switch (driver side) (illumination) terminal 5 (With heated seat)
- to heated seat switch (passenger side) (illumination) terminal 5 (With heated seat)
- to bottle holder illumination (driver side) terminal 1
- to bottle holder illumination (passenger side) terminal 1
- to cup holder illumination terminal 1
- to luggage floor box lamp terminal 1.

Ground is supplied at all times

- to NAVI control unit terminal 1 (with navigation system)
- through ground B115,
- to NAVI switch terminal 3 (With navigation system)
- to audio unit terminal 7
- to combination switch (spiral cable) terminal 27 (with steering switch)
- to soft top switch (illumination) terminal 6 (Roadster models)
- to A/T device (A/T illumination) terminal 5 (With A/T)
- to VDC off switch (illumination) terminal 4 (With VDC)
- to TCS off switch (illumination) terminal 4 (With TCS)
- to hazard switch (illumination) terminal 4
- to heated seat switch (driver side) (illumination) terminal 6 (With heated seat)
- to heated seat switch (passenger side) (illumination) terminal 6 (With heated seat)
- to bottle holder illumination (driver side) terminal 2, and
- to bottle holder illumination (passenger side) terminal 2
- through combination meter terminal 18,
- to map lamp (illumination) terminal 1 (Roadster models)
- to cup holder illumination terminal 2
- through grounds M30 and M66,
- to luggage floor box lamp terminal 2
- through grounds B5, B6, D105 and T14 (Coupe model)
- through grounds B5, B6 and T14 (Roadster model).

With power and ground supplied, illumination lamps illuminate.

A

B

C

D

E

F

G

H

I

J

LT

L

M

ILLUMINATION

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST or 2ND position, and the ignition switch is turned from ON or ACC to OFF, battery saver control function is activated.

Under this condition, the illumination lamps remain illuminated for 5 minutes, then illumination lamps are turned off.

When the lighting switch is turned from OFF to 1ST or 2ND position after illumination lamps are turned off by battery saver control, and illumination lamps illuminate again.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-III.

CAN Communication System Description

NKS004ZZ

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

NKS00500

Refer to [LAN-48, "CAN System Specification Chart"](#) .


ILLUMINATION

Schematic

NKS00501

(WN) : With navigation system * : This relay is built into the IPDM E/R (Intelligent power distribution module engine room).


A
B
C
D
E
F
G
H
I
J
LT
L
M

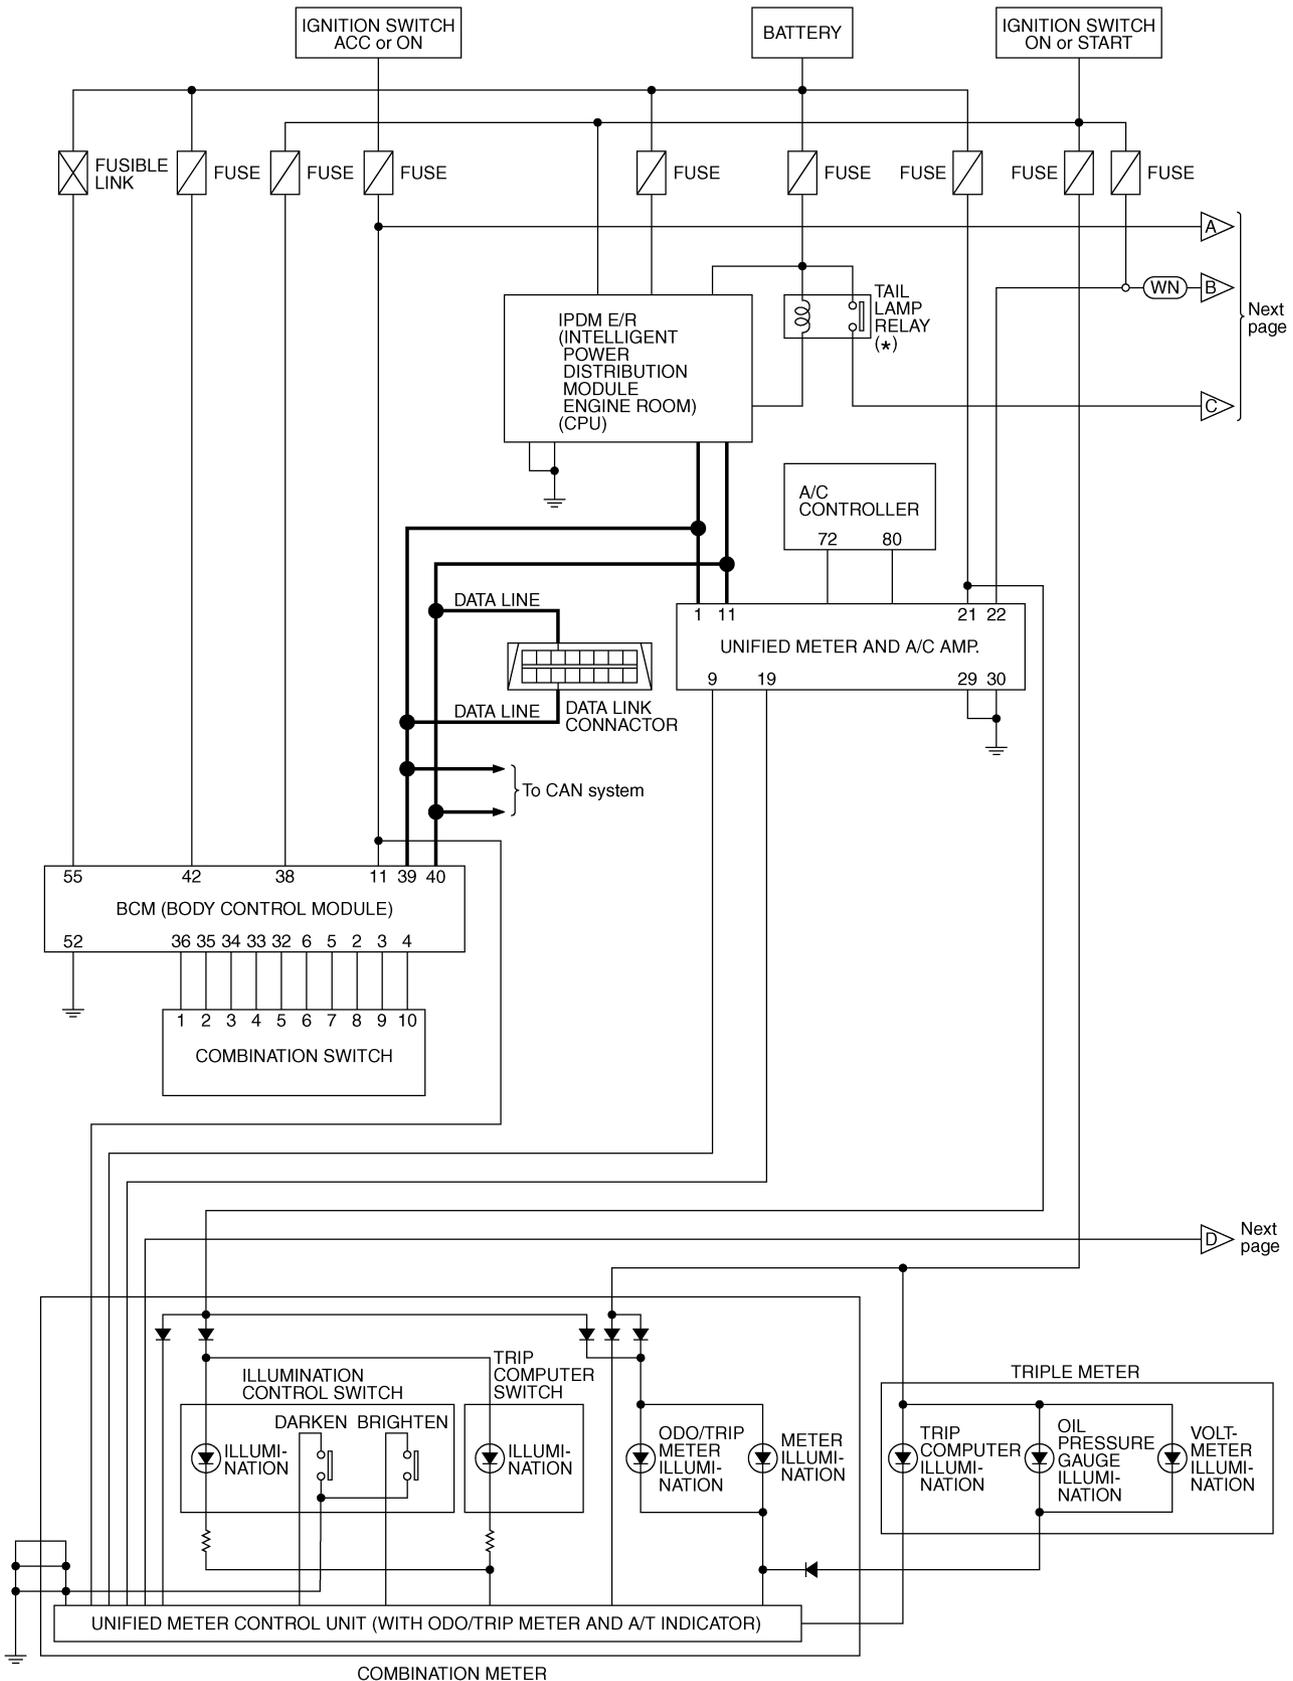

TKWT4089E

ILLUMINATION

- (A) : With A/T
- (RS) : Roadster models
- (WV) : With VDC system
- (WC) : With TCS
- (VT) : With VDC system or TCS
- (WN) : With navigation system
- (HS) : With heated seat
- (WS) : With steering switch
- (PH) : With telephone

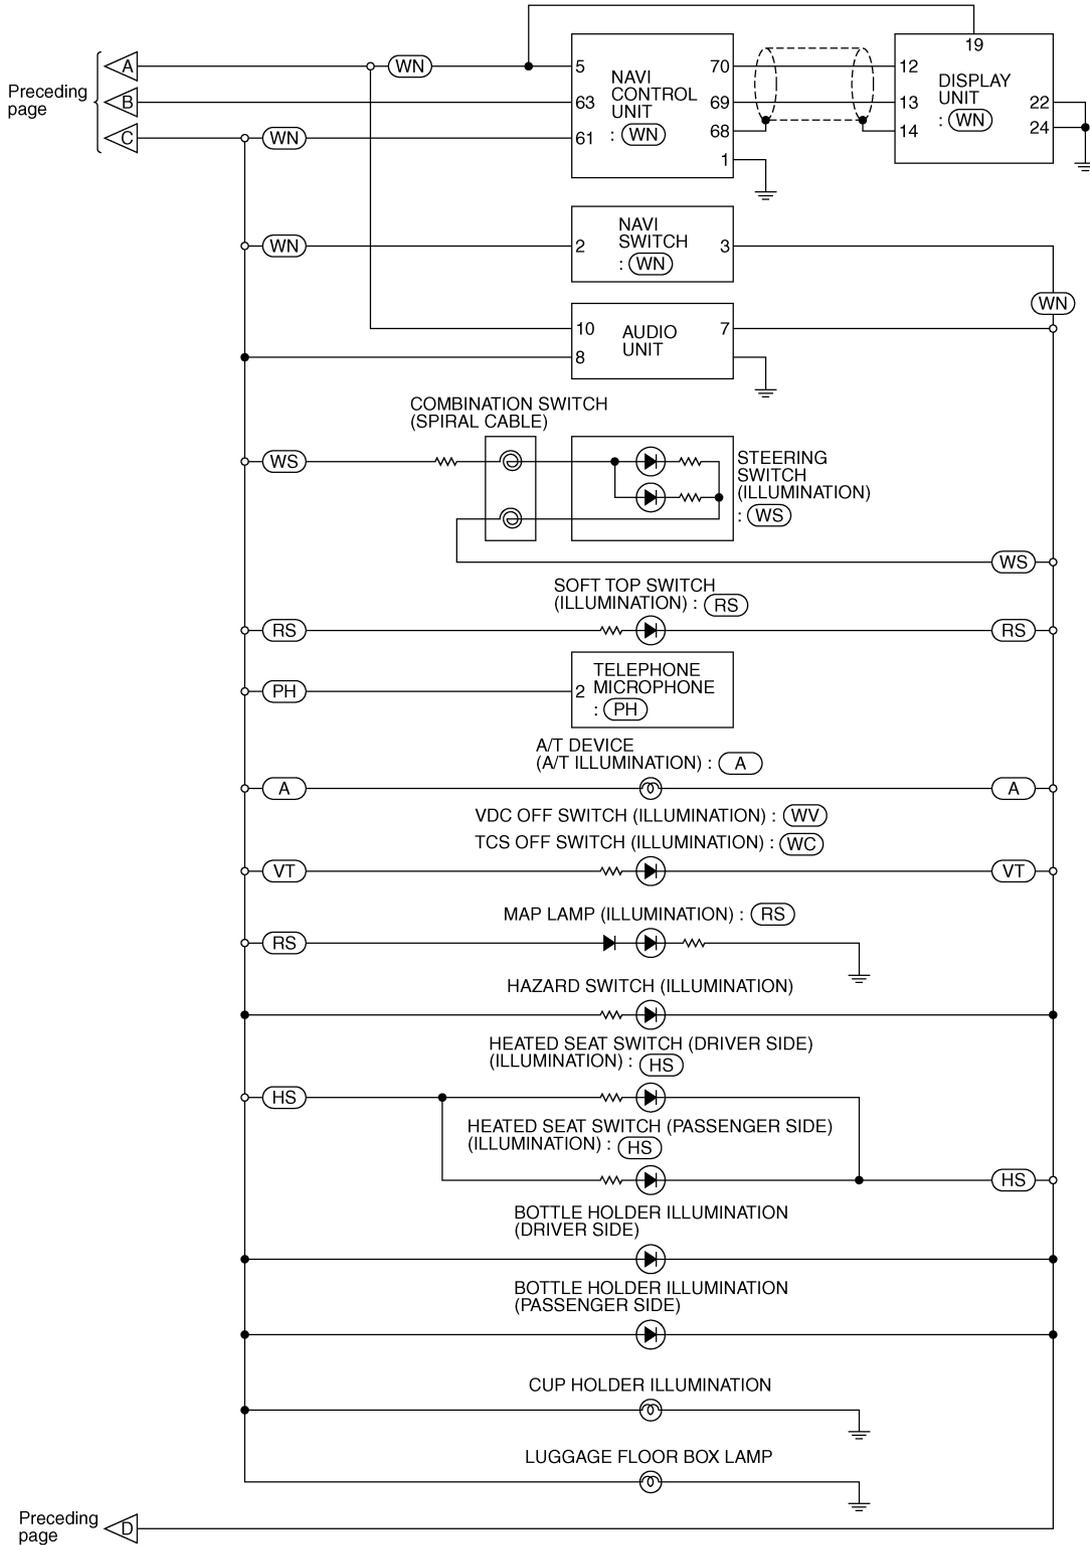


TKWT5767E

ILLUMINATION

Wiring Diagram — ILL —

NKS00502

LT-ILL-01

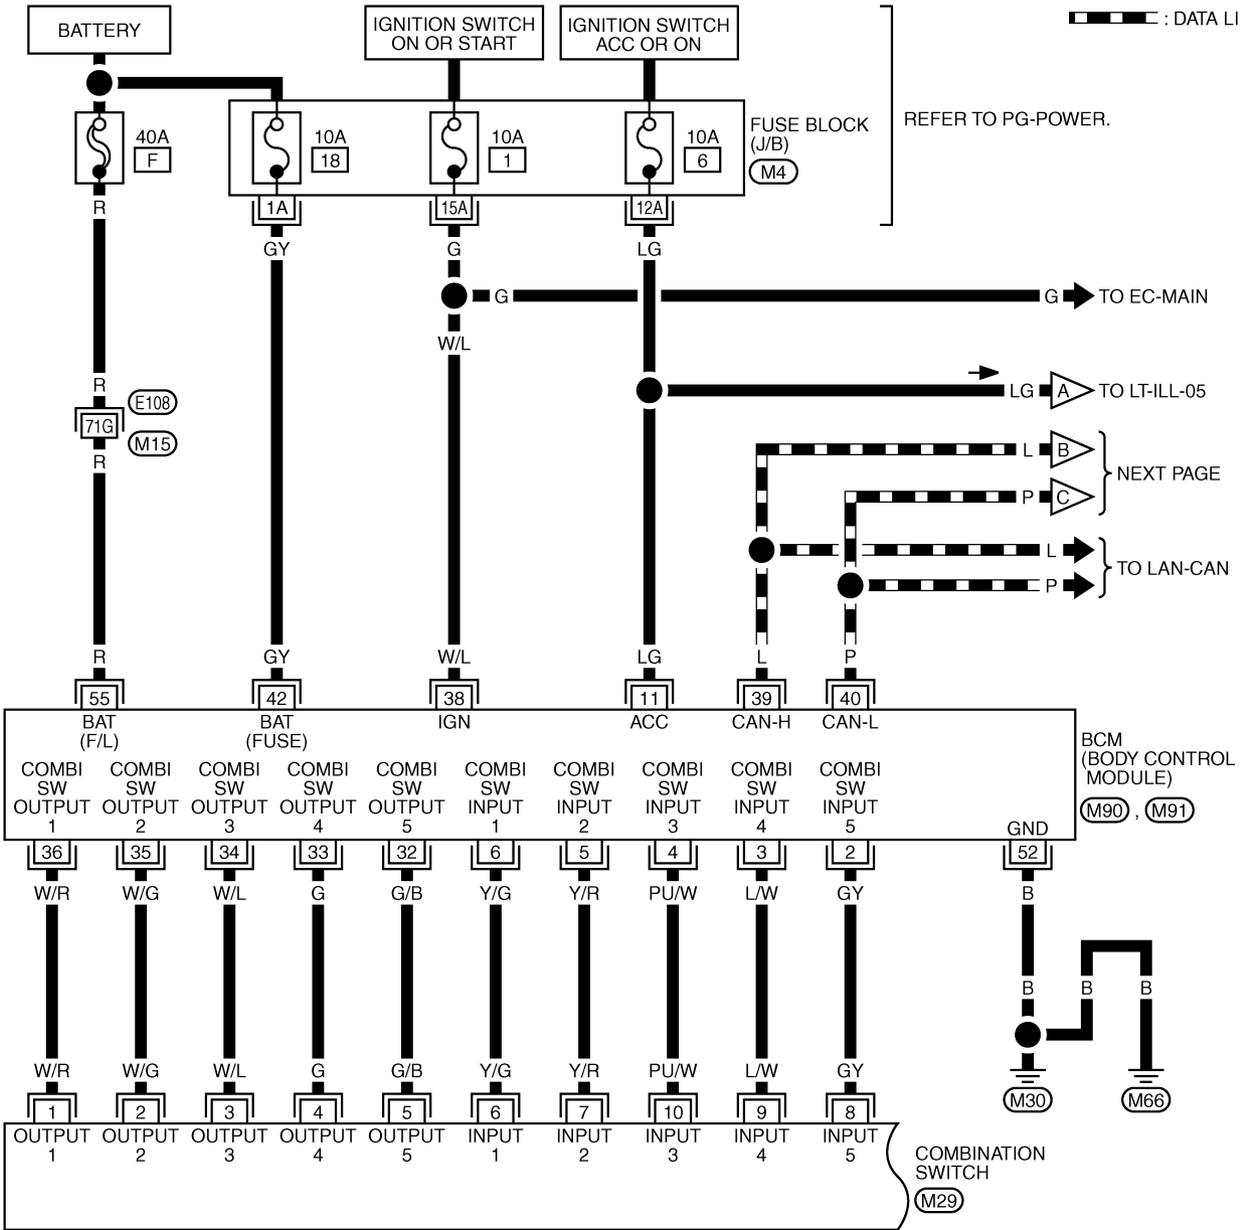

7	8	9	10	13	12	
6	5	4	3	2	1	11

(M29) W

REFER TO THE FOLLOWING.

- (E108) -SUPER MULTIPLE JUNCTION (SMJ)
- (M4) -FUSE BLOCK-JUNCTION BOX (J/B)
- (M90, M91) -ELECTRICAL UNITS

TKWT5768E



ILLUMINATION

LT-ILL-02

▬ : DATA LINE

⬠NT⬠ : WITH VDC SYSTEM,
NAVIGATION SYSTEM OR TELEPHONE

⬠OT⬠ : WITHOUT VDC SYSTEM,
NAVIGATION SYSTEM AND TELEPHONE

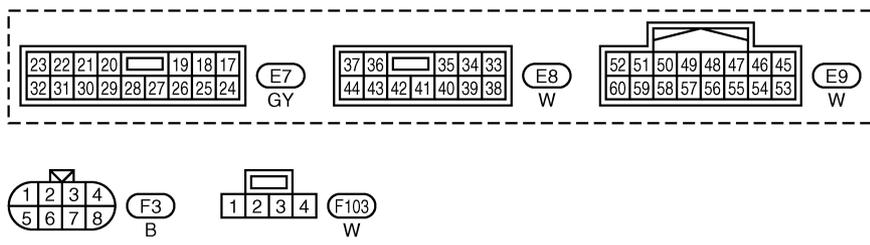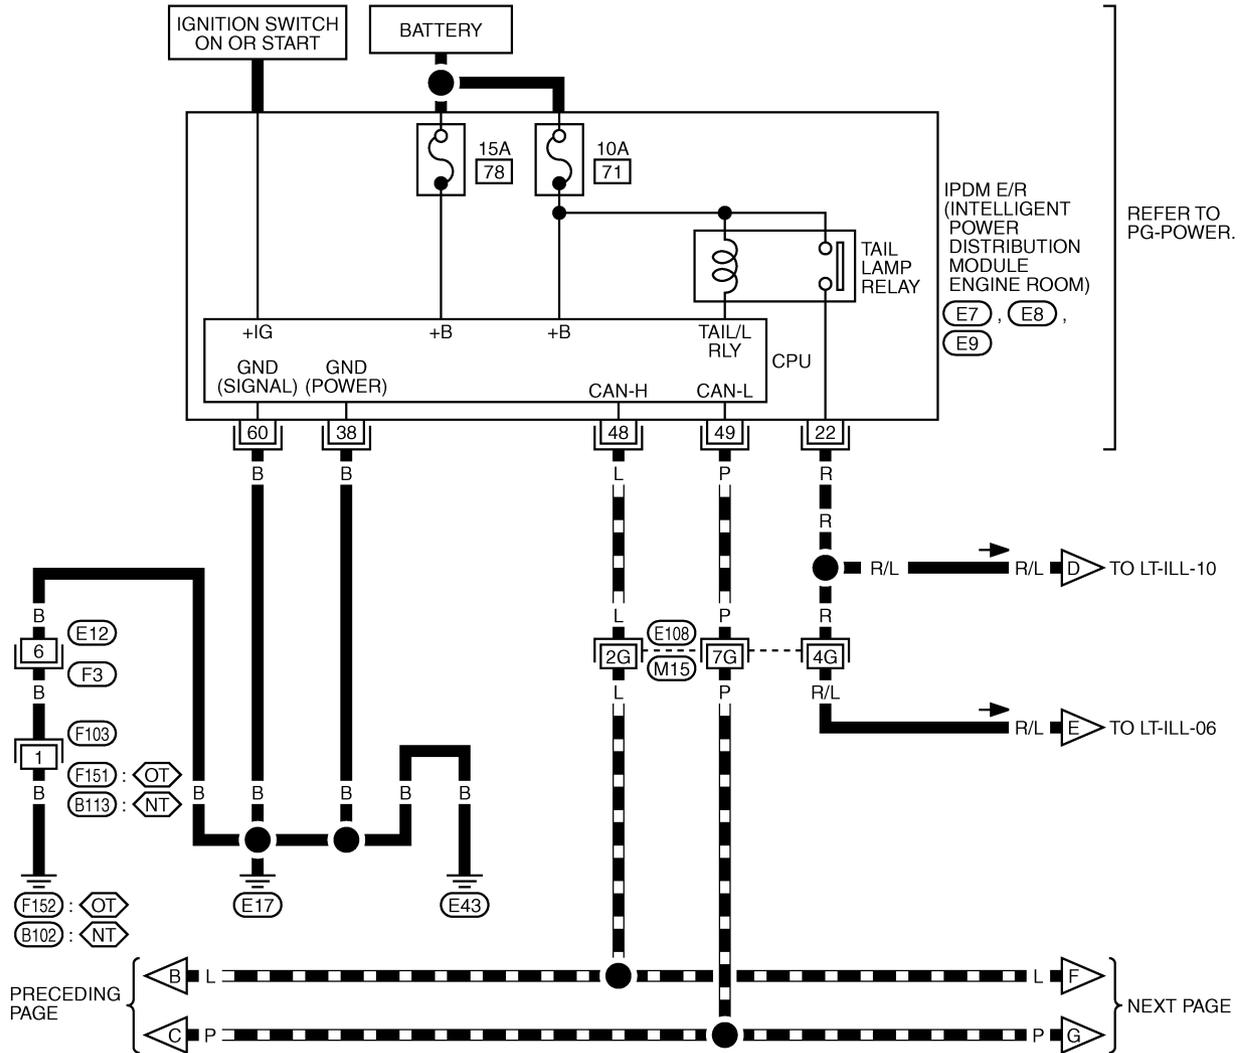






REFER TO THE FOLLOWING.
E108 -SUPER MULTIPLE
JUNCTION (SMJ)



TKWT5769E

ILLUMINATION

LT-ILL-03

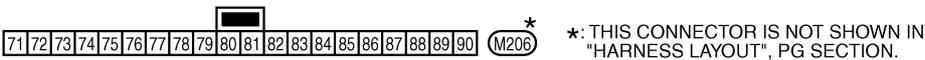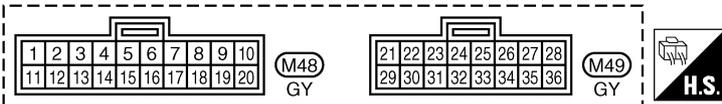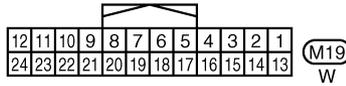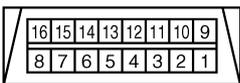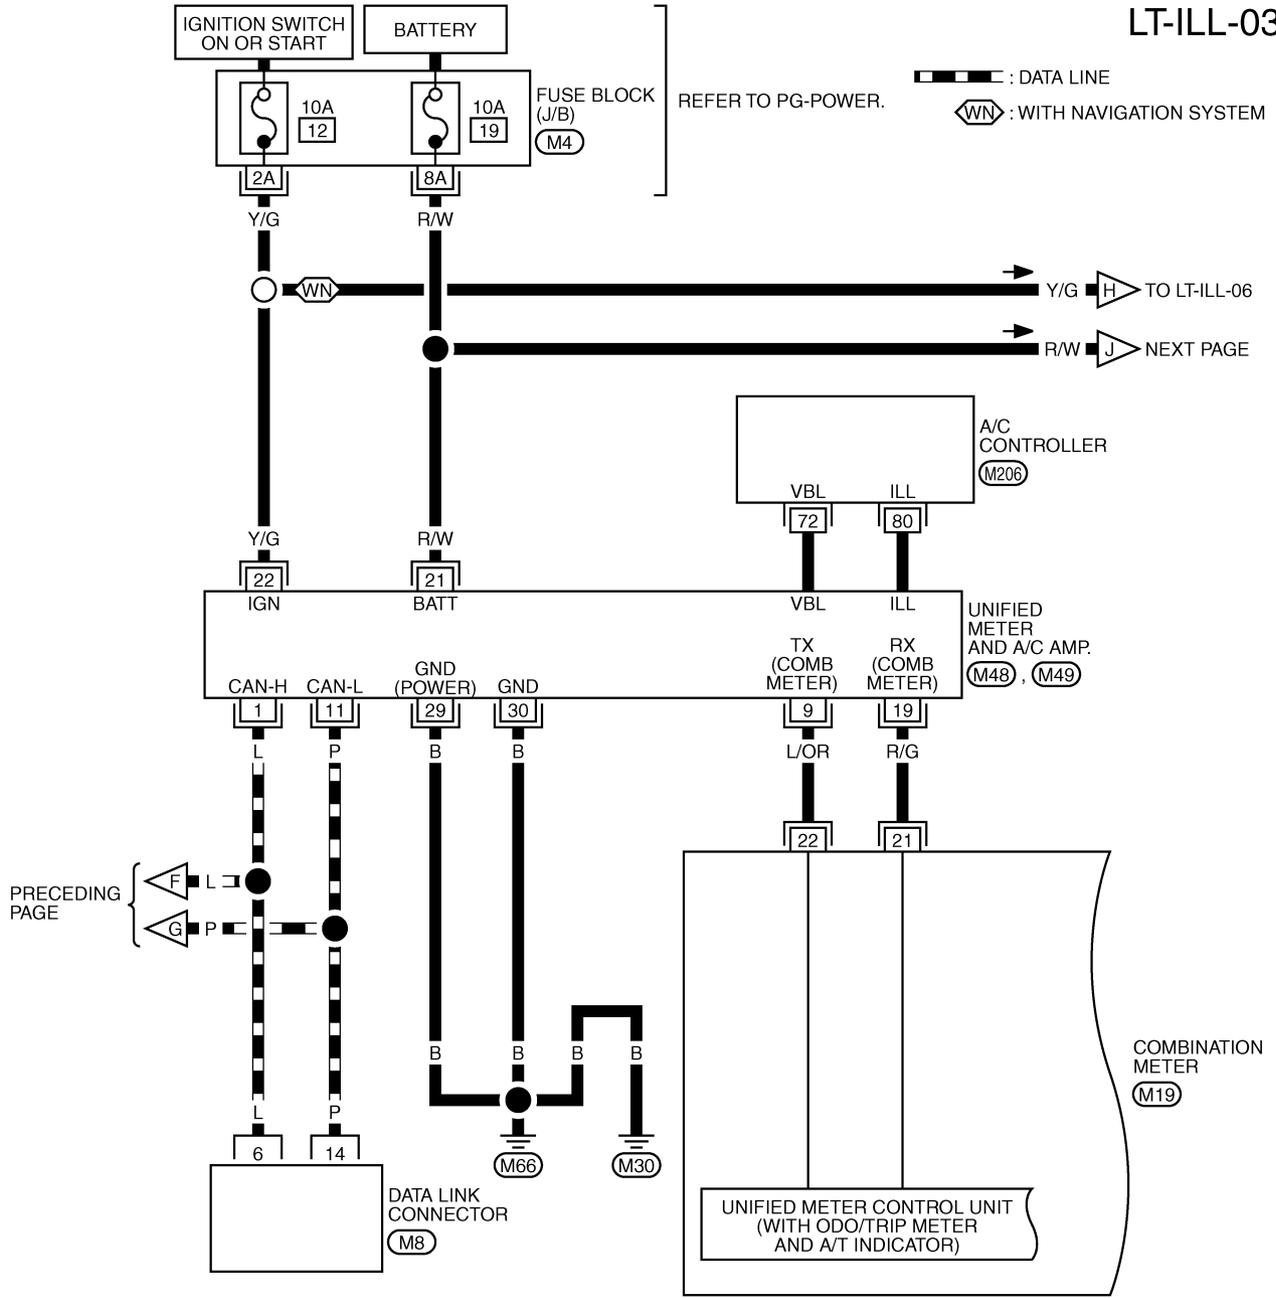



REFER TO THE FOLLOWING.

(M4) - FUSE BLOCK-JUNCTION BOX (J/B)

TKWT2296E

ILLUMINATION

LT-ILL-04


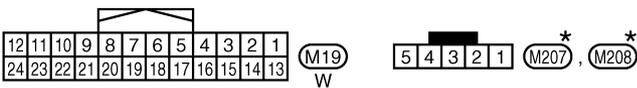
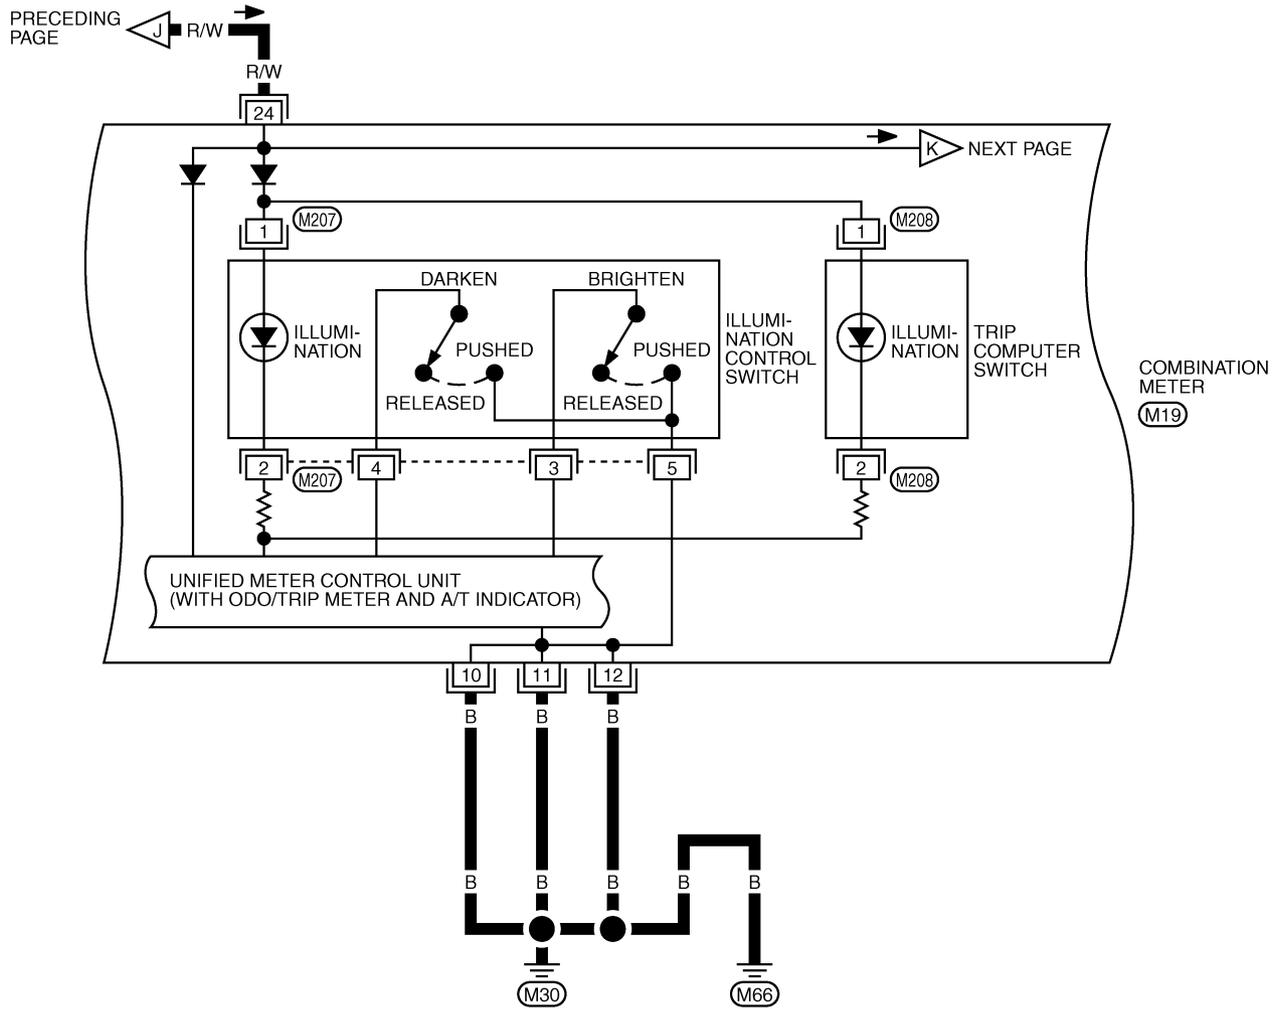


*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

TKWT4093E

ILLUMINATION

LT-ILL-05

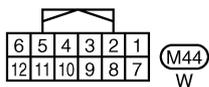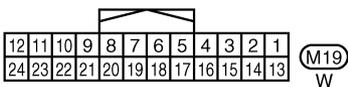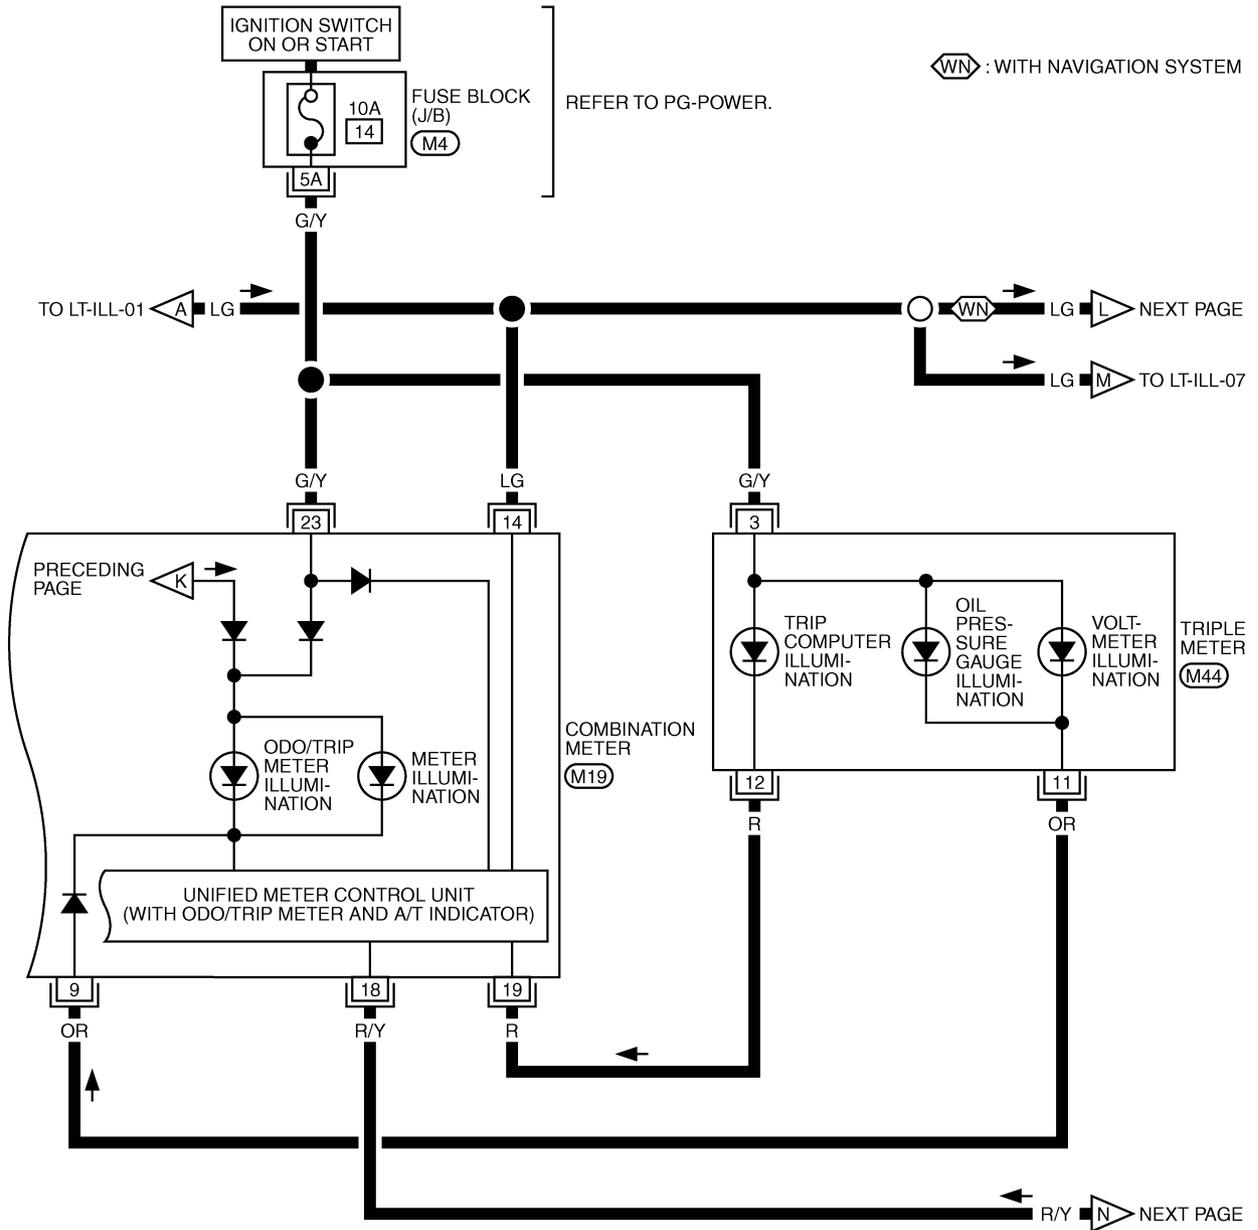


REFER TO THE FOLLOWING.
 (M4) -FUSE BLOCK-JUNCTION BOX (J/B)

TKWT1830E

ILLUMINATION

LT-ILL-06

(WN) : WITH NAVIGATION SYSTEM

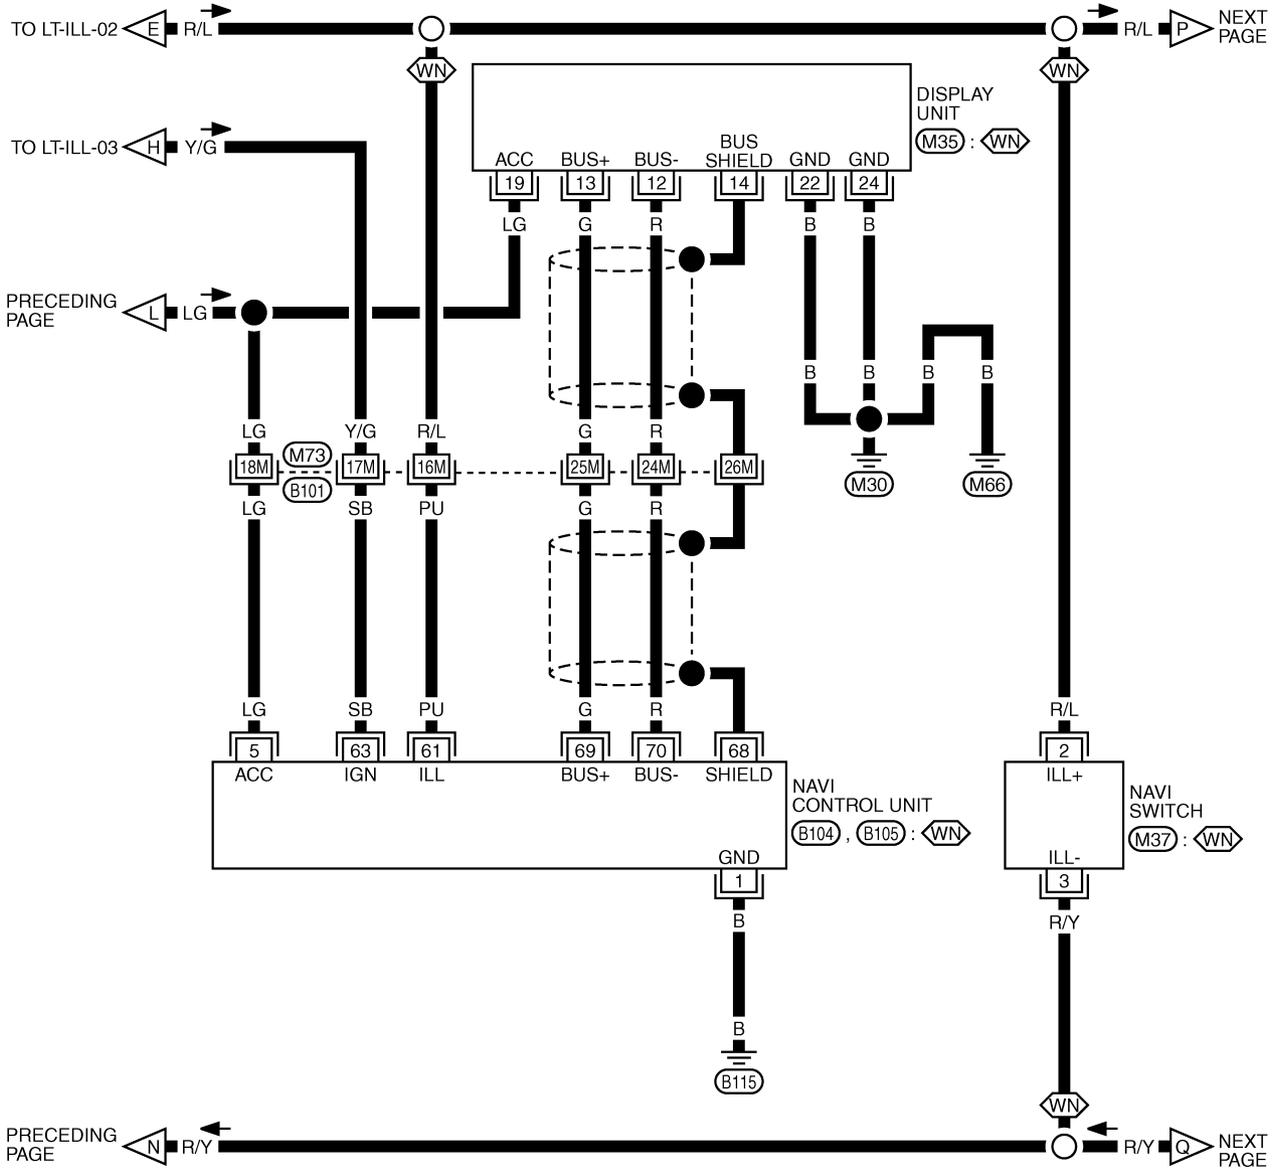

24	22	20	18	16	14	10	8	6	4	2		
23	21	19	17	15	13	12	11	9	7	5	3	1

(M35)
GY

3	2	1		
8	7	6	5	4

(M37)
W

REFER TO THE FOLLOWING.

(B101) -SUPER MULTIPLE JUNCTION (SMJ)

40	38	36	34	32	30	28	26	24	22	20	18	16	14	12	10	8	6	4	2
39	37	35	33	31	29	27	25	23	21	19	17	15	13	11	9	7	5	3	1

(B104)
W


72	70	68	66	64	62	60	58	56	54	52	50	48	46	44	42
71	69	67	65	63	61	59	57	55	53	51	49	47	45	43	41

(B105)
W


TKWT5596E

ILLUMINATION

LT-ILL-07

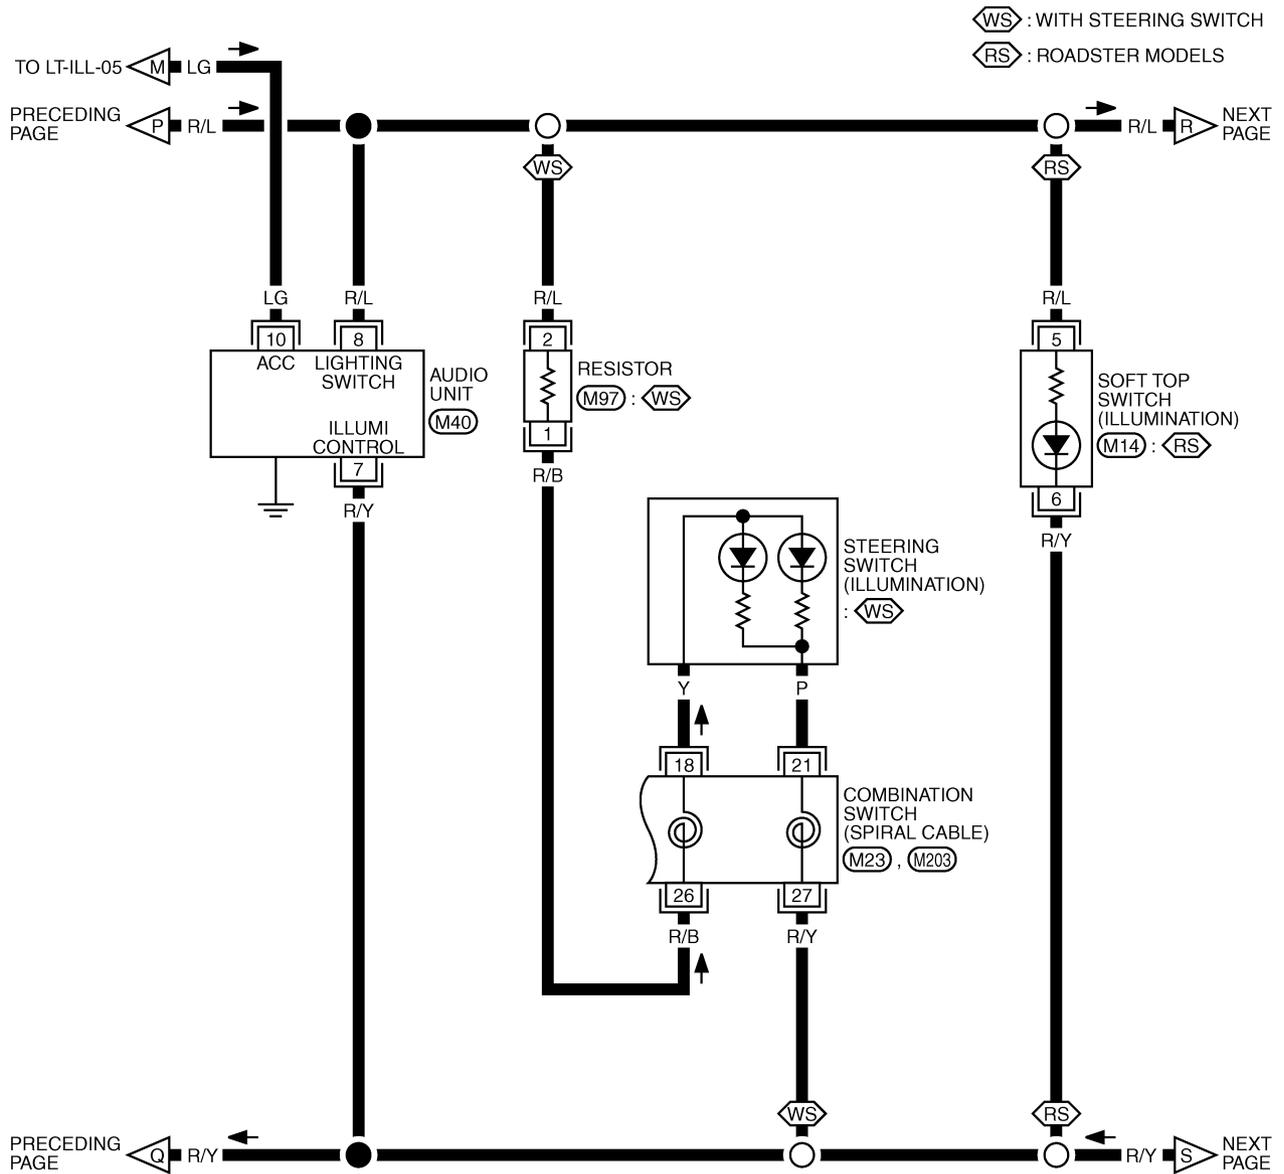

A
B
C
D
E
F
G
H
I
J
LT
L
M

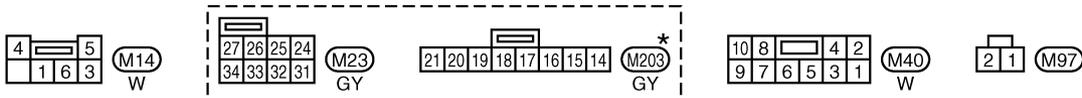



*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

TKWT4095E

ILLUMINATION

LT-ILL-08

- ⬡ : WITH A/T
- ⬢ : ROADSTER MODELS
- ⬤ : WITH VDC SYSTEM OR TCS
- ⬥ : WITH VDC SYSTEM
- ⬦ : WITH TCS WITHOUT VDC SYSTEM
- ⬧ : WITH TELEPHONE

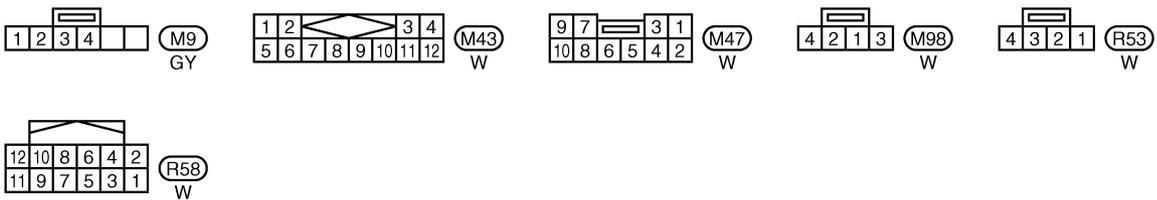
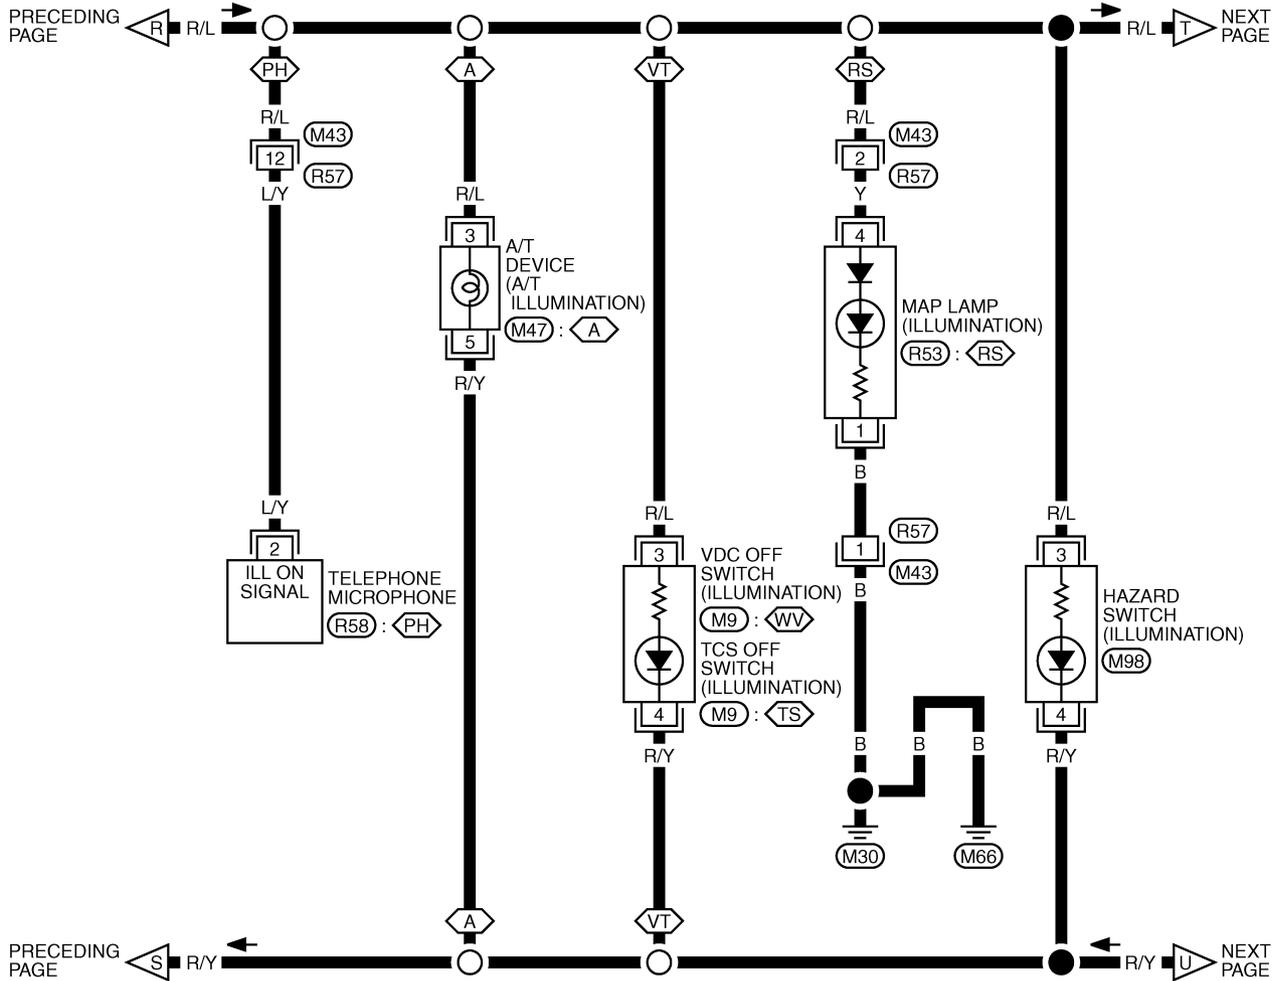


TKWT5771E

ILLUMINATION

LT-ILL-09

: WITH HEATED SEAT

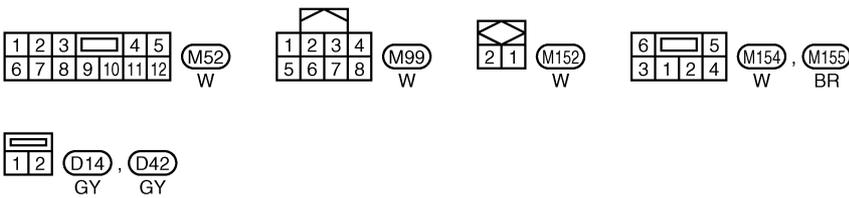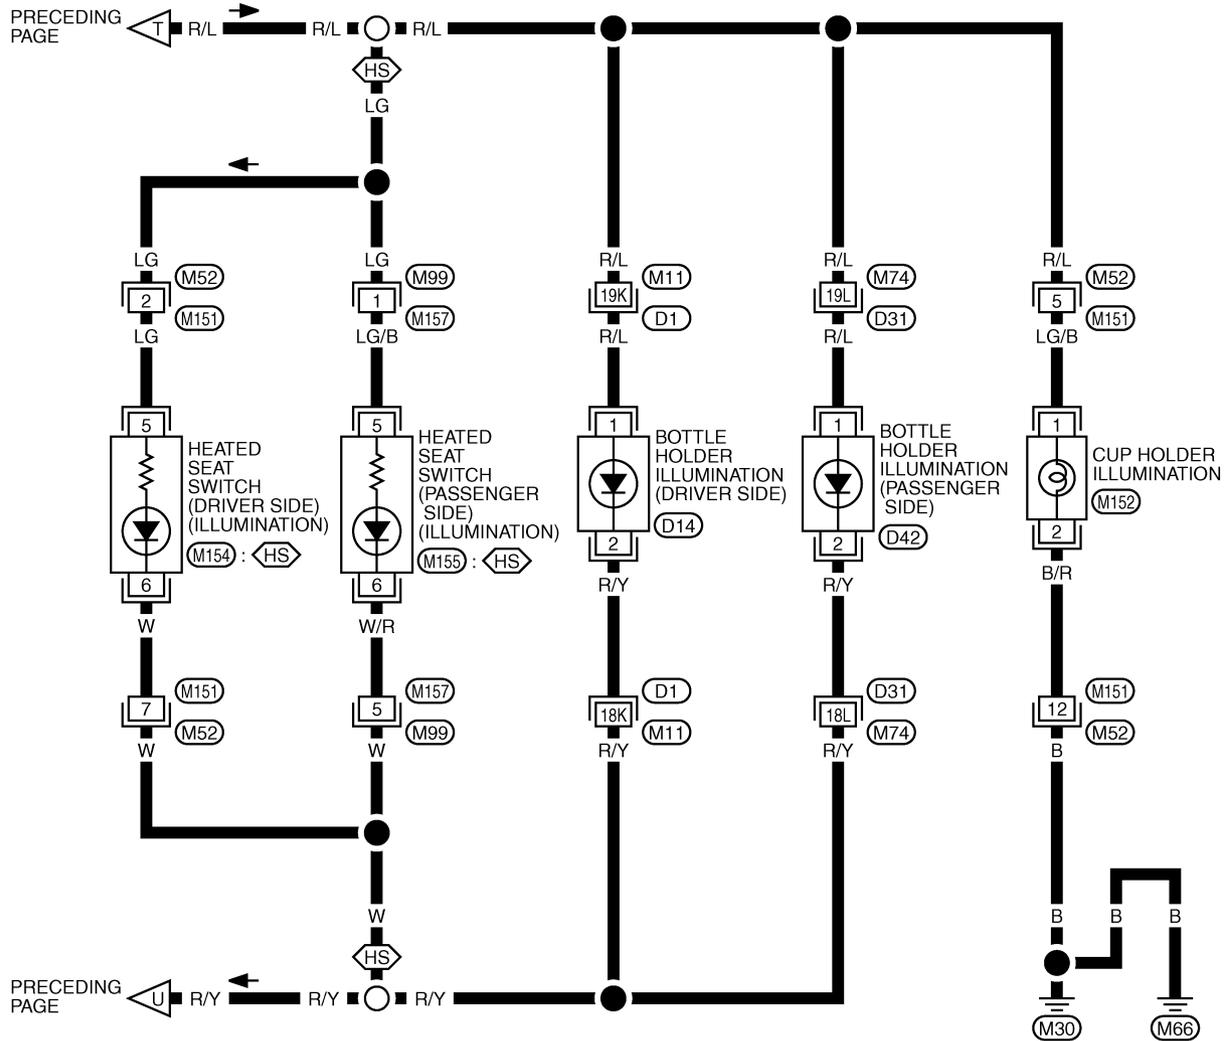


REFER TO THE FOLLOWING.
 , -SUPER MULTIPLE JUNCTION (SMJ)


TKWT4097E

ILLUMINATION

LT-ILL-10

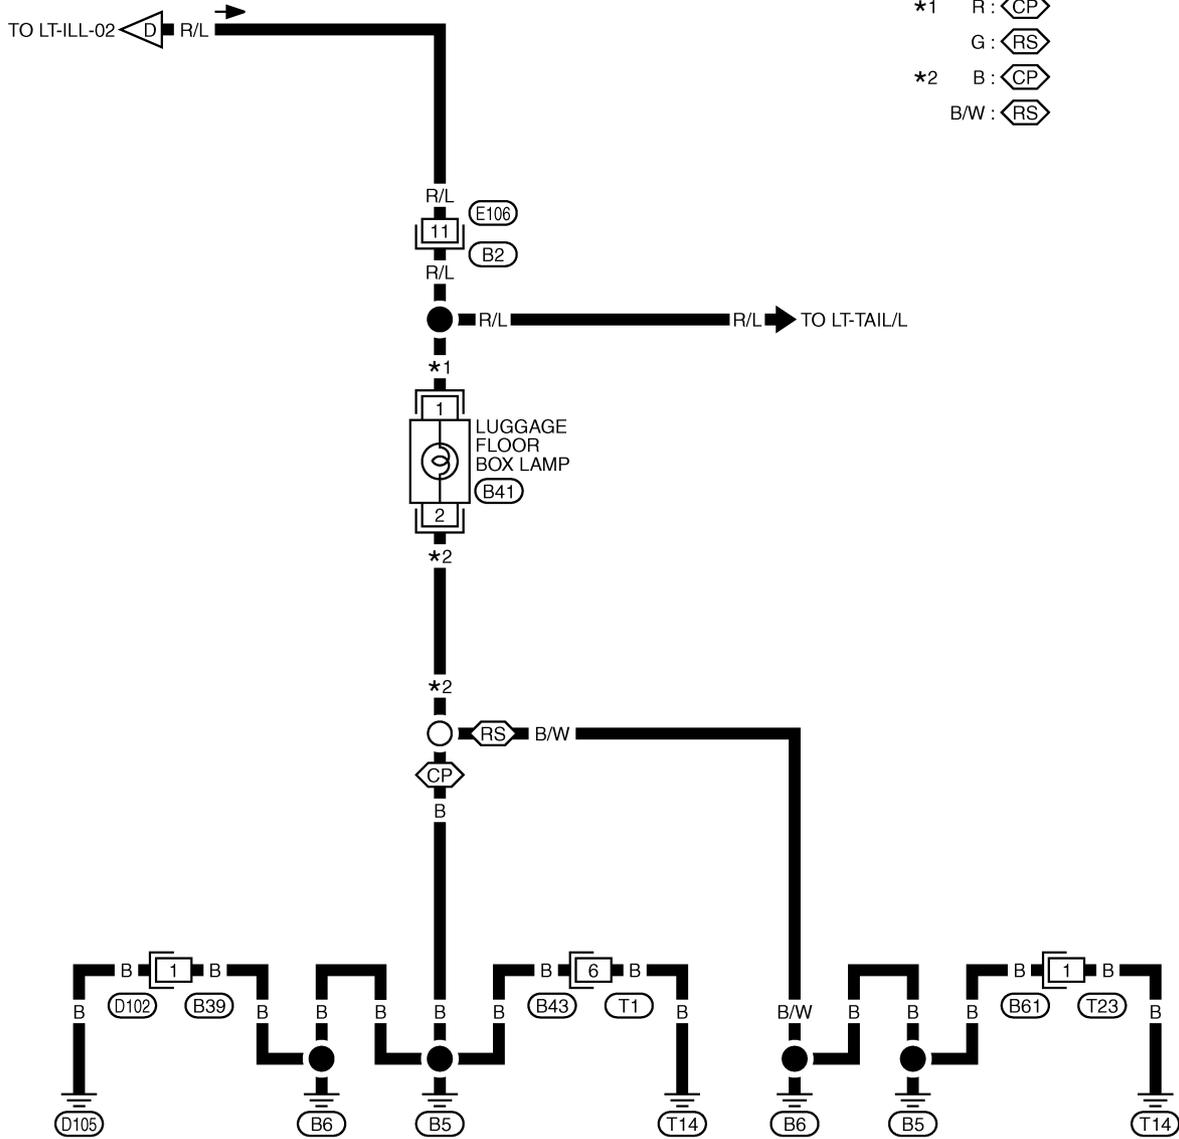

- \triangleleft CP : COUPE MODELS
 \triangleleft RS : ROADSTER MODELS
 *1 R : \triangleleft CP
 G : \triangleleft RS
 *2 B : \triangleleft CP
 B/W : \triangleleft RS

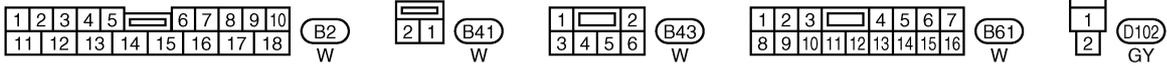

TKWT5772E

ILLUMINATION


Bulb Replacement LUGGAGE FLOOR BOX LAMP

NKS00503

1. Remove luggage floor box lamp. Refer to
2. Turn bulb socket counterclockwise to release lock and remove it.

Luggage floor box lamp : 12 V - 1.4W

3. Installation is the reverse order of removal.

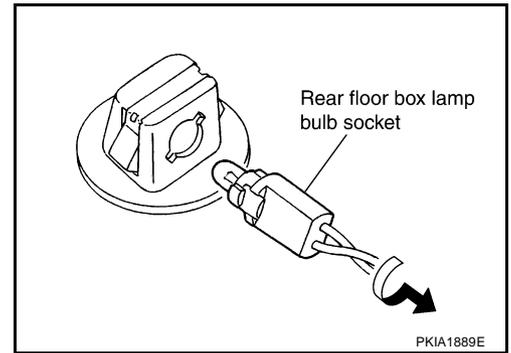


CUP HOLDER ILLUMINATION

1. Remove center console assembly (1). Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#).
2. Turn bulb socket counterclockwise to release lock and remove bulb socket (2).
3. Remove cup holder illumination bulb (3) from its socket.

Cup holder illumination : 12V - 1.1W


4. Installation is the reverse order of removal.

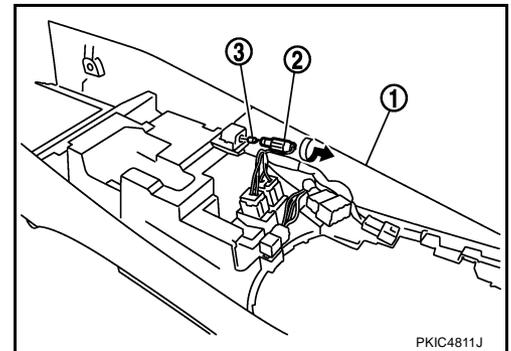

Removal and Installation LUGGAGE FLOOR BOX LAMP

NKS00504

1. Pull out rear floor box lamp using screwdriver or similar tool.
2. Installation is the reverse order of removal.

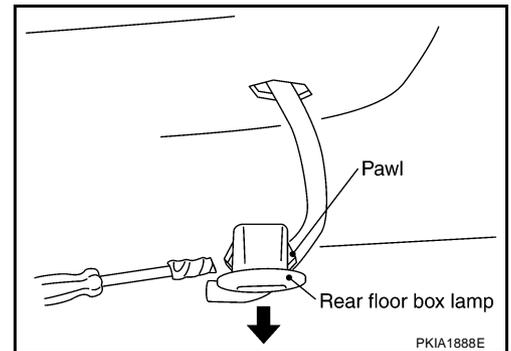

A
B
C
D
E
F
G
H
I
J
LT
L
M

BULB SPECIFICATIONS

BULB SPECIFICATIONS

PFP:26297

Headlamp

NKS00505

Item	Wattage (W)
High / Low	35 (D2R)

Exterior Lamp

NKS00506

Item	Wattage (W)	
Front combination lamp	Front turn signal lamp/—	28/8 (amber)
	Parking lamp	5
	Front side marker lamp	LED
Rear combination lamp	Stop/Tail lamp	LED
	Rear turn signal lamp	21 (amber)
	Back-up lamp	21
	Rear side marker lamp	LED
License plate lamp	5	
High-mounted stop lamp	LED	

Interior Lamp/Illumination

NKS00507

Item	Wattage (W)
Luggage floor box lamp	1.4
Cup holder illumination lamp	1.1
Bottle holder illumination lamp	LED
Map lamp	8
Luggage room lamp	5
Trunk room lamp	3.4
Vanity mirror lamp	1.32
Ignition key hole illumination lamp	1.4